

QUICK START GUIDE

CIBO+

1


WIPE OUT THE OVEN WITH A CLEAN CLOTH

2

ENSURE CIBO+ IS PLUGGED INTO A LIVE OUTLET

4

SELECT A PROGRAM

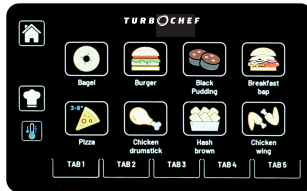


3

PRESS AND HOLD UNTIL BEEP



5

GETTING READY/
PRE HEATING

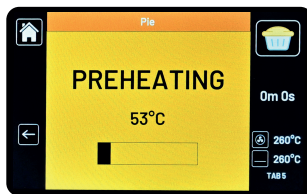

6

GREEN
SCREEN
WHEN
READY




8

GREEN
SCREEN
WHILE
COOKING




7

LOAD
FOOD

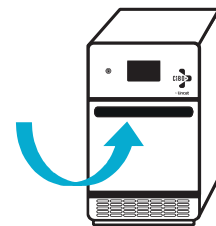

9

UNLOAD
FOOD

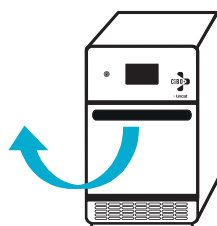

10

PRESS THE HOME
ICON TO RETURN
TO THE MENU



TURBOCHEF