

ARM-01

10QT Planetary Mixer

Parts List

Part#	Description
ARM-01-1	BEATER
ARM-01-2	DOUGH HOOK
ARM-01-3	WHIP
ARM-01-4	ATTACHMENT HUB
ARM-01-5	TRANSMISSION CASE
ARM-01-6	BEVEL DRIVE GEAR
ARM-01-7	LOCKWASHER STW12
ARM-01-8	WORM
ARM-01-9	OIL SEAL
ARM-01-10	KEY
ARM-01-11	MOTOR
ARM-01-12	WASHER M6
ARM-01-13	BOLT
ARM-01-14	TERMINAL BOARD
ARM-01-15	START WINDING
ARM-01-16	MOTOR FAN
ARM-01-17	MOTOR REAR HOUSING
ARM-01-18	BOLT M5-5- S/S
ARM-01-19G	GREEN SWITCH
ARM-01-19R	RED SWITCH
ARM-01-20	BOLT4-6 S/S
ARM-01-21	SWITCH PLATE
ARM-01-22	BOLT
ARM-01-23	MICRO SWITCH BOX
ARM-01-24	BOLT
ARM-01-25	MICRO SWITCH
ARM-01-26	PLASTIC BALL
ARM-01-27	SPEED CHANGE HANDLE
ARM-01-28	BOLT M4 X 15 S/S
ARM-01-29	SPEED CHANGE MECHANISM
ARM-01-30	SPRING
ARM-01-31	STEEL BALL 1/4
ARM-01-32	PIN
ARM-01-33	SPEED CHANGE MECHANISM
ARM-01-34	BEARING #6202
ARM-01-35	UPPER SPACER
ARM-01-36	SLOW SPEED GEAR SPRING
ARM-01-37	SLOW SPEED GEAR PIN
ARM-01-38	SLOW SPEED GEAR(8T)
ARM-01-39	SLOW SPEED GEAR

ARM-01-40	ZERO BEVEL GEAR
ARM-01-41	UPPER CLUTCH GEAR
ARM-01-42	BUSHING
ARM-01-43	SLEEVE CLUTCH
ARM-01-44	KEY
ARM-01-45	KEY
ARM-01-46	KEY
ARM-01-47	SHAFT CENTER
ARM-01-48	BUSHING
ARM-01-49	LOWER CLUTCH GEAR
ARM-01-50	CENTER SHAFT BEARING
ARM-01-51	BEARING #6204
ARM-01-52	OIL SEAL 20-40-7
ARM-01-53	BEARING #1210
ARM-01-54	TRANSMISSION SHAFT
ARM-01-55	KEY 5-5-10
ARM-01-56	KEY 5-5-10
ARM-01-57	GEAR 33T
ARM-01-58	LOCK WASHER STW-20
ARM-01-59	GEAR 24T
ARM-01-60	LOCK WASHER STW-17
ARM-01-61	BEARING #6000
ARM-01-62	BEARING #6200
ARM-01-63	KEY 5-5-15
ARM-01-64	WORM GEAR SHAFT
ARM-01-65	WORM WHEEL
ARM-01-66	LOCKWASHER STW-16
ARM-01-67	BEARING #1210
ARM-01-68	BOLT
ARM-01-69	SPRING
ARM-01-70	SWITCH PUSHER
ARM-01-71	SHIFT SHAFT
ARM-01-72	YOKE SHIFTER
ARM-01-73	SHAFT SUPPORT COVER
ARM-01-74	BOLT M5-16
ARM-01-75	LCKWASHER STW-15
ARM-01-76	BEATER SHAFT GEAR
ARM-01-77	PLANETARY
ARM-01-78	BEARING #6202
ARM-01-79	SPACER
ARM-01-80	BEARING #6202
ARM-01-81	OIL SEAL 20-35-7
ARM-01-82	KEY 5-5-15
ARM-01-83	BEATER SHAFT
ARM-01-84	BEATER PIN 8-20
ARM-01-85	BOWL
ARM-01-86	DRIP RING

ARM-01-87	BOLT M6-16S/S
ARM-01-88	SAFETY GUARD COVER
ARM-01-89	BOLT
ARM-01-90	WASHER
ARM-01-91	BOLT
ARM-01-92	SAFETY GUARD
ARM-01-93	STEEL BALL
ARM-01-95	BOWL PIN
ARM-01-96	BOWL SUPPORT
ARM-01-97	LOCKWASHER 5/16
ARM-01-98	NUT M8 S/S
ARM-01-99	BOLT M6-20 S/S
ARM-01-100	L STEEL
ARM-01-101	NUT M8
ARM-01-102	WASHER M8
ARM-01-103	SPRING
ARM-01-104	WASHER M8
ARM-01-105	SPRING PIN 4-25
ARM-01-106	ROD BOWL LIFT
ARM-01-107	SPRING PIN
ARM-01-109	PIN
ARM-01-110	ARM BOWL LIFT
ARM-01-111	WASHER
ARM-01-112	WASHER
ARM-01-113	LEVER BOWL LIFT
ARM-01-114	PEDESTAL
ARM-01-115	BOLT M8-25
ARM-01-116	MESH PLAT
ARM-01-117	BASE
ARM-01-118	BOLT M8-15
ARM-01-119	POWER CORD
ARM-01-120	BOLT M4-10
ARM-01-121	CONTACTOR
ARM-01-122	L CONTACTOR HOLDER
ARM-01-123	BOLT M4-10
ARM-01-124	ELECTRIC STAND
ARM-01-125	BOLT M6-8
ARM-01-126	CAPACITOR
ARM-01-127	CAPACITOR
ARM-01-128	BLOT M3-10 S/S
ARM-01-129	BOLT M3-10 S/S
ARM-01-130	CASE COVER
ARM-01-131	L SWITCH HOLDER
ARM-01-132	MICRO SWITCH
ARM-01-133	BOLT M3-10
ARM-01-134	ATTACHMENT HUB SCREW
ARM-01-135	PLUG ATTACHMENT HUB

ARM-01-136	MICRO SWITCH PUSHER
ARM-01-137	BOLT
ARM-01-138	POWER CORD LOCK
ARM-01-139	INGREDIENT CHUTE
ARM-01-140	PIN MICRO SWITCH
ARM-01-141	SPRING, ACTUALTOR
ARM-01-142	CLIP RING