

ARM-02

20QT Planetary Mixer

Parts List

Part#	Description
ARM-02-1	COVER
ARM-02-2	SCREW M6-10
ARM-02-3	SPEED CHANGE HANDLE
ARM-02-4	TRANSMISSION CASE
ARM-02-5	PLANETARY
ARM-02-6	BOWL SUPPORT
ARM-02-7	BASE
ARM-02-7-1	RUBBER FEET
ARM-02-8	SPEED CHANGE MECHANISM
ARM-02-9	PEDESTAL
ARM-02-11	BEARING CAP
ARM-02-12	PLASTIC PLUG
ARM-02-13	TRANSMISSION SHAFT
ARM-02-14	CENTER SHAFT BEARING
ARM-02-15	UPPER SPACER
ARM-02-16	SLOW SPEED GEAR
ARM-02-17	ZERO BEVEL GEAR
ARM-02-18	UPPER CLUTH GEAR
ARM-02-19	SLEEVE CLUTCH
ARM-02-20	LOWER CLUTCH GEAR
ARM-02-21	SHAFT CENTER
ARM-02-22	YOKE SHIFTER
ARM-02-23	BEVEL DRIVE GEAR
ARM-02-24	BEVEL DRIVE GEAR SPACER
ARM-02-25	PLUG ATTACHMENT HUB
ARM-02-27	GEAR 32T
ARM-02-28	GEAR 23T
ARM-02-29	WORM WHEEL
ARM-02-30	WORM GEAR SHAFT
ARM-02-31	WORM
ARM-02-32	MOTOR
ARM-02-33	MOTOR REAR HOUSING
ARM-02-34	INTERNAL GEAR
ARM-02-35	BEATER SHAFT GEAR
ARM-02-36	BEATER SHAFT
ARM-02-37	LEVER BOWL LIFT
ARM-02-38	ARM BOWL LIFT
ARM-02-39	ROD BOWL LIFT
ARM-02-40	SPRING
ARM-02-42	O RING

ARM-02-44	BOWL
ARM-02-45	BEATER
ARM-02-46	DOUGH HOOK
ARM-02-47	WHIP
ARM-02-48	TERMINAL BOARD
ARM-02-49	START WINDING
ARM-02-50	BOLT M6-20
ARM-02-52	APRON
ARM-02-53	SLIDE WAYS
ARM-02-54	BOWL PIN NUTS M8
ARM-02-55	BOWL PIN
ARM-02-55	BOWL PIN
ARM-02-60	SAFETY GUARD
ARM-02-63	CENTER SHAFT NUT 3/4
ARM-02-64	CENTER SHAFT LOCK WASHER
ARM-02-65	SLIDE WAY BOLTS M6-20
ARM-02-66	NUT M10
ARM-02-67	BEATER PIN 8-30
ARM-02-68	ATTACHMENT HUB SCREW 1/2
ARM-02-70	BOWL CLAMP (L)
ARM-02-71	BOWL CLAMP
ARM-02-72	CENTER SHAFT SEAL 25-40-9
ARM-02-73	CENTER SHAFT BEARING UPPER
ARM-02-75	BEARINGS
ARM-02-76	WASHER 3/8
ARM-02-77	BOLT M10-30
ARM-02-79	NUT 1/2-20
ARM-02-81	BOLT M8-25
ARM-02-82	PIN 7.9-16
ARM-02-83	BOLT M6-25
ARM-02-84	SHAFT SUPPORT COVER
ARM-02-87	BOLT M6-20
ARM-02-89	BOLT M6-20
ARM-02-90	SHIFT SHAFT
ARM-02-91	SPRING WASHER 3/8
ARM-02-92	NUT 3/8
ARM-02-93	NUT
ARM-02-94	SPRING
ARM-02-95	SWITCH PIN
ARM-02-96	SLOW SPEED GEAR SPRING
ARM-02-97	SLOW SPEED GEAR PIN.8.0-16
ARM-02-98	SLOW SPEED GEAR (8T)
ARM-02-99	BUSHING
ARM-02-100	KEY 6-6-25
ARM-02-101	KEY 6-6-30
ARM-02-102	KEY 6-6-30
ARM-02-103	BUSHING

ARM-02-104	BEARING
ARM-02-105	KEY 5-5-12
ARM-02-106	SPACER
ARM-02-107	LOCKWASHER STW 19
ARM-02-108	BEARING
ARM-02-109	BEARING
ARM-02-110	KEY5-5-12
ARM-02-111	LOCKWASHER STW 19
ARM-02-112	BEARING
ARM-02-113	ATTACHMENT HUB.
ARM-02-114	OIL SEAL 30-50-8
ARM-02-115	BEARING
ARM-02-116	PLASTIC BALL M8-27
ARM-02-117	BOLT M5-12 S/S
ARM-02-118	SPRING
ARM-02-119	STEEL BALL 1/4
ARM-02-120	SPEED CHANGING MECHANISM
ARM-02-121	PIN4-25
ARM-02-122	LOCK WASHER STW-16
ARM-02-123	OIL SEAL 30-50-8
ARM-02-124	KEY3-3-18
ARM-02-125	SPRING WASHER 1/4
ARM-02-126	MOTOR FAN
ARM-02-127	LOCKWASHER STW-16
ARM-02-128	BEARING
ARM-02-129	BEARING
ARM-02-130	OIL SEAL 25-47-10
ARM-02-131	KEY 5-5-15
ARM-02-132	BOLT M8-9 SS
ARM-02-133	STEEL BALL & SPRING SET X5
ARM-02-134	BOLT M4-21 S/S
ARM-02-135	STOPPER
ARM-02-136	SAFETY GUARD COVER R
ARM-02-136-1	SAFETY GUARD COVER L
ARM-02-137	BOLT M6-20 S/S
ARM-02-138	BOLT M5-12 S/S
ARM-02-139	WASHER
ARM-02-140	SPRING WASHER 5/16 S/S
ARM-02-141	STEEL COVER
ARM-02-142	BOLT M5-6 S/S
ARM-02-143	SPRING WASHER 1/4
ARM-02-144	BOLT M5-6 S/S
ARM-02-145	MESH PLATE
ARM-02-146	WASHER M12
ARM-02-147	WASHER
ARM-02-148	PIN 6-28
ARM-02-149	SPRING PIN 3/32-1

ARM-02-150	SPRING PIN 4-36
ARM-02-151	INGREDIENT CHUTE
ARM-02-152	BOLT M4-10 S/S
ARM-02-153	BOLT M3-15 S/S
ARM-02-154	BOLT M3-12
ARM-02-155	BOLT M4-10
ARM-02-160	SPRING
ARM-02-161	SWITCH PUSHER
ARM-02-162	BOLT
ARM-02-163	SWITCH PAD
ARM-02-164	MICRO SWITCH MV-3003
ARM-02-165	CAPACITOR RUNNING
ARM-02-166	CAPACITOR STARTING
ARM-02-167	BOLT M4-6 S/S
ARM-02-168	ELECTRIC CASE
ARM-02-169	CASE COVER
ARM-02-170	BOLT M4-6 S/S
ARM-02-171	MICRO SWITCH MV-3005
ARM-02-172	L SWITCH HOLDER
ARM-02-173	ELECTRIC STAND
ARM-02-174	BOLT M4-10
ARM-02-175	CONTACTOR
ARM-02-176	BOLT M6-30 S/S
ARM-02-177	BOLT M6-35 S/S
ARM-02-178	BOLT M6-60 S/S
ARM-02-179	SWITCH PLATE
ARM-02-180	BOLT M5-6 S/S
ARM-02-183	LOCK PLUG
ARM-02-184	POWER CORD
ARM-02-185	OIL SEAL
ARM-02-186-1	SELECTOR, TOGGLE
ARM-02-186-2	SELECTOR, DUAL PUSH BUTTON
ARM-02-186-3-A	SELECTOR, SINGLE BUTTON, RED
ARM-02-186-3-B	SELECTOR, SINGLE BUTTON, GREEN
ARM-02-186-3-C	BRACKET, BUTTON COVER
ARM-02-186-3-D	LA COSTA
ARM-02-186-4	SELECTOR, RED ROCKER
ARM-02-187	TIMER
ARM-02-188	SPRING WASHER
ARM-02-189	NUT
ARM-02-190	KNOB
ARM-02-191	BOLT M8-25
ARM-02-230	RESET SWITCH