

ARM-60

Parts List

Part#	Description
ARM-60-1	BOLT M6X10
ARM-60-2	NUT M32
ARM-60-3	BEARING CAP
ARM-60-4	BEARING #6307
ARM-60-5	PLASTIC PLUG
ARM-60-6	PBOLT M8X30
ARM-60-7	NUT M32
ARM-60-8	SHAFT SUPPORT COVER
ARM-60-8.1	GASKET
ARM-60-9	UPPER SPACER
ARM-60-10	SLOW SPEED GEAR COVER
ARM-60-11	SLOW SPEED GEAR SPRING
ARM-60-12	PIN M10X35
ARM-60-13	SLOW SPEED GEAR 12T
ARM-60-14	SLOW SPEED GEAR
ARM-60-15	ZERO BEVEL GEAR
ARM-60-16	UPPER CLUTCH GEAR
ARM-60-17	BUSHING
ARM-60-18	SLEEVE CLUTCH
ARM-60-19	SHAFT CENTER
ARM-60-20	KEY 10X10X60
ARM-60-21	KEY 10X10X40
ARM-60-22	KEY 10X10X90
ARM-60-23	BUSHING
ARM-60-24	LOWER CLUTCH GEAR
ARM-60-25	CENTER SHAFT BEARING UPPER
ARM-60-26	BEARING #5211
ARM-60-27	OIL SEAL 55X80X12
ARM-60-28	O RING
ARM-60-29	BEARING #6206
ARM-60-30	TRANSMISSION SHAFT
ARM-60-31	KEY 8X8X30
ARM-60-32	KEY 8X8X30
ARM-60-33	TRANSMISSION SHAFT GEAR
ARM-60-34	LOCK WASHER STW-40
ARM-60-35	GEAR
ARM-60-36	LOCK WASHER STW-35
ARM-60-37	BUSHING
ARM-60-38	SHIFT SHAFT
ARM-60-39	NUT M32
ARM-60-40	SPRING

ARM-60-41	SWITCH PIN
ARM-60-42	YOKE SHIFTER
ARM-60-43	BEARING #6205
ARM-60-44	BEARING #6205
ARM-60-45	KEY 8X8X30
ARM-60-46	WORM GEAR SHAFT
ARM-60-47	WORM WHEEL
ARM-60-48	LOCKWASHER STW-30
ARM-60-49	COVER
ARM-60-50	PLUG ATTACHMENT HUB
ARM-60-51	BOLT NM6X20
ARM-60-52	ATTACHMENT HUB
ARM-60-52-1	OIL SEAL INSIDE OF HUB 30X50X8
ARM-60-53	ATTACHMENT HUB SCREW
ARM-60-54	BUSHING
ARM-60-55	BEVEL DRIVE GEAR
ARM-60-56	SWITCH(ON)
ARM-60-56-1	SWITCH(OFF)
ARM-60-57	WARNING PLATE
ARM-60-58	MICRO SWITCH 3003
ARM-60-59	SWITCH BOARD 42X30X8
ARM-60-60	GEAR BOX
ARM-60-61	SPEED CHANGING MECH.
ARM-60-62	SPEED BALL M10
ARM-60-63	SPRING
ARM-60-64	OIL SEAL 20X30X6
ARM-60-65	SPEED CHANGING MECH.
ARM-60-66	LOCK WASHER STW-20
ARM-60-67	SWITCH PLATE
ARM-60-67	SWITCH PLATE
ARM-60-67-1	PLATE W/ CIRCUIT BOARD
ARM-60-67-2	CIRCUIT BOARD W/OUT PLATE
ARM-60-68	SELECTOR
ARM-60-69	TIMER
ARM-60-70	EMERGENCY BUTTON
ARM-60-71	SPEED CHANGING MECH.
ARM-60-72	SPEED CHANGING HANDLE
ARM-60-73	PLASTIC BALL M10X34
ARM-60-74	NUT 1/2X10MM
ARM-60-75	WASHER 23X39
ARM-60-76	WORM
ARM-60-76-1	SPRING
ARM-60-76-2	WASHER
ARM-60-77	OIL SEAL 30X47X7
ARM-60-78	O RING
ARM-60-79	GASKET
ARM-60-80	MOTOR

ARM-60-81	SPRING WASHER M10
ARM-60-82	BOLT M10X30
ARM-60-83	INTERNAL GEAR
ARM-60-84	BEARING
ARM-60-85	BOLT
ARM-60-86	BOLT
ARM-60-87	LOCKWASHER STW-30
ARM-60-88	BEATER SHAFT GEAR
ARM-60-89	BEARING #6207
ARM-60-90	KEY
ARM-60-91	BEATER SHAFT
ARM-60-92	BEATER PIN
ARM-60-93	BEARING #6208
ARM-60-94	OIL SEAL 40X80X12
ARM-60-95	WASHER
ARM-60-96	BOLT M12X25 S/S
ARM-60-97	SWITCH PUSHER
ARM-60-98	BOLT
ARM-60-99	SAFETY GUARD
ARM-60-100	SAFETY COVER
ARM-60-101	BOLT M8X20
ARM-60-102	BOWL
ARM-60-103	BEATER
ARM-60-104	HOOK
ARM-60-105	WHIP
ARM-60-106	MAIN SWITCH
ARM-60-107	DOOR LOCK
ARM-60-108	SWITCH BOX COVER
ARM-60-109	BOLT M4X40
ARM-60-110	MICRO SWITCH
ARM-60-111	SWITCH BOARD
ARM-60-112	APRON
ARM-60-113	BOLT
ARM-60-114	PEDESTAL
ARM-60-115	PEDESTAL COVER
ARM-60-116	BOLT
ARM-60-117	LOCKWASHER
ARM-60-118	GEAR
ARM-60-119	KEY
ARM-60-120	GEAR SHAFT
ARM-60-121	BEARING
ARM-60-122	BEARING HOUSING
ARM-60-123	BOLT
ARM-60-124	BEARING
ARM-60-125	LOCKWASHER
ARM-60-126	BOWL LIFT WHEEL
ARM-60-127	HANDLE

ARM-60-128	CHAIN GEAR (ELECTIC)
ARM-60-128	CHAIN GEAR (ELECTIC)
ARM-60-129	BOWL LIFT GEAR
ARM-60-130	BEARING
ARM-60-131	BUSHING
ARM-60-132	BEARING
ARM-60-133	KEY
ARM-60-134	SCREW
ARM-60-135	WASHER
ARM-60-136	BOLT
ARM-60-137	BOLT
ARM-60-138	WASHER
ARM-60-139	BRASS NUT
ARM-60-140	BOLT
ARM-60-141	PIN
ARM-60-142	SLIDE WAY(L)
ARM-60-142-1	SLIDE WAY
ARM-60-143	SLIDE WAY HOLDER(L)
ARM-60-143-1	SLIDE WAY HOLDER
ARM-60-144	WASHER
ARM-60-145	BOLT
ARM-60-146	PLASTIC BALL
ARM-60-147	BOWL CLAMP(L)
ARM-60-148	BOWL CLAMP
ARM-60-149	BOWL SUPPORT
ARM-60-150	CHAIN GEAR PIN
ARM-60-151	CHAIN GEAR
ARM-60-151-1	MOTOR PIN
ARM-60-152	CHAIN
ARM-60-153	SCREW
ARM-60-154	RING
ARM-60-155	WASHER
ARM-60-156	ELECTRICAL LIFT MOTOR
ARM-60-157	SCREW
ARM-60-158	MOUNTING BRACKET
ARM-60-159	BEARING
ARM-60-160	SPACER
ARM-60-161	BEARING
ARM-60-162	BOWL SUPPORT COVER
ARM-60-167	INGREDIENT CHUTE
ARM-60-169	NYLON CABLE GLAND
ARM-60-170	CABLE
ARM-60-171	BEARING
ARM-60-172	PLANETARY
ARM-60-173	BOLT
ARM-60-174	COVER BOLT
ARM-60-175	NUT

ARM-60-176	BOLT
ARM-60-177	KEY
ARM-60-178	WASHER
ARM-60-179	BOLT
ARM-60-180	BOLT
ARM-60-181	BOWL HOLDER STEEL
ARM-60-182	BEARING
ARM-60-183	SAFETY GUARD BEARING
ARM-60-184	TRANSFORMER
ARM-60-185	RELAY
ARM-60-186	START CAPACITOR
ARM-60-187	RUN CAPACITOR
ARM-60-188	START CAPACITOR