

# ASP-200 Parts List

**Table 1**

Part#	Description
ASP-200-1-1	COVER
ASP-200-1-2	BOLT
ASP-200-1-3	BOLT
ASP-200-1-4	COOLING FAN
ASP-200-1-5	SIDE PANEL
ASP-200-1-6	BOLT
ASP-200-1-7	BACK PANEL
ASP-200-1-8	SIDE PANEL
ASP-200-1-9	THRUST ROLLER CLUTCH PIN
ASP-200-1-10	THRUST ROLLER SUPPORT GUARD
ASP-200-1-11	THRUST ROLLER SUPPORT GUARD
ASP-200-1-12	THRUST ROLLER
ASP-200-1-13	WASHER
ASP-200-1-14	BOLT
ASP-200-1-15	DRIVE WHEEL PROTECTION COVER
ASP-200-1-16	BOLT
ASP-200-1-17	WASHER
ASP-200-1-18	BOLT
ASP-200-1-19	TOP PLATE
ASP-200-1-20	GUIDE HEAD
ASP-200-1-21	BOLT
ASP-200-1-22	WASHER
ASP-200-1-23	NUT
ASP-200-1-24	DRIVE WHEEL FRONT PLATE
ASP-200-1-25	BOLT
ASP-200-1-26	BOLT
ASP-200-1-27	NUT
ASP-200-1-28	BOLT
ASP-200-1-29	BRACKET
ASP-200-1-30	RING
ASP-200-1-31	SPRING
ASP-200-1-32	ADJUSTING SHAFT
ASP-200-1-33	NUT
ASP-200-1-34	BOLT & NUT
ASP-200-1-35	ROWNO SUPPORT PLATE
ASP-200-1-36	RING
ASP-200-1-37	ELECTRICAL SUPPORT TUBE
ASP-200-1-38	BOLT
ASP-200-1-39	CONTRAL PANEL PLATE
ASP-200-1-40	BOLT

ASP-200-1-41	BOLT
ASP-200-1-42	NUT
ASP-200-1-43	BOLT
ASP-200-1-44	COVER
ASP-200-1-45	BOLT
ASP-200-1-46	NUT
ASP-200-1-47	ELECTRIC BOX
ASP-200-1-48	NUT
ASP-200-1-49	WASHER
ASP-200-1-50	GEAR BOX SUPPORT PLATE
ASP-200-1-51	BOLT
ASP-200-1-52	WASHER
ASP-200-1-53	RING
ASP-200-1-54	WASHER
ASP-200-1-55	FLAT WASHER
ASP-200-1-56	DRIVE WHEEL
ASP-200-1-57	KEYWAY
ASP-200-1-58	SHAFT
ASP-200-1-59	KEYWAY
ASP-200-1-60	NUT
ASP-200-1-61	GEAR BOX ADJUSTING PLATE
ASP-200-1-62	BOLT
ASP-200-1-63	SHAFT
ASP-200-1-64	NUT
ASP-200-1-65	FLAT WASHER
ASP-200-1-66	BOLT
ASP-200-1-67	WASHER
ASP-200-1-68	MOTOR
ASP-200-1-69	BOLT
ASP-200-1-70	BOTTOM PANEL

**Table 2**

<b>Part#</b>	<b>Description</b>
ASP-200-2-1	BOWL
ASP-200-2-2	BOWL SHAFT
ASP-200-2-3	BOLT
ASP-200-2-4	OIL SEAL
ASP-200-2-5	BEARING
ASP-200-2-6	BEARING
ASP-200-2-7	NUT
ASP-200-2-8	BEARING
ASP-200-2-9	C CLAMP
ASP-200-2-10	BOWL DOLLY
ASP-200-2-11	FLAT WASHER
ASP-200-2-12	SPRING WASHER
ASP-200-2-13	BEARING

ASP-200-2-14	BOLT
ASP-200-2-15	SIDE PLATE (L)
ASP-200-2-16	SIDE PLATE (R)
ASP-200-2-17	BOLT
ASP-200-2-18	CASTER
ASP-200-2-19	WHEEL
ASP-200-2-20	BOLT
ASP-200-2-21	NUT
ASP-200-2-22	SHAFT
ASP-200-2-23	BUSHING
ASP-200-2-24	WASHER
ASP-200-2-25	SPRING WASHER
ASP-200-2-26	NUT
ASP-200-2-27	MICRO SWITCH PIN
ASP-200-2-28	CASTER
ASP-200-2-29	WASHER
ASP-200-2-30	SPRING WASHER
ASP-200-2-31	BOLT

**Table 3**

Part#	Description
ASP-200-3-1	POWER LIGHT
ASP-200-3-2	BOWL RAISE BUTTON
ASP-200-3-3	BOWL LOWER
ASP-200-3-4	SLOW START
ASP-200-3-5	SLOW TIMER
ASP-200-3-6	TOGGLE SWITCH
ASP-200-3-7	FAST TIMER
ASP-200-3-8	FAST START
ASP-200-3-9	EMERGENCY STOP BUTTON
ASP-200-3-10	MAIN POWER SWITCH
ASP-200-3-11	BACK COVER PANEL

**Table 4**

Part#	Description
ASP-200-4-1	OIL HYDRAULIC PIPE CONNECTOR
ASP-200-4-2	OIL HYDRAULIC PIPE
ASP-200-4-3	OIL HYDRAULIC PIPE CONNECTOR
ASP-200-4-4	OIL HYDRAULIC PIPE
ASP-200-4-5	OIL HYDRAULIC PIPE CONNECTOR
ASP-200-4-6	OIL HYDRAULIC PIPE
ASP-200-4-7	OIL HYDRAULIC PIPE CONNECTOR
ASP-200-4-8	OIL HYDRAULIC PIPE
ASP-200-4-9	OIL HYDRAULIC PIPE CONNECTOR
ASP-200-4-10	OIL HYDRAULIC PIPE
ASP-200-4-11	OIL HYDRAULIC PIPE CONNECTOR

ASP-200-4-12	OIL HYDRAULIC PIPE
ASP-200-4-13	HYDRAULIC CONTROL VALVE
ASP-200-4-14	HYDRAULIC CONTROL VALVE
ASP-200-4-15	HYDRAULIC CONTROL VALVE
ASP-200-4-16	GAUGE PRESSURE
ASP-200-4-17	VALVE ADJUSTING
ASP-200-4-18	CONNECTOR
ASP-200-4-19	SCREW
ASP-200-4-20	WASHER
ASP-200-4-21	VALVE SUPPORT
ASP-200-4-22	CAP
ASP-200-4-23	VALVE RELEASE
ASP-200-4-24	MOTOR
ASP-200-4-25	HYDRAULIC TANK
ASP-200-4-26	SCREW
ASP-200-4-27	OIL LEVEL WINDOW
ASP-200-4-28	SCREW
ASP-200-4-29	WASHER

**Table 5**

<b>Part#</b>	<b>Description</b>
ASP-200-5-1	BOLT
ASP-200-5-2	WASHER
ASP-200-5-3	HINGE PLATE
ASP-200-5-4	HYDRAULIC LOCK PIN
ASP-200-5-5	C CLAMP
ASP-200-5-6	HYDRAULIC LOCK HEAD
ASP-200-5-7	PIPE CONNECTOR
ASP-200-5-8	PIPE FITTING
ASP-200-5-9	PIPE FITTING
ASP-200-5-10	HYDRAULIC PIPE
ASP-200-5-11	PIPE CONNECTOR
ASP-200-5-12	PIPE FITTING
ASP-200-5-13	PIPE FITTING
ASP-200-5-14	HYDRAULIC PIPE
ASP-200-5-15	HYDRALIC CYLINDER
ASP-200-5-16	C CLAMP
ASP-200-5-17	HYDRAULIC LOCK PIN
ASP-200-5-18	HOLDING SHAFT
ASP-200-5-19	BUSHING
ASP-200-5-20	PIPE CONNECTOR
ASP-200-5-21	HYDRAULIC PIPE
ASP-200-5-22	PIPE CONNECTOR
ASP-200-5-23	PIPE FITTING
ASP-200-5-24	PIPE FITTING
ASP-200-5-25	HYDRAULIC PIPE

ASP-200-5-26	HYDRAULIC CYLINDER
ASP-200-5-27	HYDRAULIC JAW
ASP-200-5-28	MICRO SWITCH
ASP-200-5-29	BOLT
ASP-200-5-30	MICRO SWITCH HOLDER
ASP-200-5-31	WASHER
ASP-200-5-32	SPRING WASHER
ASP-200-5-33	NUT
ASP-200-5-34	C CLAMP
ASP-200-5-35	BUSHING
ASP-200-5-36	JAW SHAFT
ASP-200-5-37	HYDRAULIC LOCK HEAD
ASP-200-5-38	BUSHING
ASP-200-5-39	C CLAMP

**Table 6**

<b>Part#</b>	<b>Description</b>
ASP-200-6-1	BOLT
ASP-200-6-2	DRIVE BELT
ASP-200-6-3	BOLT
ASP-200-6-4	WASHER
ASP-200-6-5	BOLT
ASP-200-6-6	SPIRAL PULLEY
ASP-200-6-7	BEARING
ASP-200-6-8	WASHER
ASP-200-6-9	FLAT WASHER
ASP-200-6-10	SCREW PIN
ASP-200-6-11	PROTECTION PLATE 1
ASP-200-6-12	PROTECTION PLATE 2
ASP-200-6-13	PROTECTION PLATE 3
ASP-200-6-14	PROTECTION PLATE 4
ASP-200-6-15	BOLT
ASP-200-6-16	WASHER
ASP-200-6-17	PULLEY SHAFT SUPPORT
ASP-200-6-18	SMALL PULLEY
ASP-200-6-19	BOLT
ASP-200-6-20	BOLT
ASP-200-6-21	WASHER
ASP-200-6-22	BOLT
ASP-200-6-23	WASHER
ASP-200-6-24	MOTOR HOLDING PLATE
ASP-200-6-25	KEYWAY
ASP-200-6-26	MOTOR
ASP-200-6-27	WASHER
ASP-200-6-28	SPACER
ASP-200-6-29	DIVIDING BAR

ASP-200-6-30	BOLT
ASP-200-6-31	BEARING
ASP-200-6-32	OIL SEAL
ASP-200-6-33	KEYWAY
ASP-200-6-34	SPIRAL SUPPORTING SHAFT
ASP-200-6-35	CUP
ASP-200-6-36	HOOK
ASP-200-6-37	BOLT
ASP-200-6-38	MAIN PULLEY SUPPORT PLATE
ASP-200-6-39	BOLT
ASP-200-6-40	WASHER
ASP-200-6-41	ROUND WASHER
ASP-200-6-42	MACHINE FRAME
ASP-200-6-43	BUSHING
ASP-200-6-44	BOLT
ASP-200-6-45	SPLASH GUARD
ASP-200-6-46	SAFTY GUARD