

ASP-80

Parts List

Table 1

Part#	Description
ASP-80-1-1	BELTS SPZ 1637
ASP-80-1-2	WASHER
ASP-80-1-3	SPIRAL PULLEY P.D 430 WITH 6 RACES
ASP-80-1-4	BEARING 6309 2RS
ASP-80-1-5	COLUMN
ASP-80-1-6	BEARING 3211
ASP-80-1-7	SEAL 65/100/12
ASP-80-1-8	SPIRAL SUPPORTING SHAFT
ASP-80-1-9	CUP
ASP-80-1-10	SPIRAL WITH HUB
ASP-80-1-11	SPIRAL ENGINE 132 4/8 POLES KW 2/4 B5
ASP-80-1-12	SPIRAL ENGINE FRAME
ASP-80-1-13	SPIRAL PULLEY OF ENGINE P.D. 62.5 WITH 6 RACES
ASP-80-1-14	BOLTS FOR DOUGH HOOK

Table 2

Part#	Description
ASP-80-2-1	BOWL SUPPORTING SHAFT
ASP-80-2-2	SEAL 65/100/12
ASP-80-2-3	BEARING 3211
ASP-80-2-4	BOWL SUPPORTING SHAFT
ASP-80-2-5	BEARING 6309 2RS
ASP-80-2-6	BELTS SPZ 1412
ASP-80-2-7	BOWL PULLEY P.D 430 WITH 5 RACES
ASP-80-2-8	WASHER
ASP-80-2-9	CLUTCH PIN OF THE TRANSMISSION SUPPORT
ASP-80-2-10	BELT TIGHTENING PULLEY
ASP-80-2-11	BELTS SPZ 1637
ASP-80-2-12	WASHER
ASP-80-2-13	SNUB PIPE PULLEY P.D 480
ASP-80-2-14	TRANSMISSION SHAFT
ASP-80-2-15	BEARING 6208 2RS
ASP-80-2-16	TRANSMISSION SUPPORT
ASP-80-2-17	BEARING 6208 2RS
ASP-80-2-18	SEEGER RING E 39 UNI
ASP-80-2-19	BOWL DRIVING PULLEY P.D.56 WITH 5 RACES
ASP-80-2-20	WASHER
ASP-80-2-21	BELT TIGHTENING PULLEY
ASP-80-2-22	ENGINE FRAME
ASP-80-2-23	NUT FOR THE BELT TIGHTENING PULLEY

ASP-80-2-24	CLUTCH PIN OF THE ENGINE FRAME
ASP-80-2-25	BOWL ENGINE 80 6 POLES KW 0,55
ASP-80-2-26	PULLEY OF THE BOWL ENGINE P.D.45 WITH 2 RACES

Table 3

Part#	Description
ASP-80-3-1	BOWL D.680
ASP-80-3-2	MACHINE FRAME
ASP-80-3-3	FRONT REVOLVING WHEEL
ASP-80-3-4	BASE OF THE FRONT FOOD
ASP-80-3-5	PIN OF THE FRONT FOOD
ASP-80-3-6	HANDWHEEL OF THE FRONT FOOD
ASP-80-3-7	BASE GUARD
ASP-80-3-8	BACK WHEEL
ASP-80-3-9	WHEELS CLUTCH PIN
ASP-80-3-10	BUSH FOR THE CONNECTION OF THE GUARD
ASP-80-3-11	RIGHT ARM
ASP-80-3-12	GUARD REGULATING ECCENTRIC PIN
ASP-80-3-13	GUARD FASTENING BRACKET
ASP-80-3-14	STATIONERY GUARD
ASP-80-3-15	THRUST ROLLER SUPPORT GUARD
ASP-80-3-16	THRUST ROLLER
ASP-80-3-17	BEARING 6202 2RS
ASP-80-3-18	RIGHT THRUST ROLLER SUPPORT
ASP-80-3-19	THRUST ROLLER CLUTCH PIN
ASP-80-3-20	LEFT THRUST ROLLER SUPPORT
ASP-80-3-21	MOBILE GUARD
ASP-80-3-22	LEFT ARM
ASP-80-3-23	CONTROL PANEL
ASP-80-3-24	COVER HEAD
ASP-80-3-25	GUARD HEAD
ASP-80-3-26	MICROSWITCH SAFETY GUARD
ASP-80-3-27	CAM MICROSWITCH
ASP-80-3-28	CLUTCH PIN SAFETY GUARD
ASP-80-3-29	CLOSING HANDWHEEL GUARD
ASP-80-3-30	MAIN SWITCH
ASP-80-3-31	COLUMN CLOSING GUARD
ASP-80-3-32	LOCK PLUG
ASP-80-3-33	POWER CORD
ASP-80-3-34	NUT