

TB-12GS

Parts List

Part #	Description
TB-12GS-1	SCREW RING
TB-12GS-2.1	PLATE 1/8"
TB-12GS-2.2	PLATE 3/16"
TB-12GS-2.3	PLATE 1/4"
TB-12GS-2.4	PLATE 3/8"
TB-12GS-2.5	PLATE 1/2"
TB-12GS-3	KNIFE
TB-12GS-4	SQUARE SCREW
TB-12GS-5	WORM
TB-12GS-6	BODY
TB-12GS-7	MEAT PAN
TB-12GS-8	MEAT PUSHER
TB-12GS-9	FUNNER
TB-12GS-10	SCREW RING
TB-12GS-11	HUB
TB-12GS-12	BUSHING
TB-12GS-13	OIL SEAL
TB-12GS-14	BEARING
TB-12GS-15	SQUARE SHAFT
TB-12GS-16	PIN
TB-12GS-17	WORM WHEEL
TB-12GS-18	BUSHING
TB-12GS-19	BEARING
TB-12GS-20	O RING
TB-12GS-21	GEAR CASE
TB-12GS-22	MOTOR CASE
TB-12GS-23	OIL SEAL
TB-12GS-24	MOTOR COVER
TB-12GS-25	TERMINAL BOARD
TB-12GS-26	SCREW
TB-12GS-27	START WINDING
TB-12GS-28	SCREW
TB-12GS-29	SCREW
TB-12GS-30	SCREW
TB-12GS-31	WORM GEAR
TB-12GS-32	OIL SEAL
TB-12GS-33	BEARING
TB-12GS-34	PIN
TB-12GS-35	ROTOR
TB-12GS-37	BEARING
TB-12GS-38	CAPACITOR
TB-12GS-39	NUT
TB-12GS-40	SCREW

TB-12GS-41	HANDLE
TB-12GS-42	LOCK SCREW
TB-12GS-43	STAINLESS STEEL CASE
TB-12GS-44	CABLE GLAND
TB-12GS-45	BOTTOM COVER
TB-12GS-46	RUBBER PAD
TB-12GS-47	CABLE WIRE
TB-12GS-48	SWITCH PLATE
TB-12GS-49	SCREW
TB-12GS-50	SWITCH
TB-12GS-51	NYLON BUSHING