

Part Numbers

Equip Faucet and Pre-Rinse Unit Parts List

| | |
|--|-----------|
| Ceramic Cartridge, Hot | 013787-45 |
| Ceramic Cartridge, Cold | 013788-45 |
| Handle Screw, Plain (10) | 013849-45 |
| Lever Handle Kit (includes color coded screws) | 5-HDL-L |
| 3/4-27UN Full Flow Laminar Outlet | 014250-45 |
| 3" Rigid Gooseneck w/ Laminar Outlet | 5SP-03 |
| Nut, Swivel | 013839-25 |
| O-Ring, Swivel Piece (10) | 013848-45 |
| 5-1/2" Swivel Gooseneck w/ Laminar Outlet | 5SP-05 |
| 6" Swing Nozzle w/ Laminar Outlet | 5SP-06 |
| 8" Swing Nozzle w/ Laminar Outlet | 5SP-08 |
| 10" Swing Nozzle w/ Laminar Outlet | 5SP-10 |
| 12" Swing Nozzle w/ Laminar Outlet | 5SP-12 |
| 14" Swing Nozzle w/ Laminar Outlet | 5SP-14 |
| 16" Swing Nozzle w/ Laminar Outlet | 5SP-16 |
| 18" Swing Nozzle w/ Laminar Outlet | 5SP-18 |
| Check Valve, 20mm | 013840-45 |
| Check Valve Adapter, 1/2" BSP | 010321-45 |
| Overhead Spring, PRU | 014068-45 |
| Finger Hook Assembly | 004R |
| Spray Valve Assembly, PRU | 5SV |
| Bonnet Valve Assembly, PRU | 002856-40 |
| Bumper, Spray Face & Screw for PRU | 5SV-RK |
| Hose Assembly, 44" | 5HSE44 |
| Hose Assembly, 68" | 5HSE68 |
| Hose Assembly, 84" | 5HSE84 |
| Hose Assembly, 96" | 5HSE96 |
| 1/2" NPT Supply Nipple Kit (2) | B-0425-M |
| 1/2" NPT Male Elbow Kit (2) | B-0230-K |
| 1/2" NPT Female Eccentric Flange | 00AA |
| Wall Bracket Assembly, 6" | 013716-40 |
| Riser, 18" | 000369-40 |

Installation and Maintenance Instructions

EQUIP 8" WALL-MOUNT FAUCETS AND PRE-RINSE UNITS



Limited One Year Warranty

Equip warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, Equip shall, at its option, repair and/or replace it. To obtain warranty service, products must be returned to...

Equip Foodservice Accessories
Attn: Warranty Repair Department
P.O. Box 1088, 2 Saddleback Cove
Travelers Rest, SC 29690

Shipping, freight, insurance, and other transportation charges of the product to Equip and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by Equip of the returned product. This warranty does not cover items which have received

secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall Equip be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

P/N: 098-013852-45 Rev.1
Date: 04-22-14
Drawn: TEH
Checked: DMH 04-23-14
Approved: JHB 04-28-14



Instructions

Note: If unit is equipped with a rigid or swivel spout/gooseneck, install spout/gooseneck first.

Rigid Gooseneck Installation:

1. Apply Teflon tape, Loctite, or pipe joint compound to threads of gooseneck. Thread gooseneck into outlet hole of body until joint is secure and gooseneck faces desired direction.

Swing Nozzle/Swivel Gooseneck Installation:

Note: Silicon grease is applied to the interior swivel cavity of the body prior to shipment. No additional grease is required.

2. Remove plastic cap from body outlet.
3. Insert nozzle/gooseneck into body cavity.
4. Tighten swivel lock nut using 1 5/16" wrench.

Faucet Body Installation:

5. Flush debris from water lines then shut off water supply.
6. Drill two holes, approximately 1" to 1-1/4" diameter, in wall or backsplash of sink. Holes must be 8" between centers.
7. Install washers and nuts onto [B-0230-K](#) supply elbow kits, or similar 1/2" NPT inlets, as far onto threaded ends as possible. Apply Teflon tape or thread sealant to 1/2" NPT threads of these ends and pass through from back side of wall openings. Thread elbow ends into the inlet holes of the faucet flanges until the joints are secure.
8. Apply plumbers putty to faucet flange mounting surfaces.
9. Secure faucet in place with supply elbow kit washers and nuts.
10. Connect water supplies to other end of elbows.

Pre-Rinse Installation:

11. After installation of the faucet body per steps 5 through 10, apply Teflon tape, Loctite, or pipe thread compound on the bottom of the riser. Slide finger hook onto riser before riser installation. Thread riser into outlet hole of faucet body until joint is secured.
12. Install wall bracket and finger hook, tightening all fasteners securely.
13. Rotate spring and hose assembly until they face desired direction.
14. Turn on water supplies and check for leaks.

Instructions

