

# VULCAN


## CATALOG OF REPLACEMENT PARTS

### MODEL VFB2 ELECTRIC *FlashBake*® OVEN

MODEL

ML-126582	VFB2-1
ML-126583	VFB2-2



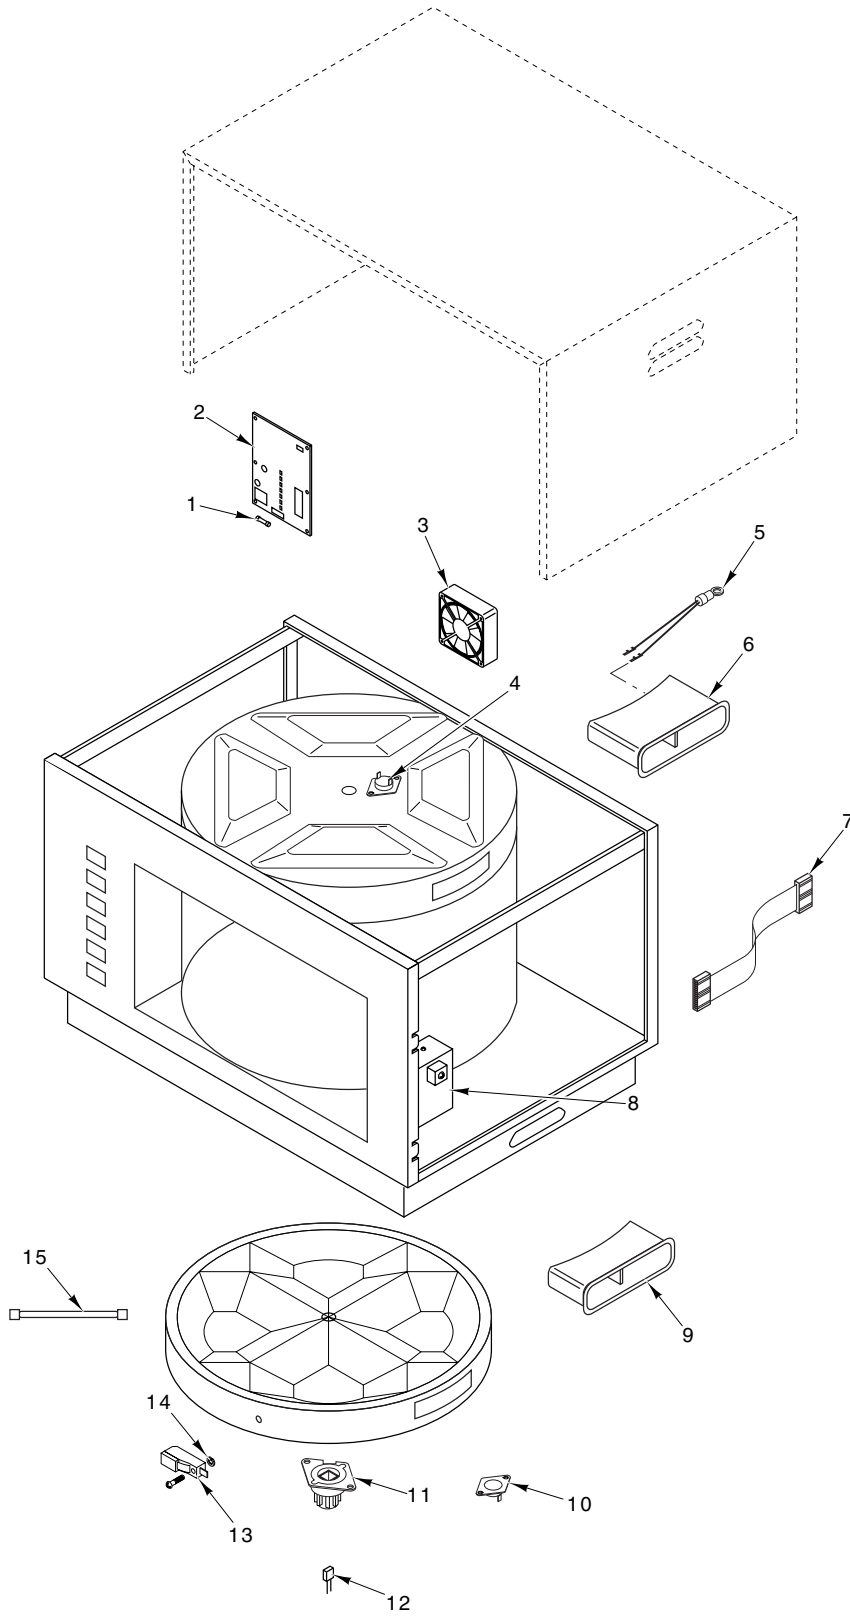


PL-55493

**INTERIOR PARTS**

**INTERIOR PARTS**

ILLUS. PL-55493	PART NO.	NAME OF PART	AMT.
1	00-853168-00016	Fuse .....	1
2	00-853168-00011	Board – Power Control .....	1
3	00-853168-00009	Fan .....	1
4	00-853168-00029	Thermostat – High Limit .....	1
5	00-853168-00031	Thermistor .....	1
6	00-853168-00017	Duct – Upper Exhaust .....	2
7	00-853168-00015	Cable – Ribbon Control .....	1
8	00-853168-00006	Latch Assy .....	1
9	00-853168-00018	Duct – Lower Exhaust .....	2
10	00-853168-00029	Thermostat – High Limit .....	1
11	00-853168-00030	Post – Center Lamp .....	1
12	00-853168-00032	Sensor – Pan .....	1
13	00-853168-00001	Socket – Lamp .....	8
14	00-853168-00002	Nut (3 mm) .....	8
15	00-853168-00003	Lamp .....	8

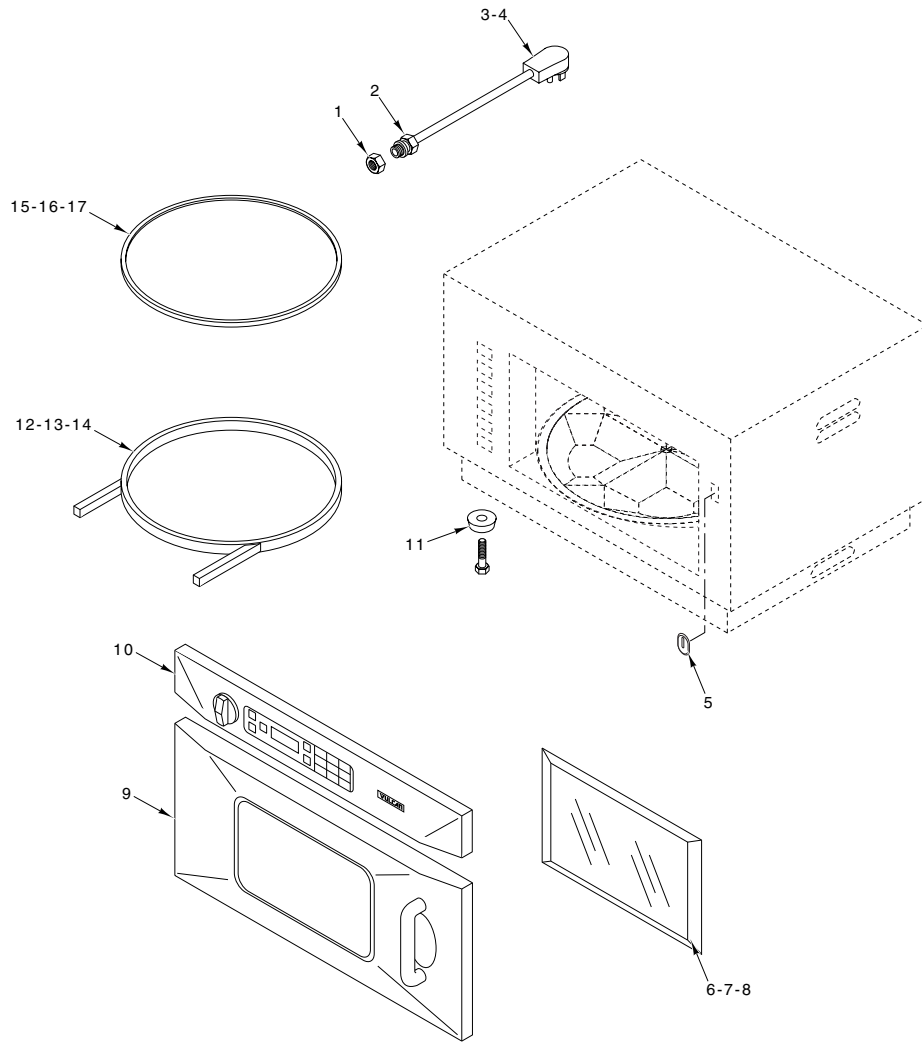

PL-55492

**EXTERIOR AND COOKING SURFACE**

ILLUS.	PART NO.	NAME OF PART	AMT.
	PL-55492		
1	00-853168-00022	Nut – Strain Relief .....	1
2	00-853168-00021	Strain Relief – Power Cord .....	1
3	00-853168-00019	Cord – Power (Domestic) .....	1
4	00-853168-00020	Cord – Power (Canadian) .....	1
5	00-853168-00012	Bumper – Door .....	1
6	00-853168-00008	Glass – Inner Door Service Assy. (Includes Items 7 & 8) .....	1
7	00-853168-00027	Window – Inner (W/Film) .....	1
8	00-853168-00028	Gasket – Inner Window .....	1
9	00-853168-00007	Door – Outer Assy. ....	1
10	00-853168-00014	Bezel Assy. (SST) .....	1
11	00-853168-00010	Foot .....	4
12	00-853168-00005	Glass – Lower Service Assy. (Includes Items 13 & 14) .....	1
13	00-853168-00025	Glass – Lower .....	1
14	00-853168-00026	Gasket – Lower Glass .....	1
15	00-853168-00004	Glass – Upper Service Assy. (Includes Items 16 & 17) .....	1
16	00-853168-00023	Glass – Upper .....	1
17	00-853168-00024	Gasket – Upper Glass .....	1