

# **VULCAN**

## CATALOG OF REPLACEMENT PARTS


### E24L, E36L, E48L & E60L SERIES ELECTRIC RESTAURANT RANGES

#### MODELS

E24L	ML-052361
E36L	ML-052362
E48L	ML-052363
E60L	ML-052364




**For additional information on Vulcan-Hart Company or to locate an authorized parts and service provider in your area, visit our website at [www.vulcanhart.com](http://www.vulcanhart.com)**

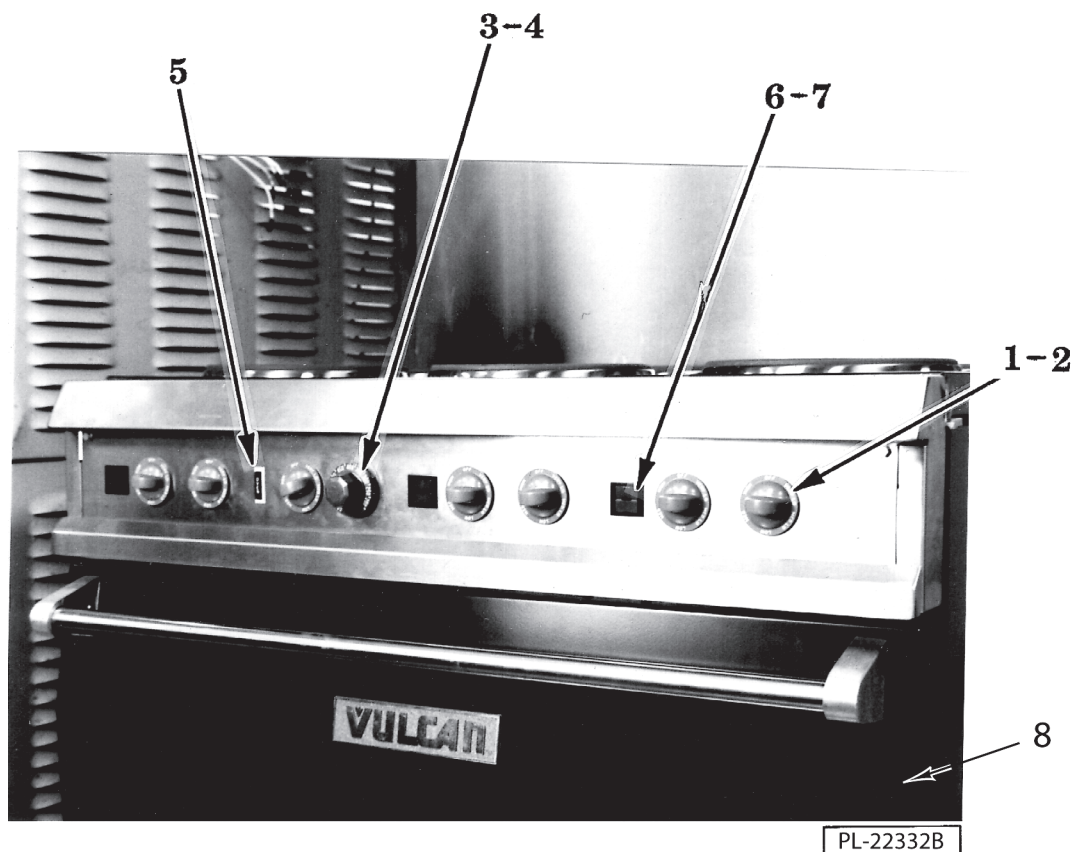


**SWITCH PANEL ASSY.**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-22332B			
1	00-411503-00004	Switch - Infinite (208/240 V.)	AR
2	00-412251-00001	Knob - Infinite Switch	AR
3	00-411506-00014	Thermostat (Oven)	1 or 2
4	00-418060-00002	Dial - Thermostat (Oven)	1 or 2
5	00-411496-000E5	Indicator Light (Oven)	AR
6	00-421194-00001	Indicator Light (Top Section - Double Lens)	AR
7	00-421194-00002	Indicator Light (Top Section - Single Lens)	AR
8	00-421945-00G42	Oven Door Assy. (36") (E36L)	1
	00-421945-00G29	Oven Door Assy. (30") (E60L)	2
	00-421945-00G19	Oven Door Assy. (24") (E24L, E48L)	1 or 2
	SC-036-14	Door Handle Screw	2
	00-411506-00006	Thermostat (Griddle)	AR
	00-418060-00002	Dial - Thermostat (Griddle)	AR
	00-411496-000E4	Indicator Light (Griddle)	AR
	00-421248-00001	Switch - On/Off (Hot Top)	AR
	00-421253-00001	Knob - On/Off Switch (Hot Top)	AR
	00-421249-00001	Switch 4 Heat (Hot Top)	AR
	00-421254-00001	Knob - 4 Heat Switch (Hot Top)	AR
	00-421158-00001	Terminal Block (85-amp, 2-pole)	AR
	00-355798-00001	Switch 3 Heat (480V French Plates)	AR
	00-411506-00014	Thermostat (480V Griddle & Hot Top)	AR

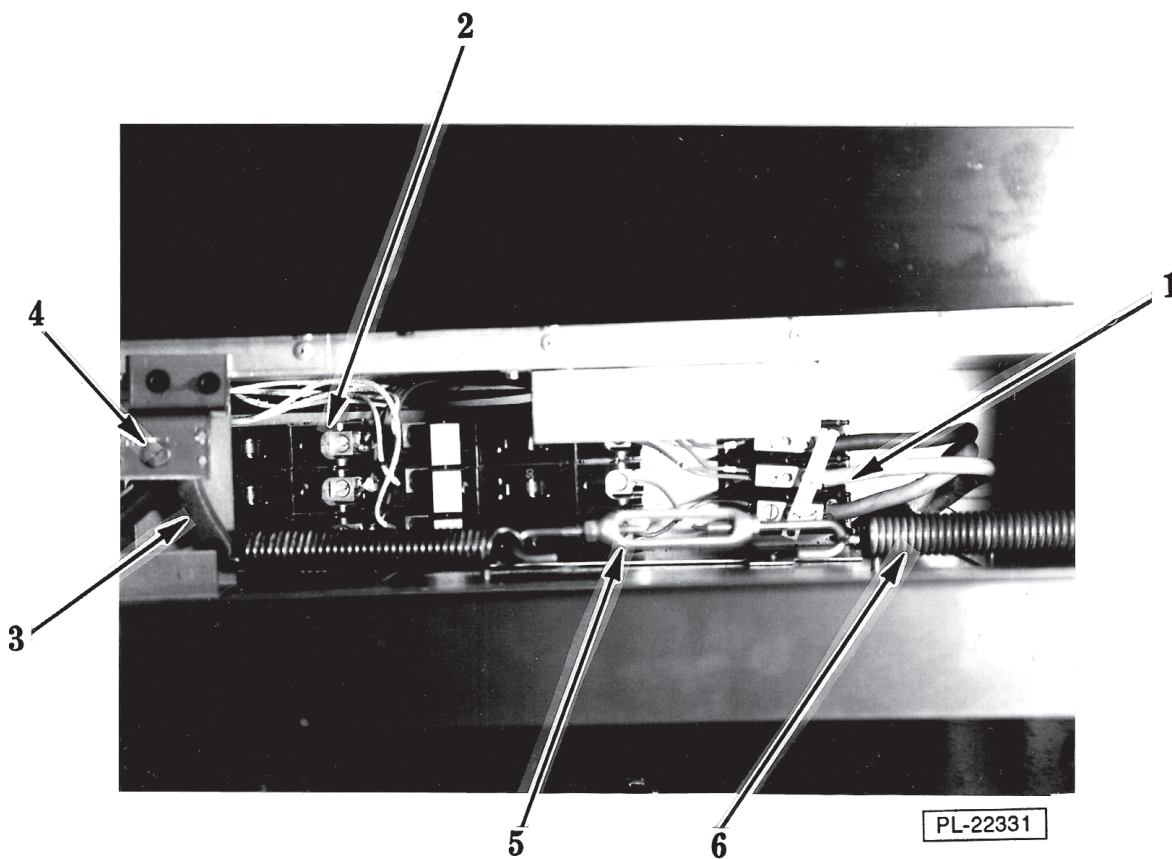


**CONNECTION BLOCK ASSY. &  
DOOR MECHANISM**

ILLUS. PL-22331	PART NO.	NAME OF PART	AMT.
1	00-410472-00008	Terminal Block .....	1
2	00-411501-00014	Circuit Breaker .....	AR
3	00-403956-00001	Crank - Bell .....	2
4	00-403971-00001	Pin - Bell Crank .....	2
5	00-417865-00001	Turnbuckle (36") .....	1
6	00-404053-00001	Spring - Oven Door (36") .....	2
	00-412014-00001	Spring - Oven Door (24") .....	1
	00-413342-00001	Spring - Oven Door (60") .....	2
	00-417856-00001	Lug - Grounding (With Set Screw) .....	1
	00-421301-00001	Cover - Breaker .....	1
	00-413381-00001	Door Hook (RH) .....	1
	00-413381-00002	Door Hook (LH) .....	1
	00-410472-00011	Terminal Block (3-pole) (E60L) (E36L 480V) .....	AR
	00-411497-000B1	Contactor (240V 2-pole) (480V Units) .....	AR
	00-411500-00006	Transformer (480V - 240V) .....	AR

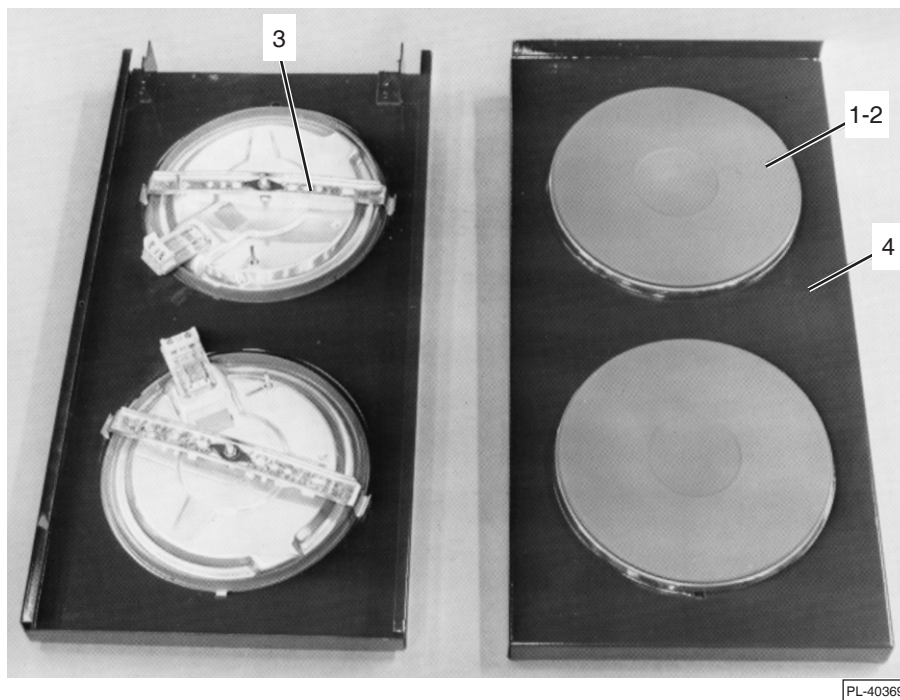



**FRENCH PLATE ASSY.**

ILLUS. PL-40369	PART NO.	NAME OF PART	AMT.
1	00-421240-00001	French Plate Element 208V (EGO French Plate Assy.) .....	AR
2	00-421240-00002	French Plate Element 240V (EGO French Plate Assy.) .....	AR
3	00-415048-00001	Clamp .....	AR
4	00-421191-000G1	Aeration Plate .....	2
	00-421243-00001	Bracket - Hold Down .....	AR
	00-421240-00003	French Plate Element 480V (EGO French Plate Assy.) .....	AR
	00-497042-000G1	Power Harness - French Plate .....	AR
	00-421152-000G1	French Plate Harness (36") .....	AR

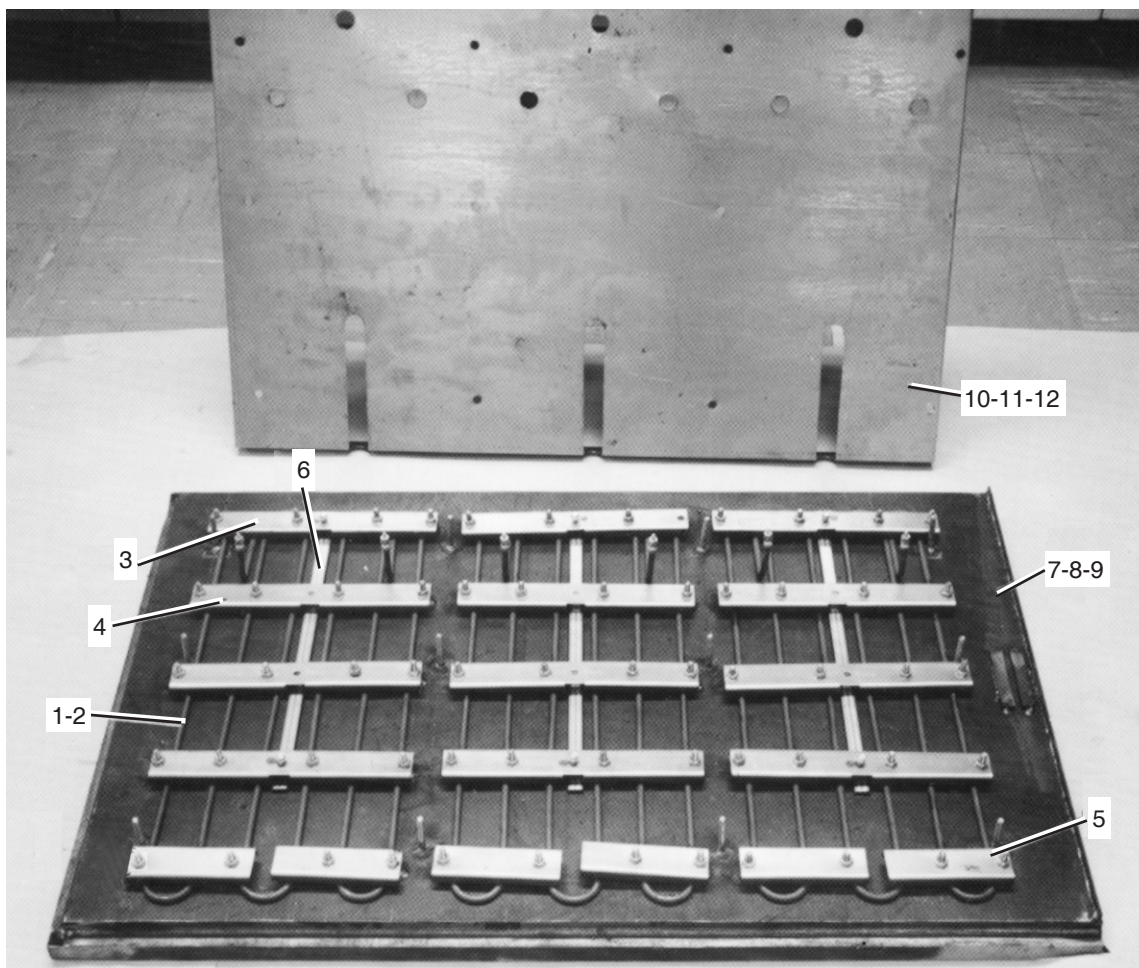

### GRIDDLES & HOT TOP UNIT

ILLUS. PL-40370	PART NO.	NAME OF PART	AMT.
1	00-407774-00001	Element - Griddle 208 V. ....	AR
2	00-407774-00002	Element - Griddle 240 V. ....	AR
3	00-418911-000G1	Clamp Assy. - Griddle Element .....	AR
4	00-406586-00001	Clamp - Front Element .....	AR
5	00-406586-00004	Clamp - Rear Element .....	AR
6	00-406509-00001	Clamp - Thermostat Bulb .....	AR
7	00-421144-000G1	Top - Griddle (12" Griddle) .....	1
8	00-406594-000G1	Top - Griddle (24" Griddle) .....	1
9	00-413631-000G1	Top - Griddle (36" Griddle) .....	1
10	00-421145-00001	Cover - Element (12" Griddle) .....	1
11	00-408283-00001	Cover - Element (24" Griddle) .....	1
12	00-413613-00001	Cover - Element (36" Griddle) .....	1
	00-413507-00002	Collector - Grease .....	1
	00-421320-00001	Hot Top Unit 208 V. ....	AR
	00-421320-00002	Hot Top Unit 240 V. ....	AR
	00-421320-00003	Hot Top Unit 480 V. ....	AR
	00-421190-00001	Support - Hot Top .....	AR
	00-421243-00001	Bracket - Hold Down .....	AR
	00-407774-00003	Element - Griddle 480 V. ....	AR

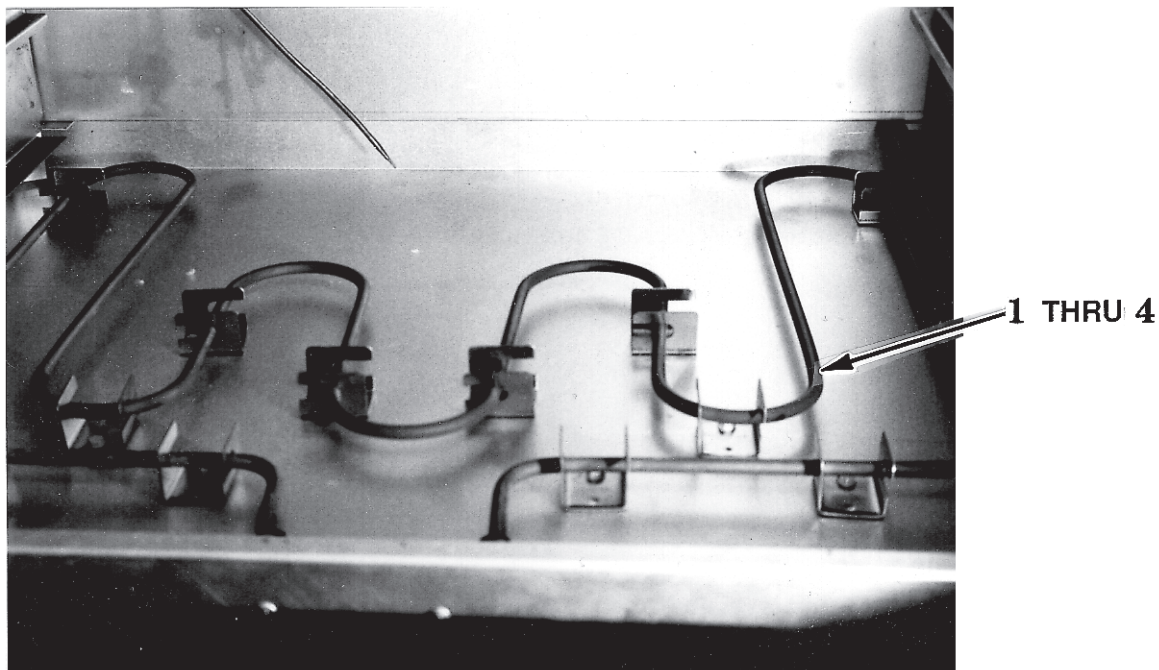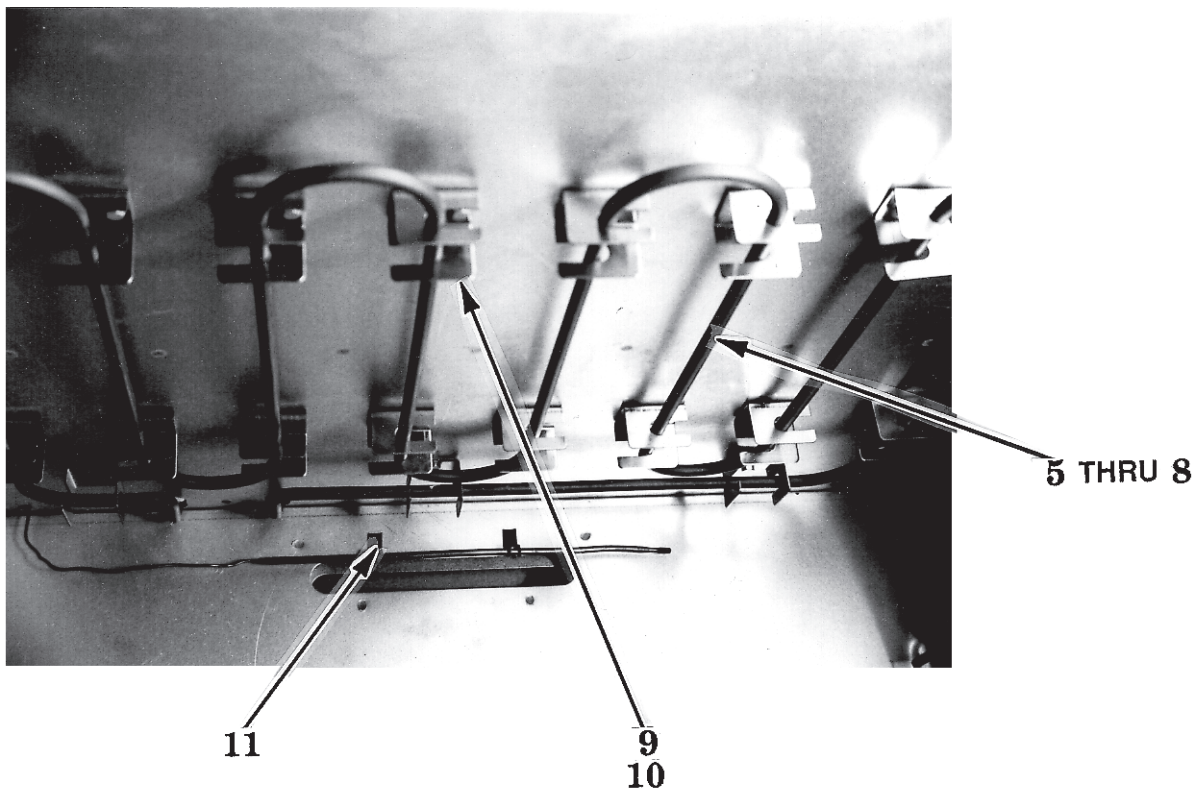

PL-22330

OVEN ELEMENTS

**OVEN ELEMENTS**

ILLUS. PL-22330	PART NO.	NAME OF PART	AMT.
1	00-421305-00001	Oven Element - Lower 208 V.(E24L & E48L) .....	1 or 2
2	00-421305-00002	Oven Element - Lower 240 V.(E24L & E48L) .....	1 or 2
3	00-421304-00001	Oven Element - Lower 208 V.(E36L & E60L) .....	1 or 2
4	00-421304-00002	Oven Element - Lower 240 V.(E36L & E60L) .....	1 or 2
5	00-421169-00001	Oven Element - Upper 208 V.(E24L & E48L) .....	1 or 2
6	00-421169-00002	Oven Element - Upper 240 V.(E24L & E48L) .....	1 or 2
7	00-421168-00001	Oven Element - Upper 208 V.(E36L & E60L) .....	1 or 2
8	00-421168-00002	Oven Element - Upper 240 V.(E36L & E60L) .....	1 or 2
9	00-412925-00001	Clamp - Element .....	AR
10	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT .....	AR
11	00-415677-00001	Clip - Capillary .....	AR
	00-417210-00001	Oven Bottom (E24L & E48L) .....	1 or 2
	00-413234-00001	Oven Bottom (E36L & E60L) .....	1 or 2
	00-417248-00001	Oven Rack (E24L & E48L) .....	AR
	00-413300-00001	Oven Rack (E36L & E60L) .....	AR
	00-419645-000G1	Oven Lining Assy. (LH or RH) .....	AR
	00-421168-00003	Oven Element - Upper 480 V.(E36L) .....	1
	00-421304-00003	Oven Element - Lower 480 V.(E36L) .....	1

**BASIC BODY PARTS**

ILLUS.	PART NO.	NAME OF PART	AMT.
	00-421204-00001	Body Back E24L .....	1
	00-421128-00001	Body Back E36L .....	1
	00-421224-00001	Body Back E48L .....	1
	00-421174-00001	Body Back E60L .....	1
	00-417212-00003	Side - Body (RH or LH) (SST) .....	2
	00-422012-000G1	Front Top Assy. E24L (Prior to May 2006) .....	1
	00-422012-000G2	Front Top Assy. E36L (Prior to May 2006) .....	1
	00-422012-000G3	Front Top Assy. E48L (Prior to May 2006) .....	1
	00-422012-000G4	Front Top Assy. E60L (Prior to May 2006) .....	1
	00-424924-000G1	Front Top Assy. E24L (May 2006 to Present) .....	1
	00-424924-000G2	Front Top Assy. E36L (May 2006 to Present) .....	1
	00-424924-000G3	Front Top Assy. E48L (May 2006 to Present) .....	1
	00-424924-000G4	Front Top Assy. E60L (May 2006 to Present) .....	1
	00-421164-00002	Support - Grease Collector (SST) .....	1
	00-417631-00001	Drip Pan (E24L, E48L & E60L) .....	AR
	00-424919-00001	Handle - Drip Pan (E24L, E48L & E60L) .....	AR
	00-417229-00001	Drip Pan (E36L & E60L) .....	AR
	00-424920-00001	Handle - Drip Pan (E36L & E60L) .....	AR
	00-417330-00001	Splash Back Assy.(23" SST) E24L .....	1
	00-417331-00001	Splasher Back Assy.(23" SST) E36L .....	1
	00-417332-00001	Splasher Back Assy.(23" SST) E48L .....	1
	00-417333-00001	Splasher Back Assy.(23" SST) E60L .....	1
	00-417243-000G1	Shelf Assy. E24L .....	1
	00-417244-000G1	Shelf Assy. E36L .....	1
	00-417245-000G1	Shelf Assy. E48L .....	1
	00-417246-000G1	Shelf Assy. E60L .....	1
	00-413112-00001	Leg 6" (PTD) .....	4
	00-413112-00012	Leg 6" (SST) .....	4
	00-497001-00001	Caster w/o Brake .....	4
	00-497001-00002	Caster w/Brake .....	4
	00-421115-000G1	Kick Panel Assy. E24L (Prior to December 2002) .....	1
	00-428194-000G1	Kick Panel Assy. E24L (December 2002 to Present) .....	1
	00-421116-000G1	Kick Panel Assy. E36L (Prior to December 2002) .....	1
	00-428195-000G1	Kick Panel Assy. E36L (December 2002 to Present) .....	1
	00-421117-000G1	Kick Panel Assy. E48L (Prior to December 2002) .....	1
	00-428196-000G1	Kick Panel Assy. E48L (December 2002 to Present) .....	1
	00-421118-000G1	Kick Panel Assy. E60L (Prior to December 2002) .....	1
	00-428197-000G1	Kick Panel Assy. E60L (December 2002 to Present) .....	1

**RECOMMENDED SPARE PARTS**

<b>PART NO.</b>	<b>NAME OF PART</b>	<b>AMT.</b>
<b>STANDARD</b>		
00-411503-00004	Infinite Switch .....	4
00-412251-00001	Switch Knob .....	4
00-411506-00014	Thermostat (Oven) .....	2
00-418060-00002	Knob (Thermostat) .....	4
00-411501-00014	Circuit Breaker .....	2
00-403956-00001	Bell Crank .....	2
00-404053-00001	Oven Door Spring (36") .....	2
00-412014-00001	Oven Door Spring (24") .....	2
00-413342-00001	Oven Door Spring (60") .....	2
00-417865-00001	Turnbuckle .....	2
00-421305-00001	Oven Element (E24/E48) (208V) (Lower) .....	2
00-421305-00002	Oven Element (E24/E48) (240V) (Lower) .....	2
00-421169-00001	Oven Element (E24/E48) (208V) (Upper) .....	2
00-421169-00002	Oven Element (E24/E48) (240V) (Upper) .....	2
00-421304-00001	Oven Element (E36/E60) (208V) (Lower) .....	2
00-421304-00002	Oven Element (E36/E60) (240V) (Lower) .....	2
00-421168-00001	Oven Element (E36/E60) (208V) (Upper) .....	2
00-421168-00002	Oven Element (E36/E60) (240V) (Upper) .....	2
00-421240-00001	French Plate Element (208V) .....	2
00-421240-00002	French Plate Element (240V) .....	2
<b>GRIDDLE/HOT TOPS</b>		
00-411506-00006	Thermostat (Griddle) .....	1
00-418060-00002	Thermostat Knob (Griddle) .....	2
00-407774-00001	Griddle Element (208V) .....	2
00-407774-00002	Griddle Element (240V) .....	2
00-421320-00001	Hot Top Assy. (208V) .....	1
00-421320-00002	Hot Top Assy. (240V) .....	1
00-421249-00001	4 Heat Switch (Hot Top) .....	2
00-421254-00001	4 Heat Switch (Hot Top) (Knob) .....	2
00-421248-00001	ON/OFF Switch (Hot Top) .....	2