

VULCAN

CATALOG OF REPLACEMENT PARTS

GAS TILTING BRAISING PAN MODEL VGCTS16

MODELS


VGCTS16 ML-152053



**For additional information on Vulcan or to locate an authorized parts
and service provider in your area, visit our website at www.vulcanequipment.com**

Table of Contents

5	LEFT HAND CONSOLE
7	RIGHT HAND CONSOLE
9	PAN ASSEMBLY
11	FIRE BOX

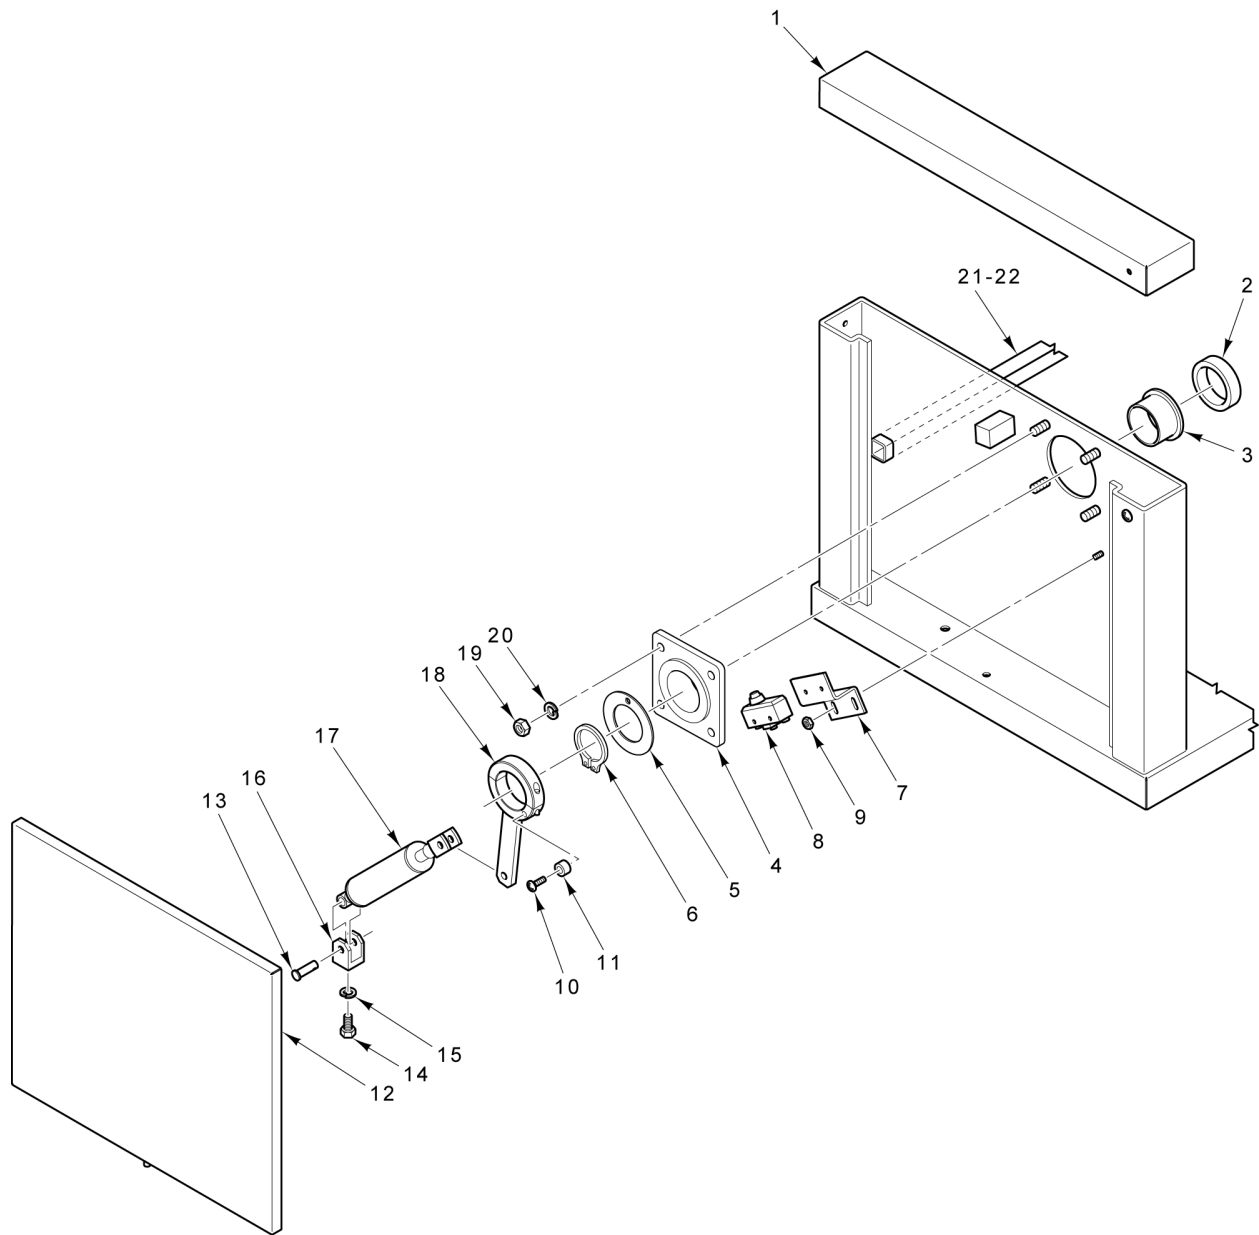


23 00-858651 Pin - Cotter
PART NOT ILLUSTRATED

PL-61220

LEFT HAND CONSOLE

LEFT HAND CONSOLE

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-61220			
1	00-858644	Cover - Console (LH).....	1
2	00-858645	Spacer (LH).....	1
3	00-858646	Bushing 1-1/2 In.....	1
4	00-858647	Housing - Console.....	1
5	00-858648	Washer - Thrust.....	1
6	00-844457	Ring - Retaining.....	1
7	00-858649	Bracket - Switch.....	1
8	00-881971	Switch - Limit.....	1
9	00-858650	Nut - Hex 10-32.....	2
10	00-858652	Cam.....	1
11	00-858653	Screw 10-32 x 3/4 Pan Hd. (SST).....	1
12	00-858638	Panel - Console (LH).....	1
13	00-858639	Pin - Clevis.....	1
14	00-842951	Bolt - Hex 5/16 x 1/2 (SST).....	1
15	00-858640	Washer - Lock.....	1
16	00-858641	Plate - Base.....	1
17	00-858642	Damper.....	1
18	00-858643	Collar - Damper.....	1
19	00-858640	Washer - Lock.....	4
20	00-853986	Nut 5/16-18 Hex.....	4
21	00-858654	Support - Tube.....	1
22	00-858655	Ring - Retaining.....	2
23	00-858651	Pin - Cotter.....	1

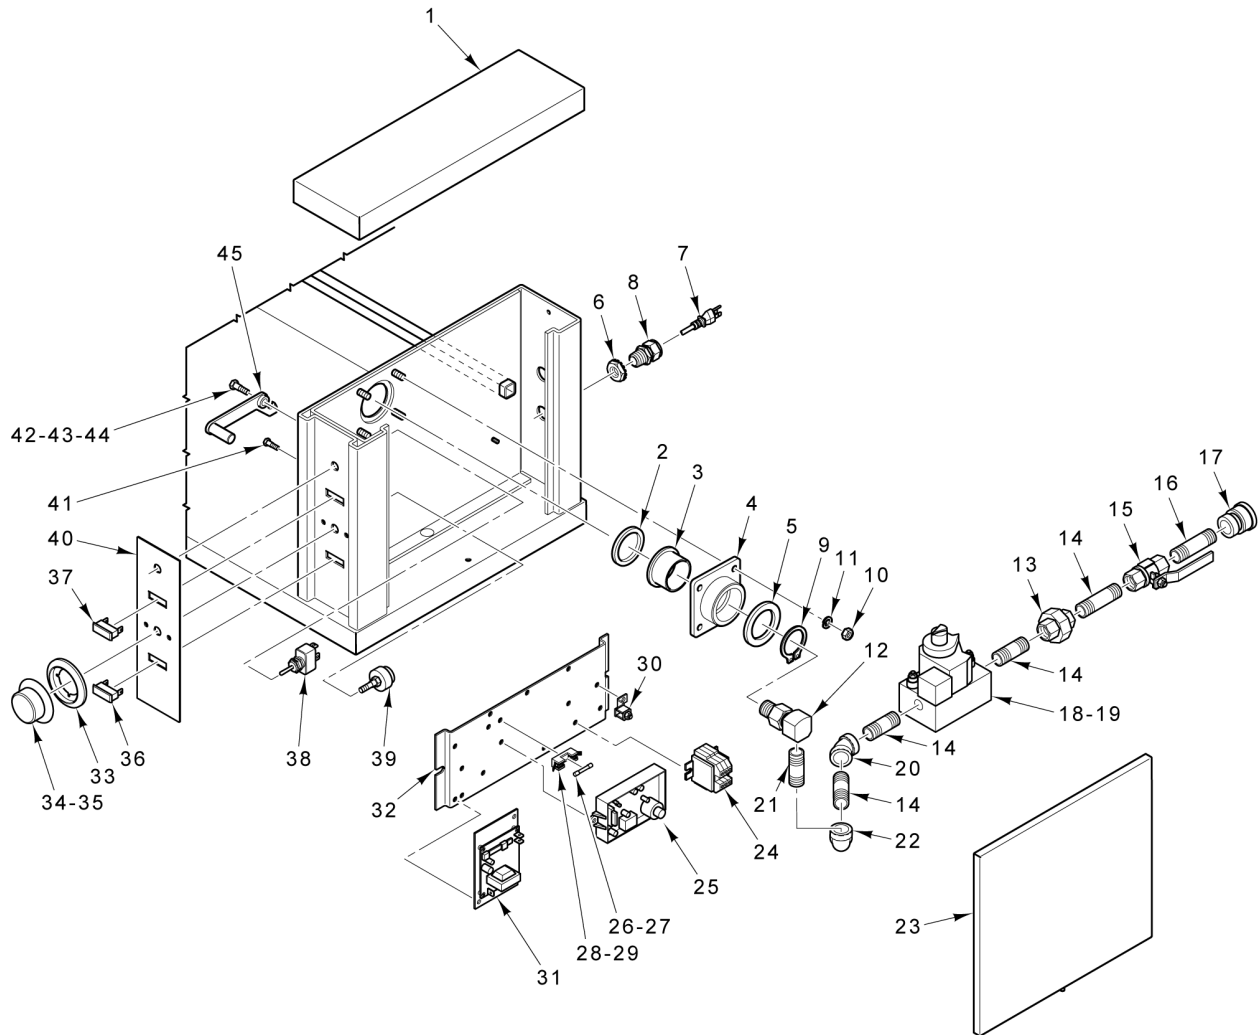

PL-61221


RIGHT HAND CONSOLE

RIGHT HAND CONSOLE

ILLUS. PL-61221	PART NO.	NAME OF PART	AMT.
1	00-858671	Cover - Console Top (RH).....	1
2	00-858670	Spacer.....	1
3	00-858669	Bushing.....	1
4	00-858668	Housing - Console (RH).....	1
5	00-858667	Ring.....	1
6	00-858666	Nut - Lock.....	1
7	00-851389	Cord - Set (120 V).....	1
8	00-858665	Connector.....	1
9	00-858664	Ring - Retaining.....	1
10	00-853986	Nut 5/16-18 Hex.....	4
11	00-858640	Washer - Lock.....	4
12	00-858663	Swivel Assy.....	1
13	00-857372	Union - 1/2" NPT.....	1
14	00-858662	Pipe 1/2 In.....	1
15	00-858661	Valve - Ball 1/2 In.....	1
16	00-851782	Nipple - Close 1/2".....	1
17	00-858660	Reducer 3/4 to 1/2 In.....	1
18	00-853401-00001	Valve - Control (Natural Gas).....	1
19	00-853401-00002	Valve - Control (Propane).....	1
20	00-858659	Elbow 1/2 In.....	1
21	00-858658	Pipe 1/2 In.....	1
22	00-858657	Elbow 1/2 In.....	1
23	00-858656	Panel - Side Console (RH).....	1
24	00-858683	Terminal Block (Incls. End Plate, End Clamp, & Mounting Rail).....	1
25	00-858682	Module - Ignition 120 V., 1 Amp.....	1
26	00-858680	Fuse 2 Amp.....	1
27	00-858681	Fuse 1 Amp.....	1
28	00-853957	Fuse Holder (120 V.).....	1
29	00-853957	Fuse Holder (220 V.).....	1
30	00-858684	Ground.....	1
31	00-858685	Transformer 120/240 V.....	1
32	00-858679	Board - Mounting.....	1
33	00-844367-00005	Bezel.....	1
34	00-851401	Dial Assy. (F).....	1
35	00-858678	Dial Assy. (C).....	1
36	00-854941	Light - Pilot, Green, 120 V.....	1
37	00-858677	Light - Pilot, Red, 120 V.....	1
38	00-855765	Switch - Power.....	1
39	00-853196	Thermostat 120 V.....	1
40	00-858676	Decal - Panel.....	1
41	00-858675	Bolt - Shoulder.....	1
42	00-858640	Washer - Lock.....	1
43	00-858674	Nut 5/16-18 (SST).....	1
44	00-858673	Pin - Lock.....	1
45	00-858672	Handle Assy.....	1

PAN ASSEMBLY

ILLUS. PL-61222	PART NO.	NAME OF PART	AMT.
1	00-836964	Knob.....	1
2	00-858686	Knob.....	1
3	00-851372	Handle.....	1
4	00-858688	Thermostat - High Limit.....	1
5	00-858639	Pin - Clevis.....	1
6	00-858705	Pin.....	1
7	00-858704	Cover.....	1
8	00-858700	Screw 10-32 x 1/4 In. Truss Hd. (SST).....	6
9	00-858703	Screw 10-32 x 1/4 In. Pan Hd. (SST).....	2
10	00-858702	Flue Assy.....	1
11	00-858701	Screw 10-32 x 1/4 In. Fill Hd. (SST).....	8
12	00-858699	Manifold Enclosure Assy.....	1
13	00-858698	Pipe 3/8 x 2 In.....	1
14	00-858697	Union 3/8 In.....	1
15	00-858696	Pipe 3/8 x 2-1/2 In. (SST).....	1
16	00-858695	Cover - Bottom.....	1
17	00-858694	Pipe 3/8 x 2-1/2 In.....	1
18	00-858693	Elbow 3/8 In.....	2
19	00-858692	Pipe 3/8 x 13-1/8 In.....	1
20	00-858691	Fire Box Assy.....	1
21	00-858690	Screw 10-32 x 3/8 In. Pan Hd. (SST).....	3
22	00-858689	Cover - High-Temp.....	1
23	00-858708	Pin - Lock.....	1
24	00-858707	Washer - Split (SST).....	1
25	00-858706	Bolt 3/8-24 x 3/4 In. Hex Hd. (SST).....	1
26	00-858687	Acorn Nut 3/8-16.....	1
27	00-858709	Strainer.....	1
28	00-858710	Cover - Skillet.....	1

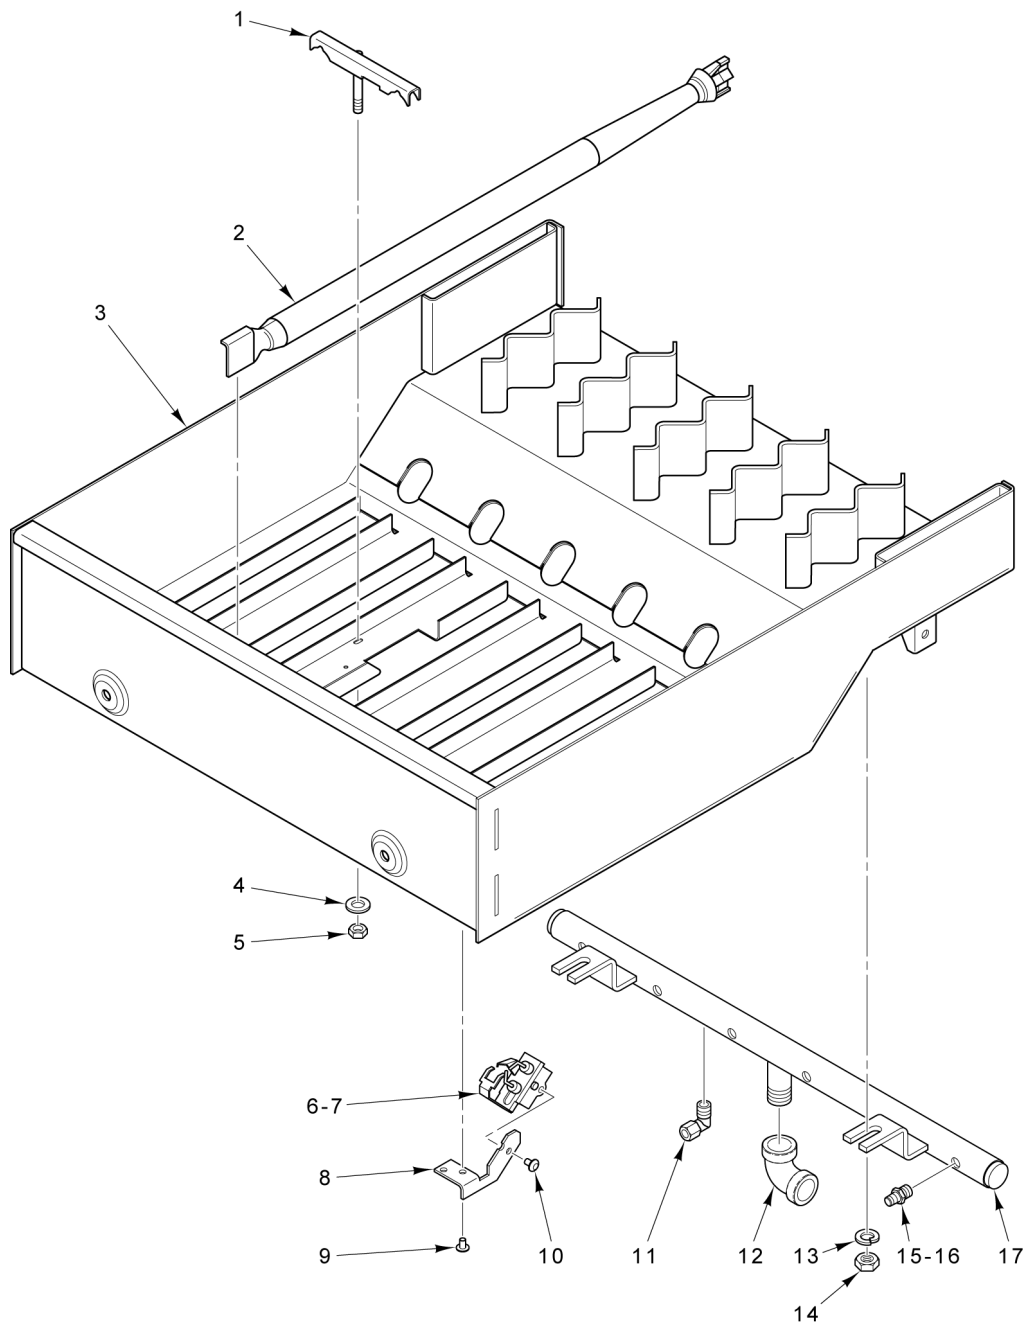

18 00-858724 Plug
 19 00-858725 Probe - Temp.
PARTS NOT ILLUSTRATED

PL-61223

FIRE BOX

FIRE BOX

ILLUS. PL-61223	PART NO.	NAME OF PART	AMT.
1	00-858711	Channel - Igniter.....	1
2	00-858712	Burner.....	6
3	00-858713	Box - Fire.....	1
4	00-858714	Washer #10 (SST).....	1
5	00-858715	Nut - Hex #10-32 (SST).....	1
6	00-858716	Burner - Pilot (Natural Gas).....	1
7	00-858717	Burner - Pilot (Propane).....	1
8	00-858718	Bracket - Pilot Burner.....	1
9	00-858700	Screw 10-32 x 1/4 In. Truss Hd. (SST).....	2
10	00-858719	Screw 8-32 Pan Hd. (SST).....	1
11	00-858720	Elbow 1/8 In.....	1
12	00-858721	Elbow.....	1
13	00-858640	Washer - Lock.....	4
14	00-853986	Nut 5/16-18 Hex.....	2
15	00-851055	Orifice (Natural Gas).....	6
16	00-858722	Orifice (Propane).....	6
17	00-858723	Manifold Assy.....	1
18	00-858724	Plug.....	1
19	00-858725	Probe - Temp.....	1

