



# CATALOG OF REPLACEMENT PARTS

## Gas Restaurant Ranges

*GUSVRNG6N*  
*GUSVRNG6P*  
*GUSVRNG10N*  
*GUSVRNG10P*




For additional information on GUSTO or to locate an authorized parts  
and service provider in your area.

## TABLE OF CONTENTS


GUSVRNG6 Gas Range .....	02
Exploded view and part number listing of RANGE MAIN BODY.....	02
Exploded view and part number listing of GAS CONTROL ASSEMBLY.....	04
Exploded view and part number listing of OVEN CHAMBER ASSEMBLY.....	05
Exploded view and part number listing of OVEN DOOR ASSEMBLY.....	06
Exploded view and part number listing of BACK PANEL ASSEMBLY.....	07
GUSVRNG10 Gas Range .....	08
Exploded view and part number listing of RANGE MAIN BODY.....	08
Exploded view and part number listing of GAS CONTROL ASSEMBLY.....	10
Exploded view and part number listing of OVEN CHAMBER ASSEMBLY.....	11
Exploded view and part number listing of OVEN DOOR ASSEMBLY.....	12
Exploded view and part number listing of BACK PANEL ASSEMBLY.....	13

# GUSVRNG6 RANGE MAIN BODY

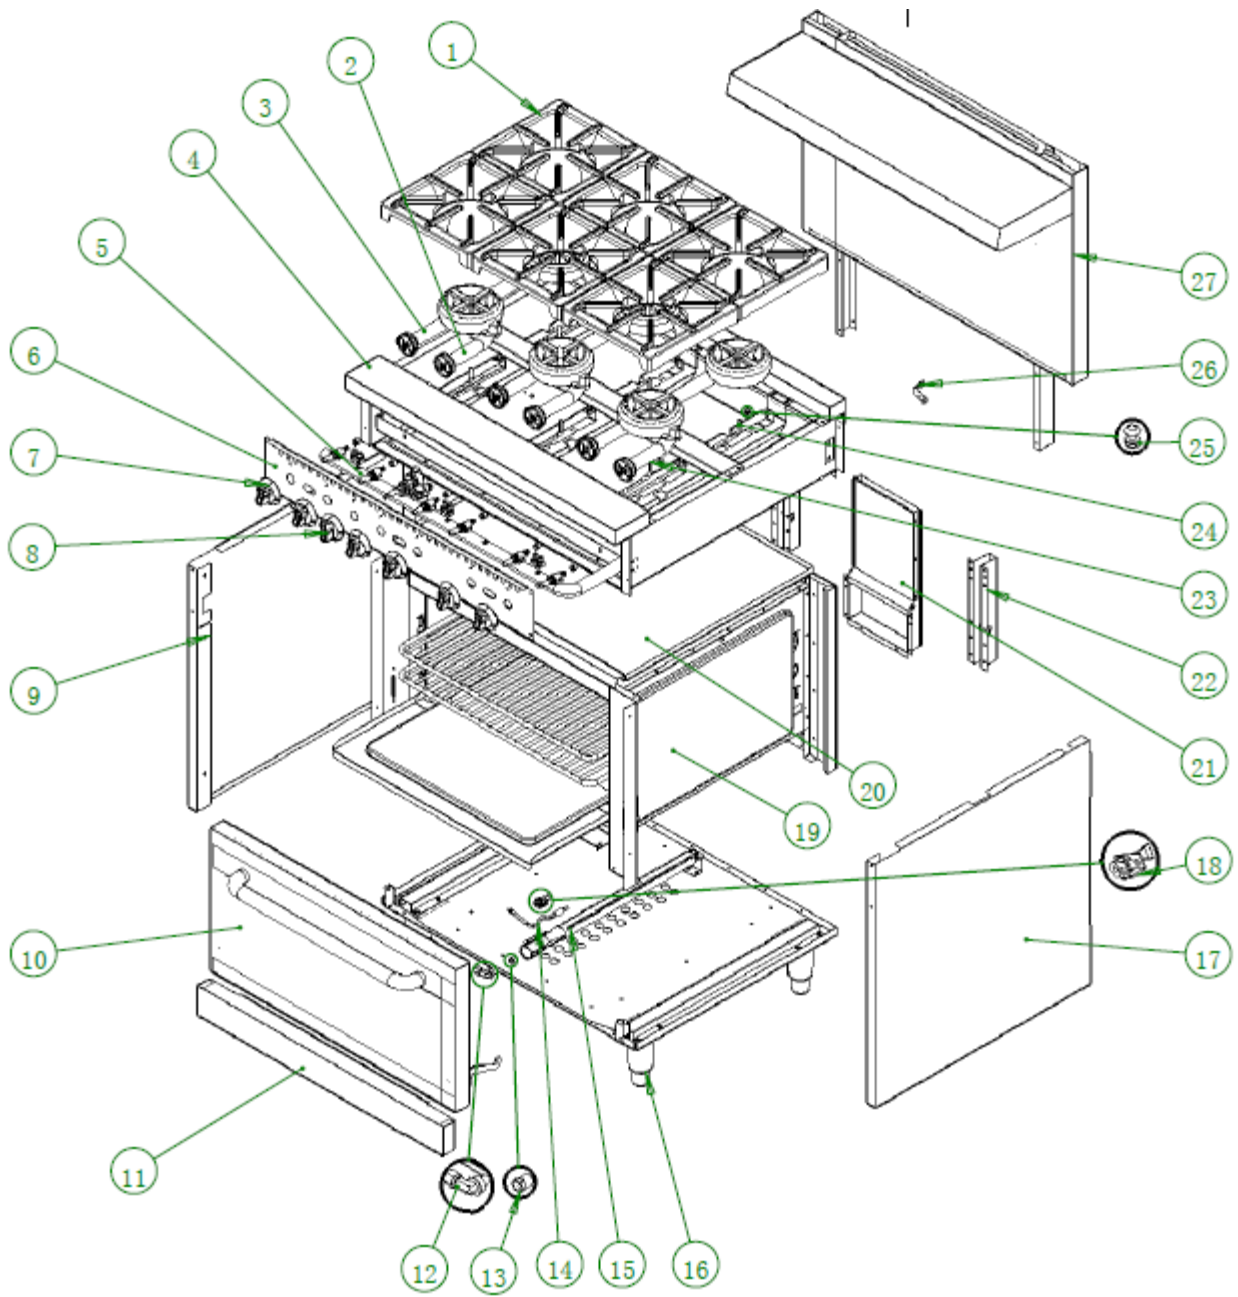


No.	Part Code	Part Name	QTY
1	302250132	BURNER GRATE	6
2	302250166	BURNER ASSEMBLY (SHORT)	3
3	302250165	BURNER ASSEMBLY (LONG)	3
4	20228077006	FRONT COUNTERTOP	1
5	20128051009	GAS CONTROL ASSEMBLY	1
6	20228051005	FRONT CONTROL PANEL	1
7	301110527	BURNER KNOB	6
	301110390	BURNER KNOB CORE	6
8	301110500	OVEN KNOB	1
	301110389	OVEN KNOB CORE	1
9	20228077010	LEFT SIDE WALL	1
10	20128051005	OVEN DOOR ASSEMBLY	1
11	316130001	LOWER FRONT BEAM SLAB	1
12	302140137	NOZZLE ELBOW	1
13	302150198	OVEN NOZZLE, NG	1
13	302150189	OVEN NOZZLE, LPG	1
14	<a href="#">302170058</a>	Robertshaw THERMOCOUPLE	1
15	302130384	OVEN TUBE BURNER	1
16	302190487	LEG MOUNTING PLATE	4
16	302090158	ADJUSTABLE LEG	4
17	20228077013	RIGHT SIDE WALL	1
18	302130447	OVEN PILOT, LPG	1
18	<a href="#">302130427</a>	OVEN PILOT, NG	1
19	20128051004	OVEN CHAMBER ASSEMBLY	1
20	20228051012	CRUMB TRAY	1
21	20128051007	INNER FLUE ASSEMBLY	1
22	316130004	SLIDE RAIL (REAR BAFFLE)	2
23	302060693	GAS PIPE (PILOT)(SHORT BURNER)	3
24	302060694	GAS PIPE (PILOT)(LONG BURNER)	3
25	302130019	STOVE PILOT	6
26	302060231	PIPE FIXER	1
27	20128051006	BACK PANEL ASSEMBLY	1

# GUSVRNG6 GAS CONTROL ASSEMBLY

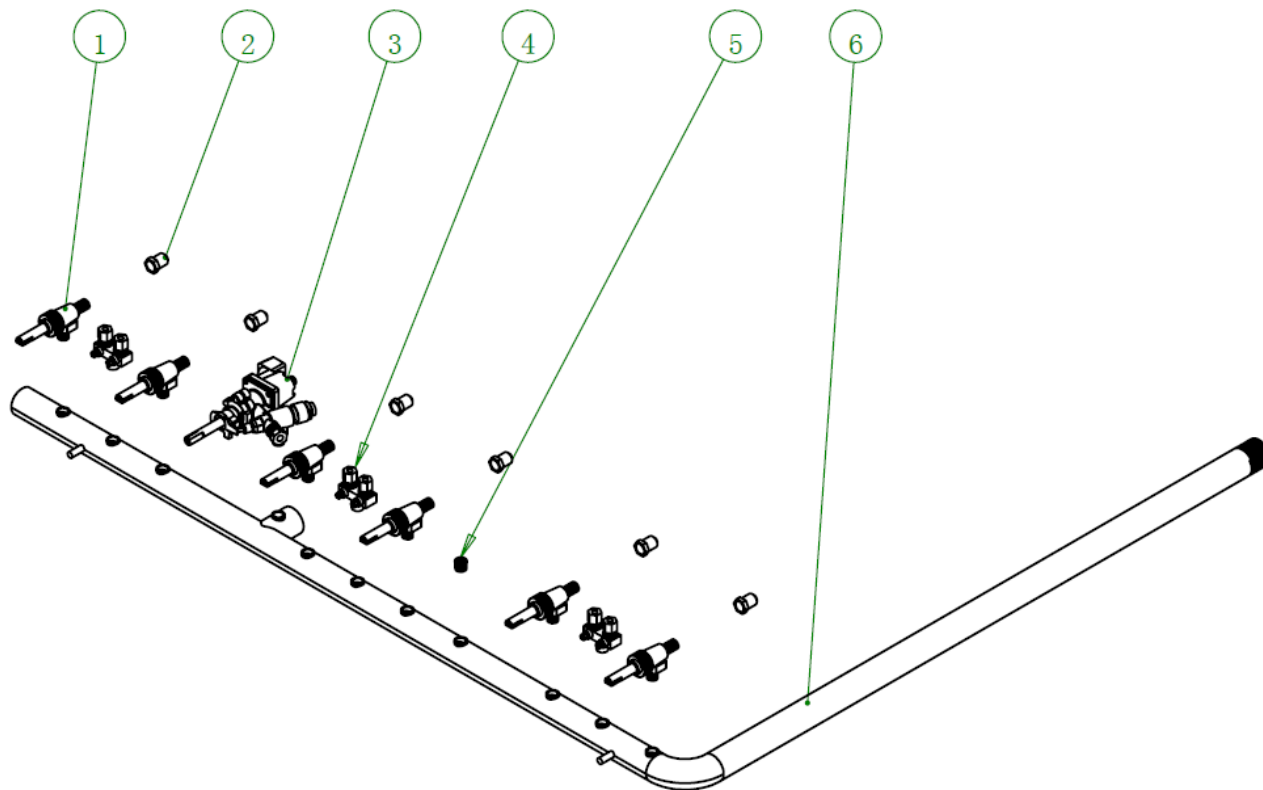


No.	Part Code	Part Name	QTY
1	302050051	GAS STOVE VALVE	6
2	302150190	BURNER NOZZLE, LPG	6
	302150198	BURNER NOZZLE, NG	6
3	<a href="#">302220127</a>	GAS OVEN VALVE	1
4	302220027	PILOT VALVE	3
5	302200620	SCREW	1
6	302180441	GAS INLET PIPE ASSEMBLY	1

## GUSVRNG6 OVEN CHAMBER ASSEMBLY

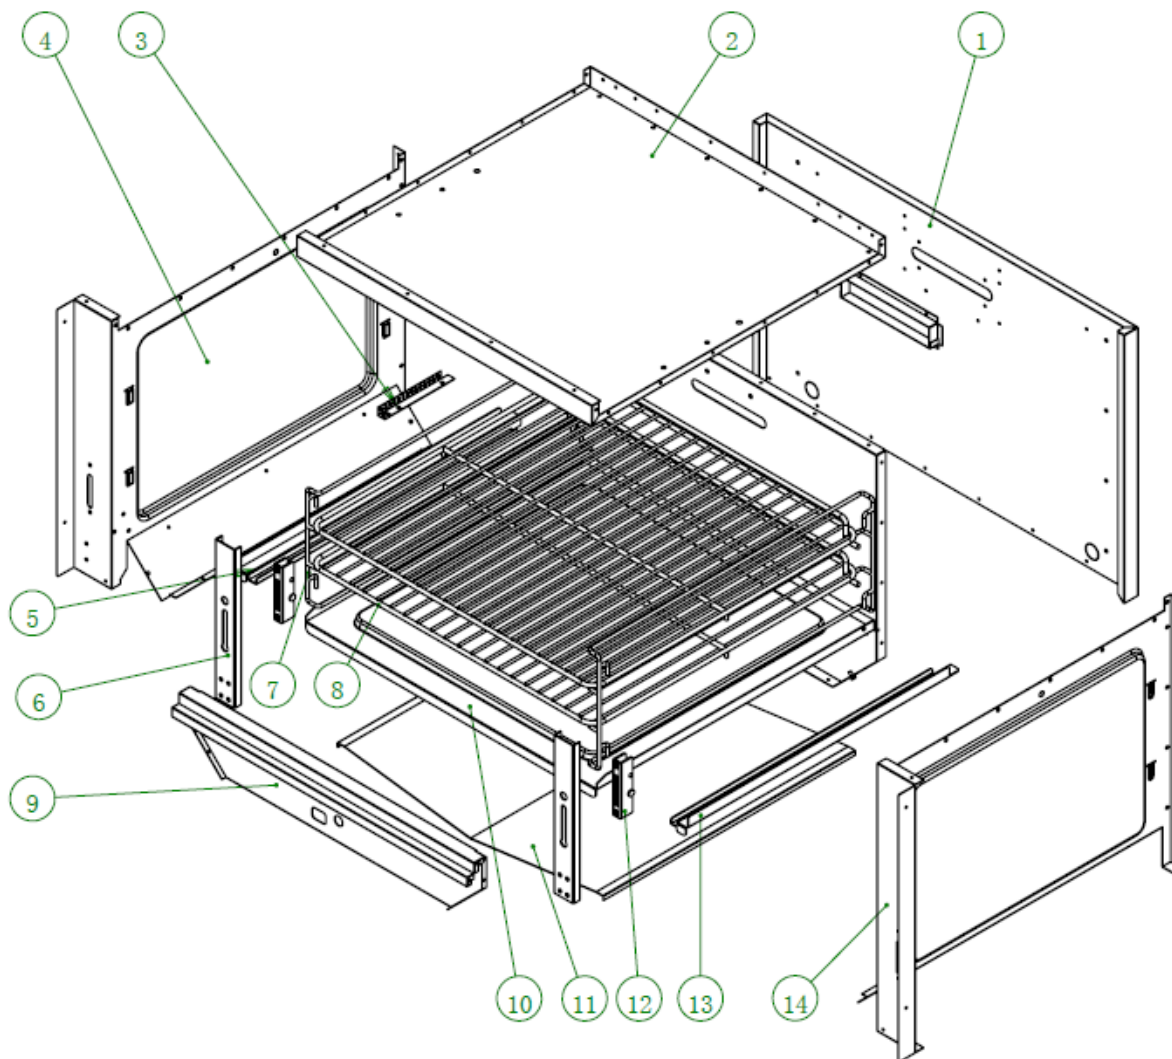


No.	Part Code	Part Name	QTY
1	20228051019	REAR SHROUDING ASSEMBLY	1
2	20228051014	OVEN CHAMBER TOP PLATE	1
3	314490021	SENSOR FIXED PLATE	1
4	20228051015	OVEN CHAMBER LEFT PLATE	1
5	316130006	OVEN CHAMBER BOTTOM LEFT LIMIT PLATE	1
6	316130002	OVEN CHAMBER SIDE REINFORCE PLATE	2
7	302110504	RACK HOLDER	2
8	302110503	RACK (CHAMBER)	2
9	20228051018	OVEN CHAMBER F LOWER FRONT PLATE	1
10	302190497	BASEBOARD (CHAMBER)	1
11	20228051028	OVEN CHAMBER BOTTOM REINFORCE PLATE	1
12	302190429	DOOR HINGE	2
13	316130007	OVEN CHAMBER BOTTOM LEFT RIGHT PLATE	1
14	20228051016	OVEN CHAMBER RIGHT PLATE	1

# GUSVRNG6 OVEN DOOR ASSEMBLY

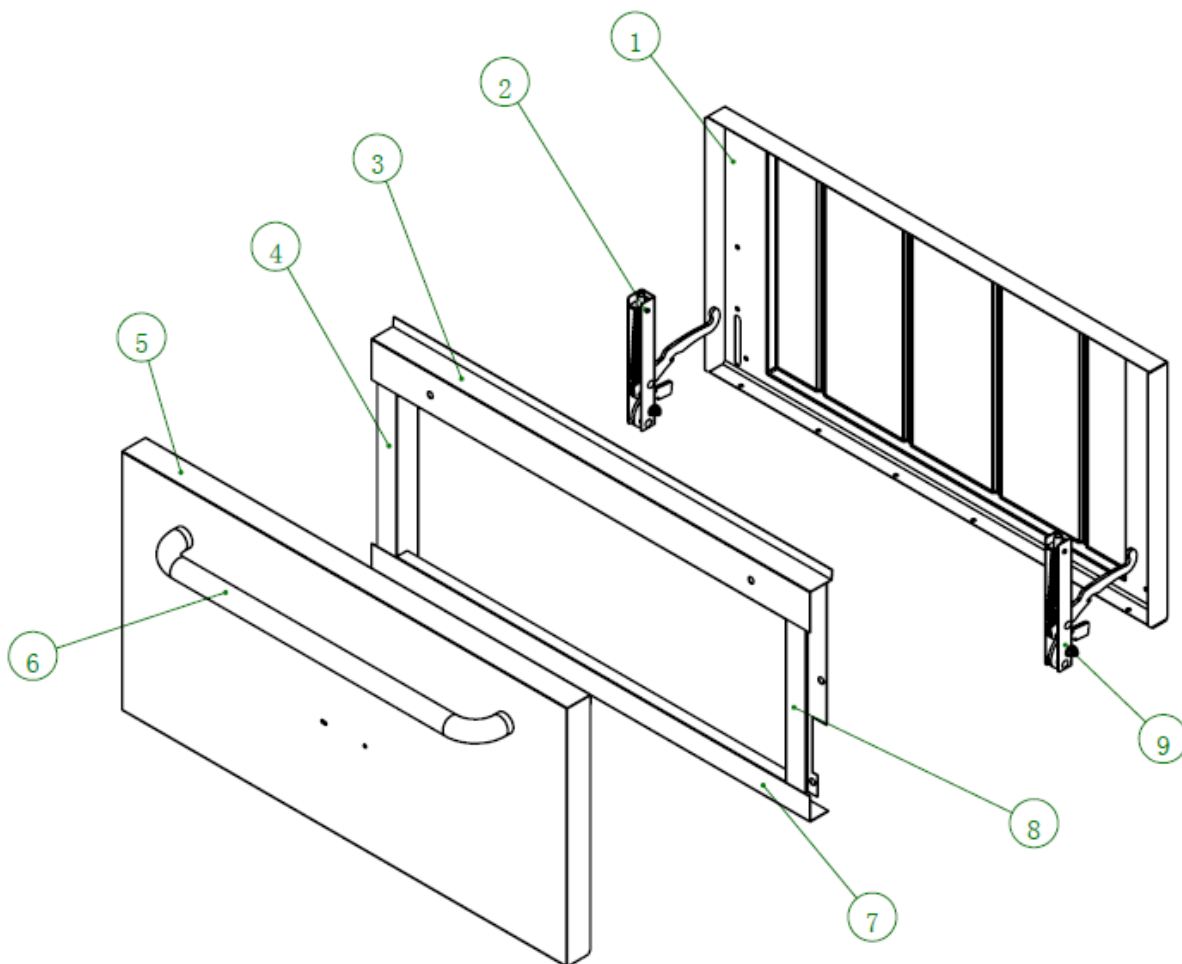


No.	Part Code	Part Name	QTY
1	20228051034	DOOR INNER PLATE	1
2	302190430	DOOR HINGE LEFT	1
3	20228051036	OVEN DOOR TOP REINFORCE	1
4	20228051037	OVEN DOOR LEFT REINFORCE	1
5	20228051033	DOOR OUTSIDE PLATE	1
6	302070144	DOOR HANDLE	1
7	20228051035	OVEN DOOR BOTTOM REINFORCE	1
8	20228051093	OVEN DOOR RIGHT REINFORCE	1
9	302190428	DOOR HINGE RIGHT	1

# GUSVRNG6 BACK PANEL ASSEMBLY

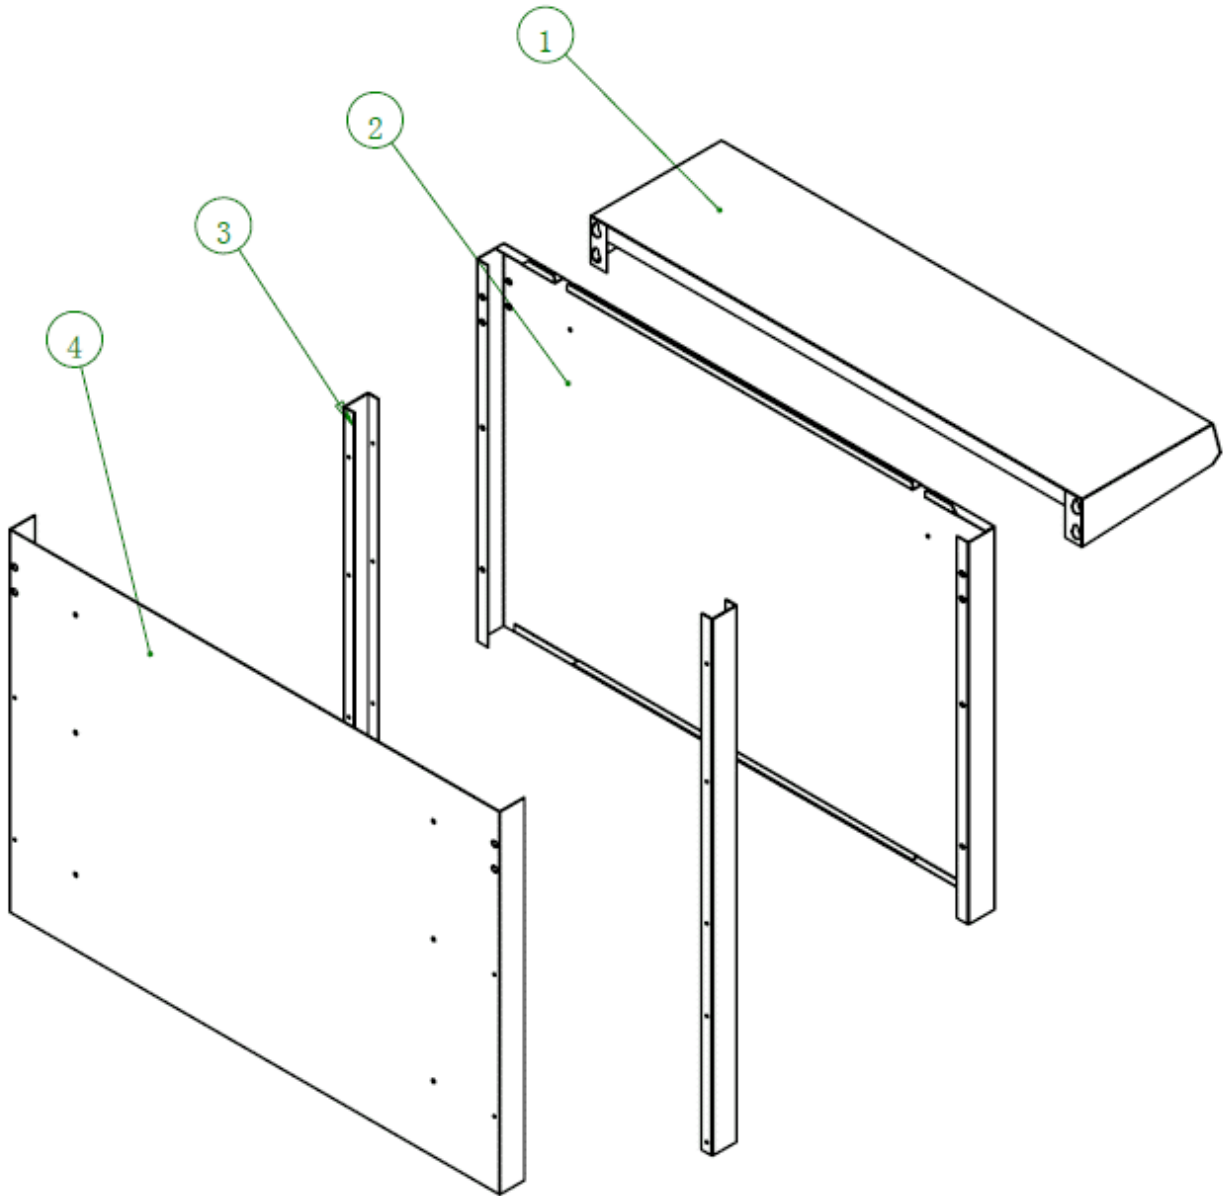

No.	Part Code	Part Name	QTY
1	20228051041	DECORATIVE COVER	1
2	20228051038	BACK FRONT PANEL	1
3	20228051040	BACK SUPPORT PANEL	2
4	316130010	BACK REAR PANEL	1


# GUSVRNG10 RANGE MAIN BODY

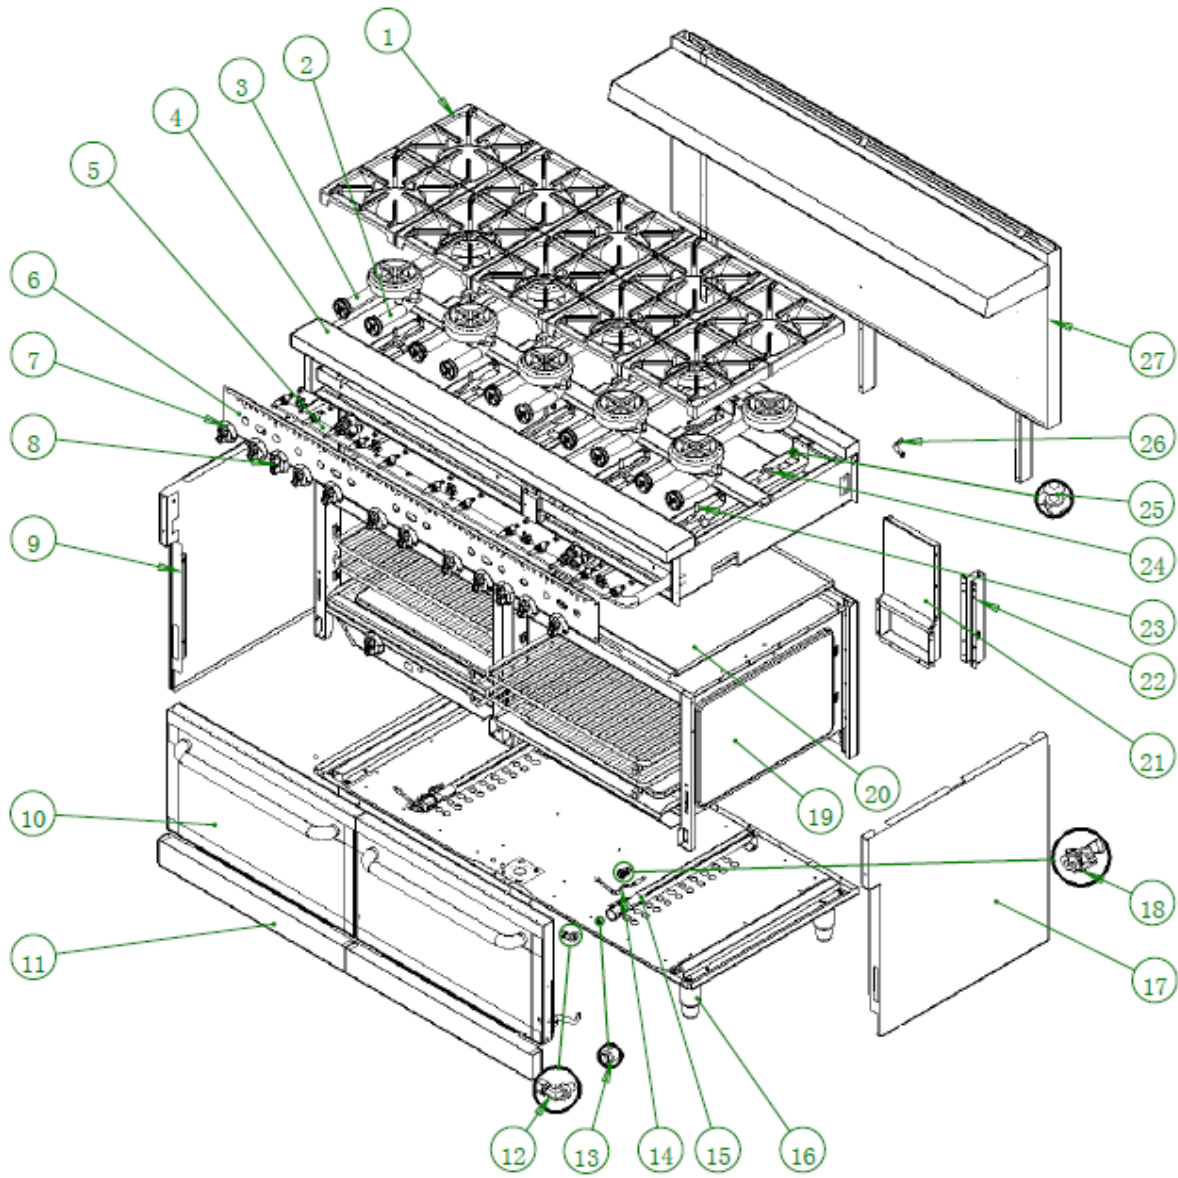

## S SERIES REPLACEMENT PARTS


No.	Part Code	Part Name	QTY
1	302250132	BURNER GRATE	10
2	302250166	BURNER ASSEMBLY (SHORT)	5
3	302250165	BURNER ASSEMBLY (LONG)	5
4	20228059001	FRONT COUNTERTOP	1
5	20128059003	GAS CONTROL ASSEMBLY	1
6	20228059007	FRONT CONTROL PANEL	1
7	301110527	BURNER KNOB	10
	301110390	BURNER KNOB CORE	10
8	301110500	OVEN KNOB	2
	301110389	OVEN KNOB CORE	2
9	20228078022	LEFT SIDE WALL	1
10	20128059005	OVEN DOOR ASSEMBLY	2
11	316140001	LOWER FRONT BEAM SLAB	2
12	302140137	NOZZLE ELBOW	2
13	302150198	OVEN NOZZLE, NG	2
13	302150189	OVEN NOZZLE, LPG	2
14	<a href="#">302170058</a>	Robertshaw THERMOCOUPLE	2
15	302130384	OVEN TUBE BURNER	2
16	302190487	LEG MOUNTING PLATE	6
16	302090158	ADJUSTABLE LEG	6
17	20228078024	RIGHT SIDE WALL	1
18	302130447	OVEN PILOT, LPG	2
18	<a href="#">302130427</a>	OVEN PILOT, NG	2
19	20128059004	OVEN CHAMBER ASSEMBLY	2
20	20228058007	CRUMB TRAY	1
21	20128051007	INNER FLUE ASSEMBLY	2
22	316130004	SLIDE RAIL ( REAR BAFFLE )	2
23	302060693	GAS PIPE (PILOT)(SHORT BURNER)	5
24	302060694	GAS PIPE (PILOT)(LONG BURNER)	5
25	302130019	STOVE PILOT	10
26	302060231	PIPE FIXER	1
27	20128059006	BACK PANEL ASSEMBLY	1

# GUSVRNG10 GAS CONTROL ASSEMBLY

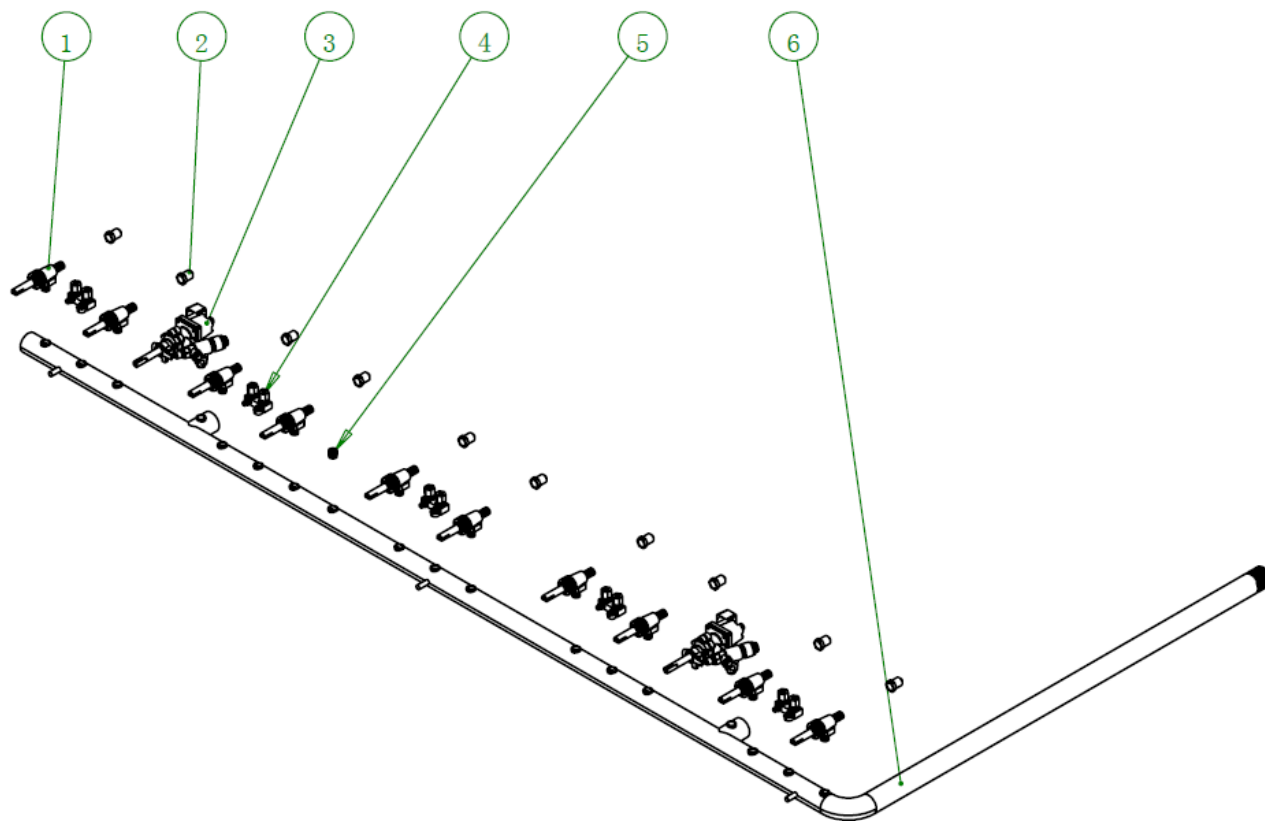


No.	Part Code	Part Name	QTY
1	302050051	GAS STOVE VALVE	10
2	302150198	BURNER NOZZLE, NG	10
2	302150190	BURNER NOZZLE, LPG	10
3	<a href="#">302220127</a>	GAS OVEN VALVE	2
4	302220027	PILOT VALVE	5
5	302200620	SCREW	1
6	302180497	GAS INLET PIPE ASSEMBLY	1

## GUSVRNG10 OVEN CHAMBER ASSEMBLY

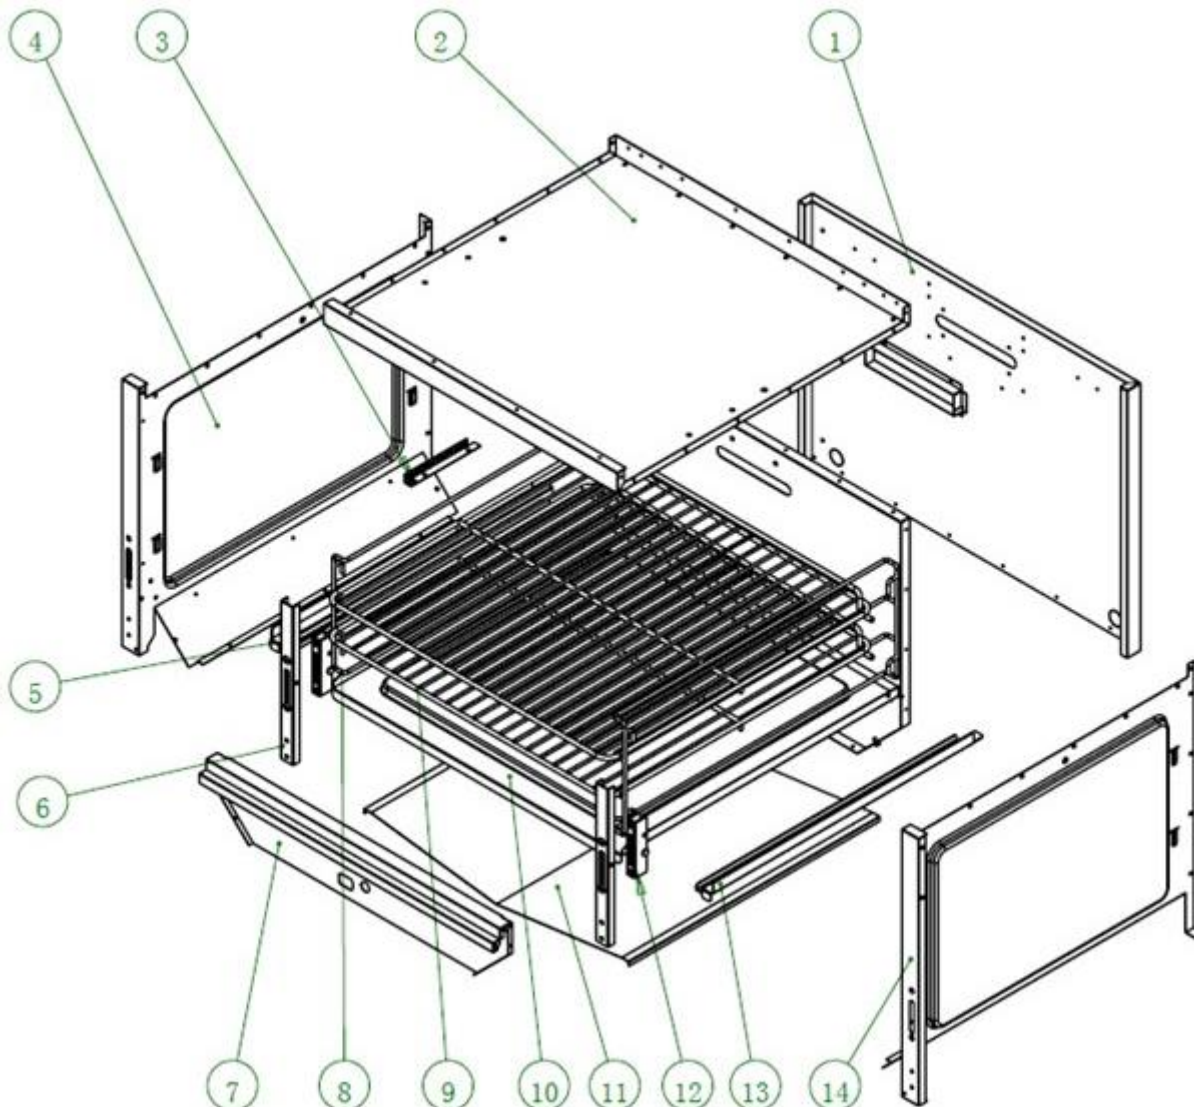


No.	Part Code	Part Name	QTY
1	20228059009	REAR SHROUDING ASSEMBLY	1
2	20228051014	OVEN CHAMBER TOP PLATE	1
3	314490021	SENSOR FIXED PLATE	1
4	20228058010	OVEN CHAMBER LEFT PLATE	1
5	316130006	OVEN CHAMBER BOTTOM LEFT LIMIT PLATE	1
6	316120002	OVEN CHAMBER SIDE REINFORCE PLATE	2
7	20228051018	OVEN CHAMBER F LOWER FRONT PLATE	1
8	302110504	RACK HOLDER	2
9	302110503	RACK (CHAMBER)	2
10	302190497	BASEBOARD (CHAMBER)	1
11	20228051028	OVEN CHAMBER BOTTOM REINFORCE PLATE	1
12	302190429	DOOR HINGE	2
13	316130007	OVEN CHAMBER BOTTOM LEFT RIGHT PLATE	1
14	20228058011	OVEN CHAMBER RIGHT PLATE	1

## GUSVRNG10 OVEN DOOR ASSEMBLY

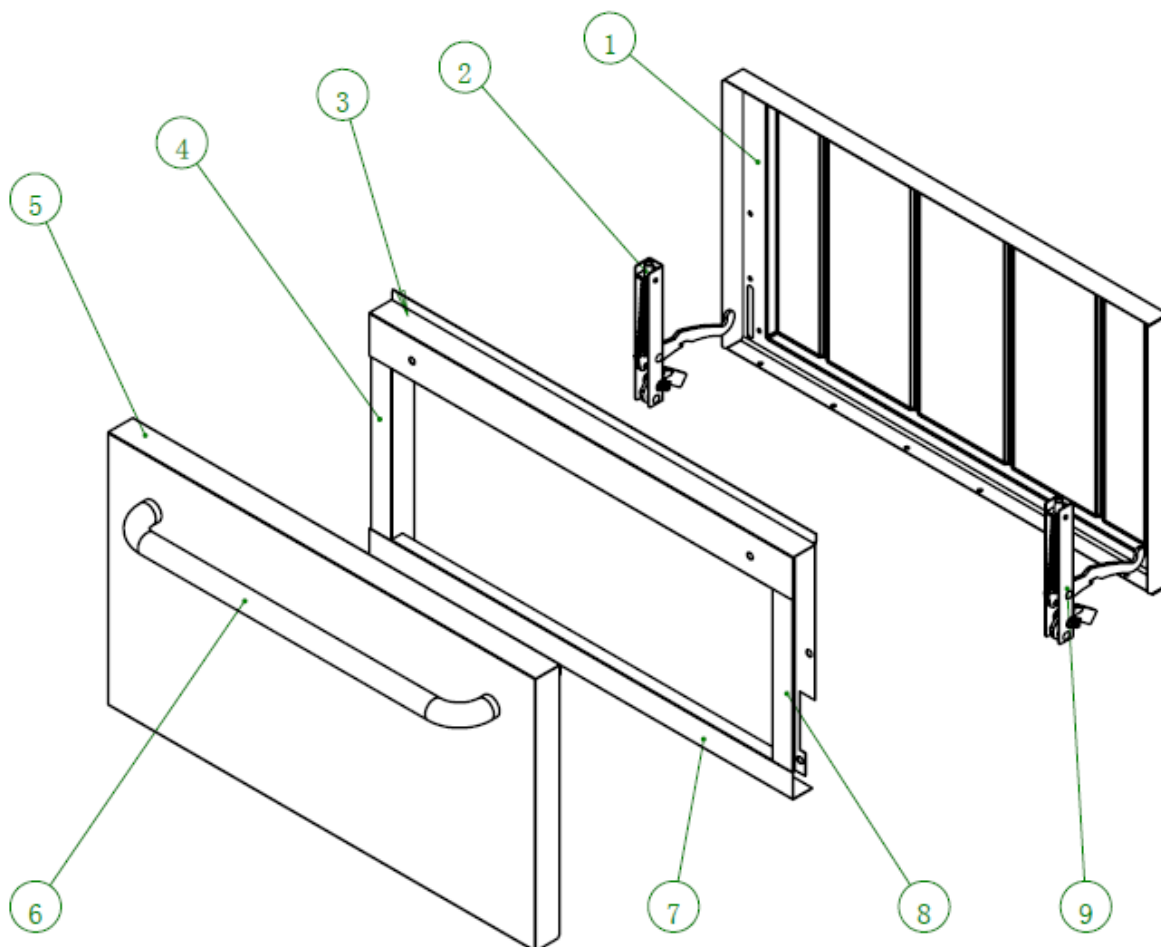

No.	Part Code	Part Name	QTY
1	20228059013	DOOR INNER PLATE	1
2	302190430	DOOR HINGE LEFT	1
3	20228059015	OVEN DOOR TOP REINFORCE	1
4	20228051037	OVEN DOOR LEFT REINFORCE	1
5	20228059012	DOOR OUTSIDE PLATE	1
6	302070144	DOOR HANDLE	1
7	20228059014	OVEN DOOR BOTTOM REINFORCE	1
8	20228051093	OVEN DOOR RIGHT REINFORCE	1
9	302190428	DOOR HINGE RIGHT	1

# GUSVRNG10 BACK PANEL ASSEMBLY

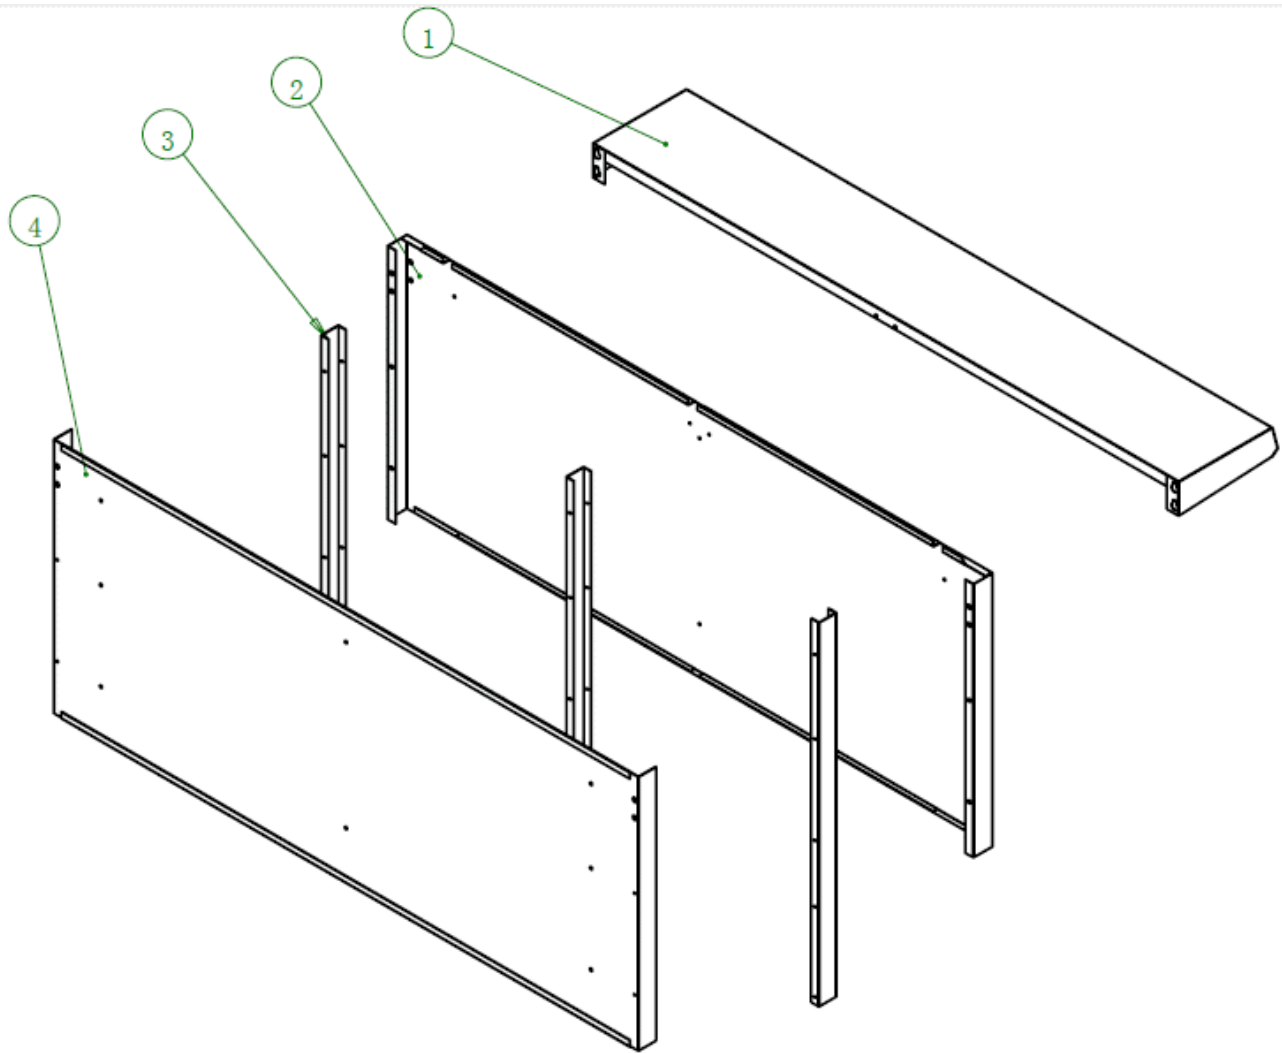

No.	Part Code	Part Name	QTY
1	20228059018	DECORATIVE COVER	1
2	20228059016	BACK FRONT PANEL	1
3	20228051040	BACK SUPPORT PANEL	3
4	20228059017	BACK REAR PANEL	1