

Unit Information

Each motor has a HI & LO speed

RPM's (no load)

18,000 - high

12,000 - low



3 Amps. MAX

WARING COMMERCIAL®




DMC201 /both agitators

DMC201CAR /solid agitator

DMX201 /CSA solid agitator

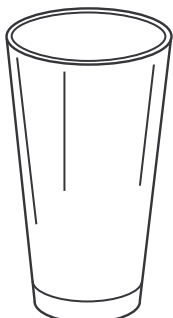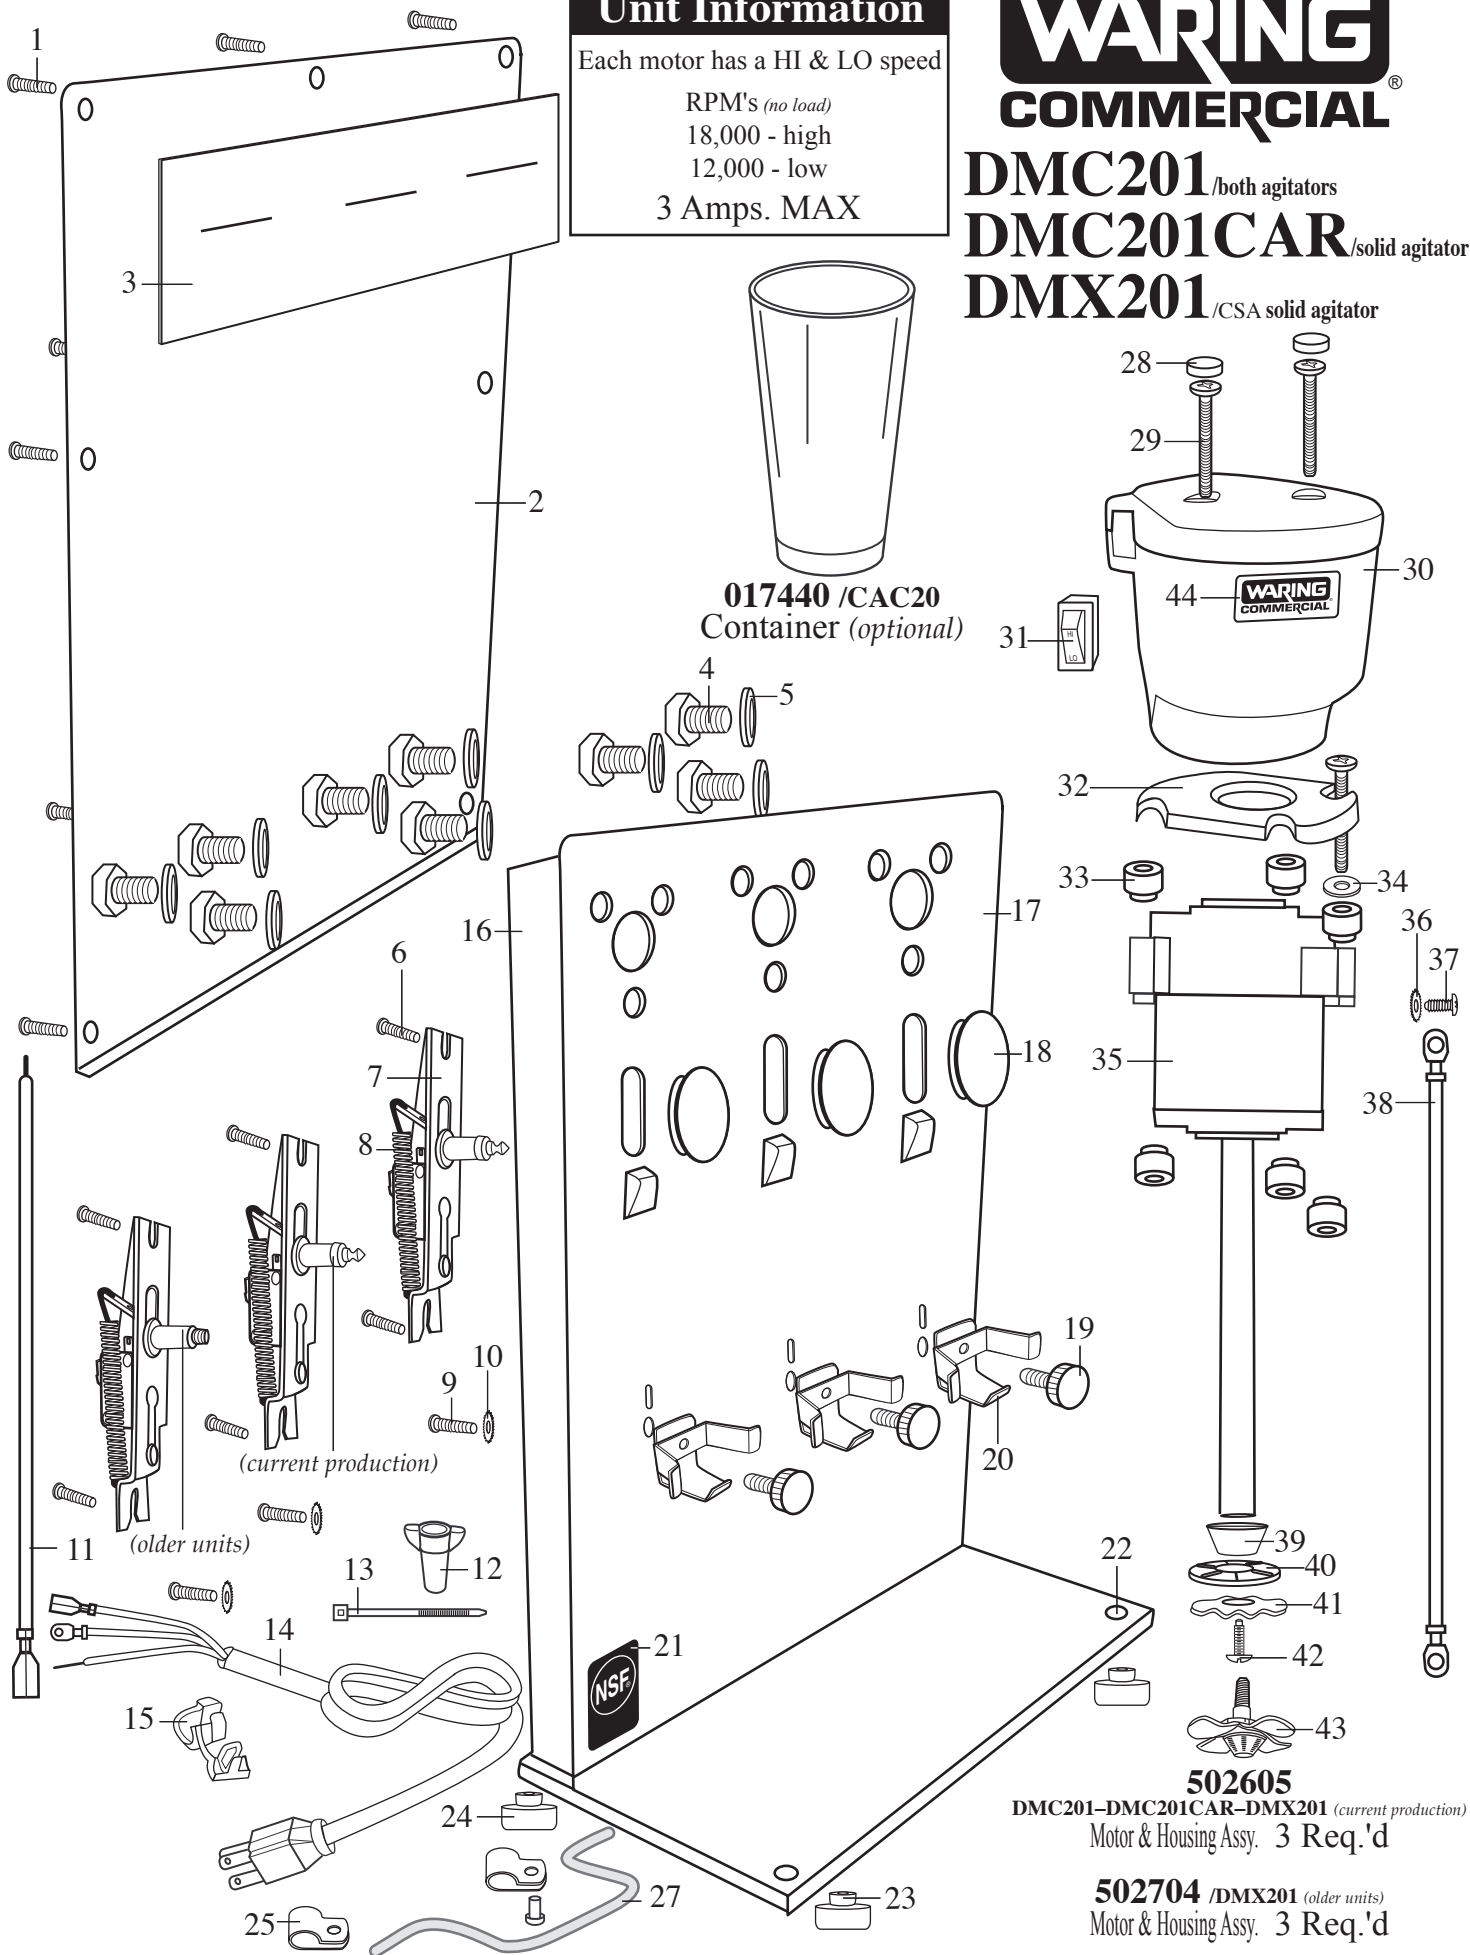

017440 /CAC20
Container (optional)

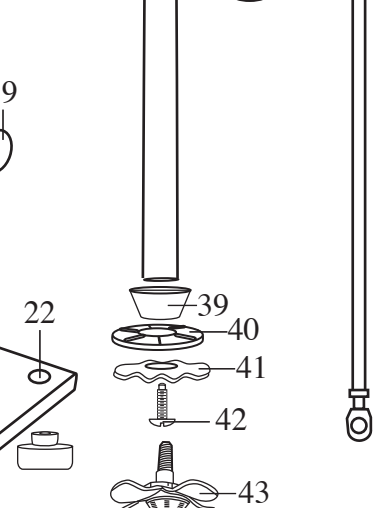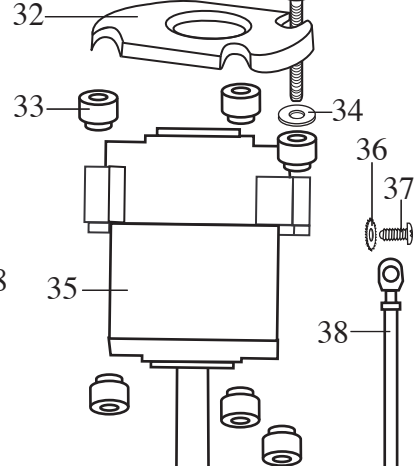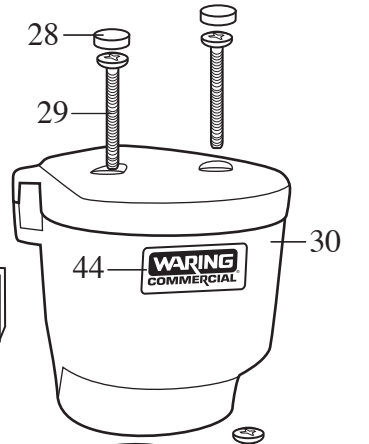

502605
DMC201-DMC201CAR-DMX201 (current production)
Motor & Housing Assy. 3 Req.'d

502704 /DMX201 (older units)
Motor & Housing Assy. 3 Req.'d

Catalog	Model
DMC201	32DM16
DMC201CAR	DMC201CAR
DMX201	31DM77 or DMX201


Waring Factory Service Center
 314 Ella T. Grasso Ave.
 Torrington, CT 06790
 Tele. 1-800-269-6640
 Fax 860-496-9017
 www.waringproducts.com

Illustration #	Part #	Description
1	016562	Screw 7 Req.'d
2	016380	Rear Panel
3	016194	Insulator
4	017930	Screw 9 Req.'d
5	003344	Washer 9 Req.'d
6	016562	Screw 6 Req.'d
7	502335	Switch & Bracket Assy. 3 Req.'d <i>(current production)</i>
	501356	Switch & Bracket Assy. 3 Req.'d <i>(older units)</i>
8	013612	Switch Return Spring 3 Req.'d
9	016562	Screw 3 Req.'d
10	002943	Washer 3 Req.'d
11	501571	Lead - brown /DMC201, DMC201CAR 3 Req.'d
	501321	Lead - brown /DMX201 3 Req.'d
12	016567	Wire Nut /DMC201, DMC201CAR 2 Req.'d
	009051	Wire Nut /DMX201 3 Req.'d
13	013731	Cable Tie 2 Req.'d /DMC201, DMC201CAR
	013731	Cable Tie 4 Req.'d /DMX201
14	501570	Cord Set /DMC201, DMC201CAR
	501317	Cord Set /DMX201
15	007556	Strain Relief
16	017124	Stand /DMC201, DMC201CAR
	017125	Stand /DMX201
17	017851	Front Panel
18	026720	Knob /snap-on - black 3 Req.'d <i>(current production)</i>
	501709	Knob /screw on - white 3 Req.'d <i>(older units)</i>
19	013918	Container Support Screw 3 Req.'d
20	015551	Container Support 3 Req.'d
21	013304	NSF Seal /DMC201, DMC201CAR
22	014980	Stud 2 Req.'d
23	016569	Foot 2 Req.'d
24	016568	Foot 2 Req.'d
25	013649	Clamp 2 Req.'d
26	015481	Rivet 2 Req.'d
27	014229	Stabilizer

Catalog	Model
DMC201	32DM16
DMC201CAR	DMC201CAR
DMX201	31DM77 or DMX201



Illustration #	Part #	Description
28	016094	Hole Plug 2 Req.'d /part of motor & housing assy.
29	012729	Screw 3 Req.'d /part of motor & housing assy.
30	503162	Housing Assy. /motor cover, mounting plate & motor hsg.
31	017510	Rocker Switch /part of motor & housing assy.
32	017508	Baffle/part of motor & housing assy.
33	013603	Vibration Dampener 6 Req.'d /part of motor & housing assy.
34	013604	Washer - steel /part of motor & housing assy.
35	025255	Motor /part of motor & housing assy. no splash guard or agitator
36	002943	Washer /part of motor & housing assy.
37	013659	Screw /part of motor & housing assy.
38	501738	Lead - green/yellow
39	013630	Collar /part of motor & housing assy.
40	013654	Splash Guard Disc /part of motor & housing assy.
41	016599	Disk Agitator /part of motor & housing assy.
42	016384	Screw /part of motor & housing assy.
43	500669	Butterfly Agitator /comes with DMC201
44	015526	Name Plate

Item Not Shown


025628 - Brush /025255 motor 2 Req.'d

DMX201 Items Not Shown


014532 - Rivet 2 Req.'d	015484 - Lead /brown
015482 - Terminal Block	502705 - Lead Assy. 3 Req.'d (older units)
015483 - Lead /blue	502706 - Fuse Assy. 3 Req.'d
	016330 - Insulation Sleeve 3 Req.'d

Catalog	Model
DMC201	32DM16
DMC201CAR	DMC201CAR
DMX201	31DM77 or DMX201

Waring Factory Service Center
 314 Ella T. Grasso Ave.
 Torrington, CT 06790
 Tele. 1-800-269-6640
 Fax 860-496-9017
 www.waringproducts.com

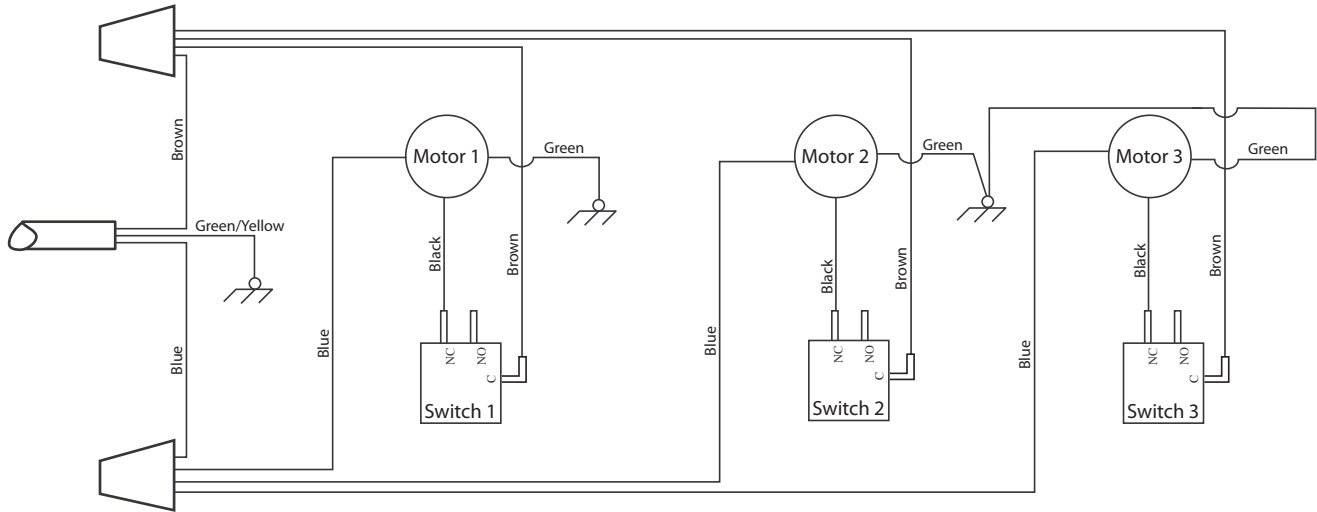

Wiring Diagram DMC201 & DMC201CAR

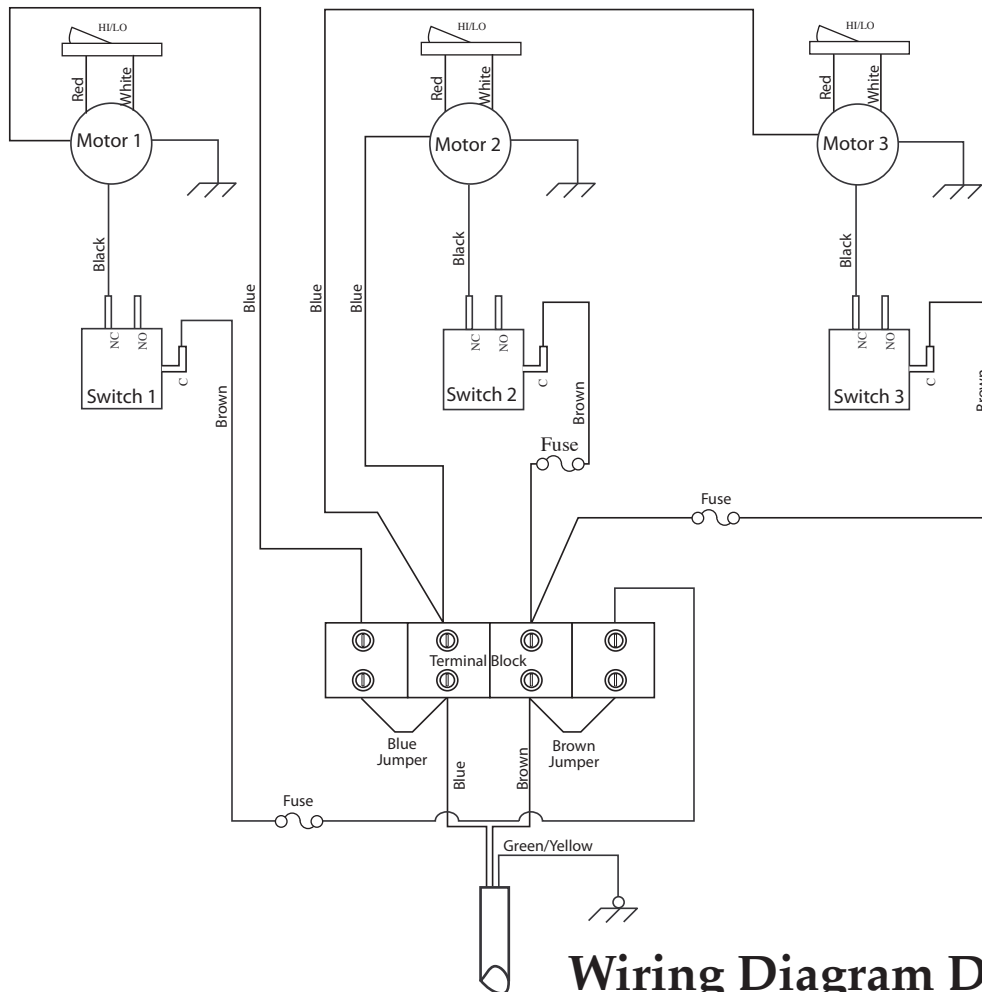

Wiring Diagram DMX201