




# Extra Burner with Toggle Switch WEB300




**037487**  
WEB300 Base Unit

Unit Information	
WEB300 - 60Hz – 1300 Watts	
Temperature Settings	
1	- Low
2	- Low / Medium
3	- Medium
4	- Medium / High
5	- High

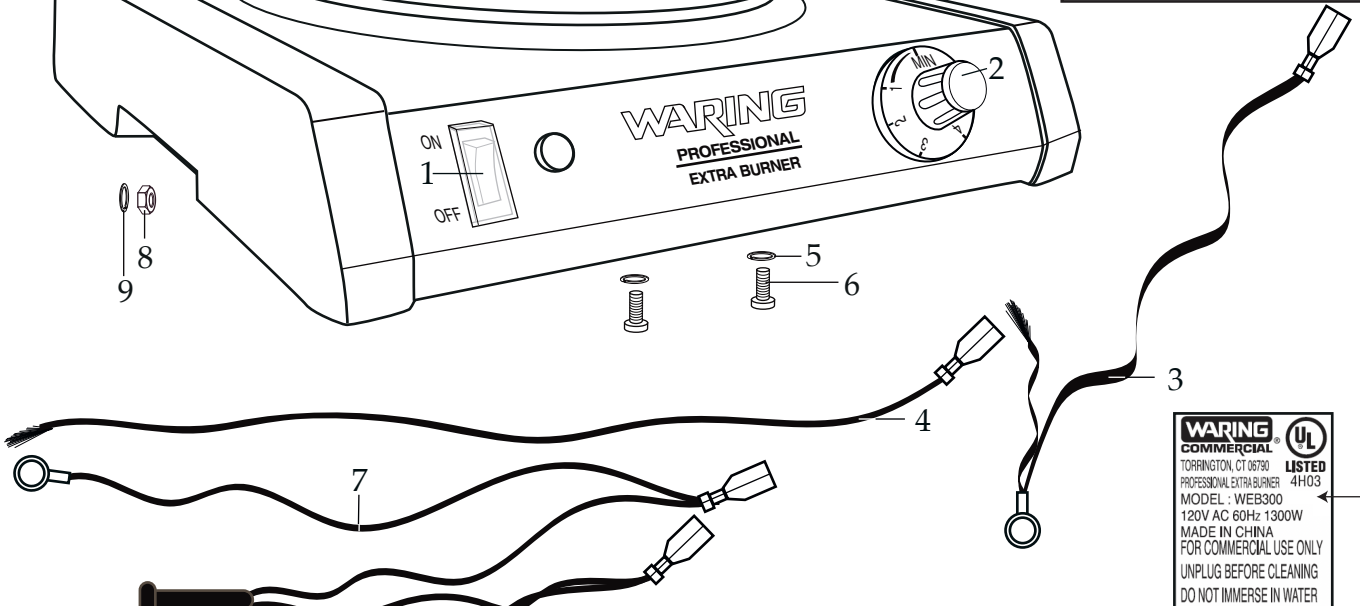

Date Code Location  
YY|MM|DD  
year|year|month|month|day|day

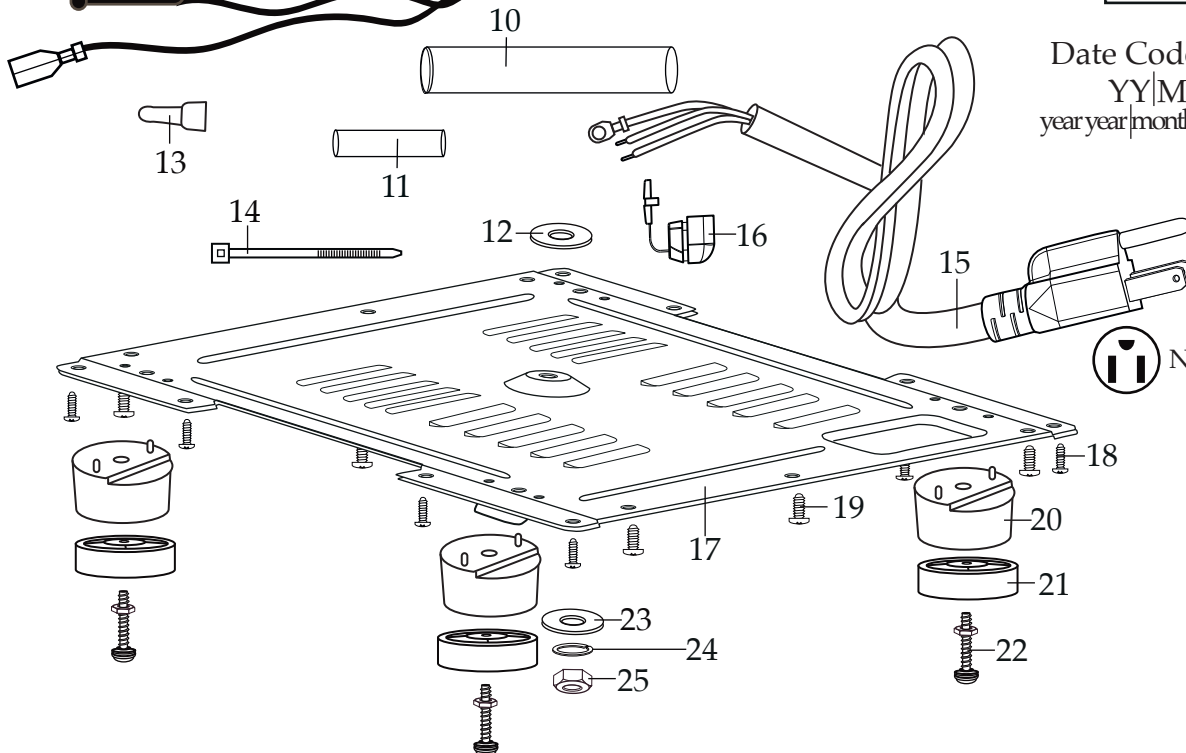

<b>Illustration#</b>	<b>Part#</b>	<b>Description</b>
1	037470	Toggle Switch
2	037471	Knob
3	037484	9.25" Double Blue Lead Assembly
4	037483	10.75" Brown Lead Assembly
5	031118	Spring Washer (lead to heater)
6	031117	Screw (lead to heater)
7	037485	Green Ready Light with White Leads
8	031115	Gound Lead Nut
9	031116	Ground Lead Spring Washer
10	037486	Large Rubber Sleeve
11	037477	Small Rubber Sleeve (5 required)
12	031112	Center Shaft Washer
13	012409	Crimp Connector (2 required)
14	013731	Wire Ties (4 required)
15	031104	Cord
16	031103	Strain Relief
17	031105	Bottom Plate
18	031108	Screw (8 required)
19	031109	Screw (6 required)
20	031120	Plastic Feet (4 required)
21	031106	Rubber Feet (4 required)
22	031107	Screw & Washer Set (4 required screw, 3 washers, 1 spring washer and 1 nut)
23	031112	Center Shaft Washer
24	031111	Center Shaft Spring Washer
25	031110	Center Shaft Nut




**031097**  
WEB300 Base Unit



Extra Burner with Green Ready Light  
and Red On Light

**WEB300**

(parts listed below are different from the current model)

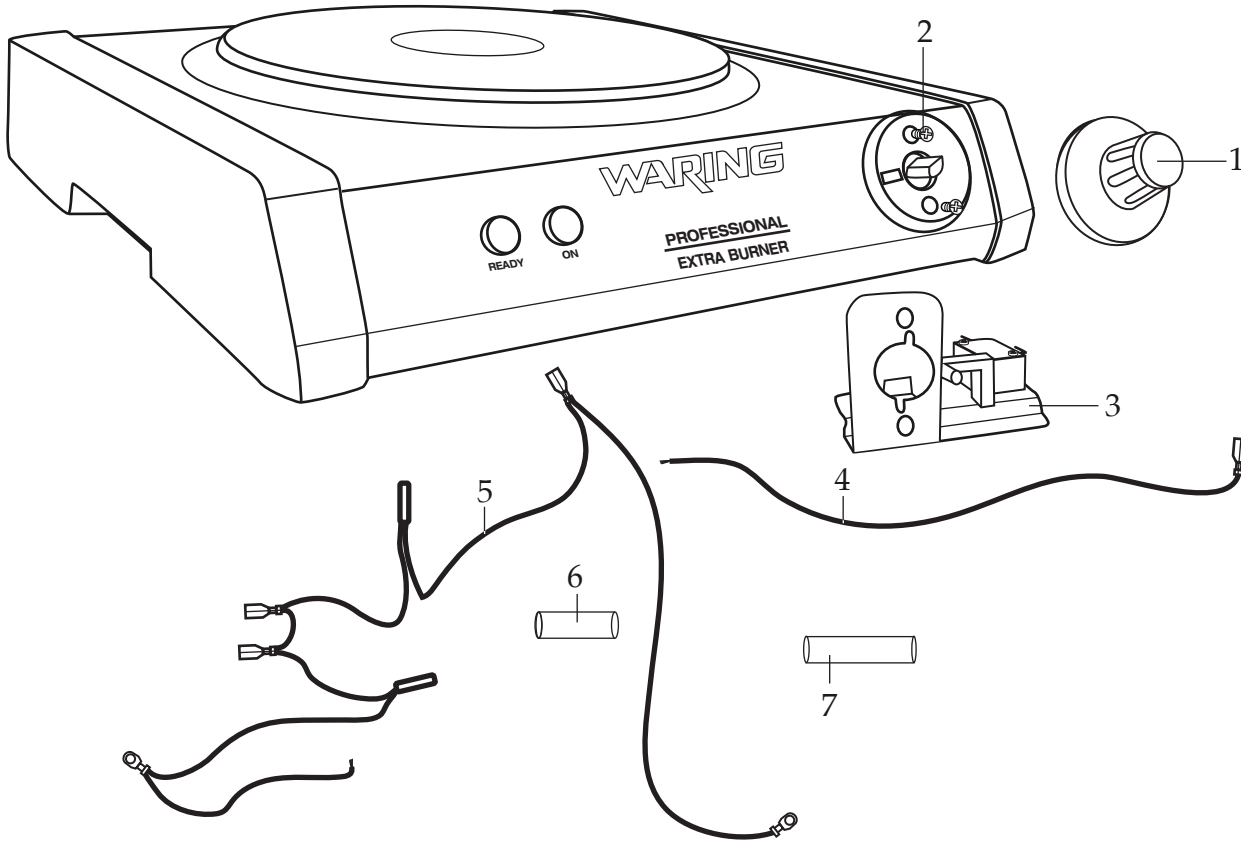

Illustration#	Part#	Description
1	031098	Knob
2	031099	Screw (2 required)
3	031100	Bracket with Micro Switch
4	031102	17" Red Lead Assembly
5	031101	7 Leads Assembly Set
6	031114	Connector Sleeve (2 required)
7	031113	Lead Sleeve (4 required)

