 
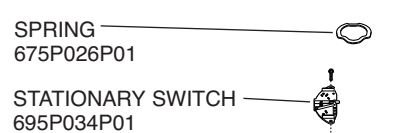 
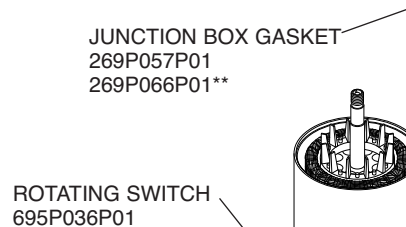 
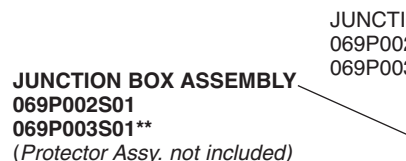 
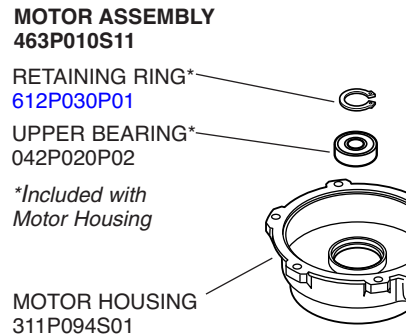 
 
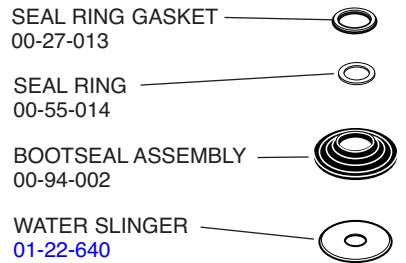 
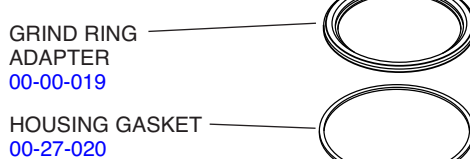 
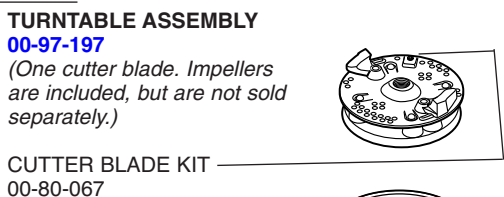 
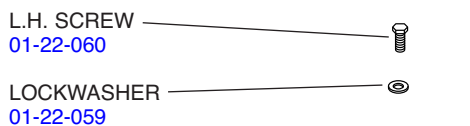 
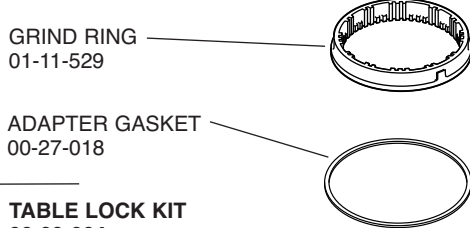 
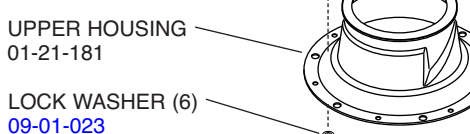 
 
 
 


Waste King

COMMERCIAL[®]
by Anaheim Manufacturing

PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com




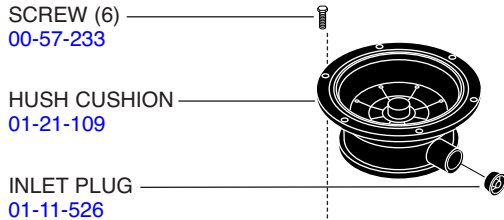


PARTS LIST

**MODEL 500-1
BEGINNING WITH
#96-06-15113-1**

**SEAL KIT
00-94-014**




 
 
 
 
**IF YOUR UNIT HAS A SERIAL NUMBER
STARTING WITH JANUARY 2004 USE
SEAL 00-94-073**

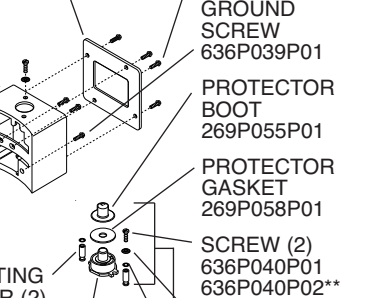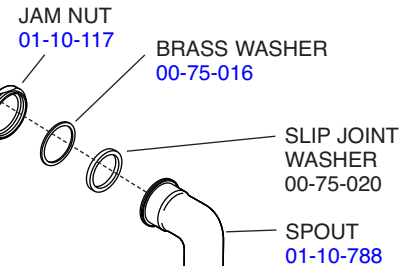




Waste King

COMMERCIAL
by Anaheim Manufacturing


 
 
 
 
 
 
 
PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com

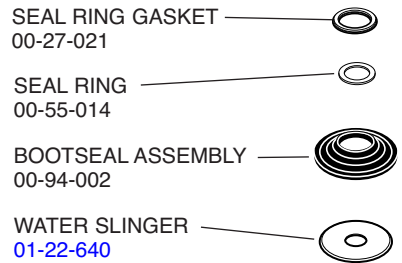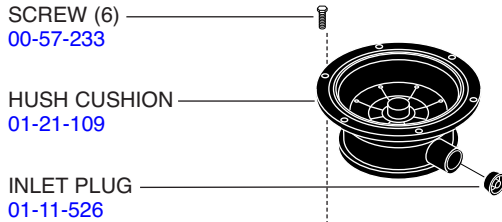

**MOTOR ASSEMBLY
463P010S12**

   

        **JUNCTION BOX ASSEMBLY
069P002S01
069P003S01**
(Protector Assy. not included)**

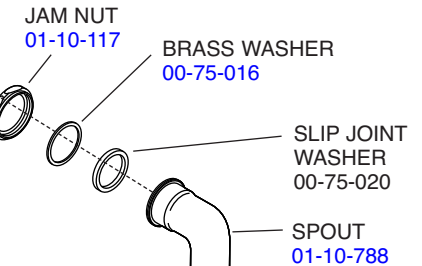

NUMBERED PARTS AVAILABLE SEPARATELY

 
 
 
 
 
 
**For stamped steel box effective 2/10/00

WKC-1318-B
REV 07/09


Waste King

COMMERCIAL[®]
by Anaheim Manufacturing

PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com

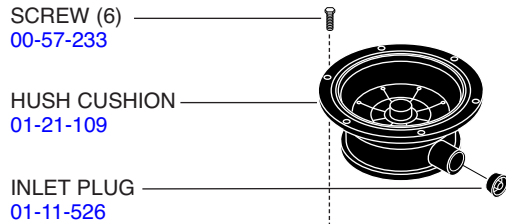


RIPPER KIT 01-22-660

 

TURNTABLE ASSEMBLY 00-97-196



 
(One cutter blade. Impellers are included, but are not sold separately.)

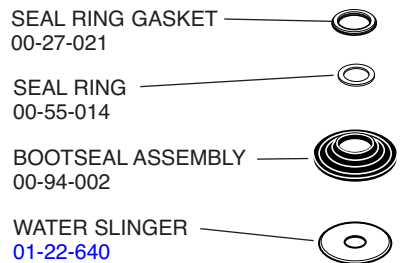







SEAL KIT 00-94-073



   
MOTOR ASSEMBLY 463P010S32



      
JUNCTION BOX ASSEMBLY 069P002S01 069P003S01** (Protector Assy. not included)

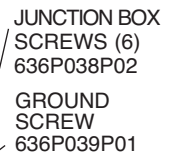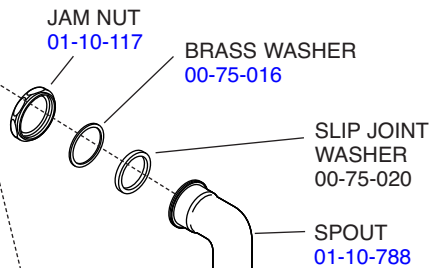









PROTECTOR ASSEMBLY 166P008S31

 



PROTECTOR ASSEMBLY 166P008S31

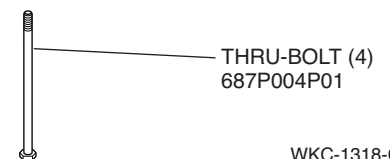 

     
 
 
 
PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com

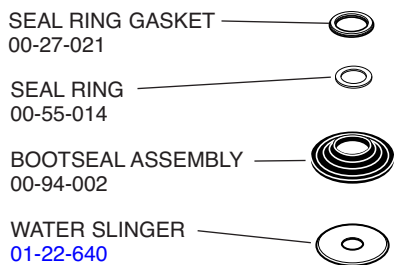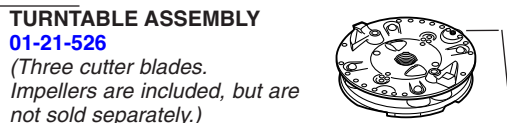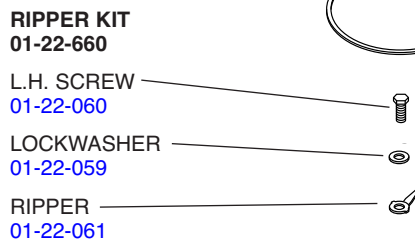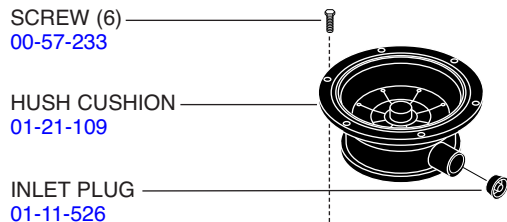








MOTOR ASSEMBLY
463P010S12

  

    JUNCTION BOX ASSEMBLY
069P002S01
069P003S01**
(Protector Assy. not included)



SEAL KIT
00-94-073

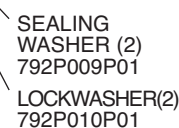       

PROTECTOR ASSEMBLY
166P008S01



FAN KIT
239P001S01







PARTS LIST

MODEL 1000-1 BEGINNING WITH #96-06-15115-1


Waste King

COMMERCIAL[®]
by Anaheim Manufacturing

    PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com

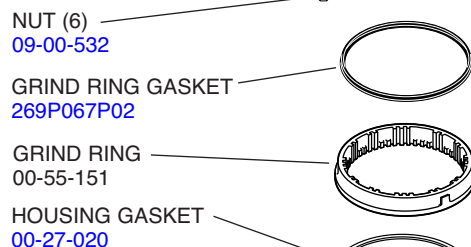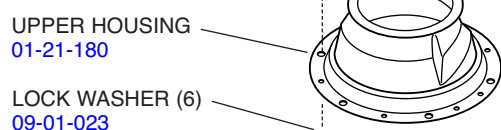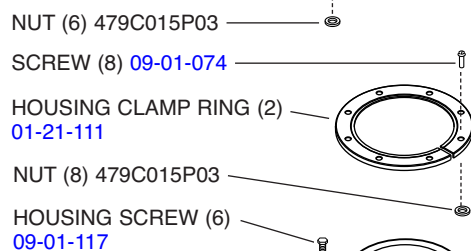
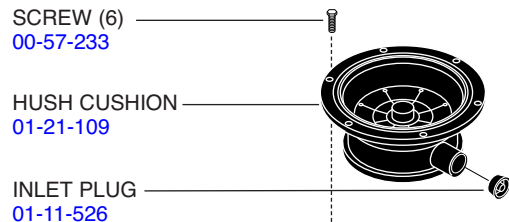


RIPPER KIT 01-22-660

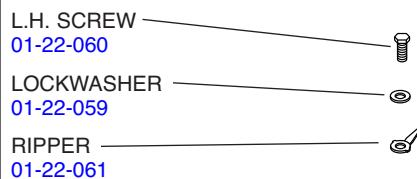 

TURNTABLE ASSEMBLY 01-21-526

  
(Three cutter blades.
Impellers are included, but are
not sold separately.)

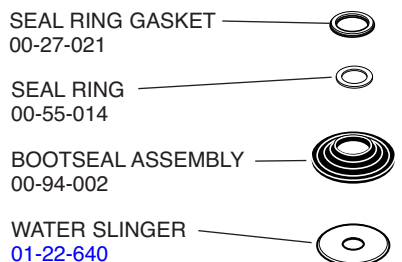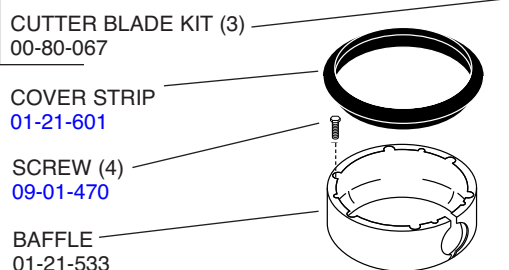

SEAL KIT 00-94-073

SPACER 01-21-588

 MOTOR ASSEMBLY 463P010S32

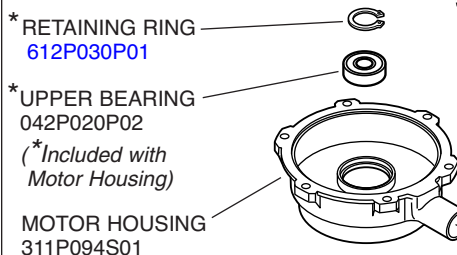


JUNCTION BOX ASSEMBLY 069P002S01 069P003S01** (Protector Assy. not included)


JUNCTION BOX GASKET
269P057P01
269P066P01**



 END SHIELD
311P097P01

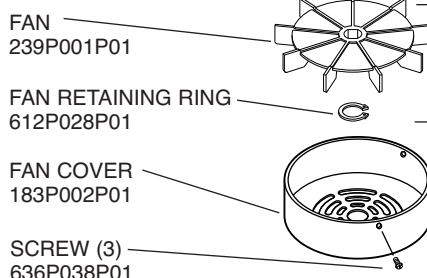

FAN KIT 239P001S01

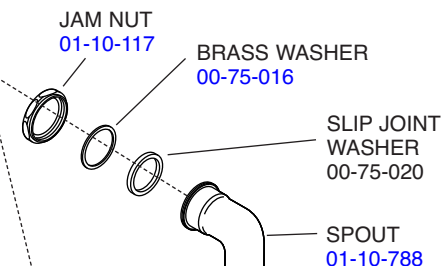 

COVER
183P003P01
174P075P01**
269P065P01**

JUNCTION BOX
SCREWS (6)
636P038P02

GROUND
SCREW
636P039P01

PROTECTOR
BOOT
269P055P01

PROTECTOR
GASKET
269P058P01

SCREW (2)
636P040P01
636P040P02**

 
SEALING
WASHER (2)
792P009P01

LOCKWASHER(2)
792P010P01

PROTECTOR ASSEMBLY 166P008S31

MOUNTING
SPACER (2)
694P013P01

PROTECTOR
166P008P31

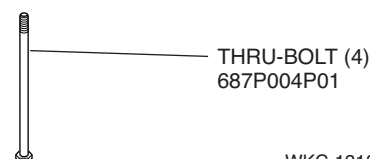

NUMBERED PARTS AVAILABLE SEPARATELY

**For stamped steel box effective 2/10/00

WKC-1318-E
REV 07/09

 
 
 
 
 
 
 
 
 
PARTS LIST

MODEL **1000-3**
BEGINNING WITH
#96-06-15117-1

Waste King

COMMERCIAL
by Anaheim Manufacturing

PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com

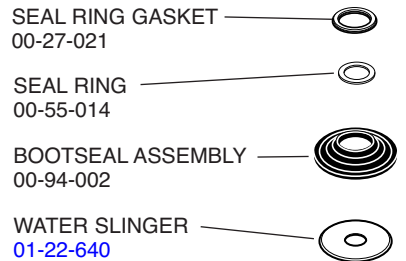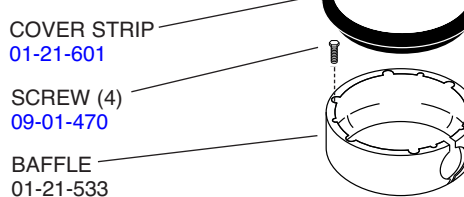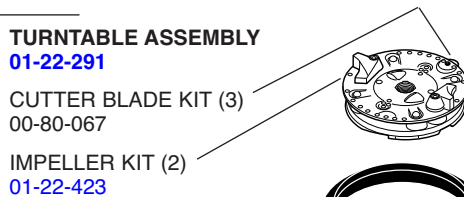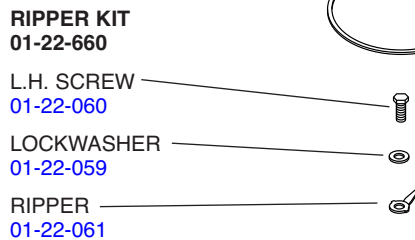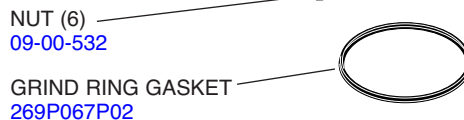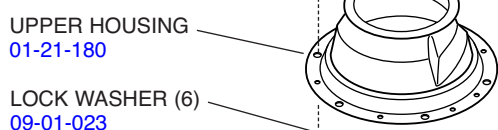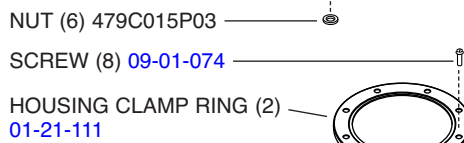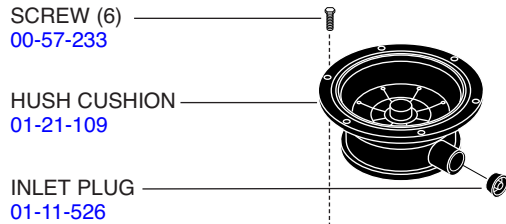

SEAL KIT
00-94-073

SPACER 01-21-588

MOTOR ASSEMBLY
463P010S13

* RETAINING RING
612P030P01

* UPPER BEARING
042P020P02
(*Included with
Motor Housing)

MOTOR HOUSING
311P094S01

JUNCTION BOX ASSEMBLY
069P002S01
069P003S01**
(Protector Assy. not included)

JUNCTION BOX GASKET
269P057P01
269P066P01**

ROTATING SWITCH
695P036P01

RETAINING RING
612P029P01

LOWER BEARING
042P020P01

SPRING
675P026P01

STATIONARY SWITCH
695P034P01
(re-use screw)

END SHIELD
311P097P01

FAN
239P001P01

FAN RETAINING RING
612P028P01

FAN COVER
183P002P01

SCREW (3)
636P038P01

JAM NUT
01-10-117

BRASS WASHER
00-75-016

SLIP JOINT
WASHER
00-75-020

SPOUT
01-10-788

COVER
183P003P01
174P075P01**
269P065P01**

JUNCTION BOX
SCREWS (6)
636P038P02

GROUND
SCREW
636P039P01

PROTECTOR
BOOT
269P055P01

PROTECTOR
GASKET
269P058P01

SCREW (2)
636P040P01
636P040P02**

SEALING
WASHER (2)
792P009P01

LOCKWASHER(2)
792P010P01

**PROTECTOR
ASSEMBLY**
166P008S02

START
CAPACITOR
122P005P04

CAPACITOR
COVER
183P005P01

SCREW (4)
636P038P01

RUN
CAPACITOR
122P006P01

CAPACITOR
COVER
183P008P01

FAN KIT
239P001S01

THRU-BOLT (4)
687P004P03

NUMBERED PARTS AVAILABLE SEPARATELY

 
 
 
 
 
 
 
**For stamped steel box effective 6/22/00

WKC-1318-F
REV 07/09

Waste King

COMMERCIAL
by Anaheim Manufacturing

PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com

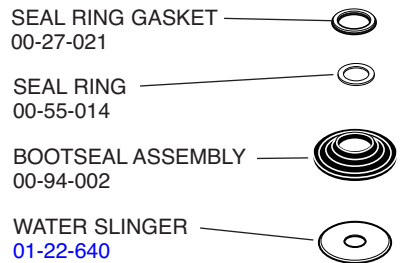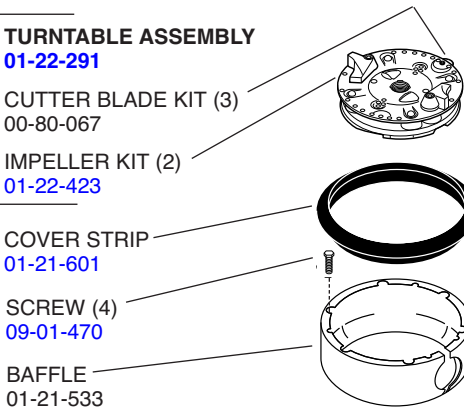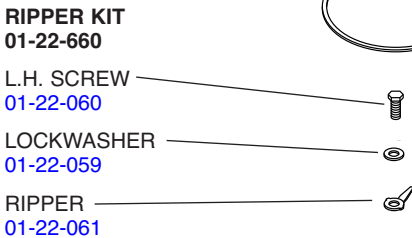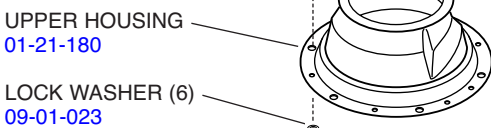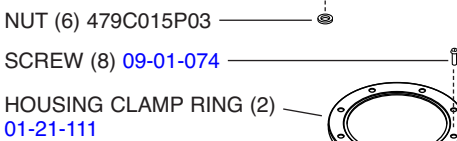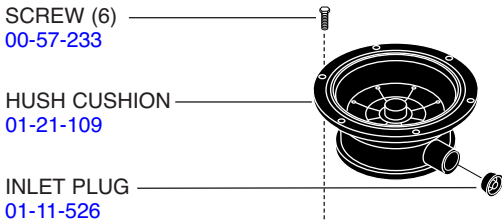

SEAL KIT
00-94-073

SPACER 01-21-588

MOTOR ASSEMBLY
463P010S33

* RETAINING RING
612P030P01

* UPPER BEARING
042P020P02
(*Included with
Motor Housing)

MOTOR HOUSING
311P094S01

JUNCTION BOX ASSEMBLY
069P002S01
069P003S01**
(*Protector Assy. not included)

JUNCTION BOX GASKET
269P057P01
269P066P01**

LOWER BEARING
042P020P01

SPRING
675P026P01

END SHIELD
311P097P01

FAN
239P001P01

FAN RETAINING RING
612P028P01

FAN COVER
183P002P01

SCREW (3)
636P038P01

JAM NUT
01-10-117

BRASS WASHER
00-75-016

SLIP JOINT
WASHER
00-75-020

SPOUT
01-10-788

COVER
183P003P01
174P075P01**
269P065P01**

JUNCTION BOX
SCREWS (6)
636P038P02

GROUND
SCREW
636P039P01

PROTECTOR
BOOT
269P055P01

PROTECTOR
GASKET
269P058P01

SCREW (2)
636P040P01
636P040P02**

SEALING
WASHER (2)
792P009P01

LOCKWASHER(2)
792P010P01

**PROTECTOR
ASSEMBLY**
166P008S32

JUNCTION BOX
069P002P01
069P003P01**

MOUNTING
SPACER (2)
694P013P01

PROTECTOR
166P008P32

FAN KIT
239P001S01

THRU-BOLT (4)
687P004P02

NUMBERED PARTS AVAILABLE SEPARATELY

**For stamped steel box effective 3/29/01

WKC-1318-G
REV 07/09

PARTS LIST

MODEL 1250-3
BEGINNING WITH
#96-06-15118-1

Waste King

COMMERCIAL[®]
by Anaheim Manufacturing

PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com



 
 
 
 
 
 
 
 
 
 


TABLE LOCK KIT 00-99-004

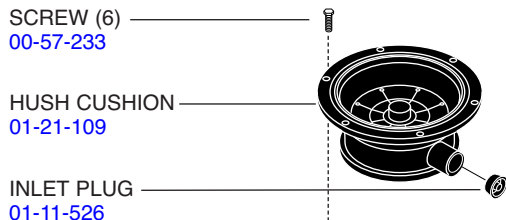 



TURNTABLE ASSEMBLY 01-22-668

 

MOTOR ASSEMBLY 463P010S13










  JUNCTION BOX ASSEMBLY 069P002S01 069P003S01** (Protector Assy. not included)










SEAL KIT 00-94-014

       
IF YOUR UNIT HAS A SERIAL NUMBER
STARTING WITH JANUARY 2004 USE
SEAL 00-94-073



PROTECTOR ASSEMBLY 166P008S02

       

FAN KIT 239P001S01

 

NUMBERED PARTS AVAILABLE SEPARATELY

 
 
 
 
 
 
 
 
 
**For stamped steel box effective 6/22/00

WKC-1318-H
REV 07/09

Waste King

COMMERCIAL[®]
by Anaheim Manufacturing

PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com

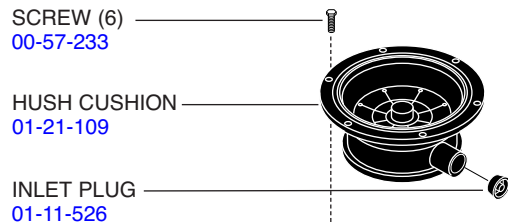

NUMBERED PARTS AVAILABLE SEPARATELY **For stamped steel box effective

PARTS LIST

MODEL 1500-3
BEGINNING WITH
#96-10-15057-1

SEAL RING GASKET
00-27-013

SEAL RING
00-55-014

BOOTSEAL ASSEMBLY
00-94-002

WATER SLINGER
01-22-640

SEAL KIT
00-94-014

IF YOUR UNIT HAS A SERIAL NUMBER
STARTING WITH JANUARY 2004 USE
SEAL 00-94-073

SPACER 01-21-588

MOTOR ASSEMBLY
463P010S33

* RETAINING RING
612P030P01

* UPPER BEARING
042P020P02
(*Included with
Motor Housing)

MOTOR HOUSING
311P094S01

JAM NUT
01-10-117

BRASS WASHER
00-75-016

SLIP JOINT
WASHER
00-75-020

SPOUT
01-10-788

COVER
183P003P01
174P075P01**
269P065P01**

JUNCTION BOX
SCREWS (6)
636P038P02

GROUND
SCREW
636P039P01

PROTECTOR
BOOT
269P055P01

PROTECTOR
GASKET
269P058P01

SCREW (2)
636P040P01
636P040P02**

SEALING
WASHER (2)
792P009P01
LOCKWASHER(2)
792P010P01

PROTECTOR
ASSEMBLY
166P008S32

JUNCTION BOX ASSEMBLY
069P002S01
069P003S01**
(Protector Assy. not included)

JUNCTION BOX GASKET
269P057P01
269P066P01**

JUNCTION BOX
069P002P01
069P003P01**

MOUNTING
SPACER (2)
694P013P01

PROTECTOR
166P008P32

LOWER BEARING
042P020P01

SPRING
675P026P01

END SHIELD
311P097P01

FAN
239P001P01

FAN RETAINING RING
612P028P01

FAN COVER
183P002P01

SCREW (3)
636P038P01

FAN KIT
239P001S01

THRU-BOLT (4)
687P004P02

PARTS LIST

MODELS 2000-1/2000-3

2000-1: BEGINNING WITH #96-05-15084-1

2000-3: BEGINNING WITH #96-06-15464-1

CLAMP (2)
00-10-034

HUSH CUSHION
00-14-674

SCREW (6)
09-01-324

UPPER HOUSING
01-22-895


TABLE LOCK KIT
00-99-004

L.H. SCREW
01-22-060

LOCKWASHER
01-22-059


TURNTABLE ASSEMBLY
01-22-645
(INCLUDES IMPELLER KIT
AND CUTTER BLADE KIT)

 IMPELLER DETAIL IMPELLER KIT* (2)
00-86-545

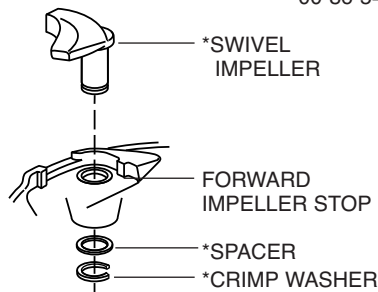

CUTTER BLADE DETAIL
(TURNTABLE SHOWN
UPSIDE-DOWN)

 CUTTER
BLADE KIT* (1)
00-80-178

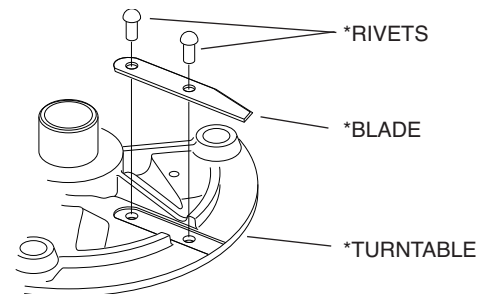

UPPER GASKET
00-27-100

GRIND RING
00-55-151

LOWER GASKET
00-27-020

WATER SLINGER
01-22-856

Waste King

C O M M E R C I A L[®]
by Anaheim Manufacturing

PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com

PARTS LIST

MODELS 2000-1/2000-3

2000-1: BEGINNING WITH #96-05-15084-1

2000-3: BEGINNING WITH #96-06-15464-1

SEAL ASSEMBLY
01-22-533-S01

SCREW (2)
09-01-520

SEAL PROTECTOR
01-22-643

HEAD ASSEMBLY
01-22-532

SHIMS (4)
00-64-024
(Replace as required.
Stack height of replacement
shims same as originally
installed shims.)

SPACER 01-22-641

WASHER 09-01-533

RETAINING RING 00-55-031

WATER SLINGER
01-22-640

SPACER 01-22-639

MOTOR HOUSING
311P093S01

UPPER BEARING
01-21-590*
(Included in seal
kit 01-22-688)

RETAINING RING*
09-01-523

LEG ASSEMBLY (3)
01-22-918

**CRANE SEAL KIT
01-22-688
SINCE 1984**

PRIOR TO SERIAL # 840800214

SEAL ASSEMBLY
09-00-225
(NLA)

SHIM (4)
00-64-024

SPACER 01-22-771

UPPER BEARING
01-21-590

RETAINING RING
00-55-031

**SEAL KIT
01-22-754
(NLA)**

* Included with Motor Housing and available separately.

**NUMBERED PARTS AVAILABLE SEPARATELY
(NLA) - NO LONGER AVAILABLE**

 
Waste King

COMMERCIAL
by Anaheim Manufacturing

PHONE: (800) 454-4423 • FAX: (800) 454-4406
www.wasteking.com


2000-1:

MOTOR ASSEMBLY 463P010S14

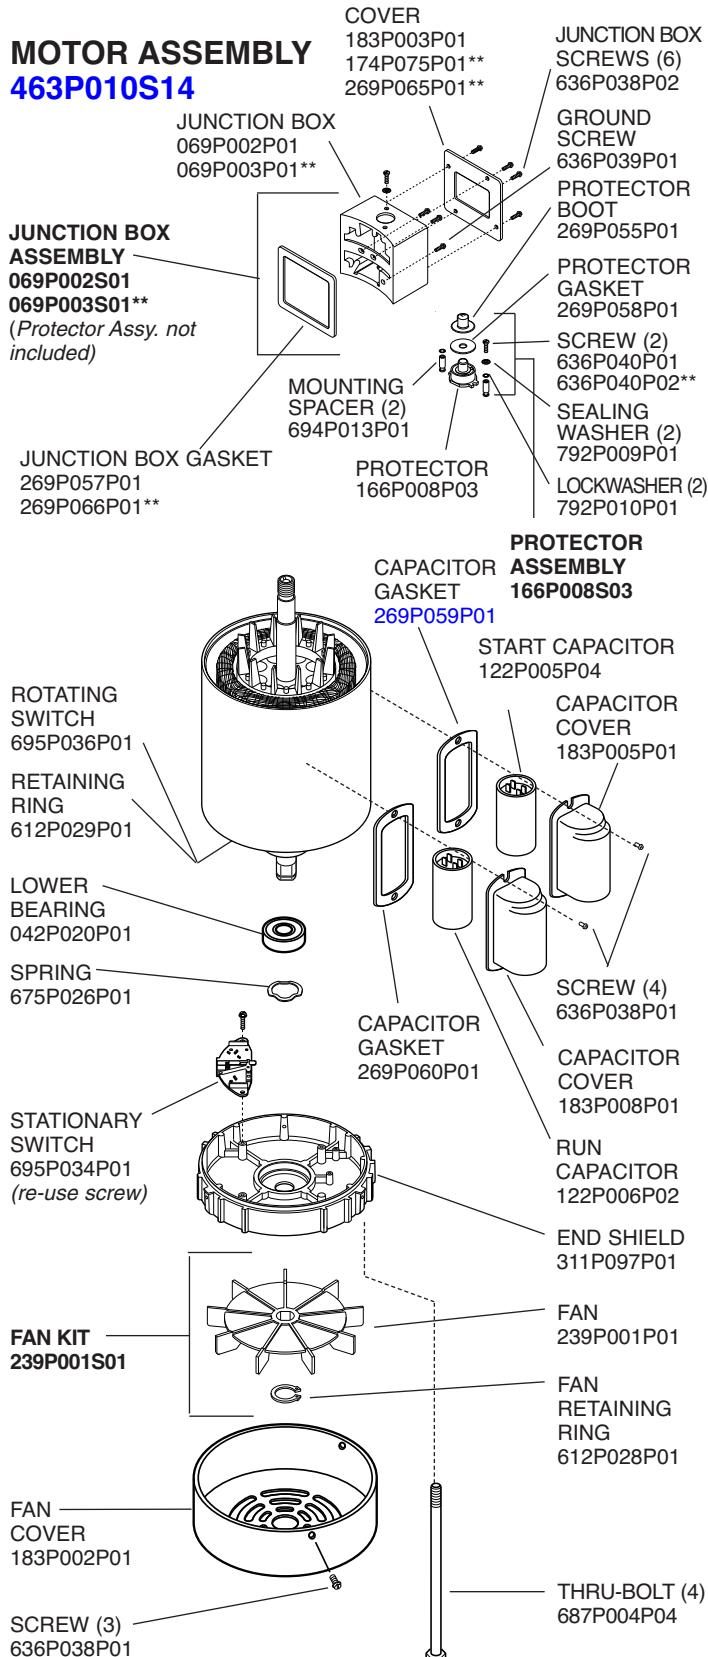

2000-3:

 MOTOR ASSEMBLY 463P010S34

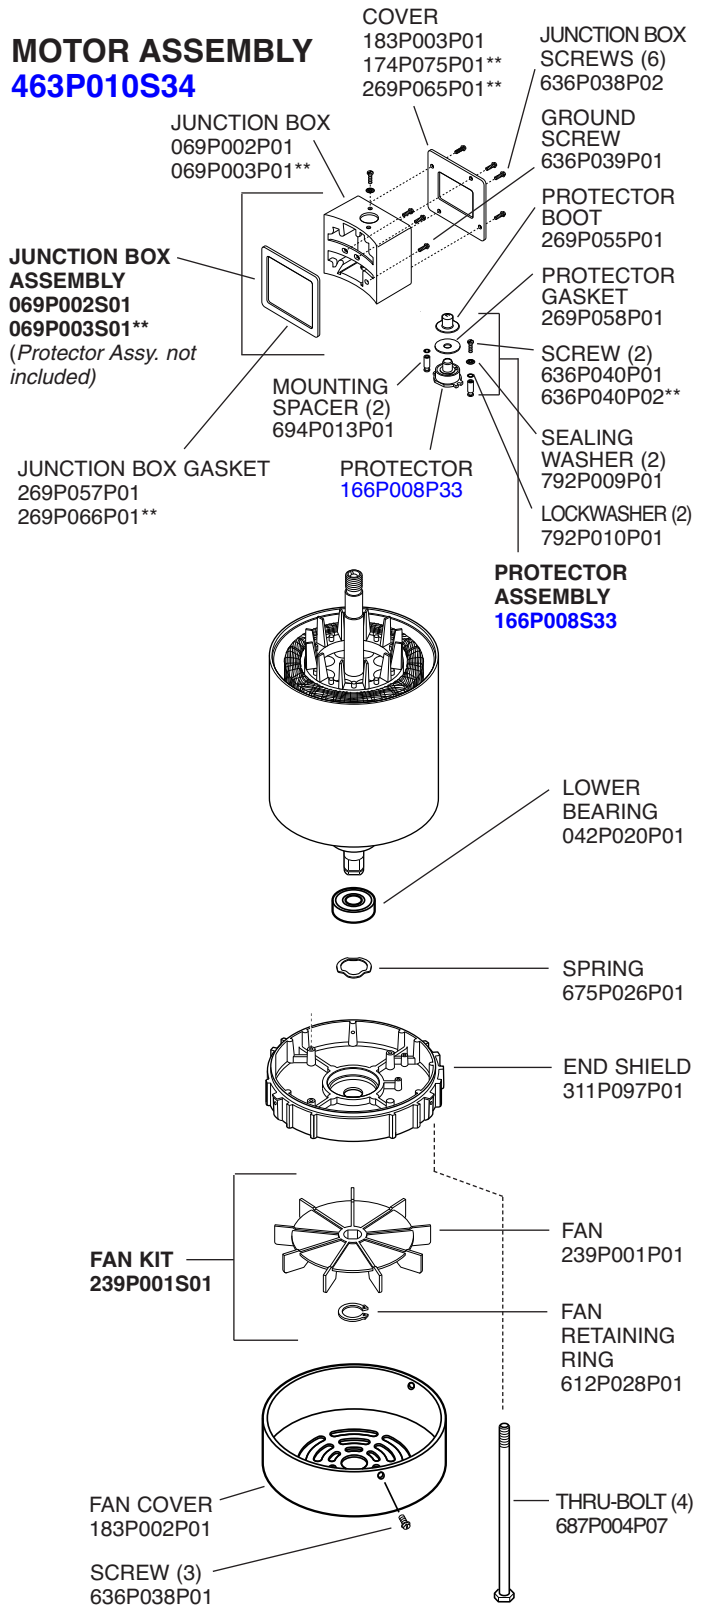

**For stamped steel box effective 11/16/99

NUMBERED PARTS AVAILABLE SEPARATELY

**For stamped steel box effective 2/14/00

WKC-1318-K3
REV 05/01

PARTS LIST

MODELS 2000-1/2000-3

2000-1: BEGINNING WITH #96-05-15084-1

2000-3: BEGINNING WITH #96-06-15464-1