




**30" ELECTRIC FREESTANDING RANGE
(With Bake Assist Temps)**

MODELS:

ACR4303MFS3 (Stainless)


COOKTOP PARTS

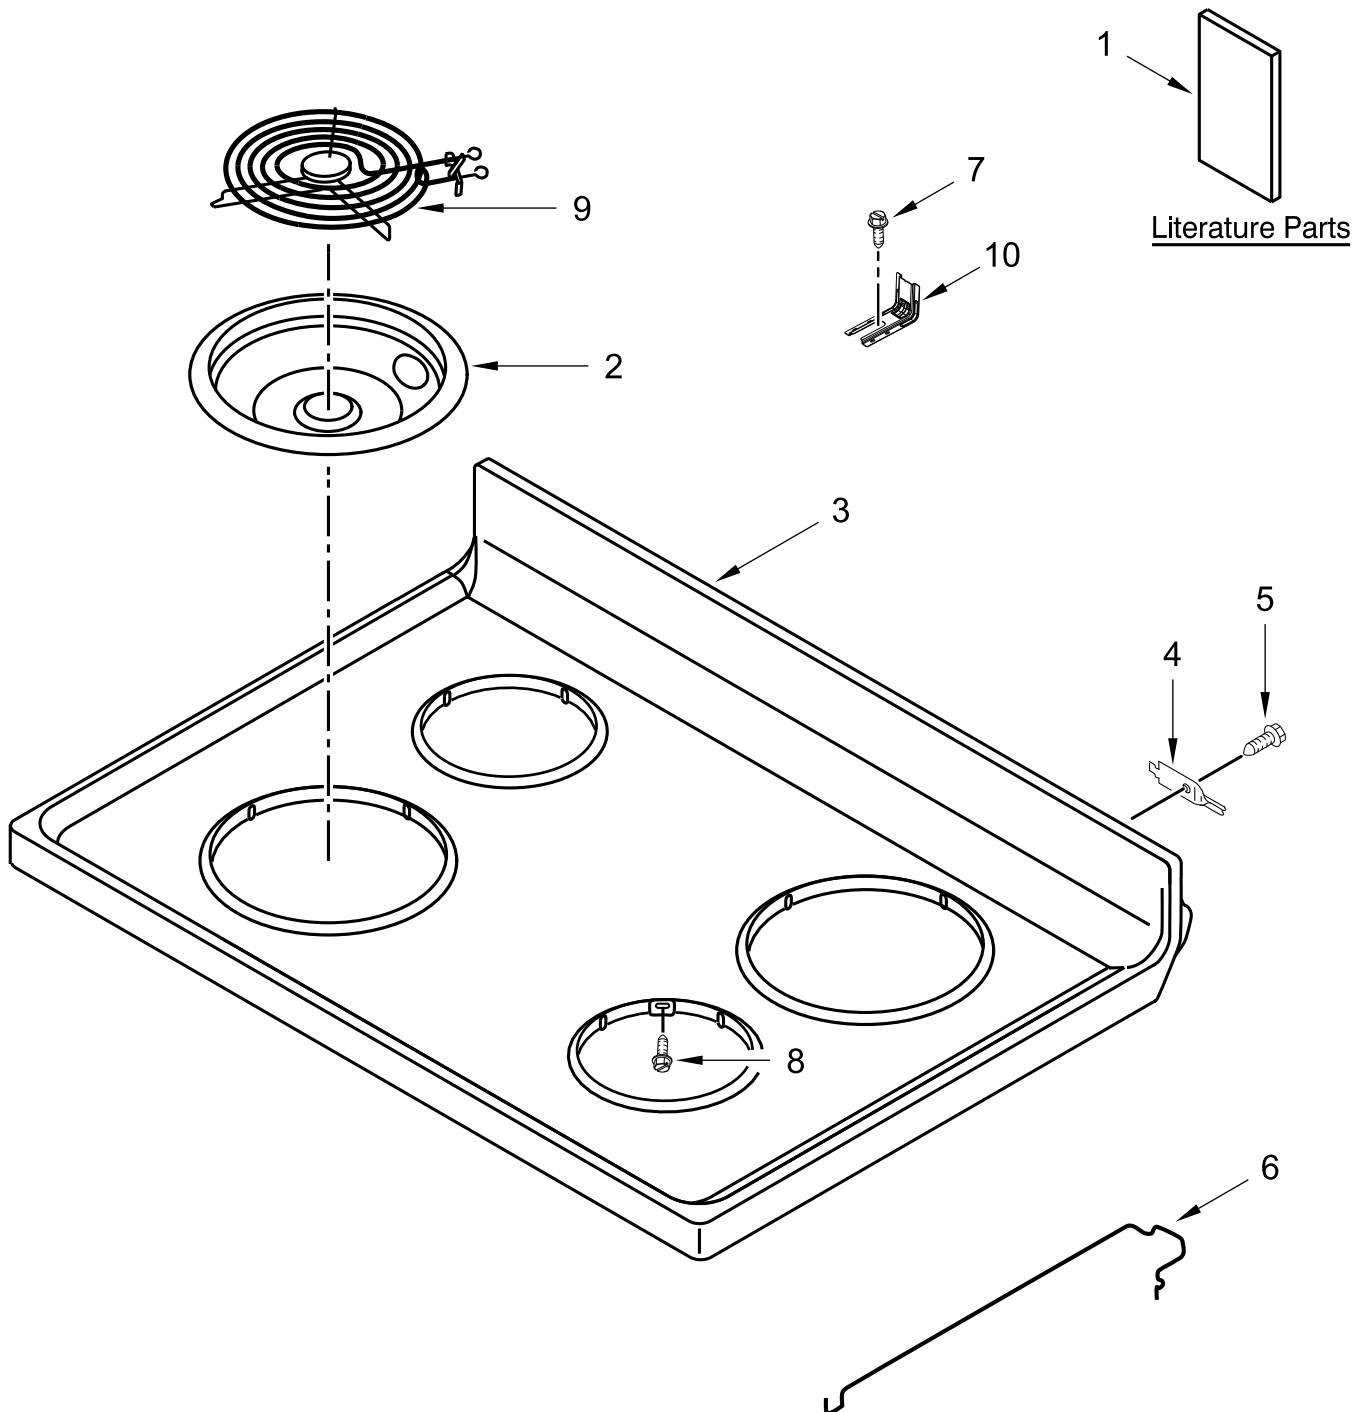

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	10	W10306542	Bracket, Anti-Tip
	W11235898	User Instructions	6	3195812	Rod, Support			FOLLOWING PARTS NOT ILLUSTRATED
	W11241246	Wiring Diagram	7	7101P485-60	Screw, Anti-Tip Kit			
	W11047681	Instructions, Installation	8	3196154	Screw		W11134841	Harness, Main
2	W10196405	Bowl, Drip (8") (Left Front and Right Rear)	9	W11199518	Element, Coil Heating (2150W) (Left Front and Right Rear)		W11134595	Harness, Cooktop
	W10196406	Bowl, Drip (6") (Right Front and Left Rear)		W11199519	Element, Coil Heating (1300W) (Right Front and Left Rear)		3196173	Screw (Grounding)
3		Cooktop					W10281322	Kit, Bare Wire Adapter Block
	3186233	Black						
4	3195060	Hinge, Cooktop						


CONTROL PANEL PARTS

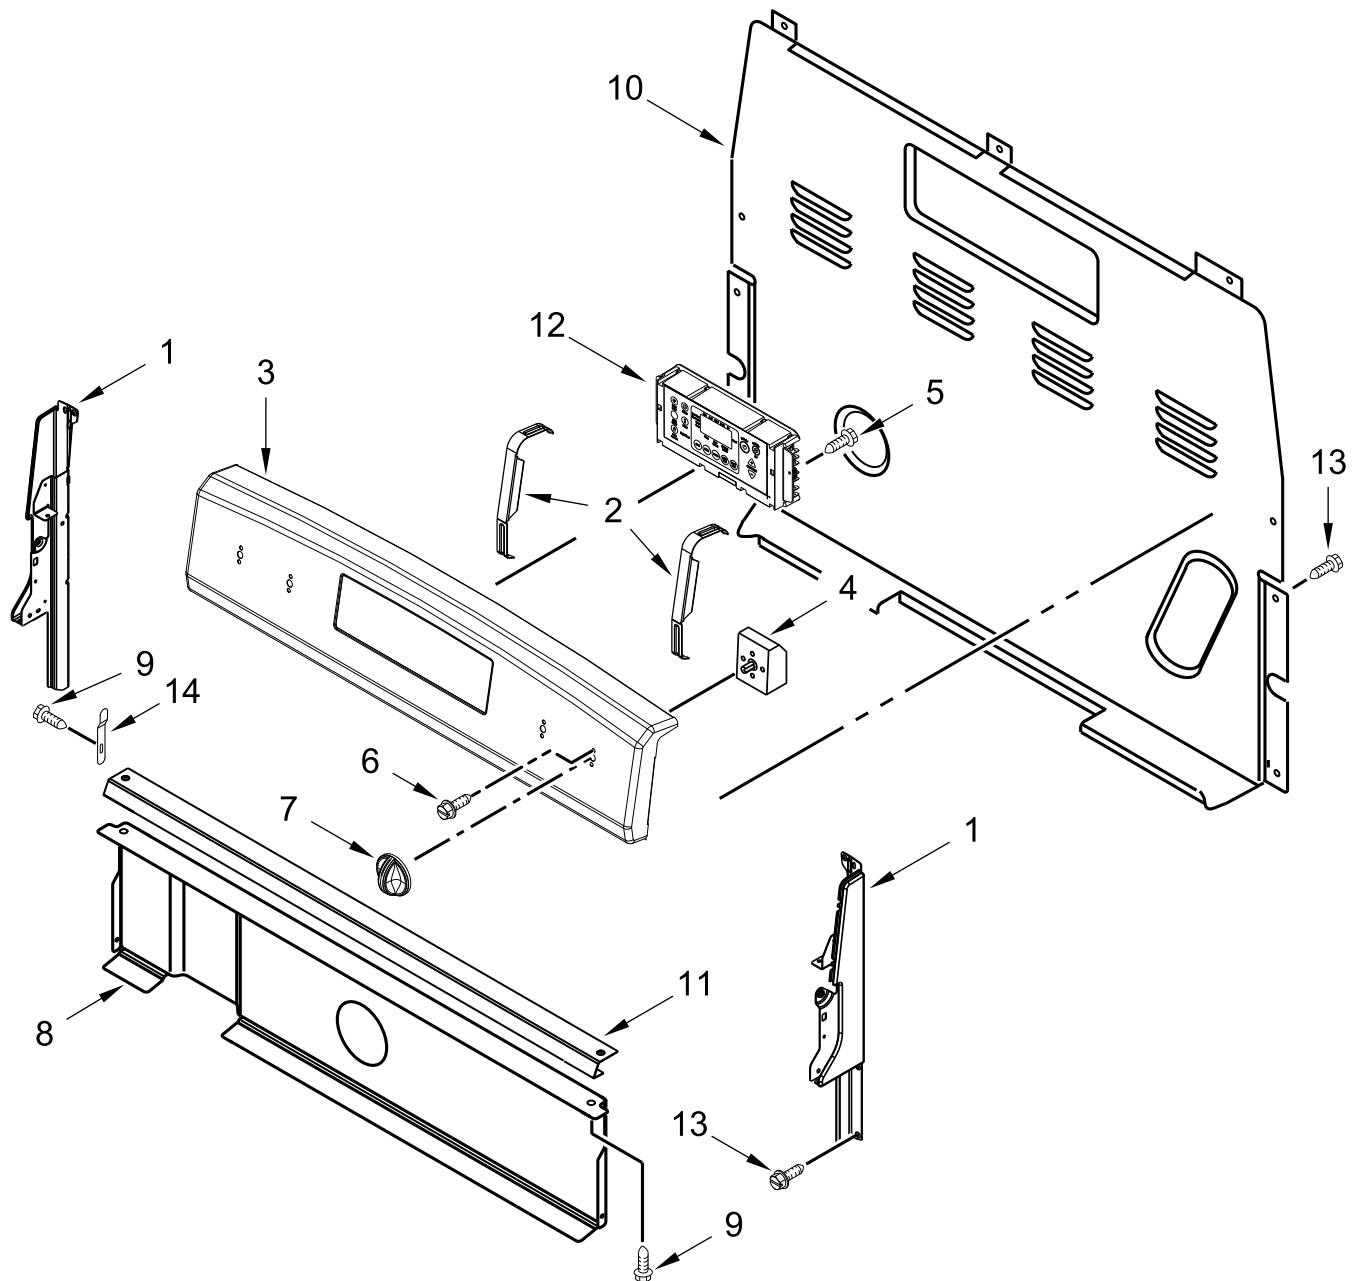

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	3196169	Screw	13	3196178	Screw
	W11130372	Black (Left)	6	3400882	Screw	14	3196200	Clip, Spring
	W11130379	Black (Right)	7		Knob, Infinite			
2	W10695491	Bracket, Control		W10844802	Stainless			
3		Panel, Control	8	W10134247	Shield, Heat			
	W11157011	Stainless	9	3196165	Screw			
4	3148951	Switch, Infinite	10	8272473	Cover, Upper Rear			
		(Left Front and Right Rear)	11	W10525121	Bracket, Console Mounting			
	3148953	Switch, Infinite (Green)	12		Control, Electronic			
		(Right Front and Left Rear)		W11204487	Black			


CHASSIS PARTS

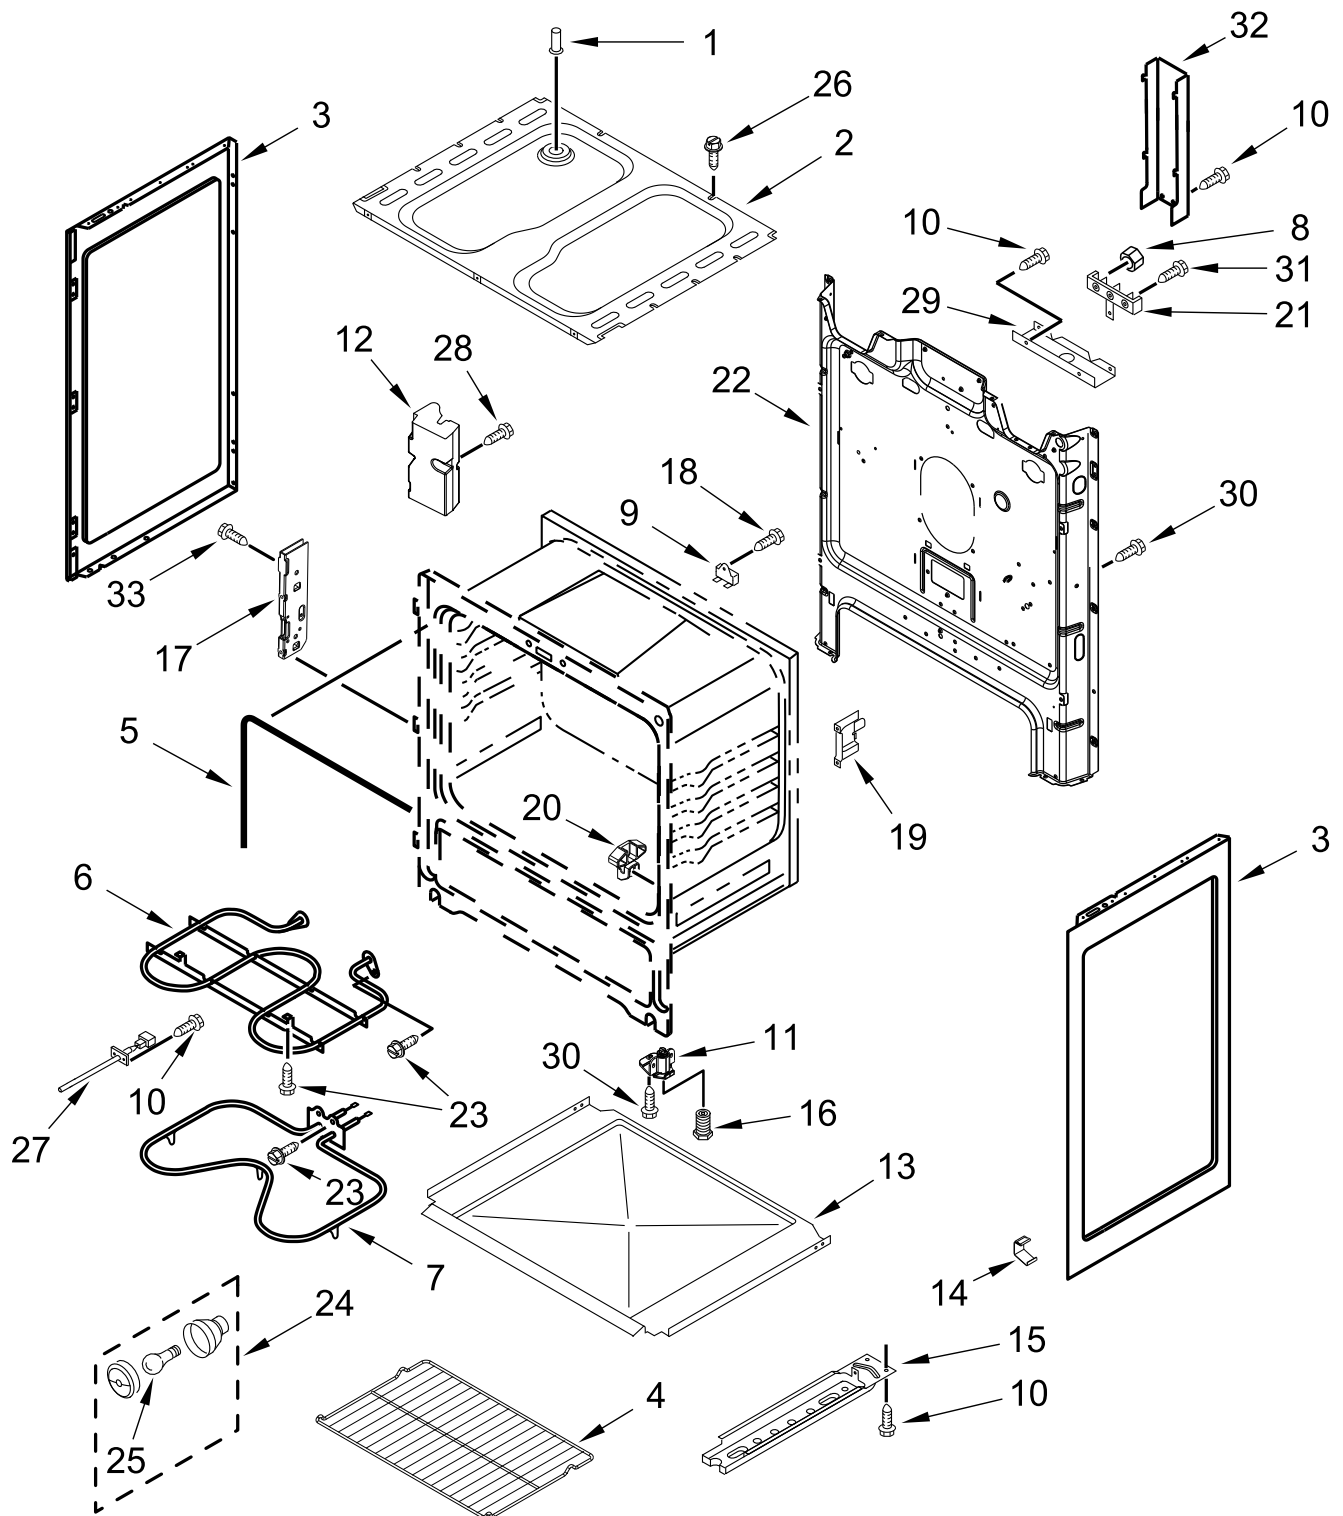

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	15	W10390008	Assembly, Base Rail (Left)	25	W10571723	Bulb, Halogen 40 Watts
2	W10209613	Box, Burner				26	3196567	Screw
3		Panel, Side		W10390007	Assembly, Base Rail (Right)	27	W10181986	Sensor, Oven
	W10162245	Black	16	W10058460	Foot, Leveling	28	W11034869	Screw
4	W10268578	Rack, Oven	17	W10289077	Receiver, Hinge	29	3186034	Bracket, Service
5	W10129032	Seal, Door	18	3196172	Screw	30	3196178	Screw
6	W10308476	Element, Broil	19	W10404688	Clip, Oven Support	31	3400016	Screw
7	W11022836	Element, Bake	20	W10674705	Glide, Drawer Front	32	W10326122	Cover, Terminal Block
8	3400029	Nut	21	W10245259	Block, Terminal	33	W10031780	Screw
9	3196548	Fuse, Thermal	22		Back, Main (Not Serviced)			FOLLOWING PARTS NOT ILLUSTRATED
10	3196169	Screw	23	3196174	Screw		8273263	Insulation, Wrap
11	W10341186	Assembly, Front Foot	24	W11175594	Assembly, Light		8272611	Insulation, Back
12	W10910404	Counterweight						
13	8054068	Retainer, Insulation						
14	W10137382	Clip, Panel						

DOOR PARTS

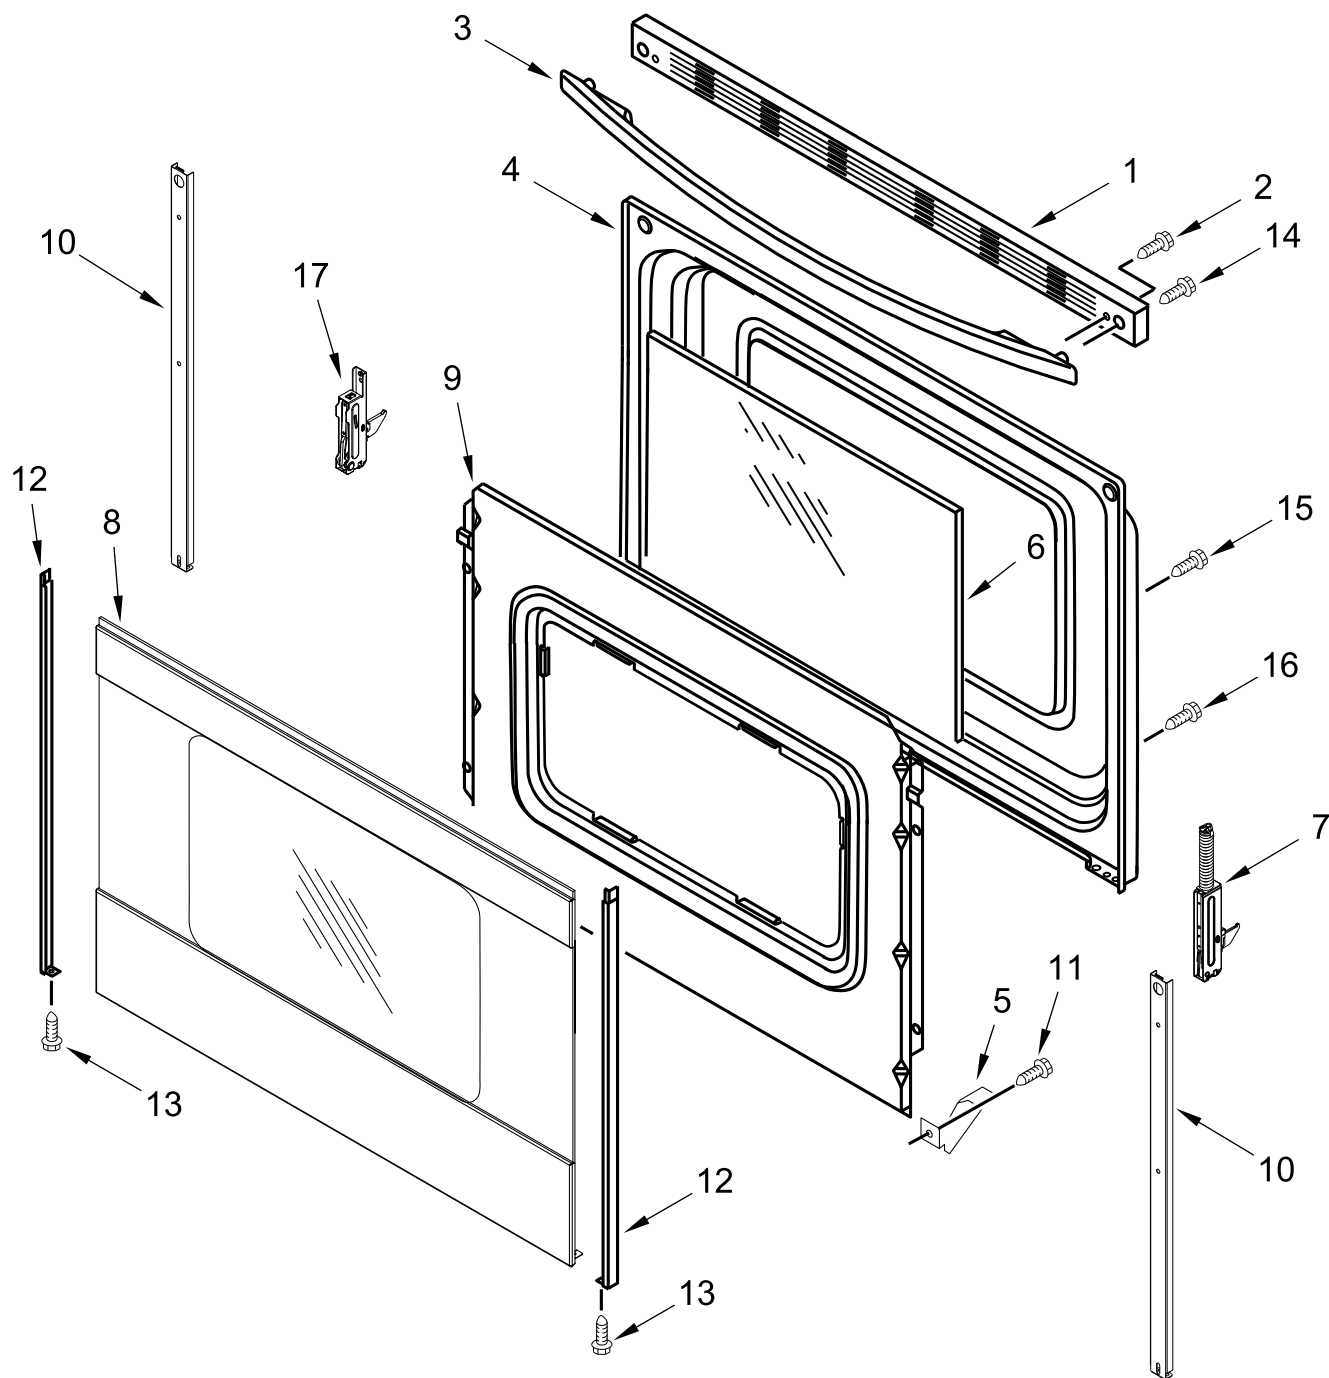


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10163951	Screw
3		Handle, Door
	W10144883	Stainless
4	9761344	Liner, Door
5	W10137382	Clip, Panel
6	W10620754	Glass, Inner
7	W10299225	Hinge, Active

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8		Glass Assembly, Outer Door
	W10817930	Stainless
9	9761505	Retainer, Insulation
10	W10544179	Strap, Door
11	3196165	Screw
12		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10327235	Screw
14	W10200660	Screw
15	W10031790	Screw
16	W10031780	Screw
17	W10299227	Hinge, Door (Passive)

DRAWER PARTS

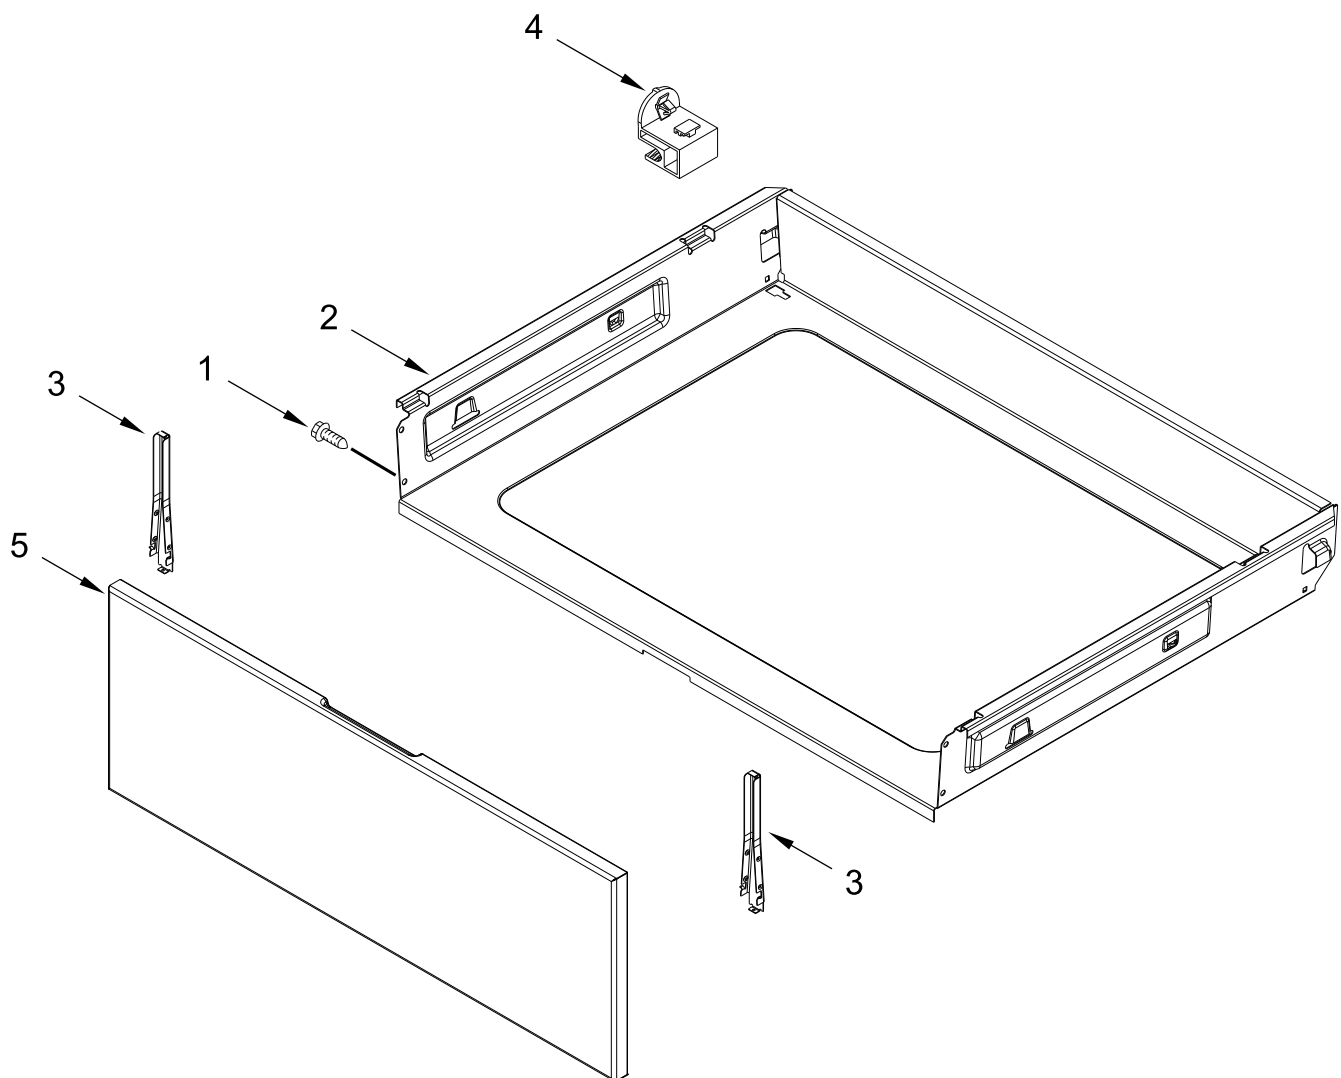

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10462910	Bracket, Mounting Drawer
4	W10674708	Glide, Drawer Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W10330070	Stainless

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	241430	Aluminum Foil
	3184478	Cleaner, Glass
	4396923	Grid, Broiler Pan and