




36" SMART COMMERCIAL-STYLE GAS RANGE WITH 6 BURNERS

MODELS:

KFGC506JSS00 (Stainless)


BURNER BOX PARTS

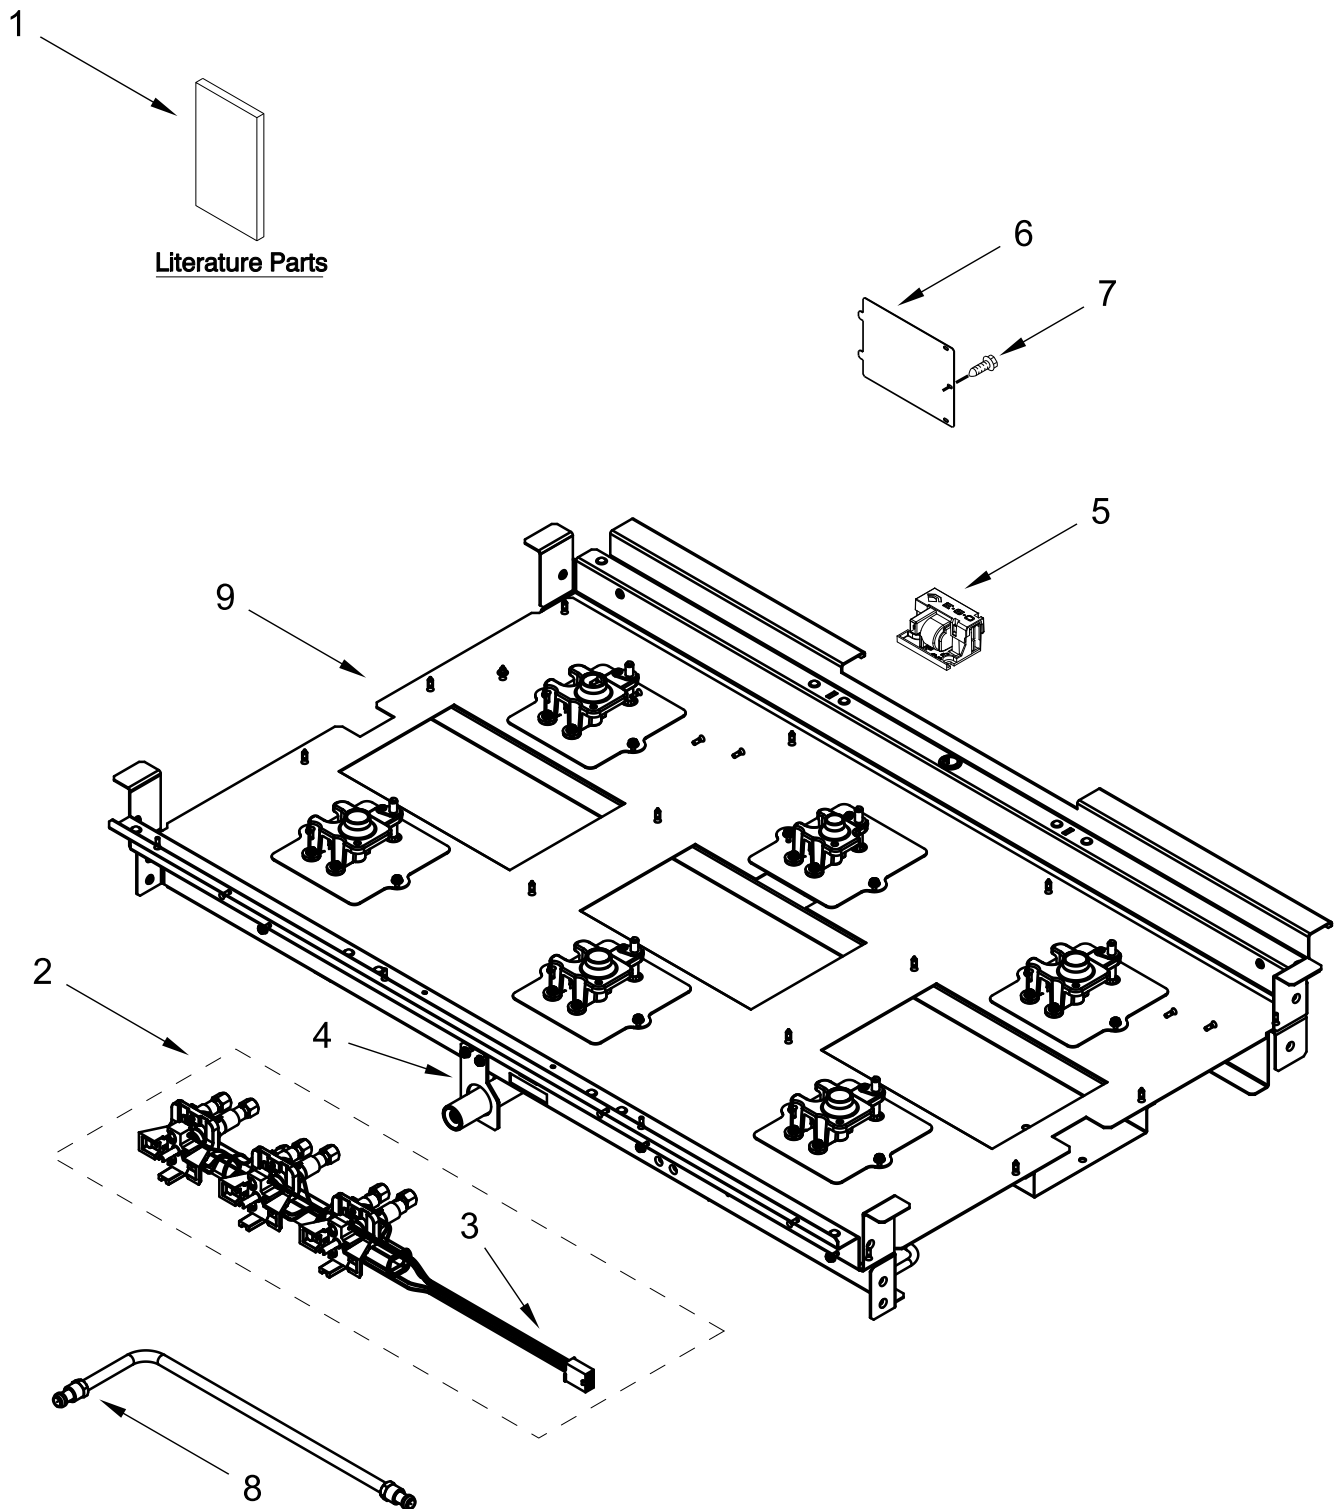

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	7101P426-60	Screw	9		Box, Burner (Not Serviced)
	W11177370	Guide, Use and Care	8	W10892073	Tube, Manifold Supply (Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W11177374	Instructions, Installation		W10892334	Tube, Manifold Supply (Right)		W11200307	Harness, Main (36")
	W11184759	Guide, Internet Connectivity					W11200332	Harness, Cooktop
	W11202388	Diagram, Wiring					W10780278	Harness, Door Lock
	W11202292	Sheet, Tech					W11200325	Harness, Communication
	W11364680	Guide, Quick Start					W11242785	Harness, WIFI
2	W10892995	Assembly, Valve Manifold (Left Front, Left Rear, Center Rear)					W10624584	Cord, Power
	W10893005	Assembly, Valve Manifold (Center Front, Right Front, Right Rear)					4450800	Screw, Grounding
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238042	Kit, LP Conversion
3	W10903729	Switch, Harness					W11311196	Ignitor Wire, Wire-Electrode Bake
4	W11121194	Bracket, Manifold					W11311197	Ignitor Wire, Wire-Electrode Broil
5	W11121317	Module, Spark						
6	W10115843	Cover, Ignition						


COOKTOP, BURNER AND GRATE PARTS

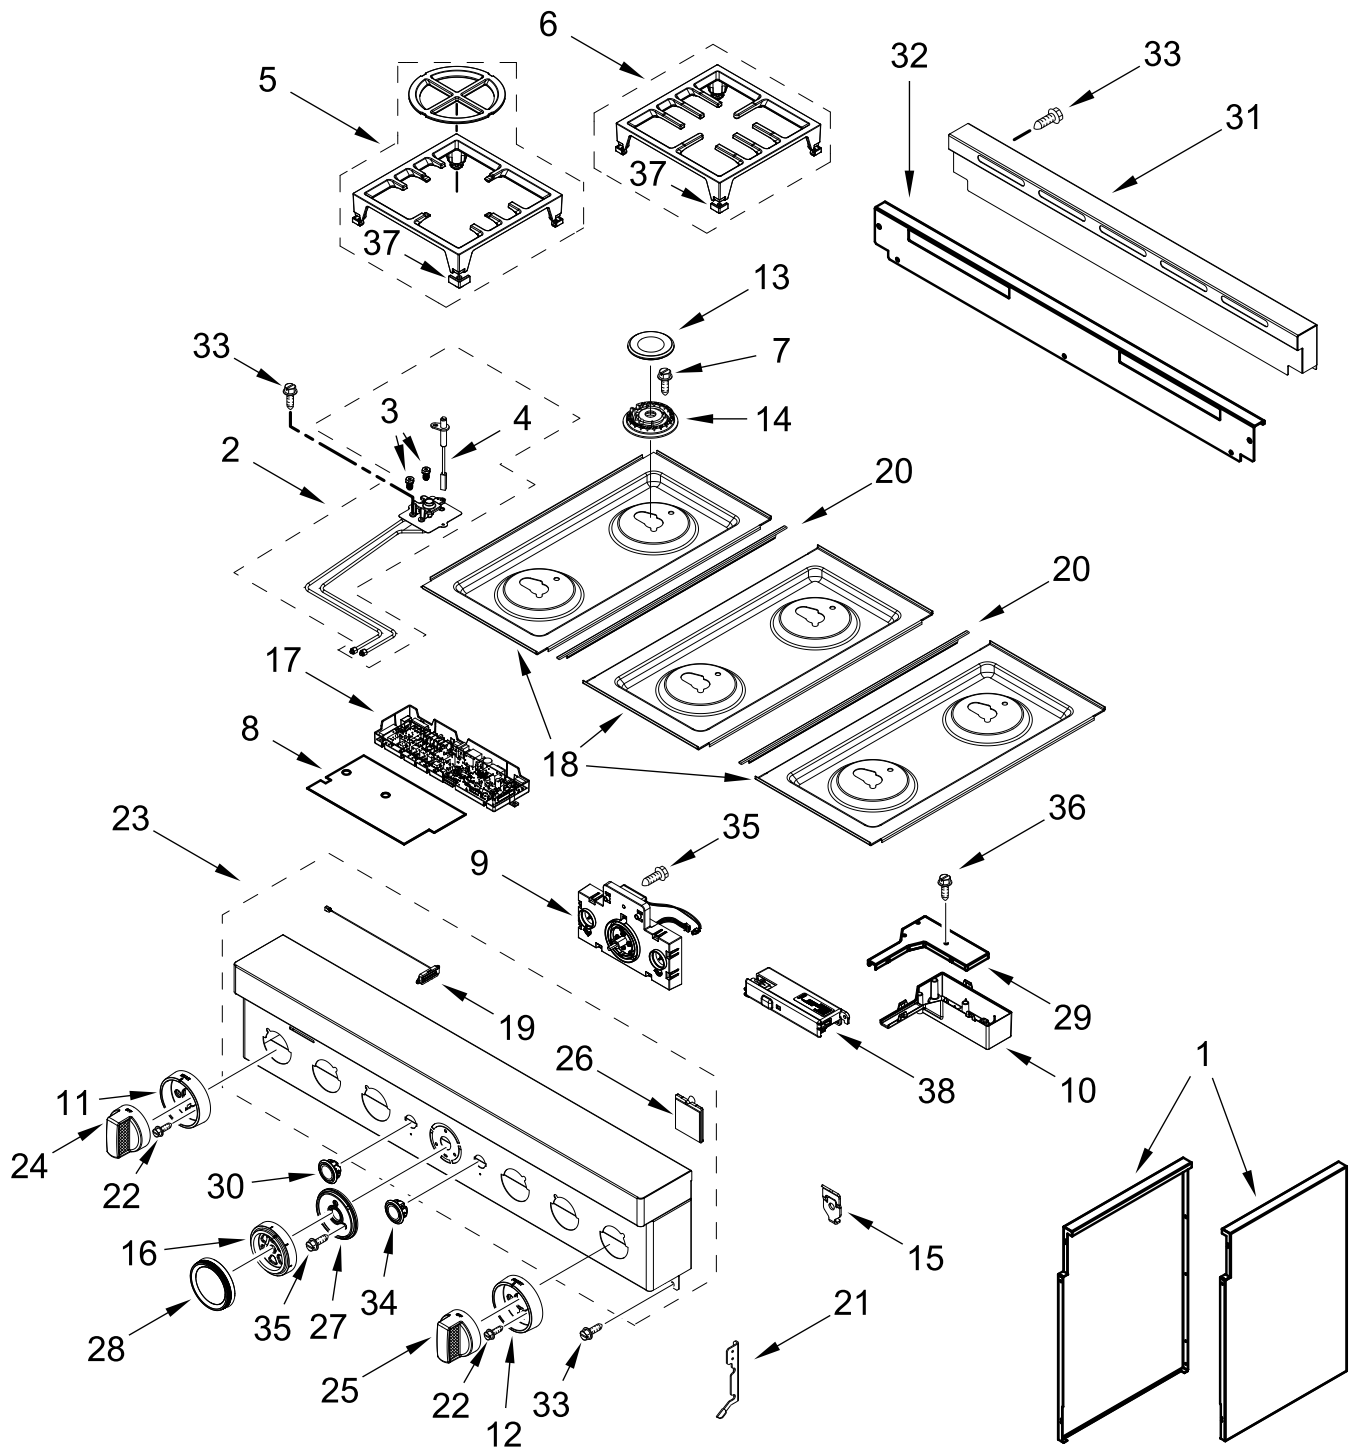

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	4	W11238757	Igniter (Left Front, Right Front)	18		Panel, Cooktop Black (Left)
	W11106880	Panel, Cabinet Side (Right)		W10892340	Igniter (Center Front, Center Rear)		W11038235	Black (Left)
2	W10892774	Assembly, Orifice Holder (Left Front)		W11114379	Igniter (Left Rear, Right Rear)		W11038257	Black (Center)
	W10892492	Assembly, Orifice Holder (Left Rear)					W11038248	Black (Right)
	W11159467	Assembly, Orifice Holder (Center Front)	5	W11291183	Burner, Grate (With Wok Ring)	19	W11130078	Antenna, WIFI Trim, T-Strip
	W10892725	Assembly, Orifice Holder (Center Rear)	6	W11291179	Burner, Grate	20	W10271524	Black
	W10892731	Assembly, Orifice Holder (Right Front)	7	W11323261	Screw (8-18 X 1")	21	W10130760	Bracket, Moving Console (Left)
	W10892477	Assembly, Orifice Holder (Right Rear)		W11323309	Screw (8-18 X 1/2")		W10130759	Bracket, Moving Console (Right)
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	8	W11281269	Barrier, Appliance Manager	22	W10919387	Screw
	W10892419	Orifice, Main (15K) (Left Rear, Right Rear, Center Front)	9	W11095716	Interface, User	23	W10877950	Panel, Console
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	10	W11205795	Cover, WIFI Outer	24		Knob, Single
	W10892438	Orifice, Simmer (5K) (Center Rear)	11	W10883433	Bezel (Rear Burners)	25	W10912166	Stainless Knob, Dual
			12	W10881642	Bezel (Front Burners)		W10883172	Stainless
			13	W11121390	Cap, Burner Black (Includes 6)	26	W10896366	Assembly, Light Pipe
			14	W10891746	Spreader, Flame (High) (Left Front, Right Front)	27	W10913810	Stainless Bezel, Oven
				W10891974	Spreader, Flame (Low) (Left Rear, Center Front, Right Rear)	28		Knob, Oven Temperature
				W10891978	Spreader, Flame (AUX) (Center Rear)		W11249669	Stainless
			15	W11036559	Spring Clip, Range	29	W11205794	Cover, WIFI Inner
			16		Knob, Oven Mode	30	W11241511	Button Assembly, Oven Light
				W11264992	Stainless	31	W11183086	Trim, Island
			17	W11100284	Manager, Appliance (Powermax)	32	W10323250	Insert, Island Trim
						33	7101P426-60	Screw
						34	W11241510	Button Assembly, Oven Start
						35	3400814	Screw
						36	7101P624-60	Screw
						37	W11042504	Bumper, Grate
						38	W11110768	Assembly, WIFI Module


CHASSIS PARTS

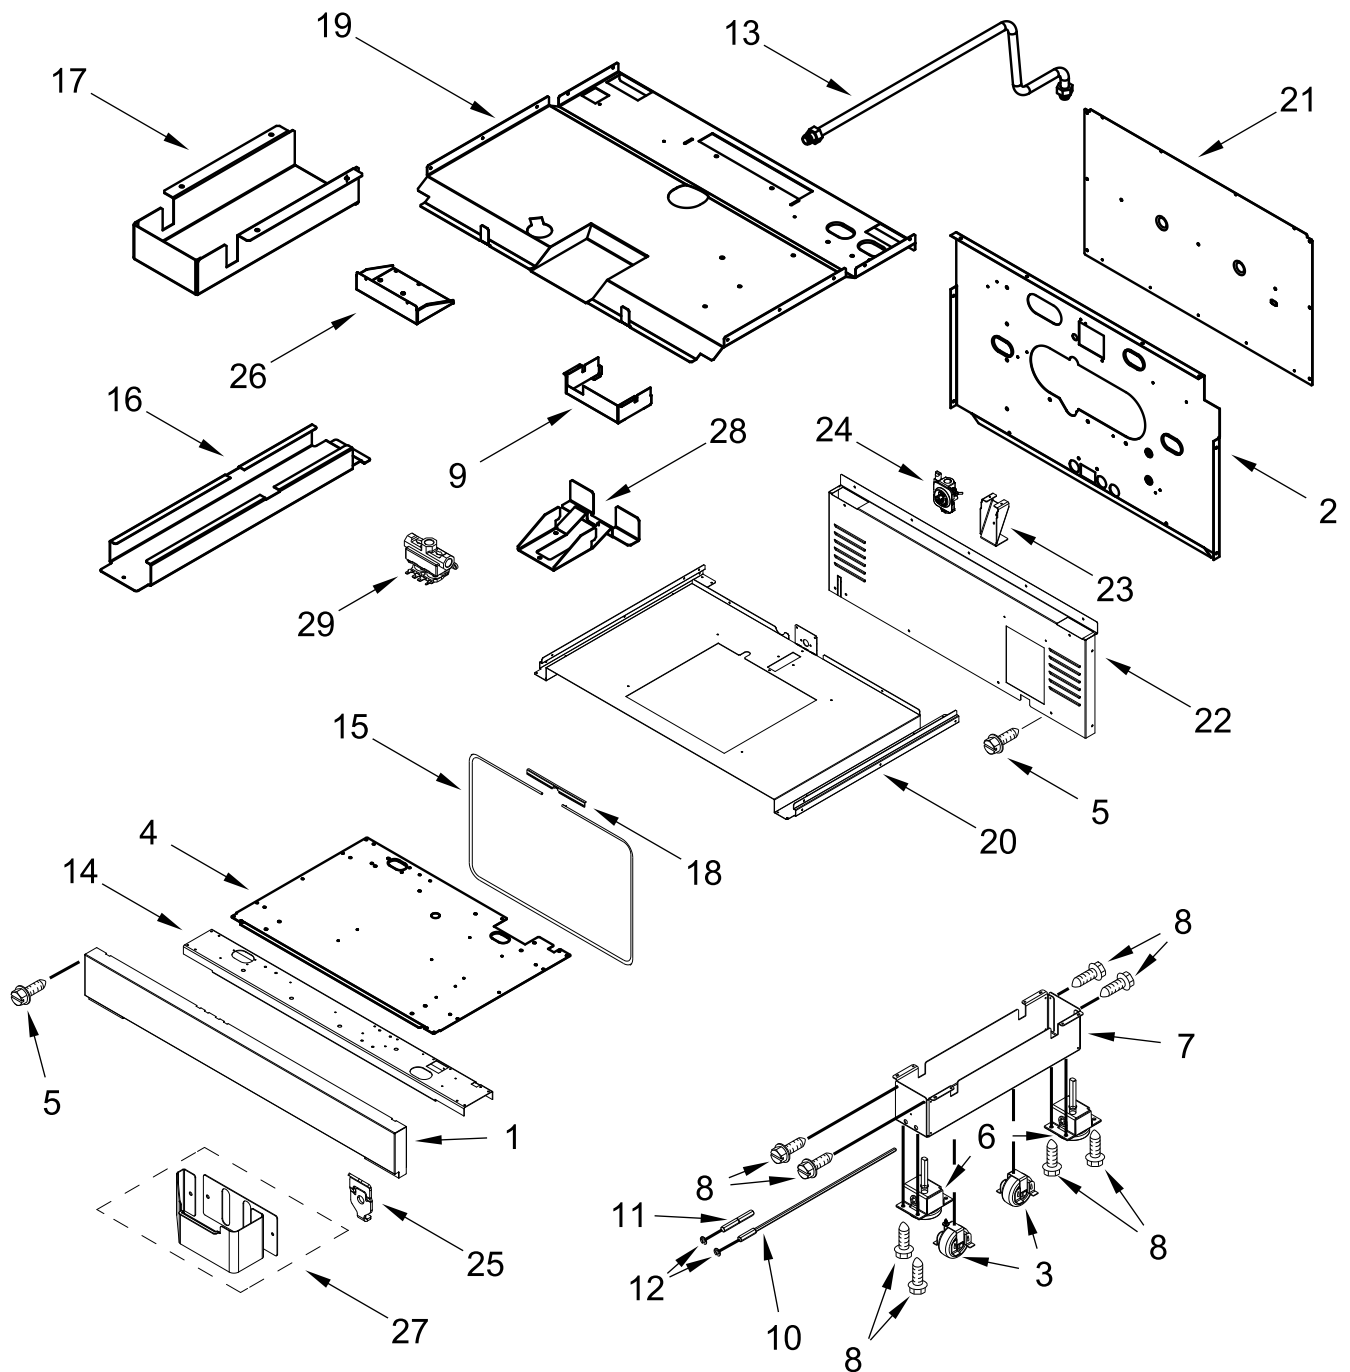

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394782	Kickplate	13	W11181648	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
2	W11324988	Back, Chassis	14	W11087493	Support, Channel	24	W10896959	Regulator, Pressure
3	W10138054	Assembly, Roller	15	W11115330	Gasket, Oven (36")	25	W11036559	Spring Clip, Range
4	W11095572	Duct, Bottom (36")	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
5	7101P426-60	Screw	17	W11368831	Channel, Wire	27	W11199181	Cover, Foot (Left)
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9" Long)		W11199178	Cover, Foot (Right)
7	W10908710	Base, Leveling Leg	19	W11324985	Top, Chassis	28	W11190223	Bracket, Bake Alignment
8	4449743	Screw	20	W11040801	Chassis, Bottom	29	W10145680	Valve, Dual
9	W11369237	Cabinet, Appliance Manager	21	W11103333	Panel, Back Top			
10	W10115869	Shaft, Long	22	W11034133	Panel, Back Bottom			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


OVEN PARTS

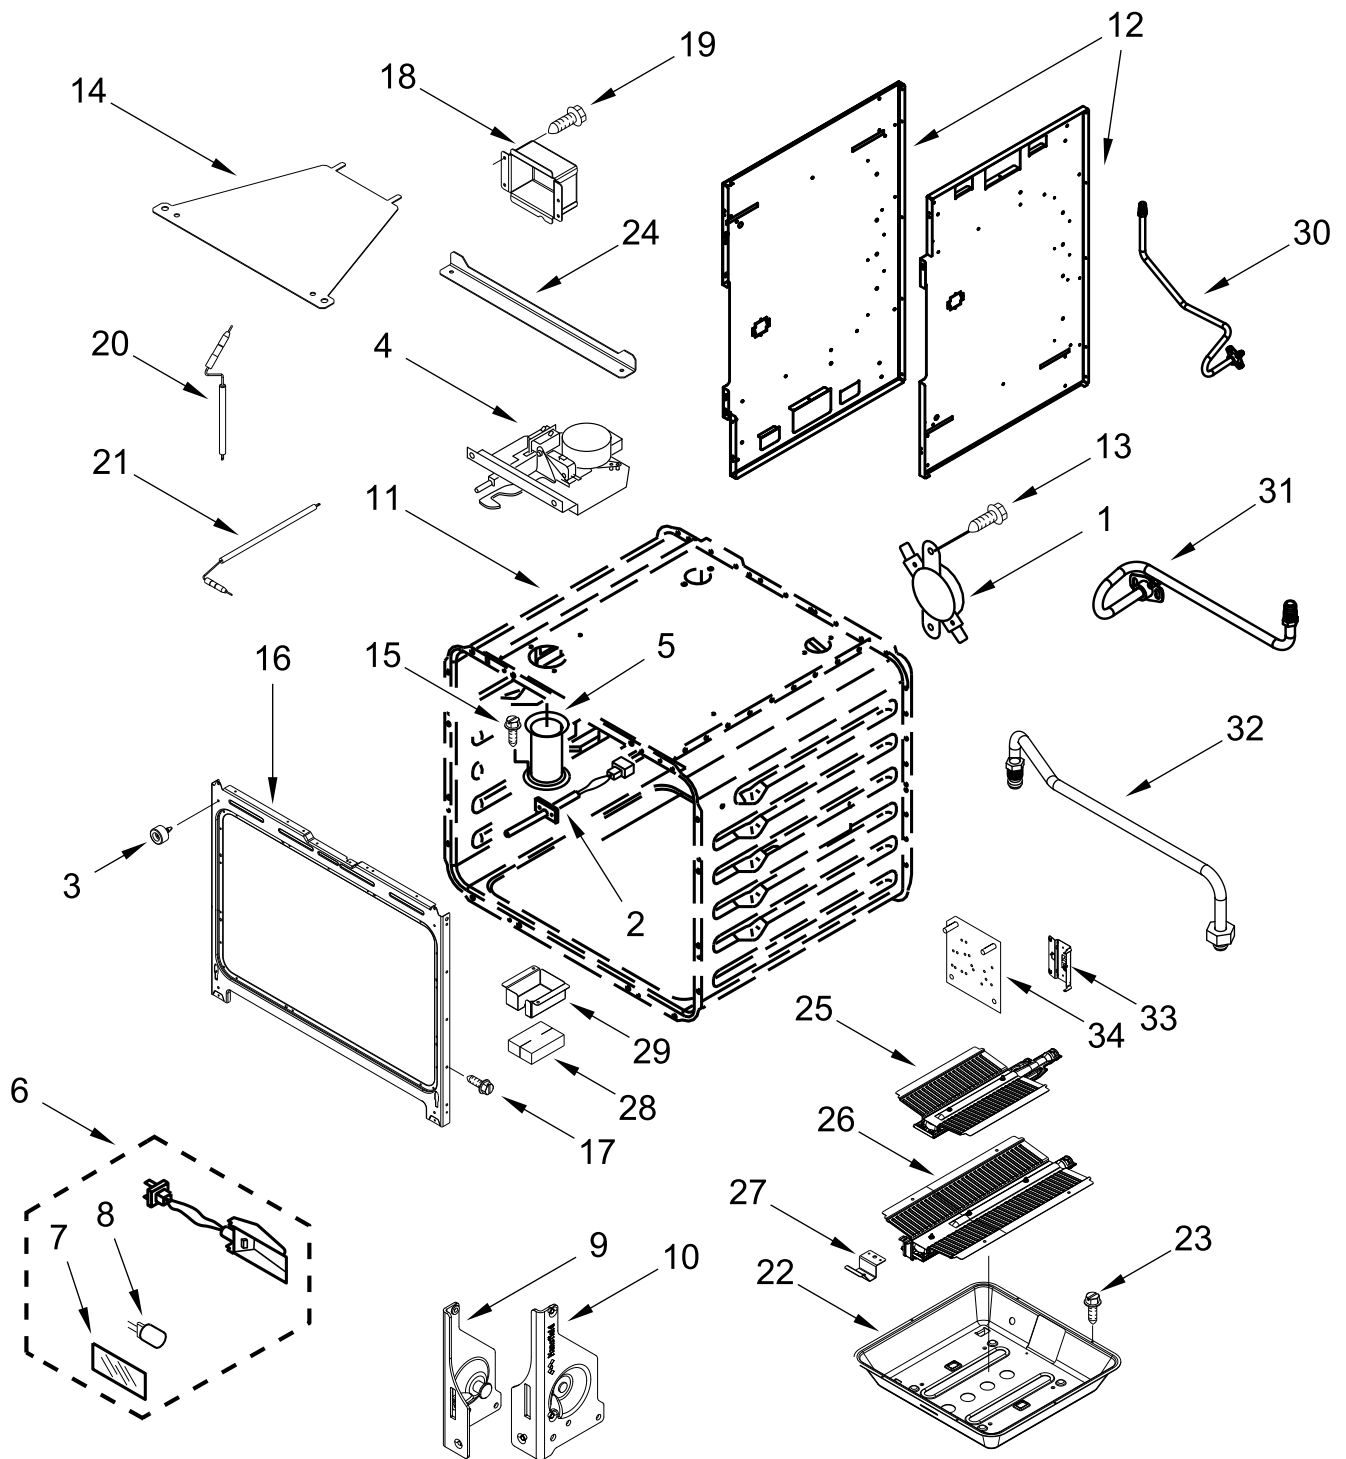

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	13	7101P426-60	Screw	28	W10311009	Insulation, Broil Cover
2	W10622170	Probe, Sensor	14	W10160858	Cover, Latch	29	W10310985	Cover, Broil
3	W10351278	Bumper & Screw	15	3196176	Screw	30	W11109238	Tube, Broil
4	W10830016	Latch, Motorized	16	W11192749	Frame, Front	31	W11106980	Tube, Bake
5	W10145743	Tube, Vent	17	3196560	Screw	32	W11107279	Tube, Gas
6	W11223932	Assembly, Oven Light	18	W10308051	Box, Broil	33	W10145362	Bracket-Board, DSI
7	W10169756	Lens, Light	19	7101P434-60	Screw	34	W10511278	Module, Spark DSI
8	W10169757	Bulb, Light	20	W11182863	Electrode, Broil			FOLLOWING PARTS NOT ILLUSTRATED
9	W11096294	Receiver, Hinge (Left)	21	W11205400	Electrode, Bake		W10282811	Insulation, Wrap
10	W11096293	Receiver, Hinge (Right)	22	W10145744	Support, Bake Pan		W11108226	Insulation, Back, 36"
11		Liner, Oven (Not Serviced)	23	12992902	Screw		W10299356	Insulation, Bottom
12	W11102297	Chassis, Side (Left)	24	W10317437	Bracket, Broil Standoff		3400968	Nut
	W11102296	Chassis, Side (Right)	25	W10878504	Burner, Bake			
			26	W10311335	Burner, Broil			
			27	W10308040	Bracket, Bake Burner			


VENTING PARTS

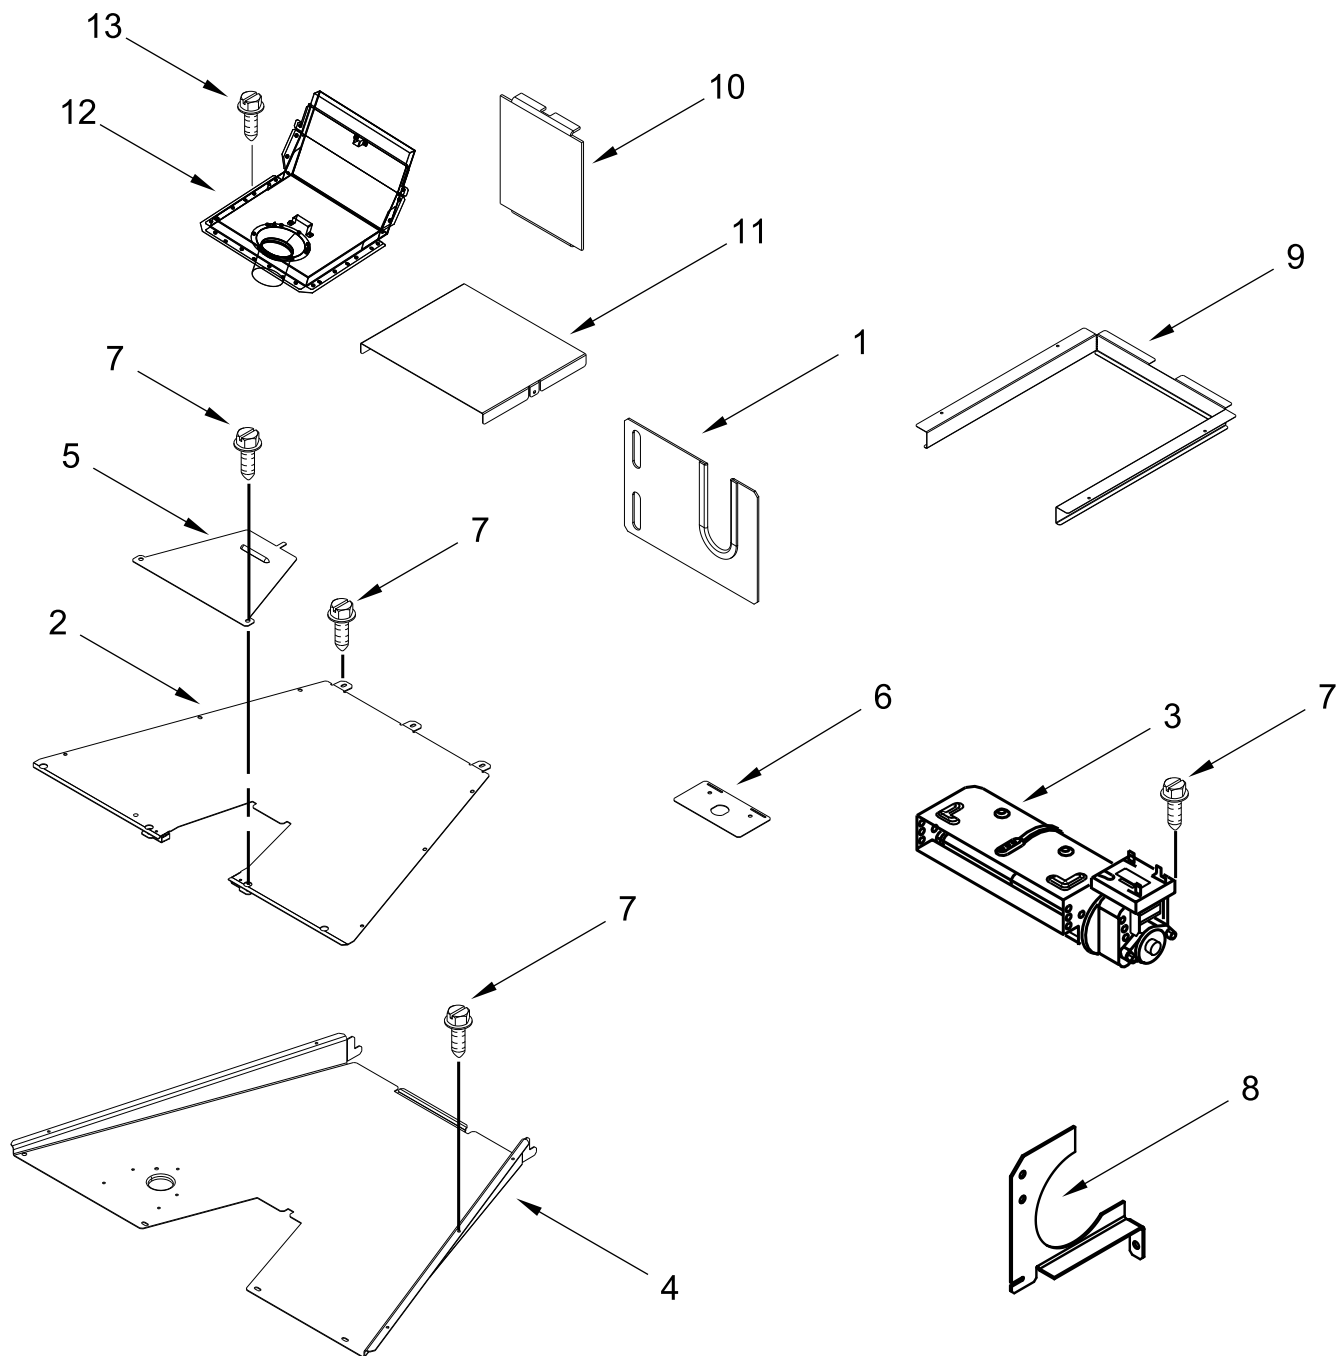

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106956	Cover, Channel	6	W10115855	Holder, Strain Relief	11	W10246086	Retainer, Insulation
2	W11105221	Vent, Cooling Top (30")	7	7101P426-60	Screw	12	W10340579	Vent, Chimney Box (30" / 36")
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	3400805	Screw (Zinc)
4	W11091676	Vent, Cooling Bottom (30")	9	W10145363	Duct, Primary Air (30")			
5	W11109518	Plate, Cooling Latch	10	W10246087	Insulation, Chimney			


OVEN DOOR PARTS

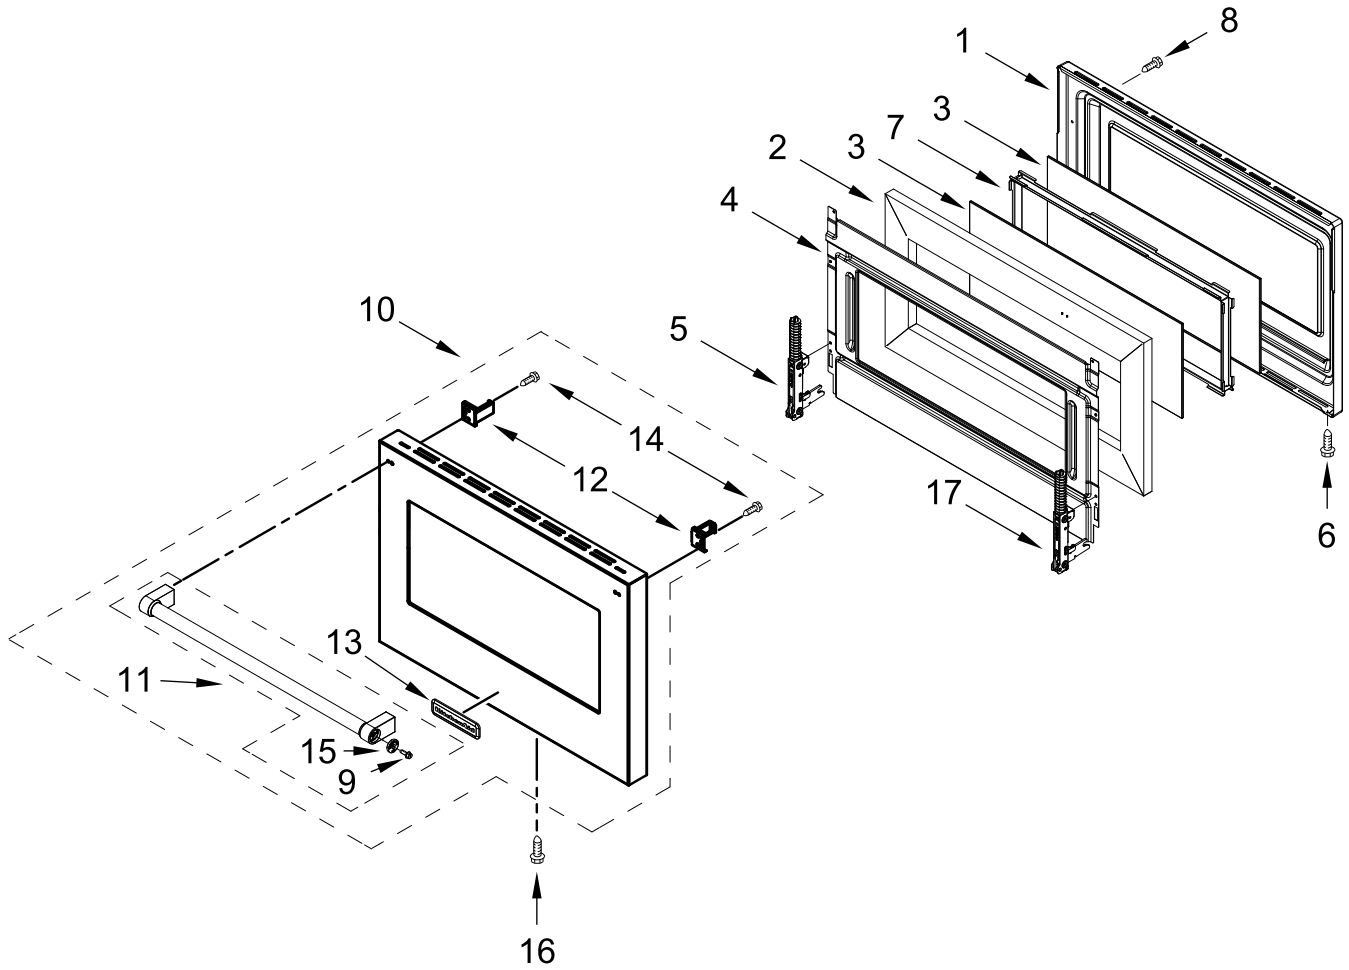

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	7	W11194814	Frame, Glass	12	W11197830	Bracket, Handle
2	W10884823	Insulation, Door	8	W10898280	Screw	13	W10518672	Badge
3	W11036791	Glass, Inner	9	W10656499	Screw	14	W10276043	Screw
4	W11194820	Retainer, Glass	10	W11389307	Assembly, Outer Door (Includes Handle)	15	W10876779	Medallion, Handle
5	W11096978	Hinge, Door (Left)	11	W10799321	Assembly, Door Handle	16	W10162096	Screw
6	W10607120	Screw				17	W11096977	Hinge, Door (Right)

INTERNAL OVEN PARTS

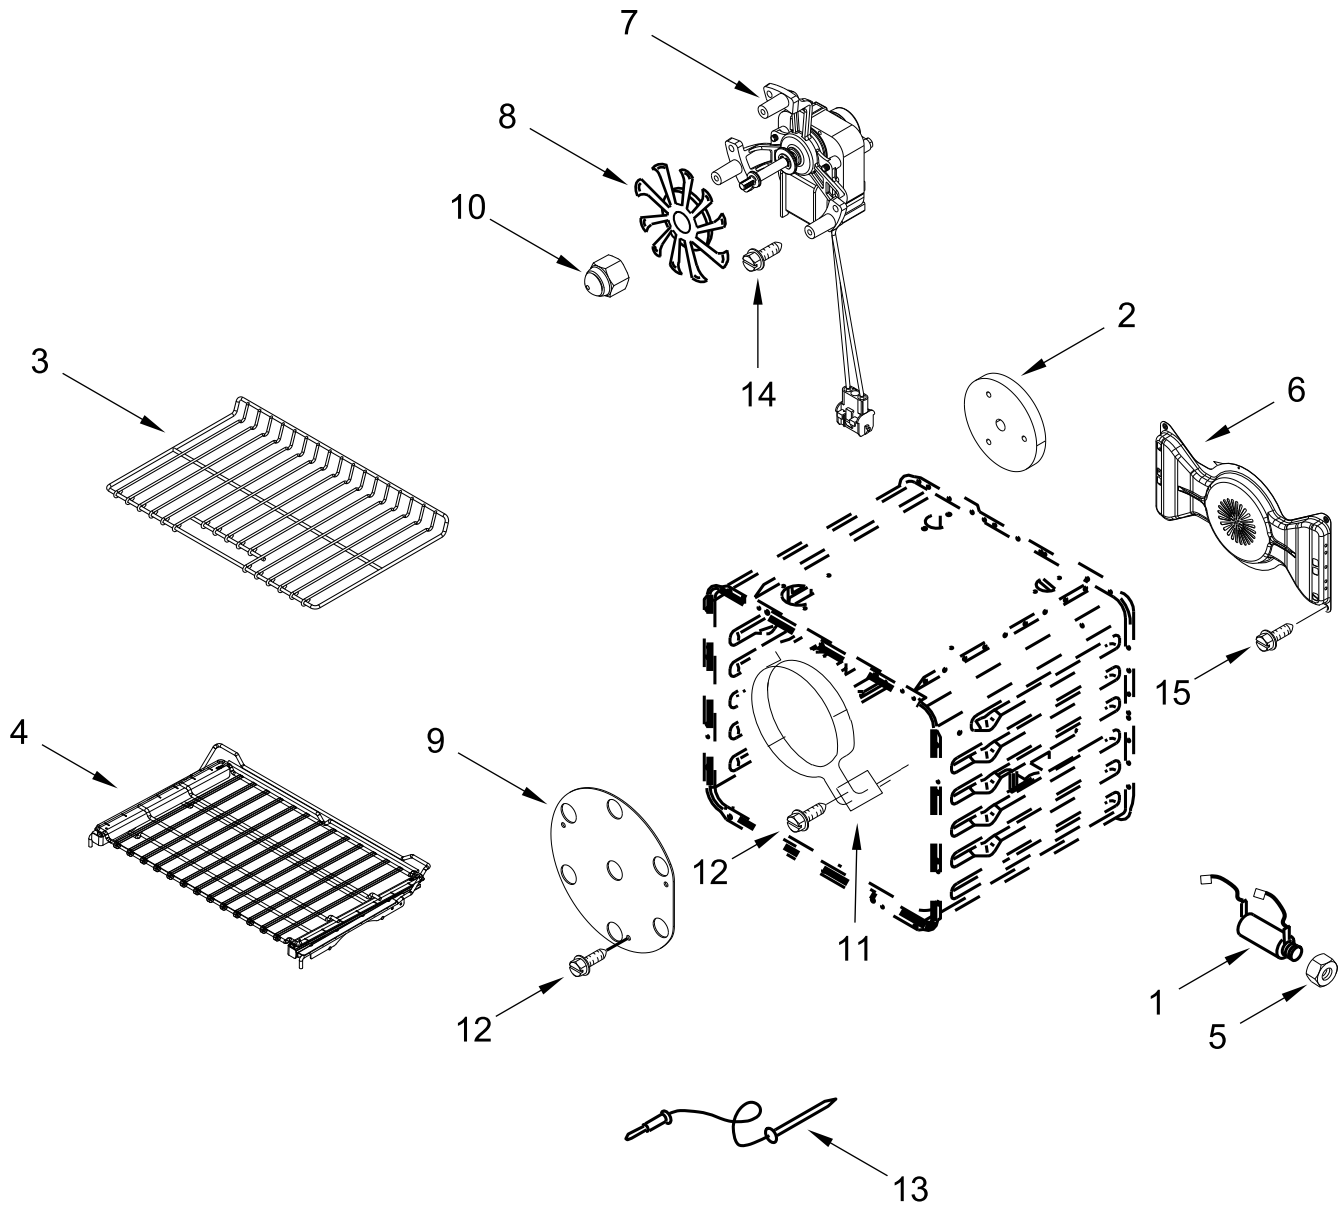

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9755543	Jack, Meat Probe	7	W10631506	Motor, Convection	13	9755542	Probe, Temperature
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	W10720084	Screw
3	W10822069	Rack, Oven	9	W10261523	Plate, Fan	15	W10739592	Screw
4	W11108464	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)			
5	W11033111	Nut, Locking	11	W11098505	Element, Convection Heat			
6	W11212180	Baffle, Convection	12	4449154	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Medallion, Handle
	W11368841SI	Sl. Silver
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue