




30" GAS SLIDE-IN SELF-CLEAN CONVECTION RANGE

MODELS:

MGS8800FZ0 (Stainless)


COOKTOP PARTS

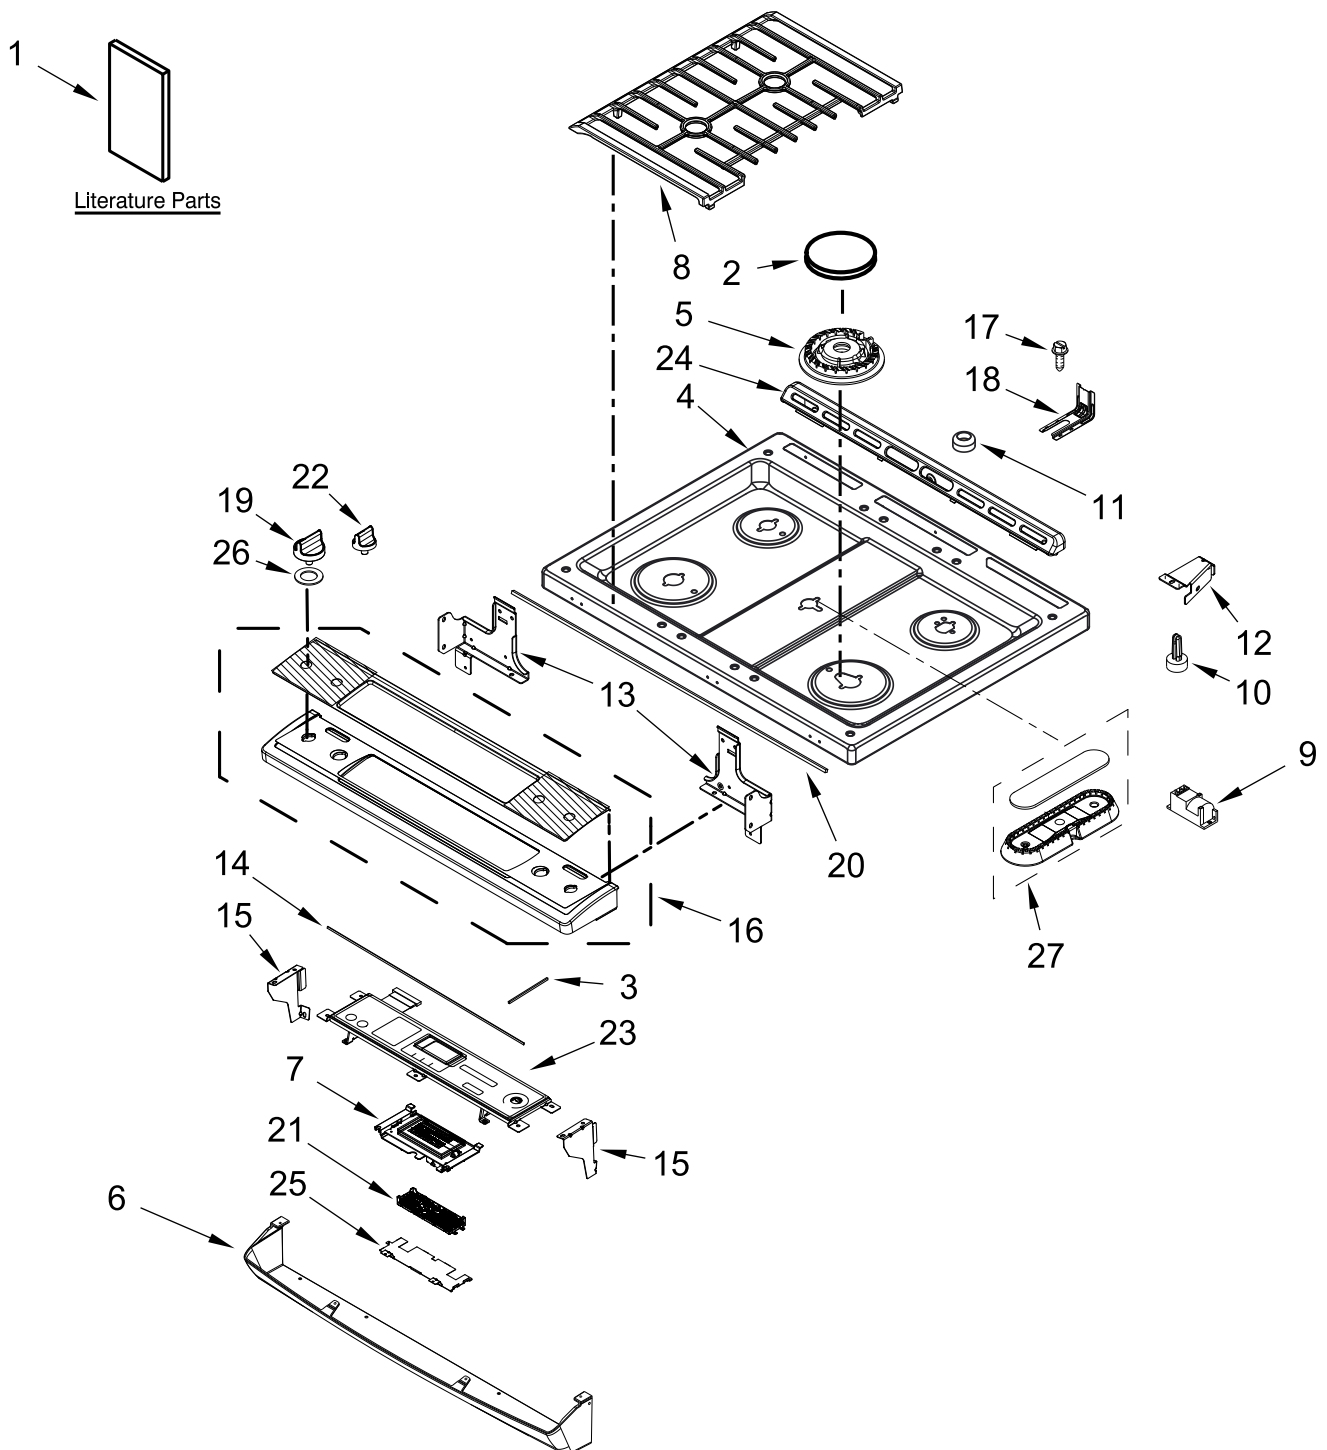

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Kit, Grate	19		Knob
	W11124007	Instructions, Installation		W10432521	Black		W10876615	Stainless
	W11123989	Guide, Use & Care	9	W10475149	Module, Spark (5+0)	20	W10612719	Gasket, Console/ Cooktop
	W10844271	Sheet, Tech		W10457998	Module, Spark (0+2)	21	W10759301	Control, Electronic
	W10400066	Guide, Quick Start (English)	10	8016P022-60	Glide, Main Top	22		Knob, Mini
	W10400067	Guide, Quick Start (French)	11	W10664705	Bumper		W10876616	Stainless
			12	W10162253	Brace, Corner (Left)	23		Assembly, Overlay
				W10162252	Brace, Corner (Right)		W10888920	Stainless
2		Kit, Burner Cap	13	W10289170	Support, Cooktop (Left)	24		Trim, Vent
	W10837262	Black		W10289169	Support, Cooktop (Right)		W10577781	Black
3	W10689102	Gasket, Console Short				25	W10558372	Bracket, Control
4		Cooktop	14	W10689101	Gasket, Console	26		Bushing
	W10884169	Black	15	W10547960	Bracket, Console (Left)		W10739036	Black
5	W10256028	Spreader, Flame (Left Front & Right Front)		W10547961	Bracket, Console (Right)	27	W10298664	Spreader, Flame
	W10464795	Spreader, Flame (Left Rear)		W10598048	Bracket, Console (Center)			FOLLOWING PARTS NOT ILLUSTRATED
	W10256025	Spreader, Flame (Right Rear & Center)	16		Assembly, Console		W10911849	Harness, Main
6		Panel, Lower Console		W10680371	Stainless		W10754419	Harness, Bake/Broil
	W10570527	Black	17	7101P485-60	Screw, Anti-Tip Kit		W10580265	Harness, Bake/Warm Drawer
7	W10759327	Assembly, Display	18	W10606241	Bracket, Anti-Tip		W10575120	Harness, Keypad
							W10598169	Harness, Display
							W10580229	Wire, Ground
							313438	Clip, Harness


CHASSIS PARTS

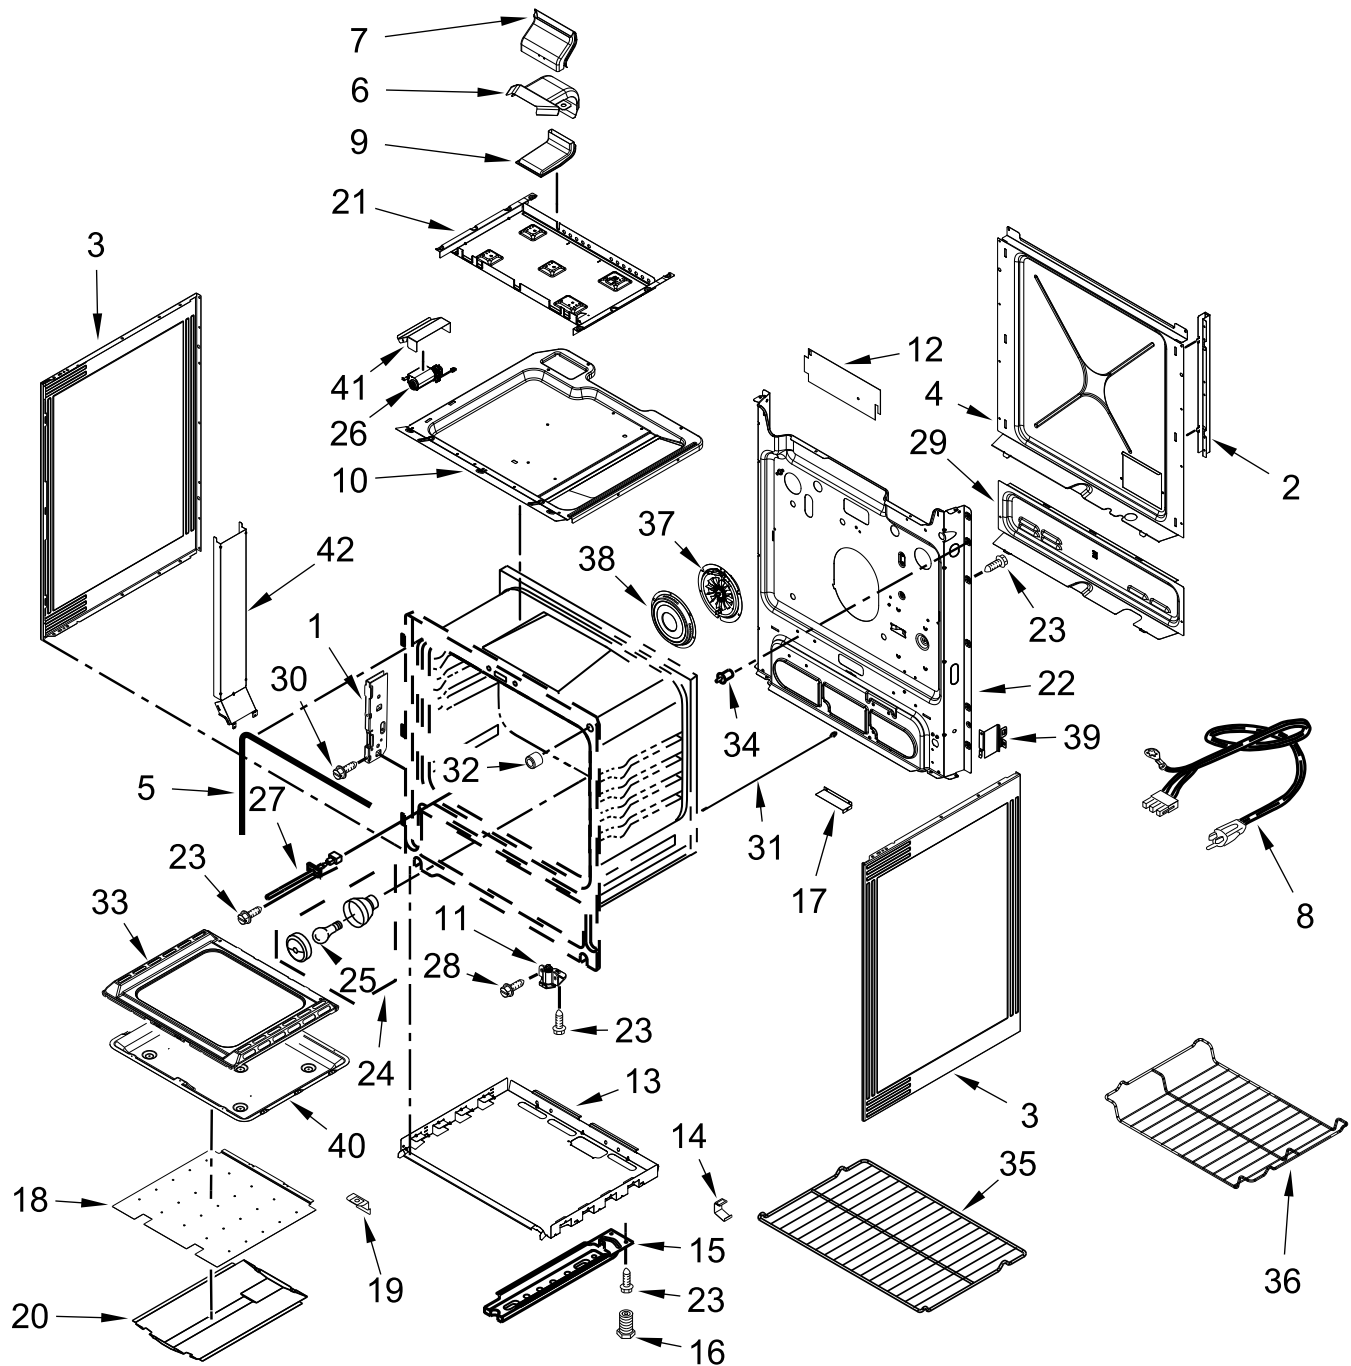

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	17	W11206138	Guard, Splash	36	W10289145	Rack, Oven (Gull-Wing)
2	W10162241	Channel, Rear	18	W10323077	Diffuser, Flame	37	W10874477	Assembly, Convection
3		Panel, Side	19	W10035900	Support, Oven Bottom	38	W10346154	Cover, Convection
	W10162245	Black	20	3601P356-45	Baffle, Bake Burner	39	W10273002	Bracket, Oven Support
4	W10289172	Cover, Back	21	W10558276	Burner, Box Gas	40	W10273204	Pan, Bake
5	W10162385	Gasket, Door	22		Back, Main (Not Serviced)	41	W10162255	Duct, Cover
6	W10162257	Duct, Cooktop	23	3196178	Screw	42	W10162254	Duct, Cooling
7	W10614920	Assembly, Flue	24	W10454648	Assembly, Light			FOLLOWING PARTS NOT ILLUSTRATED
8	W10889764	Cord, Power	25	7407P103-60	Bulb, Light		W10289173	Insulation, Wrap
9	W11040249	Assembly, Flue (Upper)	26	W11190724	Assembly, Cooling Fan		W10162240	Insulation, Back
10	W10289168	Box, Burner SI	27	W10586204	Sensor		4820F015-59	Insulation, Strap
11	W10341186	Assembly, Front Foot	28	3196169	Screw		7111P017-60	Clamp, Wire
12	W11117035	Shield, Wire	29	W10162249	Cover, Wire		3196520	Clip, Wire
13	W10541959	Shield, Bake	30	W10031780	Screw			
14	W10137382	Clip, Panel	31	W10273192	Rod, Door Switch			
15	W10390008	Assembly, Base Rail (Left)	32	9758701	Spacer, Door			
	W10390007	Assembly, Base Rail (Right)	33	W10211368	Bottom, Oven			
16	W10058460	Foot, Leveling	34	W10627802	Switch, Door			
			35	W10531060	Rack, Oven			


MANIFOLD PARTS

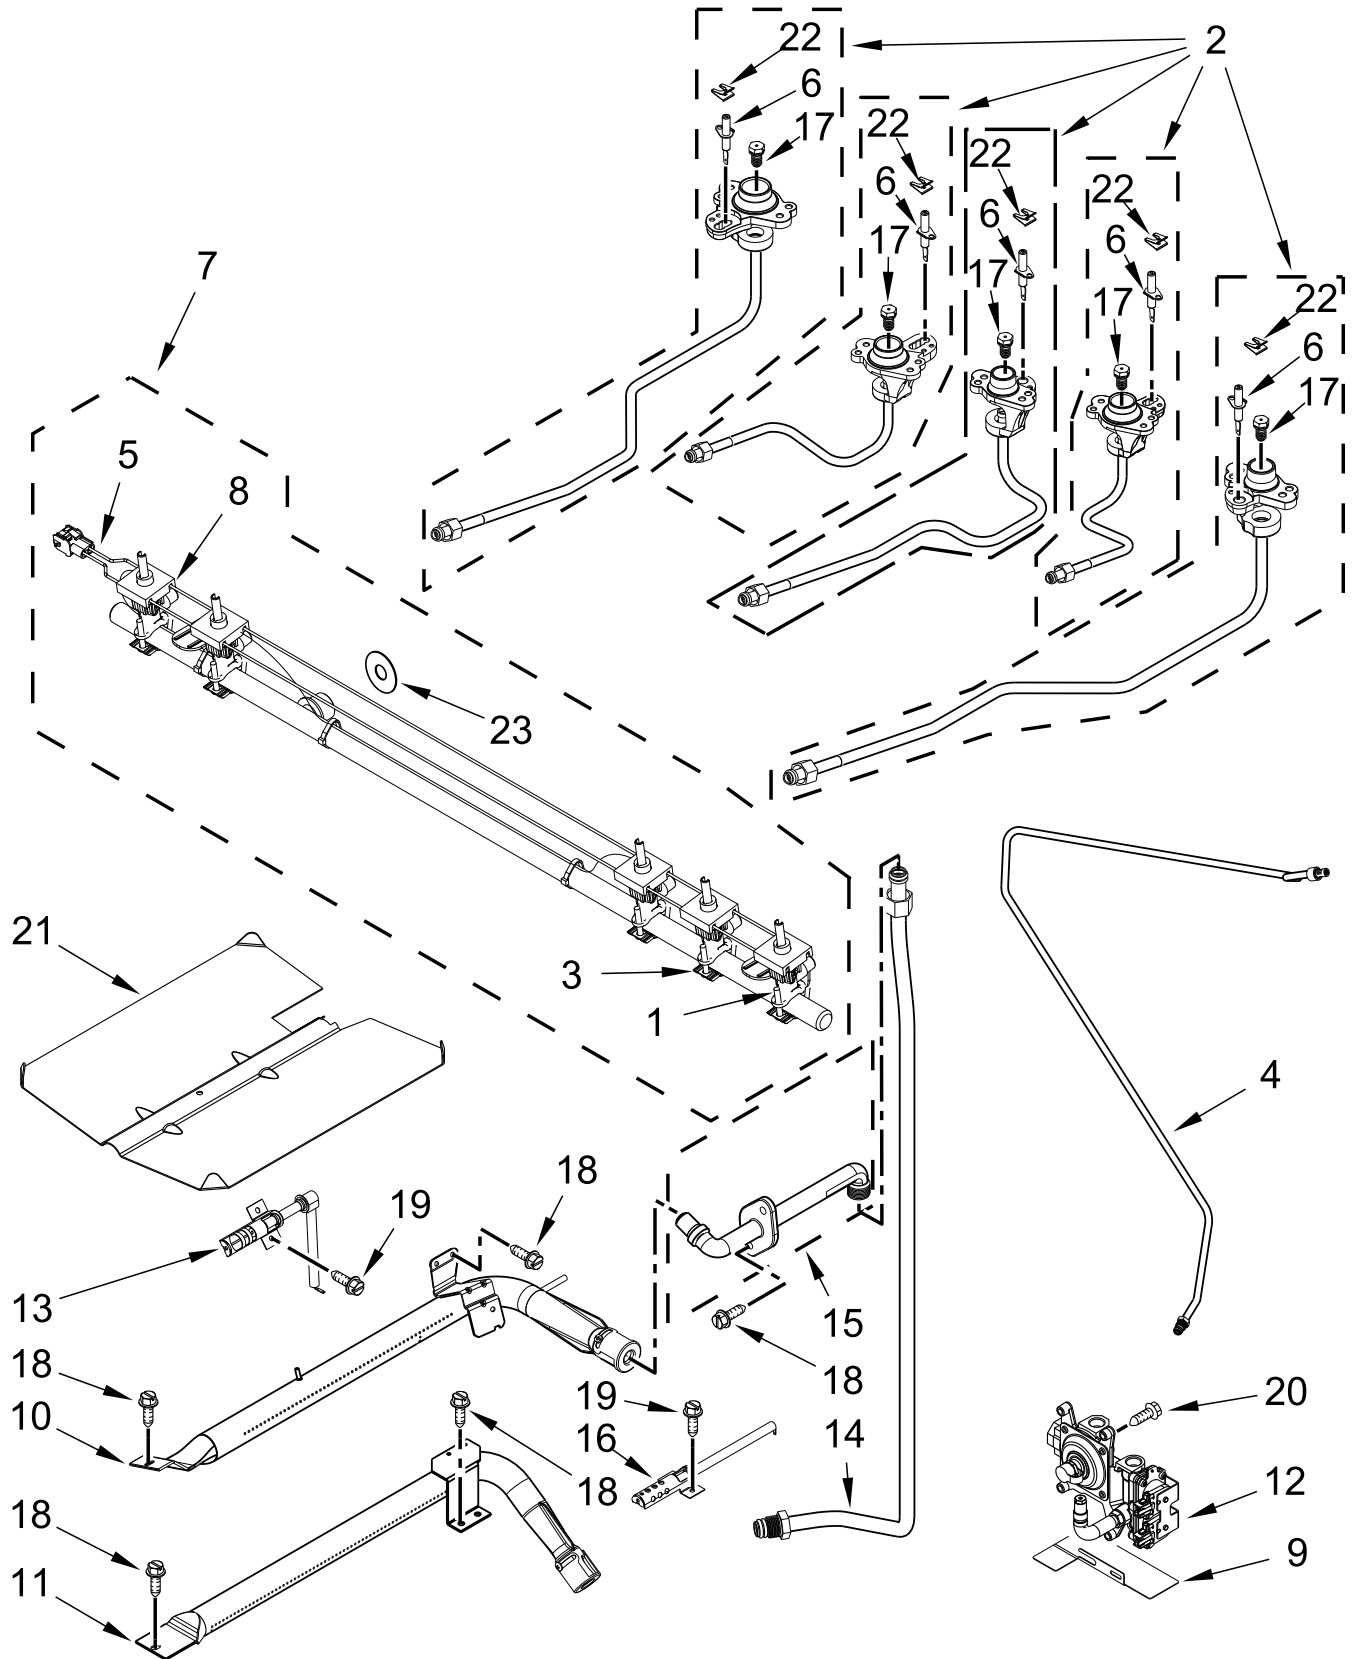

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10246216	Screw	7	W10850515	Assembly, Manifold	17	W10657946	Orifice (17K) (Left Front)
2	W10552128	Assembly, Orifice (Left Front)	8	W10566042	Valve, Gas (Left Front & Right Front)		W10515054	Orifice (5K) (Left Rear)
	W10552127	Assembly, Orifice (Left Rear)		W10566049	Valve, Gas (Left Rear)		W10434277	Orifice (1.8MM) (Right Front)
	W10552126	Assembly, Orifice (Right Front)		W10566050	Valve, Gas (Right Rear)		W10657949	Orifice (9.2K) (Right Rear)
	W10552125	Assembly, Orifice (Right Rear)		W10850893	Valve, Gas (Center)		W10657947	Orifice (8K) (Center)
	W10836763	Assembly, Orifice (Center)	9	W10224921	Bracket, Aegis	18	3196178	Screw
3	W10295996	Bracket, Saddle Valve	10	W10439242	Burner, Broiler	19	3196385	Screw
4	W10552140	Tube, Supply	11	W10680035	Burner, Bake	20	3400016	Screw
5	W10478601	Harness, Spark Switch	12	W10554066	Valve, Regulator	21	3601P336-45	Baffle, Broil Burner
6	W10496874	Electrode (Left Front)	13	W10324262	Igniter, Bake	22	W10575401	Clip, Spring (Electrode)
	W10464799	Electrode (Left Rear)	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)	23	W10140571	Seal, Switch Shaft
	W10496870	Electrode (Right Front & Center)	15	W10583216	Fitting, Broil Burner			FOLLOWING PARTS NOT ILLUSTRATED
	W10496872	Electrode (Right Rear)	16	W10333842	Electrode, Broil		W10566083	Kit, LP Conversion
							W10566535	Kit, LP Conversion (Bake/Broil)


DOOR PARTS

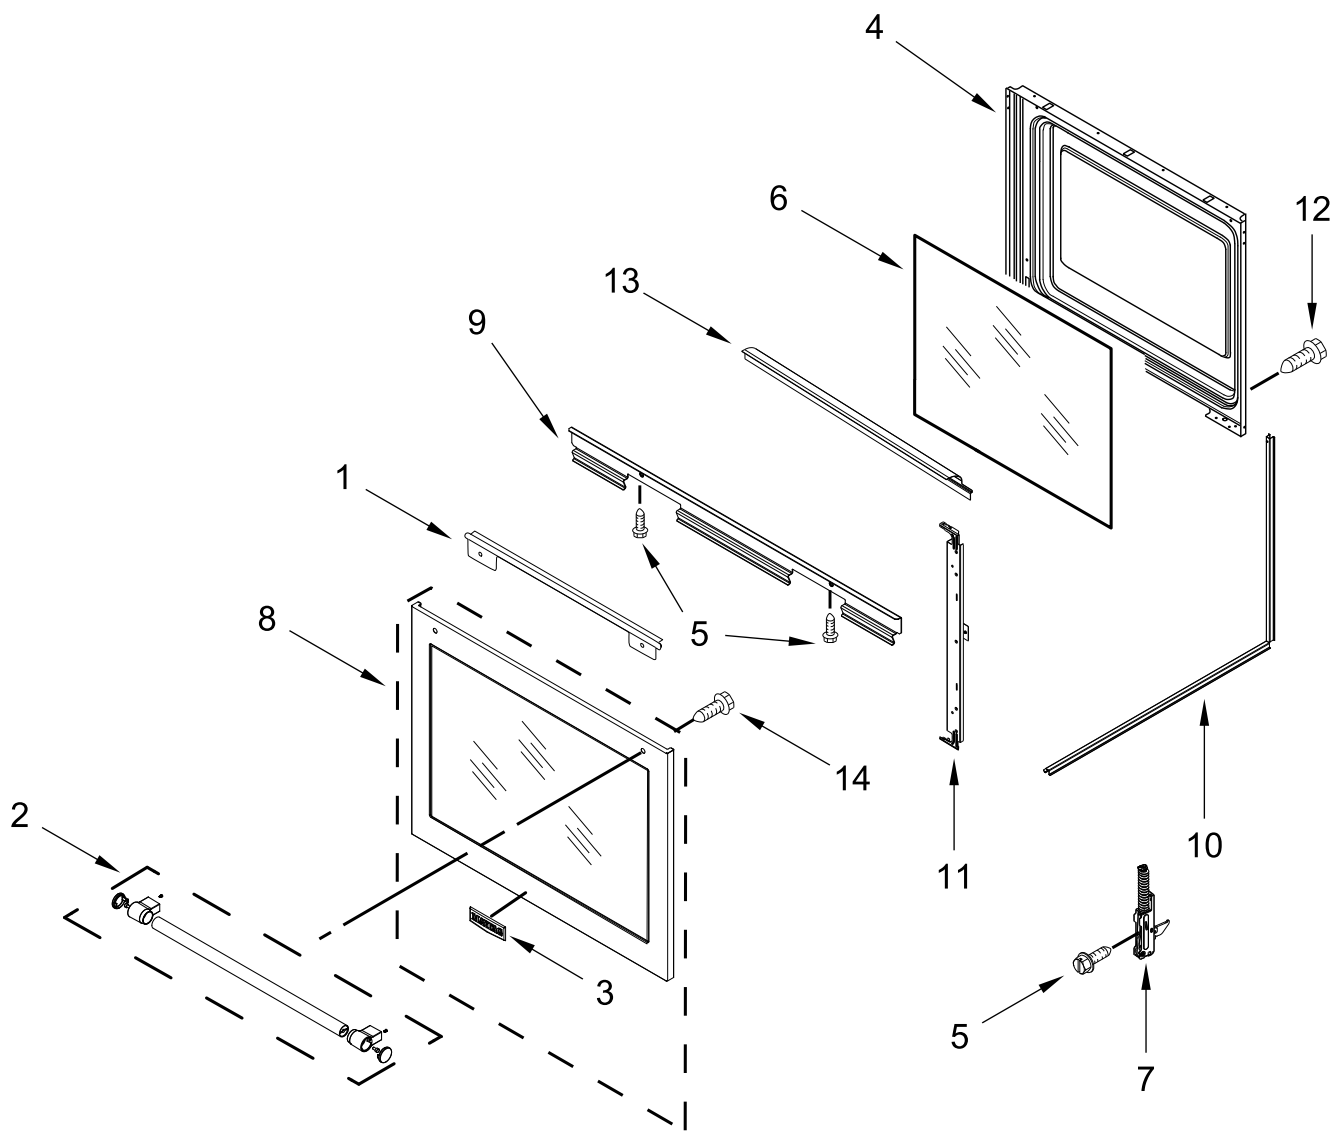

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10541911	Bracket, Glass Upper Handle	7	W10885519	Hinge, Door (Active)	12	W10031780	Screw
2		Assembly, Handle	8		Assembly, Door Skin	13		Liner, Door Scoop
	W10834521	Stainless		W10883552	Stainless		W10613791	Black
3	W10612925	Badge	9	W10813140	Rail, Horizontal Support	14	8533988	Screw
4	W10826568	Liner, Door	10	W10813142	Spacer, Glass			
5	W10327235	Screw	11	W10813139	Rail, Vertical Support			
6	W10813616	Glass, Inner						

DRAWER PARTS

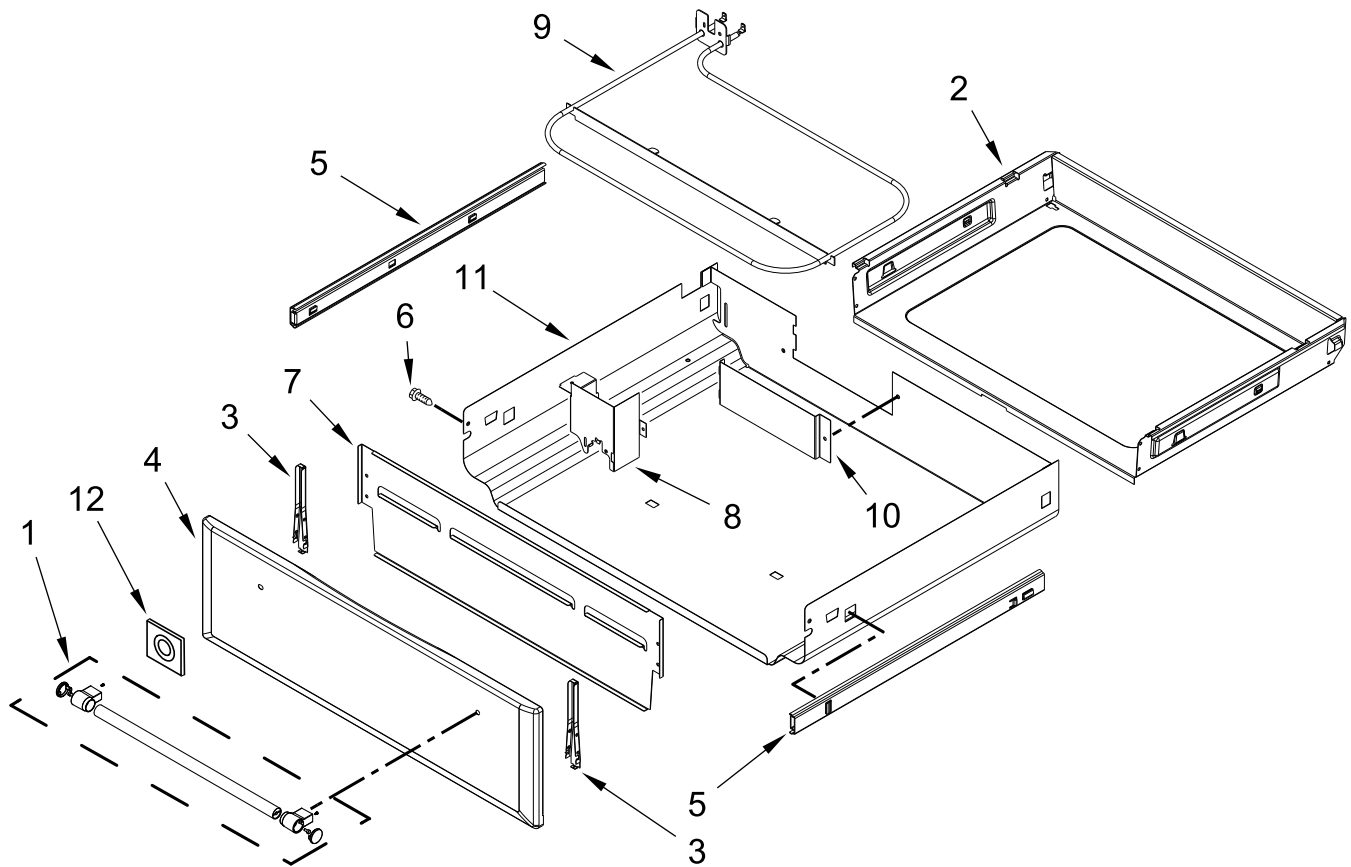

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Handle
	W10834521	Stainless
2	W10688022	Drawer, Storage
3	W10318026	Bracket, Mounting
4		Panel, Drawer Front
	W10865703	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
6	8533988	Screw
7	W10748082	Panel, Inner
8	W10634259	Cover, Wire
9	W10323181	Element, Warm

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10727084	Cover, Gas Valve
11	W10634260	Enclosure, Warming
12	3823F017-45	Spacer, Handle

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10391473	Pad, Cooktop Cleaning
	W10432019	Alt Cleaning Kit
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W10432539	Griddle
	4396927	Rack, Oven (Split)
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10432545	Kit, Grill Assembly, Trim
	W10675026	Black
	W10675027	White
	W10675028	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint