

OPERATING and MAINTENANCE INSTRUCTIONS

Models: 120PH, 121PH and 126 PH Series Proof/Hot Cabinets

Model No.	Volts	Watts	Amps	Hertz	Phase	NEMA
120, 121PH, 126PH Series	120	2000	16.6	60	1	5-20P
120, 121PH, 126PH Series w/240 suffix	240	2000	8.6	60	1	6-15P

All are designed for AC service.

HOW TO INSTALL UNIT:

1. Place cabinet near warm ovens. Do *NOT* put in drafty areas or near ventilating systems.
2. Plug cord end into proper wall outlet.
3. Fill water pan (following steps a-c)



CAUTION

Use of treated or soft water may be required for proper operation and to maintain warranty.

operation and to maintain warranty.


- a. Lift off cover.
- b. Fill with 3½ qts. (3.3 liters) of clean, hot water. Replace cover.
- c. Adjust vents on cover to half open.

HOW TO PROOF:

1. Fill water pan (See “How to Install”)
2. Push “POWER” switch to “ON.” The yellow light will come on.
3. Push “MODE SELECTION” switch to “PROOF”. The yellow light will come on.
4. Turn “HUMIDITY” dial to No. 8.
5. Turn “AIR” dial to “OFF”.
6. Preheat for 30 minutes.
7. Put fresh or fully thawed dough into cabinet.
8. Turn “HUMIDITY THERMOSTAT” to No. 9.

NOTE: The cabinet temperature will drop inside cabinet if cold dough is added.

Do NOT put frozen dough into cabinet

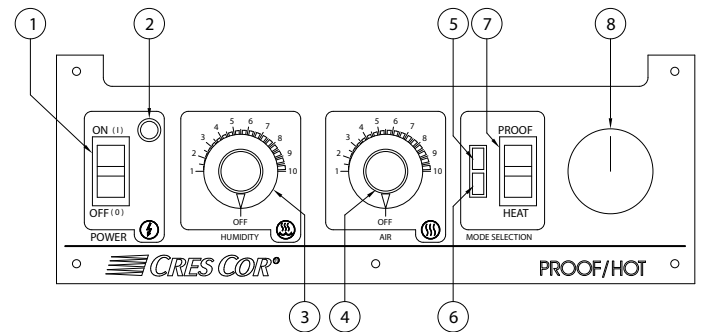

CONTROL PANEL PARTS IDENTIFICATION

- | | |
|--------------------------|----------------------------|
| 1. Switch - Power | 5. Yellow Light - Proof |
| 2. Pilot Light - Power | 6. Red Light - Heat |
| 3. Thermostat - Humidity | 7. Switch - Mode Selection |
| 4. Thermostat - Air | 8. Thermometer |

NOTE: No. 9-10 setting will give you an approximate temperature of 95°F (35°C), and 90-95% humidity. Experiment with different “HUMIDITY” and “AIR” settings to get the exact temperature and humidity you need. The thermometer shows the temperature inside the cabinet.

NOTE: Check water level in water pan if you are proofing longer than 90 minutes. Fill with clean, hot water.

Proof/Hot Cabinets	FL-2212
Rev. 8 (3/12)	Page 2 of 4

OPERATING and MAINTENANCE INSTRUCTIONS

Models: 120PH, 121PH and 126 PH Series Proof/Hot Cabinets

HOW TO HOLD

1. Push “POWER” switch to “ON.” The yellow light will come on.
2. Push “MODE SELECTION” switch to “HEAT.” The red light will come on.
3. Turn “AIR” dial to temperature needed.

NOTE: No. 8 is about 175°F (79°C).
No. 6 is about 145°F (63°C).
No. 4 is about 115°F (46°C).

Proper food holding temperature is 140°F (60°C) or higher.

4. Preheat cabinet for 30 minutes.
5. Put food into cabinet.

HOW TO TURN UNIT OFF:

Push “POWER” switch to “OFF” position.



MAINTENANCE:

HOT UNIT REMOVAL INSTRUCTIONS:

1. Unplug power cord from wall outlet.
2. Remove screw from back of cabinet located just above cord.
3. Pull entire unit out the front of the cabinet.

HOW TO CLEAN THE CABINET:

 **WARNING** *BEFORE* cleaning the cabinet:

1. Allow cabinet to cool.
2. Remove Hot unit from cabinet.
3. Do NOT use abrasives or harsh chemicals.

Cleaning Notes:

1. Wipe up spills as soon as possible.
2. Clean cabinet regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer’s directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.
7. Empty water pan at least once a week.

 **CAUTION** DELIME OR DESCALE RESERVOIR PARTS AS REQUIRED TO PREVENT DAMAGING BUILD-UP.

WARRANTY COVERAGE MAY BE AFFECTED WITHOUT PROPER CLEANING.

OPERATING and MAINTENANCE INSTRUCTIONS

Models: 120PH, 121PH and 126 PH Series Proof/Hot Cabinets

HOW TO CLEAN UNIT:

	SOIL	CLEANER	METHOD
DOOR (Polycarbonate)	Dirt	Mild detergent* and water.	1. Wipe with soft, damp cloth. 2. Rinse well.
	Grease and Oil	Weak, alcohol-type cleaner.	1. Wipe with soft, damp cloth. 2. Rinse well.
CABINETS Inside and Outside (Aluminum)	Dirt	Mild detergent* and hot water, or mild abrasive cleaner.	1. Use soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry.
		Steam (No strong alkaline additive).	1. Rinse after steam cleaning. 2. Wipe dry.
	Fingerprints, Grease and Oil	Chemical oven cleaner for aluminum. Mild abrasive cleaner; oily or waxy cleaner.	Follow oven cleaner manufacturer's directions. Apply with clean, soft cloth.
	Water Spots	Mild abrasive cleaner, Oily or waxy cleaner.	Apply with soft, clean cloth. Wipe with damp cloths.
<i>*Mild detergents include soaps and non-abrasive cleaners.</i>			

TROUBLE-SHOOTING CHART:

FAILURE	POSSIBLE CAUSE
1. Indicator lights do NOT light.	1a. Circuit breaker/fuse to wall outlet is blown. 1b. Cord is unplugged from wall outlet or cabinet. 1c. Switch is "OFF".
2. Unit does not heat.	2a. Thermostat set too low or is "OFF". 2b. Switch is "OFF".
3. Unit gets too hot or won't shut off.	3a. Defective electrical parts. UNPLUG UNIT FROM WALL OUTLET.
4. Humidity is low	4a. Water in pan may be low 4b. Thermostat set too low
5. Blower does not work or makes noise.	5a. Defective blower.

NOTE: Optional digital thermometer will flash if cabinet temperature is below 140°F or above 250°F.
Call the factory if you need different settings.

If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.

Proof/Hot Cabinets	FL-2212
Rev. 8 (3/12)	Page 4 of 4

OPERATING and MAINTENANCE INSTRUCTIONS

Models: 120PH, 121PH and 126 PH Series Proof/Hot Cabinets

REPLACEMENT PARTS:

DESCRIPTION	QTY.	120 VOLT	240 VOLT
Proof/Hot Unit	1	PHU-747-55	PHU-747-56
Heater (Reservoir)	1	0811-005-K	0811-015-K
Pan (Reservoir)	1	1019-002	1019-002
Heater (Air)	2	0811-214	0811-215
Thermostat Kit	2	0848-062-K	0848-062-K
Thermometer Kit (Analog)	1	5238-030-K	5238-030-K
Thermometer Kit (OP, Digital)	1	5238-034-K	5238-034-K
Thermometer Kit (OC, Digital)	1	5238-034-K1	5238-034-K1
Power Cord	1	0810-093	0810-039
Indicator Lights	1	0766-093	0766-093
Power Light (Power)	1	0766-094	0766-095
Switch (Power)	1	0808-116	0808-116
Switch (Mode Selection)	1	0808-117	0808-117
Blower Kit	1	0769-180-K	0769-182-K

