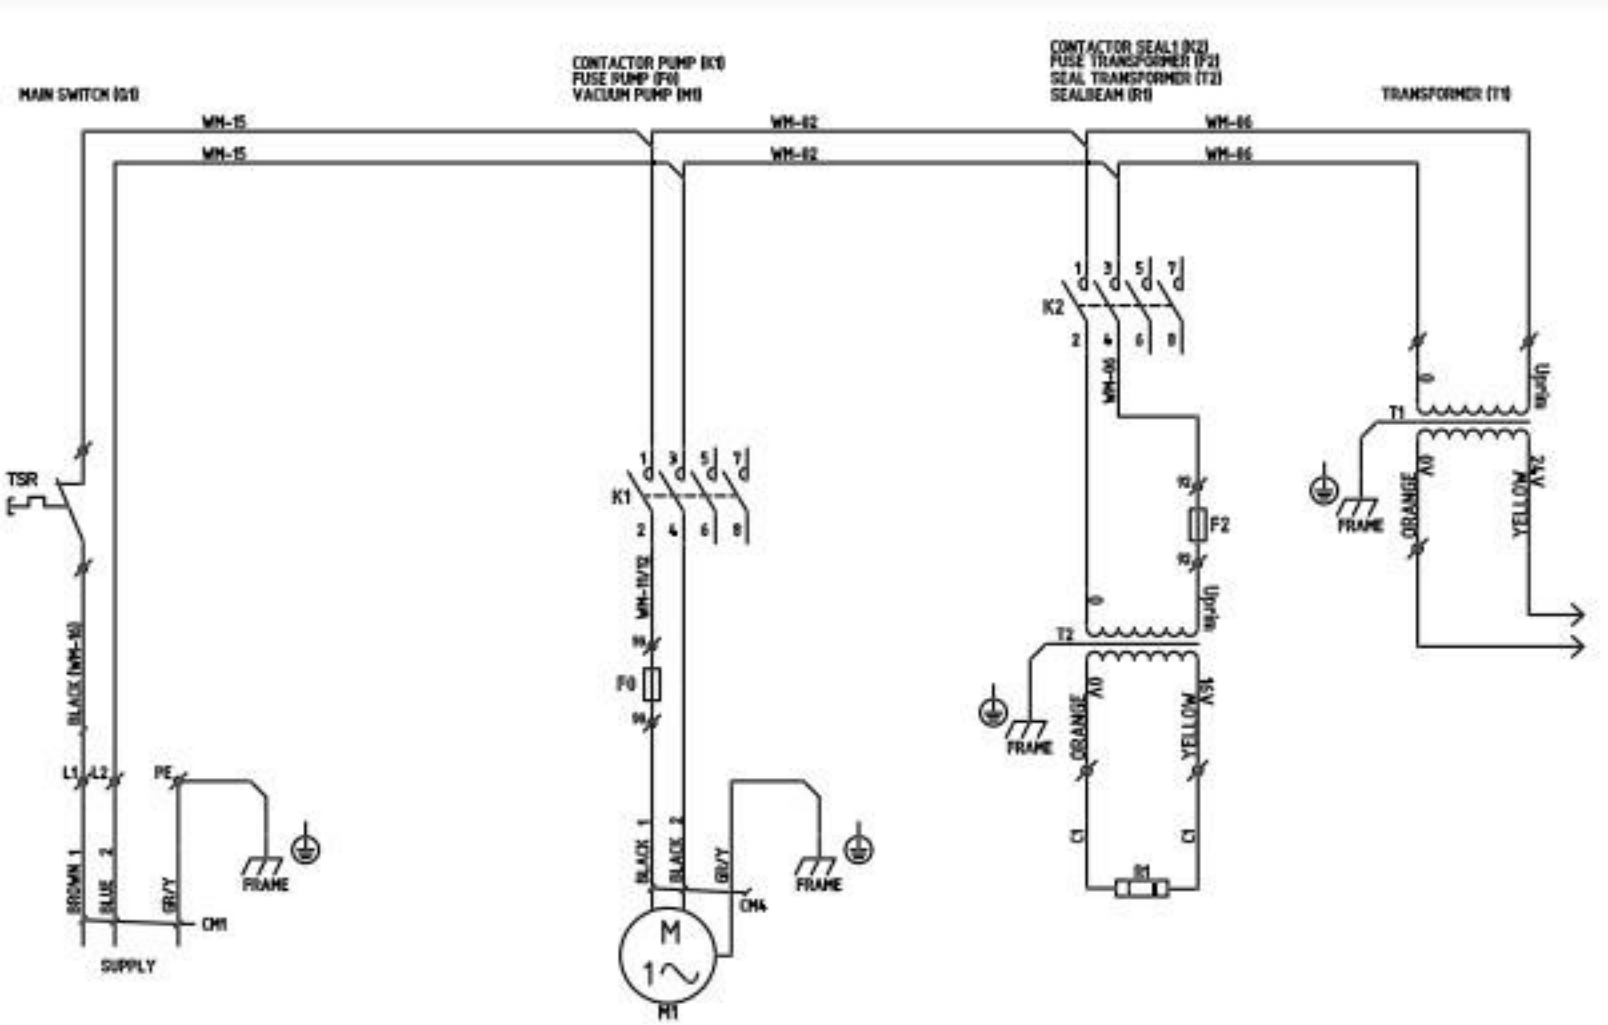
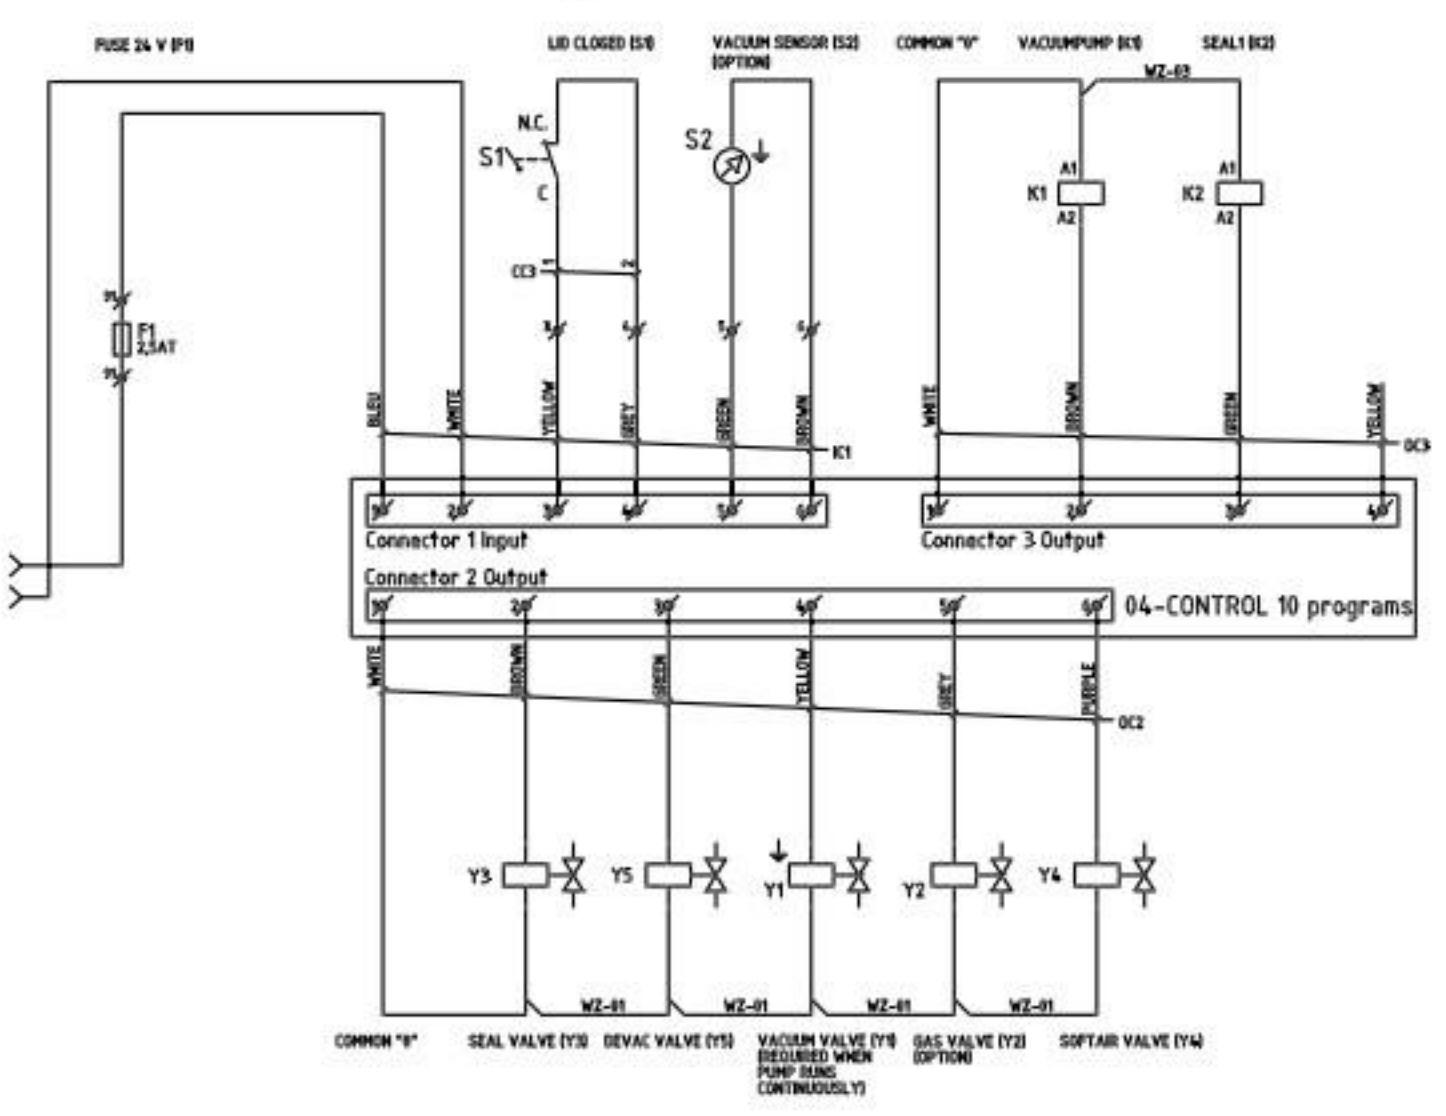

MAIN SWITCH (Q1)
CONTACTOR PUMP (K1)
FUSE PUMP (F0)
VACUUM PUMP (M1)
CONTACTOR SEAL1 (K2)
FUSE TRANSFORMER (F2)
SEAL TRANSFORMER (T2)
SEALBEAM (R1)
TRANSFORMER (T1)
WH-15
WH-02
WH-06
TSR
BLACK (WH-15)
L1
L2
PE
BROWN 1
BLUE 2
GR/Y
CN1
SUPPLY
FRAME
K1
WH-15/2
F0
BLACK 1
BLACK 2
GR/Y
CN4
M
1~
M1
K2
F2
T2
ORANGE
A0
YELLOW
24V
C1
R1
T1
Uprim
0
230V
ORANGE
A0
YELLOW
24V


FUSE 24 V (F1)
LID CLOSED (S1)
VACUUM SENSOR (S2) (OPTION)
COMMON "0"
VACUUMPUMP (K1)
SEAL1 (K2)
WZ-03
N.C.
S1
C
S2
K1
K2
A1
A2
CC3
F1 2,5AT
BLEU
WHITE
YELLOW
GREY
GREEN
BROWN
K1
WHITE
BROWN
GREEN
YELLOW
CC3
Connector 1 Input
Connector 3 Output
Connector 2 Output
04-CONTROL 10 programs
WHITE
BROWN
GREEN
YELLOW
GREY
PURPLE
CC2
Y3
Y5
Y1
Y2
Y4
WZ-01
WZ-01
WZ-01
WZ-01
COMMON "0"
SEAL VALVE (Y3)
DEVAC VALVE (Y5)
VACUUM VALVE (Y1) (REQUIRED WHEN PUMP RUNS CONTINUOUSLY)
GAS VALVE (Y2) (OPTION)
SOFTAIR VALVE (Y4)