



CATALOG OF REPLACEMENT PARTS

OV310G MINI RACK OVEN




ML-132515

OV310G

Table of Contents

5	ADVANCED CONTROL PANEL ASSEMBLY
7	VISUAL INTERFACE CONTROL PANEL ASSEMBLY
9	ELECTRICAL COMPONENTS (USED WITH ADVANCED CONTROLS)
11	ELECTRICAL COMPONENTS (USED WITH VISUAL INTERFACE)
13	CABINET UNIT
15	INTERIOR PANELS
17	DOOR ASSEMBLY
19	ROTATOR AND RACK ASSEMBLY
21	DRAFT INDUCER ASSEMBLY
23	WATER/STEAM SUPPLY
25	GAS HEAT SUPPLY
27	HEAT EXCHANGER AND AIR CIRCULATION SYSTEM

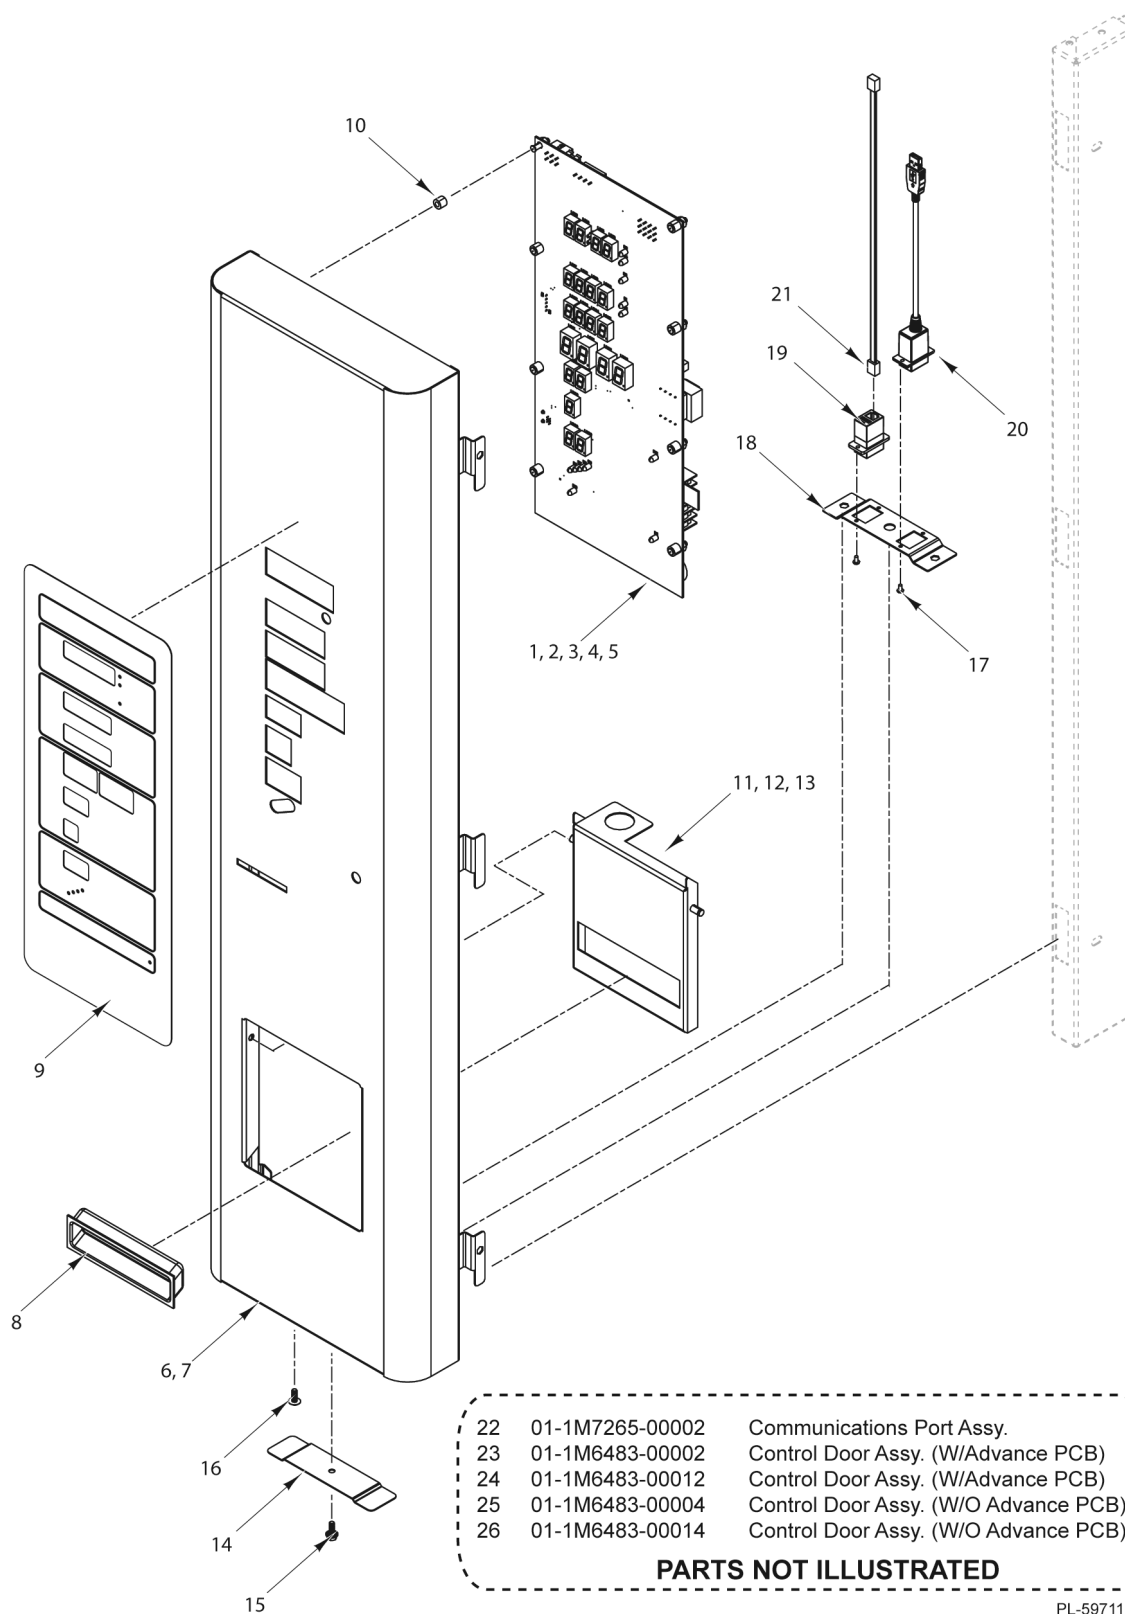


ADVANCED CONTROL PANEL ASSEMBLY

ADVANCED CONTROL PANEL ASSEMBLY

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-59711			
1	01-100V16-0565E	Board - Control (NLA - Obsolete) (Supsd By Item 3).....	1
2	01-1M6012-00002	Kit - EPROM Chip (NLA - Obsolete).....	1
*3	01-100V16-01036	Board - Control (USB Compatible).....	1
4	01-100V23-00F10	Fuse (1 Amp., 250 V.) (On Back of Item 1).....	1
5	01-100V10-00223	Alarm - Piezo Pre-wired.....	1
6	01-1M6424-00001	Control Door Weldment (NLA - Obsolete) (Supsd By Item 7).....	1
*7	01-1M6424-00011	Door Weldment.....	1
8	01-100V18-00110	Pull - Handle Pocket (Black, Plastic).....	1
9	01-100V16-00866	Label - Advanced Controls.....	1
10	01-1000V5-00164	Spacer.....	8
11	01-1M6450-00001	Door - Access.....	1
12	01-1000V0-00092	Pin 1/4 Dia. x 1/2 Lg. (With Retaining Ring).....	2
13	01-100V18-00121	Magnet (0.75 x 0.38 x 1.87).....	1
*14	01-1M7265-00102	Cover - USB Port.....	1
*15	01-1000V4-00386	Screw.....	1
*16	01-1000V4-00412	Mach. Screw 10-32 x 1/2 Phil. Truss Hd. (SST) (Feb 2017 through Jan 2019).....	2
*17	01-100V12-00037	Rivet - Push/Lock (Black Plastic) (Feb 2017 through Jan 2019).....	4
*18	01-1M7625-00001	Bracket Assy. - USB Port (Feb 2017 through Jan 2019).....	1
*19	01-100V10-00344	Jack - RJ12 Panel Mount Coupler (Feb 2017 through Jan 2019).....	1
*20	01-100V10-00350	Coupler - USB Type A Latching (3 ft) (Feb 2017 through Jan 2019).....	1
21	01-100V10-00351	Cable - RJ12 Telephone (3 ft) (Feb 2017 through Jan 2019).....	1
*22	01-1M7265-00002	Communications Port Assy. (Incls Items 17-21) (Feb 2017 through Jan 2019).....	1
23	01-1M6483-00002	Control Door Assy. (With Advanced PCB) (NLA - Obsolete) (Supsd By Item 24).....	1
*24	01-1M6483-00012	Control Door Assy. (With Advanced PCB).....	1
25	01-1M6483-00004	Control Door Assy. (W/O Advanced PCB) (NLA - Obsolete) (Supsd By Item 26).....	1
*26	01-1M6483-00014	Control Door Assy. (W/O Advanced PCB).....	1

* SN 24-2026680 and Above

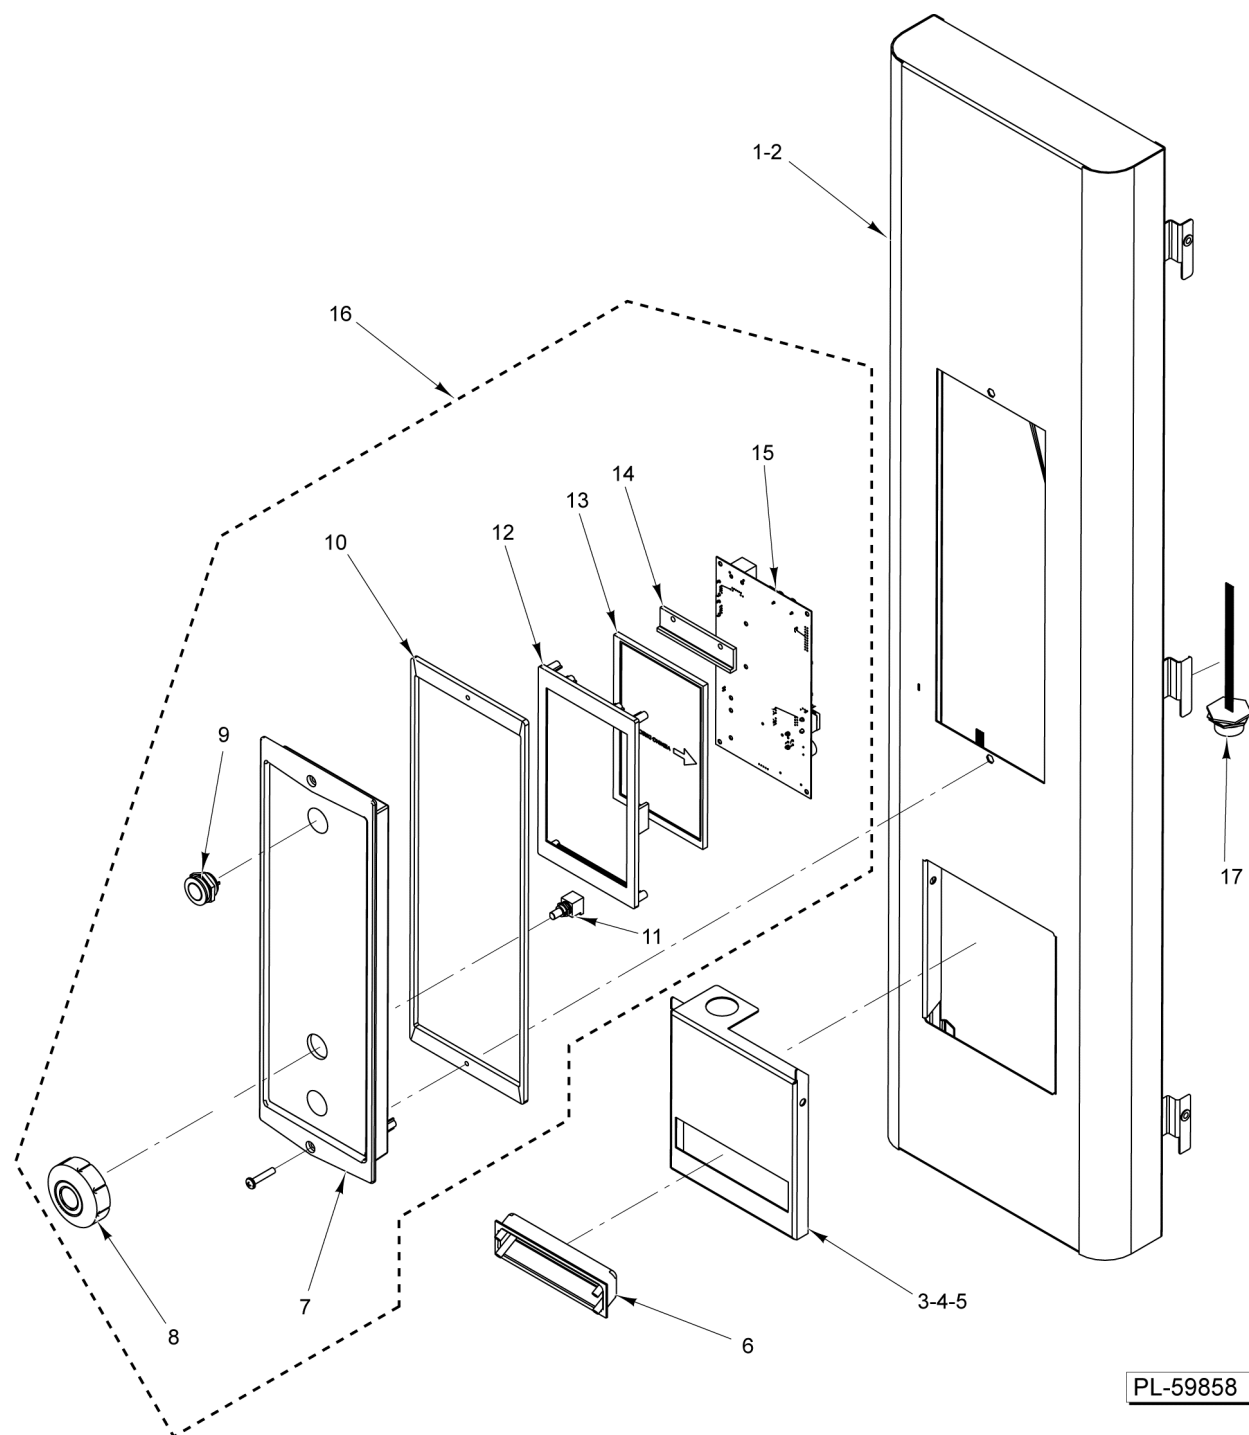

VISUAL INTERFACE CONTROL PANEL ASSEMBLY


VISUAL INTERFACE CONTROL PANEL ASSEMBLY

ILLUS. PL-59858	PART NO.	NAME OF PART	AMT.
*1	01-1M6520-00001	Control Door Assy. (Incls. Items 2 through 17) (NLA - Obsolete).....	1
*2	01-1M6425-00001	Control Door Weldment (NLA - Obsolete).....	1
*3	01-1M6450-00001	Door - Access (NLA - Obsolete).....	1
*4	01-1000V0-00092	Pin 1/4 Dia. x 1/2 Lg. (With Retaining Ring) (NLA - Obsolete).....	2
*5	01-100V18-00121	Magnet (0.75 x 0.38 x 1.87) (NLA - Obsolete).....	1
6	01-100V18-00110	Pull - Handle Pocket (Black, Plastic).....	1
*7	01-1M6725-00001	Bezel Assy. - Control (Incls. Items 12, & 14) (NLA - Obsolete).....	1
*8	01-100V16-00873	Knob - Adjustment (NLA - Obsolete).....	1
9	01-1000V6-00341	Switch - Push-button.....	2
*10	01-100V16-00876	Gasket - Bezel (NLA - Obsolete).....	1
*11	01-1000V6-00342	Encoder (32-Position) (NLA - Obsolete).....	1
*12	01-100V16-00874	Display Frame (NLA - Obsolete).....	1
*13	01-100V10-00299	Display Screen (NLA - Obsolete).....	1
*14	01-100V16-00875	Retainer - LCD (NLA - Obsolete).....	1
*15	01-100V16-00818	Board (User Interface) (Incls. Item 13) (NLA - Obsolete).....	1
*16	01-1M6454-00001	Panel - Control Display (Incls. Items 7 through 15) (NLA - Obsolete).....	1
17	01-100V10-00301	Cable - USB Connector.....	1

* Contact Factory

10 01-1M4450-00002 Harness - Wiring

PART NOT ILLUSTRATED

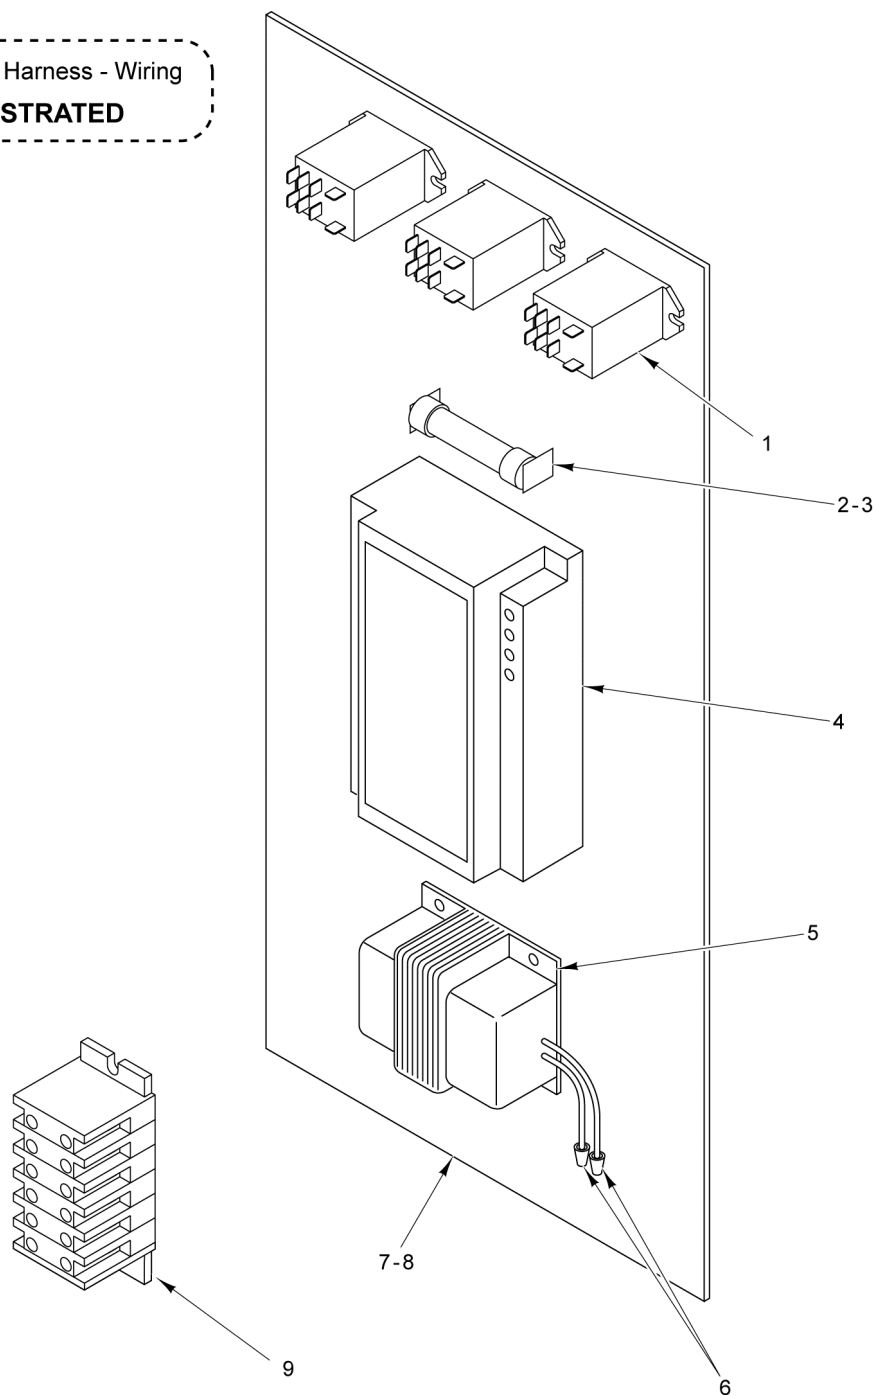


PL-59713

**ELECTRICAL COMPONENTS
(USED WITH ADVANCED CONTROLS)**

**ELECTRICAL COMPONENTS
(USED WITH ADVANCED CONTROLS)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-59713			
1	01-1000V6-00271	Relay - D.P.D.T. (1/2 Hp., 120 VAC).....	3
2	01-100V10-00219	Fuse - Panel Mount (0.5 Amp.).....	1
3	01-100V10-00232	Fuse Holder (30 Amp.).....	1
4	01-1000V9-00152	Control - Electronic Ignition.....	1
5	01-100V10-00251	Transformer (120-24 V.) (With Reset).....	1
6	01-1000V5-00015	Nut - Wire (Orange).....	2
7	01-1M5387-00002	Plate - Relay Mounting.....	1
8	01-1M5563-00001	Module - Electrical (Incls. Items 1 thru 7 & 10).....	1
9	01-1M5548-00005	Terminal Block Assy.....	1
10	01-1M4450-00002	Harness - Wiring (Main).....	1

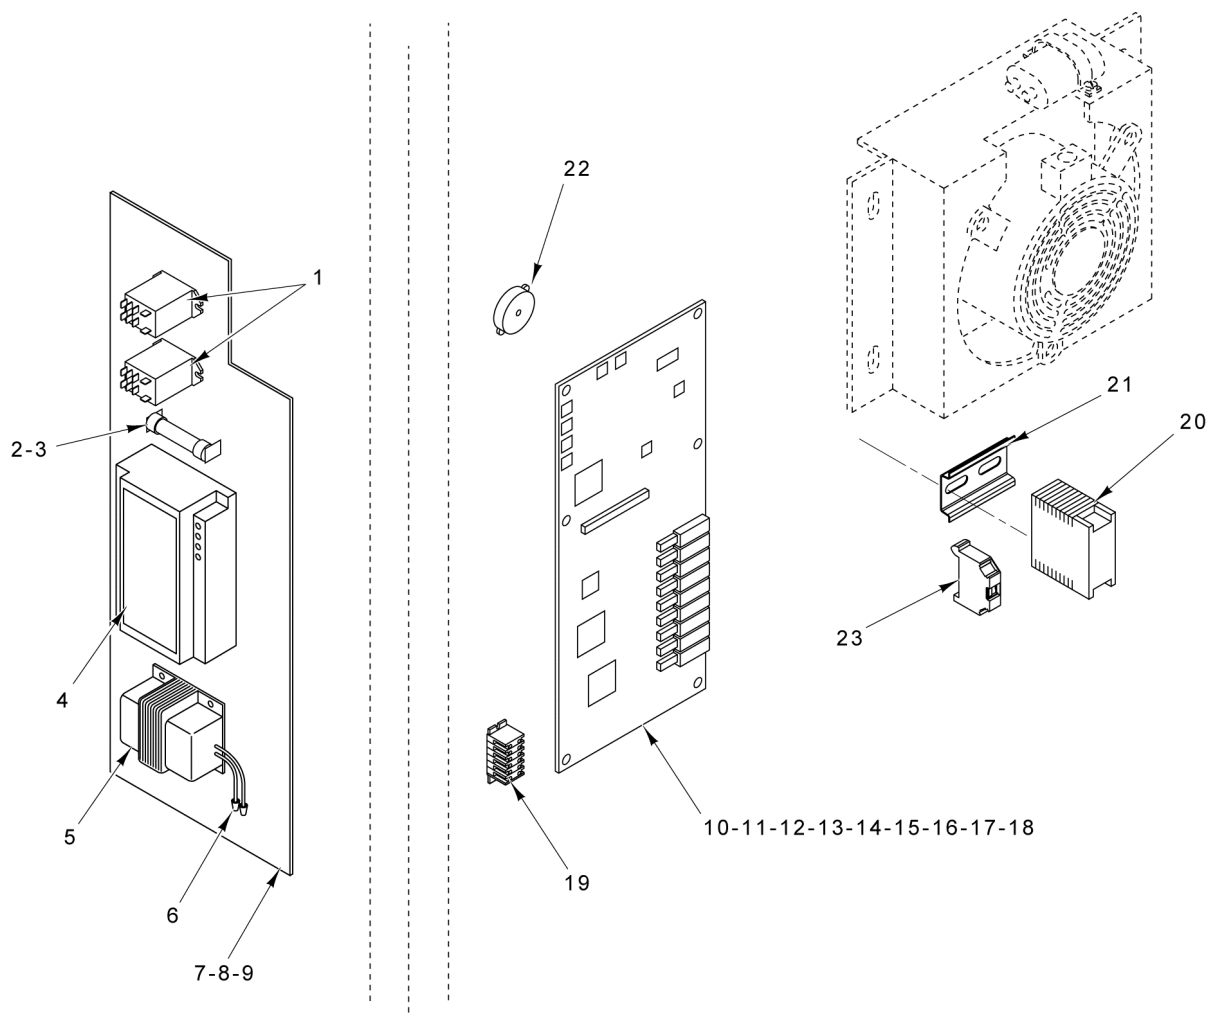


PL-59862

ELECTRICAL COMPONENTS (USED WITH VISUAL INTERFACE)

ELECTRICAL COMPONENTS (USED WITH VISUAL INTERFACE)

ILLUS. PL-59862	PART NO.	NAME OF PART	AMT.
1	01-1000V6-00271	Relay - D.P.D.T. (1/2 Hp., 120 VAC).....	2
2	01-100V10-00232	Fuse Holder (30 Amp.).....	1
3	01-100V10-00219	Fuse - Panel Mount (0.5 Amp.).....	1
4	01-1000V9-00152	Control - Electronic Ignition.....	1
5	01-100V10-00251	Transformer (120-24 V.) (With Reset).....	1
6	01-1000V5-00015	Nut - Wire (Orange).....	2
7	01-1M6531-00001	Plate - Relay Mounting.....	1
8	01-1M6528-00001	Harness - Electric Module.....	1
9	01-1M6404-00001	Module - Electrical (Incls. Items 1 thru 8).....	1
10	01-1000V5-00164	Spacer (Nylon).....	8
11	01-1M6532-00001	Component Plate Assy. (Incls. Items 12 thru 19 & 22).....	1
12	01-1M6533-00001	Plate - Mounting (I/O Board).....	1
13	01-100V16-00813	Board - Control (I/O).....	1
14	01-1M6529-00001	Harness - Common I/O Assy.....	1
15	01-1M6475-00001	Cable - Power Supply.....	1
16	01-1M6476-00001	Cable - Power Connector.....	1
17	01-100V11-00210	Cable (RJ45, Cat-5).....	1
18	01-1000V5-00064	Pin - Molex (Male).....	AR
19	01-1M5548-00005	Terminal Block Assy.....	1
20	01-100V10-00298	Supply - Power.....	1
21	01-1M6226-00002	Rail - Din.....	1
22	01-1M6534-00001	Buzzer Assy.....	1
23	01-1000V5-00252	Stop - Terminal Section End.....	1

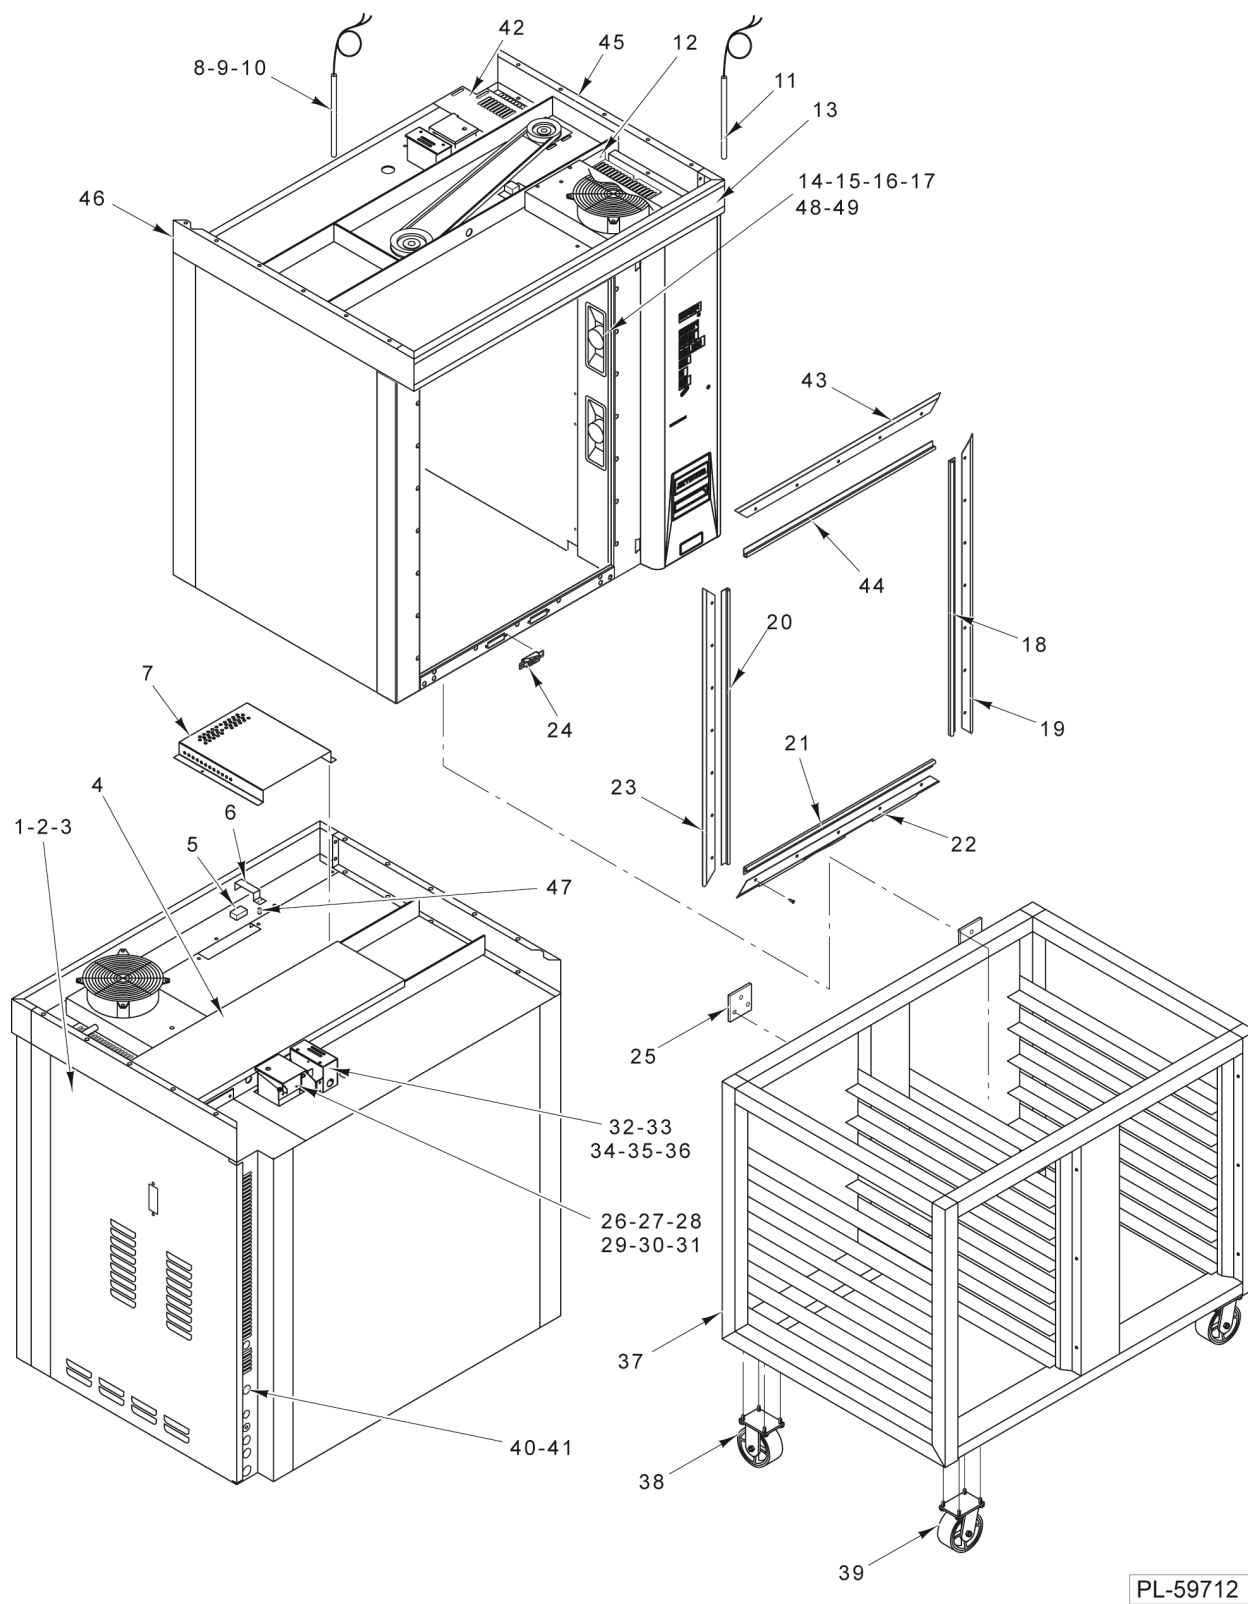


PL-59712

CABINET UNIT

CABINET UNIT

ILLUS. PL-59712	PART NO.	NAME OF PART	AMT.
1	01-1M4198-0002G	Skin Assy., Outer Right Hand Side (Gas Oven).....	1
2	01-100V11-00207	Cover - Access (Breaker).....	1
3		Screw 10-32 Phil. Truss Hd.....	2
4	01-1M4221-00003	Cover - Rotator.....	1
5	01-1M5816-00101	Switch Assy. - Door Magnet.....	2
6	01-1M5806-00001	Bracket - Switch.....	2
7	01-1M5832-00001	Cover - Wiring.....	1
8	01-1A1828-00001	Kit - Thermocouple (Use with Advanced Controls).....	1
9	01-100V17-00279	Fitting 1/4 x 3/16.....	1
10	01-100V10-00302	Sensor - Temperature (Used with Visual Interface Controls).....	1
11	01-1M5860-00001	Thermostat Assy. (High Limit) (Incls. Stuffing) (Used with Advanced Controls).....	1
12	01-1M4203-00001	Cover - Front Outer.....	1
13	01-1M6489-00001	Trim - Upper Front Assy.....	1
*14	01-1000V7-00027	Lamp - Oven (Complete) (Lens, Base, & 120V Bulb).....	2
*15	01-1000V7-00028	Bulb.....	2
*16	01-1000V7-0027G	Gasket.....	2
*17	01-1000V7-0027L	Lens - Glass.....	2
18	01-1M6492-00001	Gasket - Door Opening Side.....	1
19	01-1M6426-00001	Retainer - Right Side Gasket.....	1
20	01-1M6492-00001	Gasket - Door Opening Side.....	1
21	01-1M6493-00002	Gasket - Door Opening Bottom.....	2
22	01-1M6464-00001	Retainer - Bottom Gasket.....	1
23	01-1M6427-00001	Retainer - Left Side Gasket.....	1
24	01-1M6449-00004	Striker - Loading Door.....	4
25	01-1M3475-00001	Retainer.....	2
26	01-1M6100-00003	Cap - Vent.....	1
27	01-1M3375-00004	Hinge - Body.....	1
28	01-1000V4-00304	Pins - Hinge (Shoulder Bolt).....	2
29	01-1M6611-00001	Vent Stack Gasket Retainer Assy. (Incls. Item 30).....	1
30	01-1M6611-00101	Gasket.....	1
31	01-1M6100-00004	Vent Cover Assy. (Incls. Items 26 thru 28).....	1
32	01-1M6055-00002	Vent Assy. - Motor (Incls. Items 33 thru 36).....	1
33	01-1M6779-00001	Motor - Stepper.....	1
34	01-1M6104-00103	Cover - Stepper Motor.....	1
35	01-1M6104-00104	Harness - Stepper Motor.....	1
36	01-1M6340-00001	Arm Actuator.....	1
**37	01-1M4533-00012	Stand Assy. (12-Pan Capacity) (Incls. Items 38 & 39).....	1
38	01-100V14-00047	Caster - Rigid Plate.....	2
39	01-100V14-00046	Caster - Swivel Plate (With Brake).....	2
40	01-1M5575-00001	Cord - Power (120 V.).....	1
41	01-100V17-00572	Grip - Cord (Aluminum) (Strain Relief 120 V. Supply Cord).....	1
42	01-1M4202-00002	Cover - Rear Outer.....	1
43	01-1M6428-00001	Retainer - Top Gasket.....	1
44	01-1M6491-00001	Gasket - Door Opening Top.....	1
45	01-1M4459-00004	Panel - Trim Top (RH).....	1
46	01-1M4459-00003	Panel - Trim Top (LH).....	1
47	01-1000V4-00121	Insert - Threaded 10-32 Hex.....	4
***48	01-1000V7-00053	Lamp - Oven (Complete) (Lens, Base, & Bulb).....	2
***49	01-1000V7-00054	Bulb - Halogen G9 Base.....	2


* 9/30/15 And Before
 ** Optional Part
 *** 10/1/2015 And After

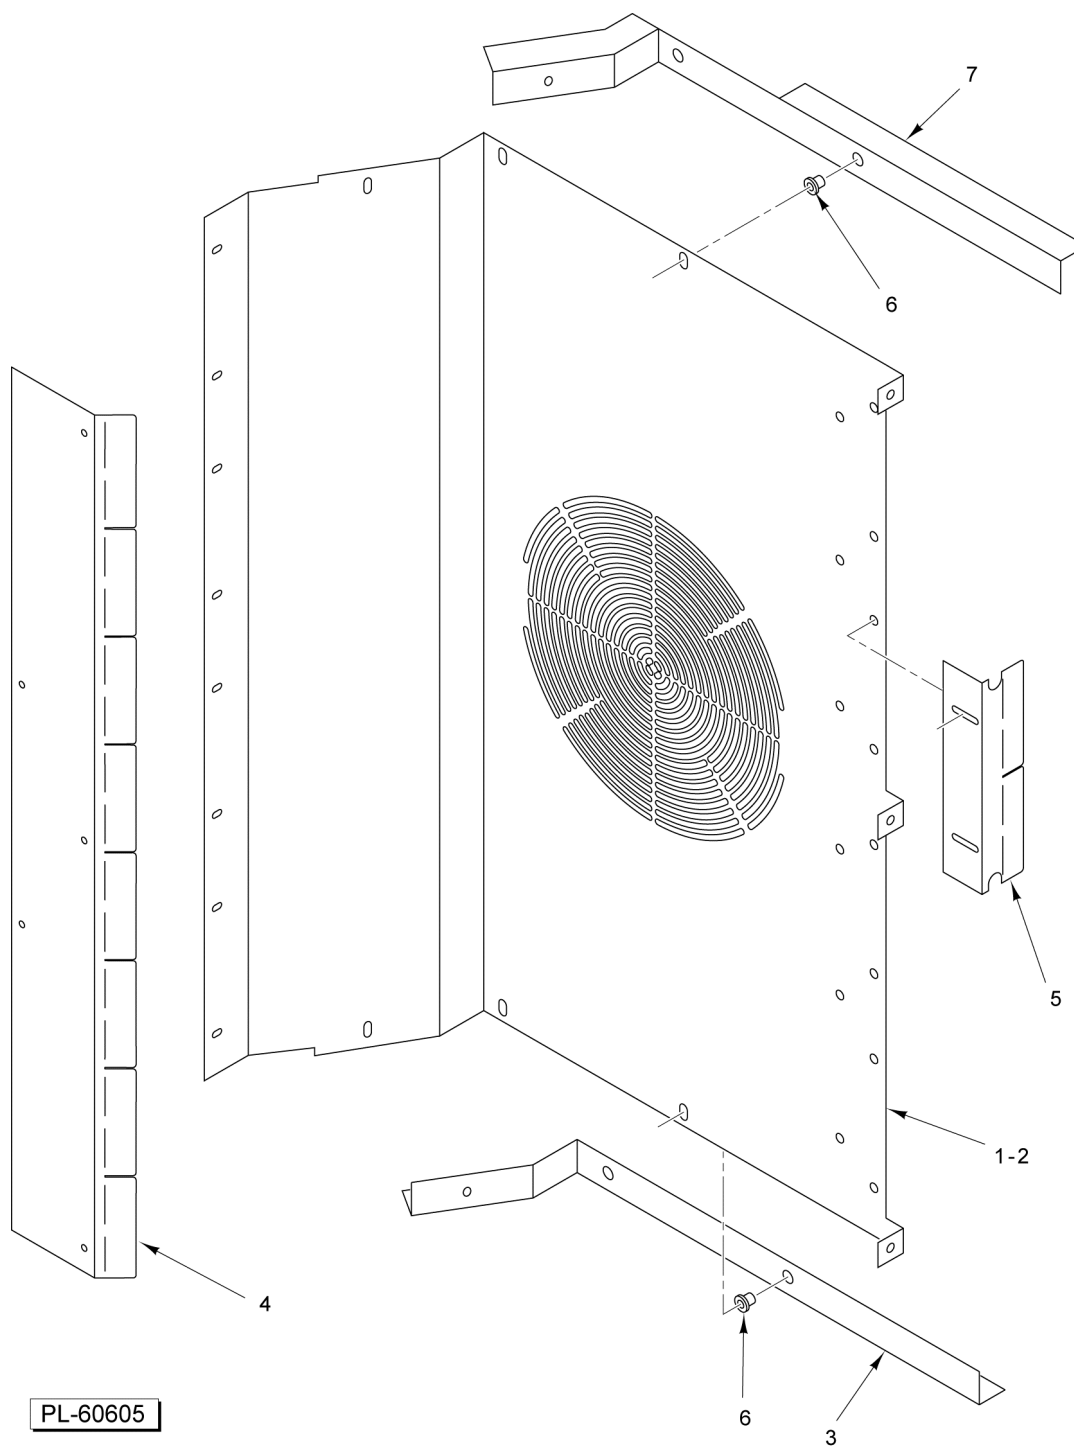

INTERIOR PANELS

INTERIOR PANELS

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60605			
1	01-1M4268-00002	Panel - Pressure Weldment.....	1
2	01-1M5593-00001	Panel - Pressure Assy. (Incls. Items 1, 5, & 6).....	1
3	01-1M4212-00002	NLA - Obsolete--Bracket - Lower Mounting (Incls. Item 6).....	1
4	01-1M5379-00001	Shutter - Airflow.....	1
5	01-1M5379-00002	Shutter - Airflow (Front RH).....	4
6	01-1000V4-00121	Insert - Threaded 10-32 Hex.....	AR
7	01-1M4211-00002	NLA - Obsolete--Bracket - Upper Mounting (Incls. Item 6).....	1

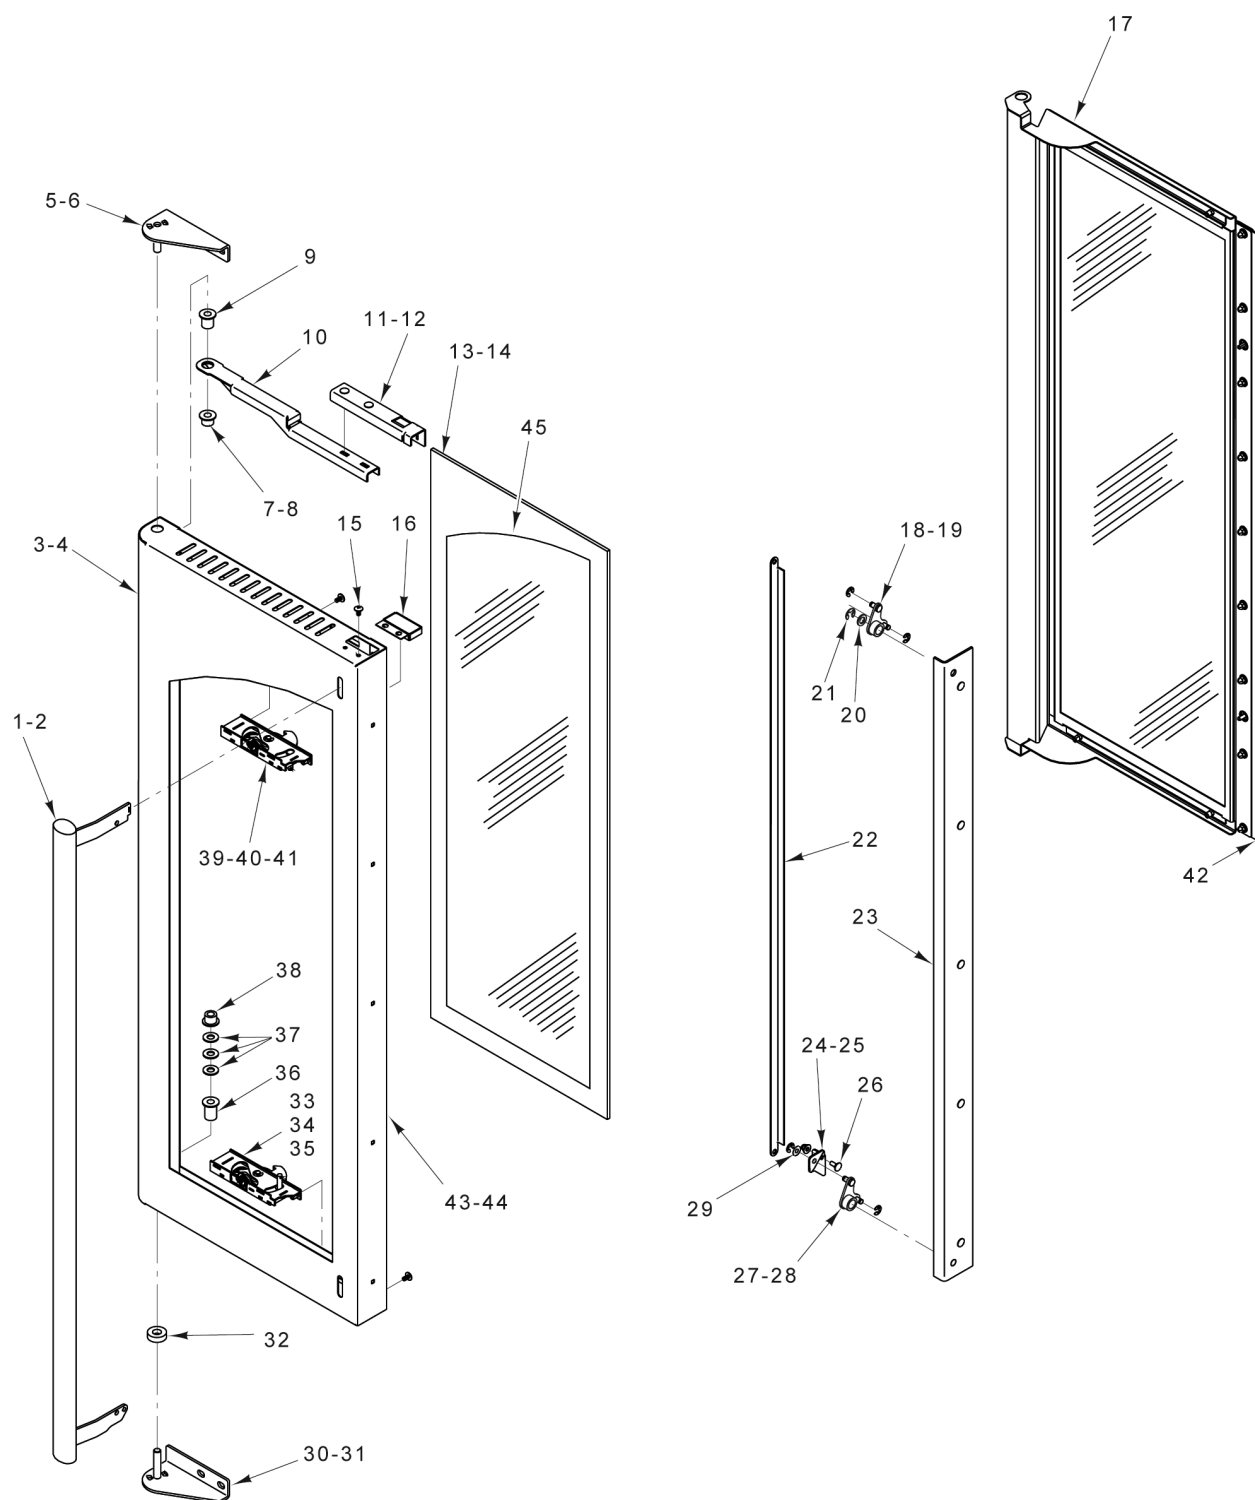


PL-59707

DOOR ASSEMBLY

DOOR ASSEMBLY


ILLUS. PL-59707	PART NO.	NAME OF PART	AMT.
1	01-1M6468-00001	Handle Assy. - Left.....	1
2	01-1M6470-00001	Handle Assy. - Right.....	1
3	01-1M6419-00001	Door - Skin Left.....	1
4	01-1M6418-00001	Door - Skin Right.....	1
5	01-1M6189-00003	Mount - Door Bearing Weldment (Top Left).....	1
6	01-1M6189-00004	Mount - Door Bearing Weldment (Top Right).....	1
7	01-1000V0-00108	Bearing 5/8 ID x 1 OD x 1/16 Lg. (Bronze).....	1
8	01-1000V0-00107	Bearing 3/8 ID x 5/8 OD x 1/2 Lg. (Bronze).....	2
9	01-1000V0-00110	Bearing 3/8 ID x 5/8 OD x 3/4 Lg. (Bronze).....	1
10	01-1M6462-00001	Torque Arm - Hinge Side.....	1
11	01-1M6485-00001	Torque Arm - Left.....	1
12	01-1M6486-00001	Torque Arm - Right.....	1
13	01-1M7242-00001	Kit, Left Door Glass and VHB Tape (Includes Item 45).....	1
14	01-1M7243-00001	Kit, Right Door Glass and VHB Tape (Includes Item 45).....	1
15	01-1000V4-00350	Mach. Screw 10-32 x 3/8 Phil. Hd. (SST).....	7
16	01-1M6436-00001	Magnet Assy.....	1
17	01-1M6472-00001	Door - Inner (Left & Right).....	1
18	01-1M6473-00001	Mount - Left Door Handle Rotator.....	1
19	01-1M6474-00001	Mount - Right Door Handle Rotator.....	1
20	01-1000V4-00341	Washer.....	2
21	01-1000V0-00091	Clip - E Style.....	2
22	01-1M6432-00001	Rod - Connecting.....	1
23	01-1M6471-00001	Cradle Mechanism - Handle.....	1
24	01-1M6441-00001	Actuator - Left Latch.....	1
25	01-1M6442-00001	Actuator - Right Latch.....	1
26	01-1000V4-00339	Bolt - Carriage 10-32 x 1/2.....	6
27	01-1M6473-00001	Mount - Left Door Handle Rotator.....	1
28	01-1M6474-00001	Mount - Right Door Handle Rotator.....	1
29	WS-028-08	Washer #10 x 0.43 (Zinc Plated) (SST).....	13
30	01-1M6189-00003	Mount - Door Bearing Weldment (Bottom Right).....	1
31	01-1M6189-00004	Mount - Door Bearing Weldment (Bottom Left).....	1
32	01-1M6434-00001	Kit - Wave Washer (1 Set).....	4
33	01-1M6415-00001	Latch Assy. (RH Door Bottom, LH Door Top).....	1
34	01-1M6480-00001	Latch Assy. (RH Door Top, LH Door Bottom).....	1
35	01-1M6463-00001	Tab - Door Latch Retaining.....	1
36	01-1000V0-00100	Bearing 3/8 ID x 5/8 OD x 1 Lg. (Bronze).....	1
37	01-1000V4-00364	Washer 0.375 x 0.812 x 1/6.....	3
38	01-1000V0-00107	Bearing 3/8 ID x 5/8 OD x 1/2 Lg. (Bronze).....	2
39	01-1M6415-00001	Latch Assy. (RH Door Bottom, LH Door Top).....	1
40	01-1M6480-00001	Latch Assy. (RH Door Top, LH Door Bottom).....	1
41	01-100V20-00028	Spring - Extension (For Items 33, 34, 39, & 40).....	1
42	01-100V16-00881	Gasket (Vertical Strip).....	1
43	01-1M6421-00001	Door Assy. - Left (Complete).....	1
44	01-1M6420-00001	Door Assy. - Right (Complete).....	1
45	01-1M7188-00001	Kit, VHB Tape.....	AR

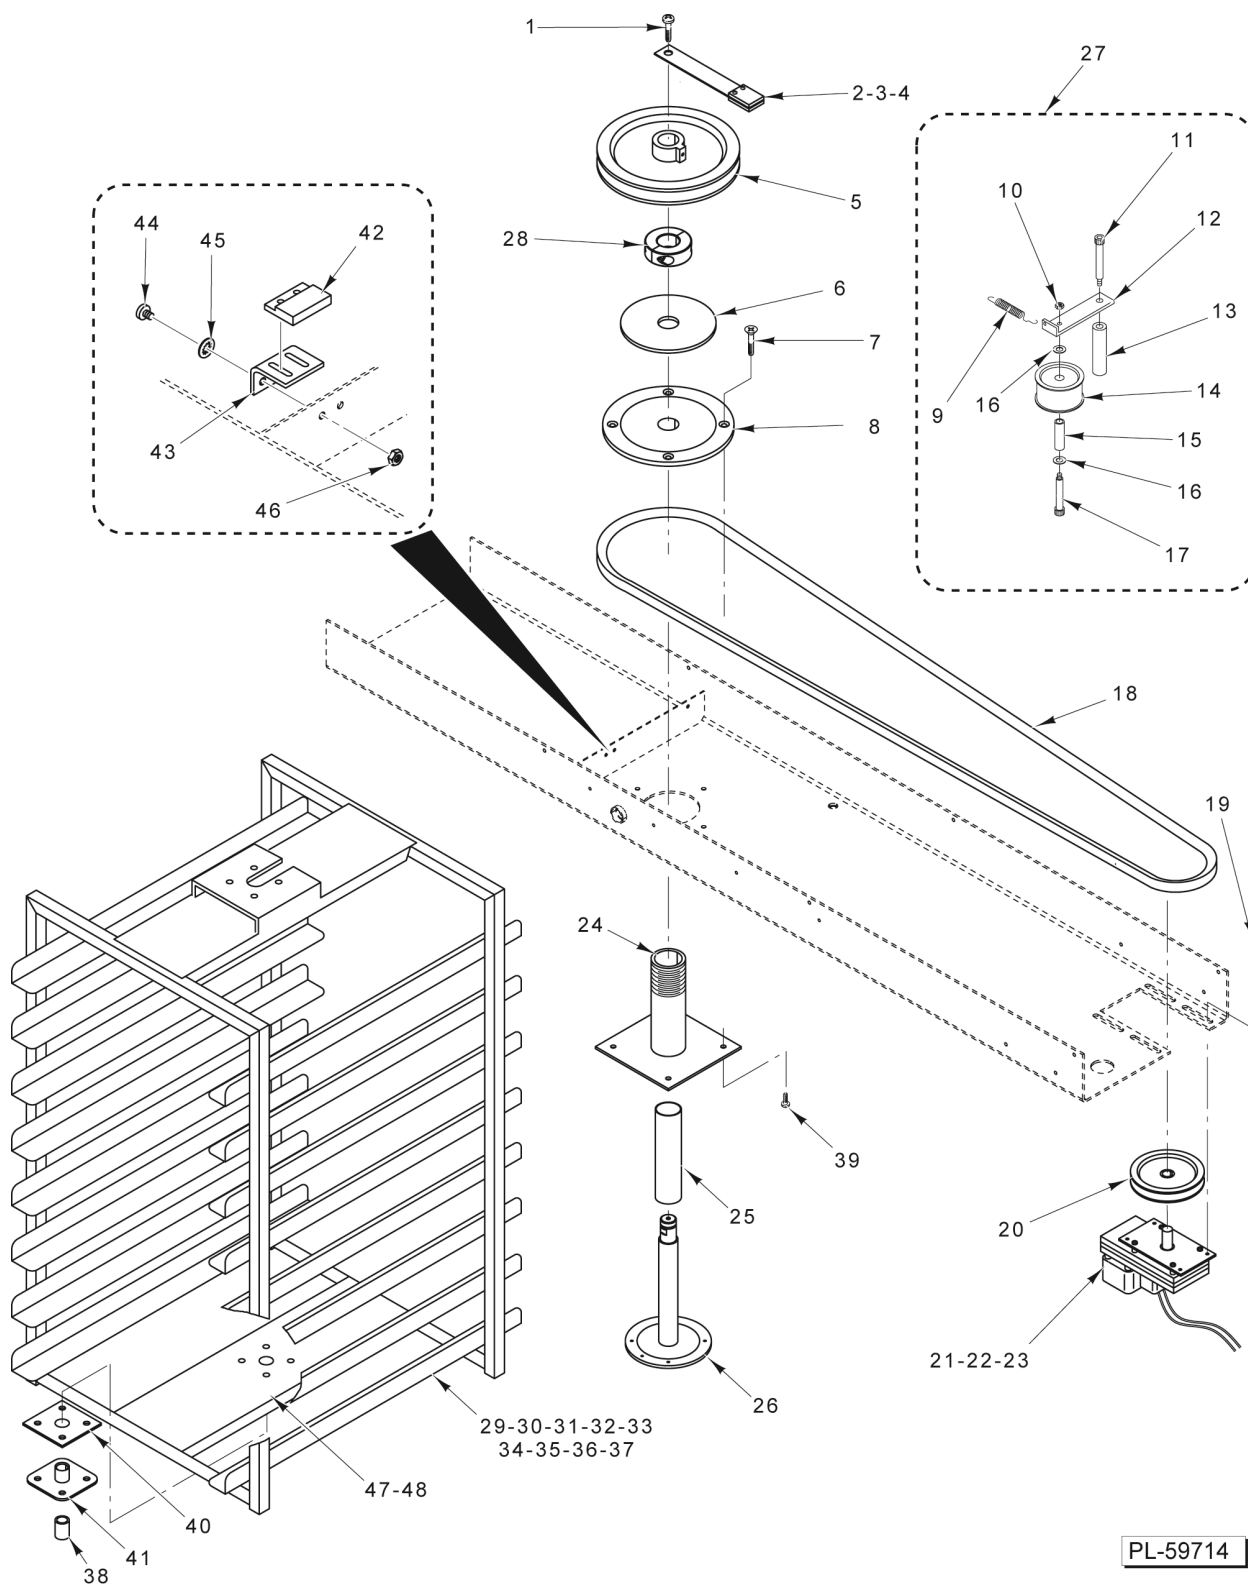

ROTATOR AND RACK ASSEMBLY

ROTATOR AND RACK ASSEMBLY

ILLUS. PL-59714	PART NO.	NAME OF PART	AMT.
1		Screw 1/4-20 x 1/2 Truss Hd.....	1
2	00-175999	Actuator - Magnetic.....	1
3	01-1M3383-00001	Plate - Magnet Mounting.....	1
4		Screw 6-32 x 3/8 Pan Hd.....	2
5	01-1000V3-00090	Sheave (3/4 Bore).....	1
6	01-1000V0-00071	Bearing - Rotator Thrust.....	1
7		Screw 1/4-20 x 1/2 Flat Hd.....	4
8	01-1M3358-00003	Disk - Thrust (With Removable Rack).....	1
9	01-100V20-00009	Spring - Tension.....	1
10		Nut 5/16-18 Hex (Nylock).....	1
11	01-1000V4-00296	Shoulder Bolt 1/2 Dia. x 1-3/4, 3/8-16 Hex Socket Hd.....	1
12	01-1M3527-00001	Bracket - Rotator Idler.....	1
13	01-1M3526-00002	Tube - Rotator Idler.....	1
14	01-1000V3-00107	Pulley - Rotator Idler.....	1
15	01-1000V0-00038	Bearing - Journal (Nylon).....	1
16		Washer 3/8 (SST).....	2
17	01-1000V4-00295	Shoulder Bolt 3/8 Dia. x 1-1/4, 5/16-18 Hex Socket Hd.....	1
18	01-1000V3-00093	V-Belt.....	1
19		Screw 10-32 x 1/2 Truss Hd.....	8
20	01-1000V3-00106	Sheave - Die Cast (3/8 In. Bore).....	1
21	01-1M3360-00001	Plate - Rotator Drive.....	1
22	01-1M7292-00001	Motor - Gear (6 RPM).....	1
23	01-1000V8-00134	Blade - Fan (2-1/2).....	1
24	01-1M3363-00003	Housing - Upper Rotator (With Removable Rack).....	1
25	01-1000V0-0072A	Bearing - Rotator (Upper).....	1
26	01-1M3365-00003	Shaft - Rotator (With Removable Rack).....	1
27	01-1M3525-00002	Pulley - Idler (Incls. Items 9 thru 17).....	1
28	01-1000V1-00076	Collar - Two-Piece Set (5/8 In.) (With Removable Rack).....	1
29	01-1M5965-00005	Rack - End Load (5-Pan) (Removable) (Step Slide).....	1
30	01-1M5965-0006D	Rack - End Load (6-Pan) (Removable) (Step Slide).....	1
31	01-1M5965-0008D	Rack - End Load (8-Pan) (Removable) (Step Slide).....	1
32	01-1M5965-00006	Rack - End Load (6-Pan) (Removable) (Straight Slide).....	1
33	01-1M5965-00008	Rack - End Load (8-Pan) (Removable) (Straight Slide).....	1
34	01-1M5965-00010	Rack - End Load (10-Pan) (Removable) (Straight Slide).....	1
35	01-1M5965-00012	Rack - End Load (12-Pan) (Removable) (Straight Slide).....	1
36	01-1M5967-00006	Rack - Side Load (6-Pan) (Removable) (Straight Slide).....	1
37	01-1M5967-00008	Rack - Side Load (8-Pan) (Removable) (Straight Slide).....	1
38	01-1000V0-0072B	Bearing - Rotator (Lower).....	1
39		Screw 10-32 x 1/2 Truss Hd.....	4
40	01-1M3366-00001	Shaft - Lower Rotator.....	1
41	01-1M3364-00002	Housing - Bearing (Lower Rotator).....	1
42	01-1M5816-00101	Switch Assy. - Door Magnet.....	1
43	01-1M3384-00002	Bracket - Mounting Switch.....	1
44		Screw 4-40 x 3/8 Pan Hd. (SST).....	2
45		Lockwasher #4 Internal.....	2
46		Nut 4-40 hex (SST).....	2
47	01-1M3417-00003	Support, Rack Bottom Assy. (For End-Load Removable Racks Only) (Items 29-35)	1
48	01-1M3417-00004	Support, Rack Bottom Assy. (For Side-Load Removable Racks Only) (Items 36 & 37)	1

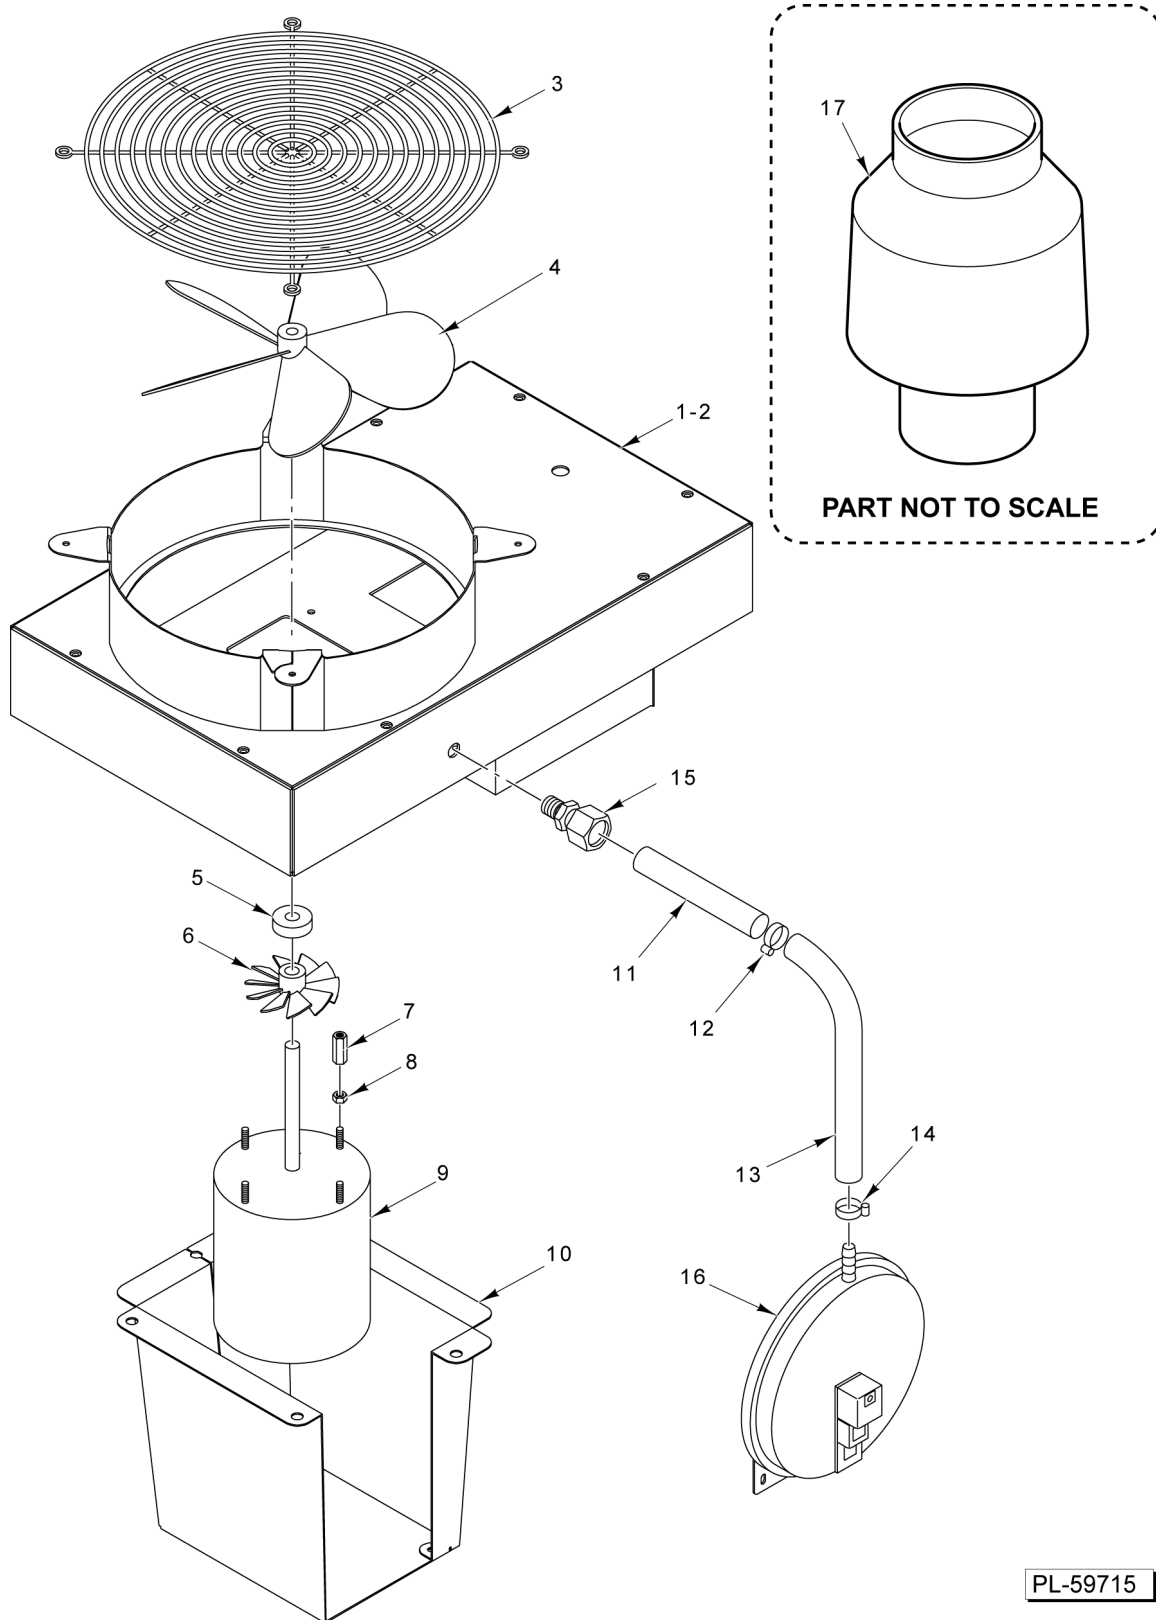


DRAFT INDUCER ASSEMBLY

DRAFT INDUCER ASSEMBLY

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-59715			
1	01-1M4442-00001	Draft Inducer Assy. (Incls. Items 2 thru 15).....	1
2	01-1M4441-00001	Weldment - Draft Inducer.....	1
3	01-1000V8-00090	Guard - Blower Wheel.....	1
4	01-1000V8-00095	Blade - Fan.....	1
5	01-1000V1-00075	Collar - Set 5/16 (SST).....	1
6	01-1000V8-00099	Blade - Fan 2 In. Dia.....	1
7	01-1000V4-00220	Nut - Coupler 8-32 x 5/8.....	4
8		Nut 8-32.....	4
9	01-1000V8-00098	Motor - Fan (3000 RPM).....	1
10	01-1M4465-00001	Shroud - Motor.....	1
*11	00-913135-00149	Tube 1/4 O.D. x 6 Lg. (Alum.) (6 In.).....	1
12	01-1000V1-00018	Clamp - Hose 1/4 I.D. x 7/16 O.D.....	1
*13	01-100V17-00094	Hose 1/4 I.D. x 7/16 O.D. x 17 Lg.....	1
14	01-1000V1-00018	Clamp - Hose 1/4 I.D. x 7/16 O.D.....	1
15	FP-078-49	Fitting - Tube (1/4 In.) (Brass).....	1
16	01-1000V6-00177	Switch - Pressure.....	1
17	01-1000V9-00153	Diverter - Draft (For Direct Vent Option).....	1

* Sold Per Inch

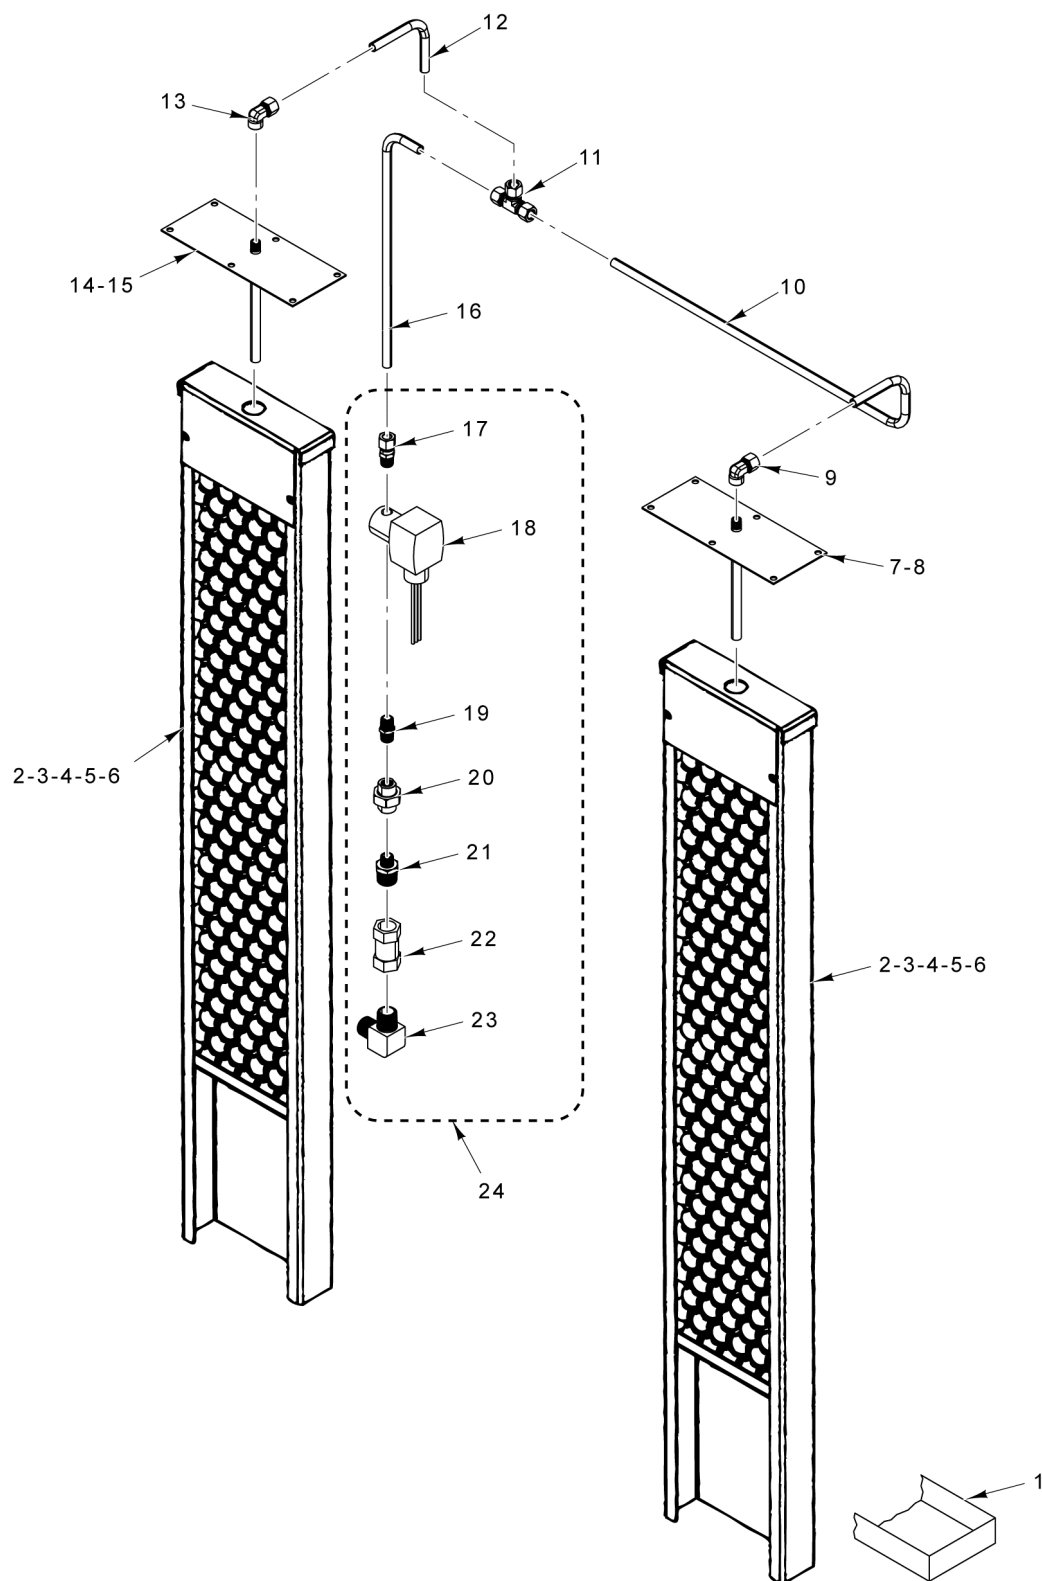


PL-59716

WATER/STEAM SUPPLY

WATER/STEAM SUPPLY

ILLUS. PL-59716	PART NO.	NAME OF PART	AMT.
1	01-1M4411-00001	Pan - Auxiliary Drain.....	1
2	01-1M6004-00001	Steamer - Mass Assy. (Incls. Items 3 thru 6).....	2
3	01-1M6004-00104	Retainer - Steamer Balls.....	1
4	01-1M6004-00105	Retainer - Steamer Bottom.....	1
5	01-1M6004-00106	Cover - Steamer Assy.....	1
6	01-1M5975-00001	Steamer - Balls.....	4
7	01-1M4272-00003	Manifold - Steamer Assy. (Incls. Items 8 & 9).....	1
*8	01-100V21-0039A	Tape - Silicone (1/8 x 3/4) (20 In. Per Manifold).....	AR
9	01-100V17-00666	Elbow 3/8 x 90 Deg. Compression (Brass).....	1
10	01-1M6495-00002	Tube - Copper (Water Supply to Front Manifold).....	1
11	01-100V17-00506	Tee 3/8 In. Compression (Brass).....	1
12	01-1M6495-00003	Tube - Copper (Water Supply to Rear Manifold).....	1
13	01-100V17-00666	Elbow 3/8 x 90 Deg. Compression (Brass).....	1
14	01-1M4272-00003	Manifold - Steamer Assy. (Incls. Items 13 & 15).....	1
*15	01-100V21-0039A	Tape - Silicone (1/8 x 3/4) (20 In. Per Manifold).....	AR
16	01-1M6495-00001	Tube - Copper (Water Supply to Tee).....	1
17	01-100V17-00341	Fitting - Straight 1/4 MNPT x 3/8 CC (Brass).....	1
18	01-100V17-00075	Valve - Solenoid 1/4 NPT (2-Way) (120 V.).....	1
19	01-100V17-00083	Pipe - Close Hex 1/4 NPT (Brass).....	1
20	10-100V17-00661	Union 1/4 (Brass).....	1
21	01-100V17-00424	Pipe - Reducer Hex 1/2 NPTM to 1/4 NPTM (Brass).....	1
22	01-100V17-00566	Regulator - Flow 1/2 NPTF 1/2 NPTF (1.5 GPM).....	1
23	01-100V17-00662	Elbow 1/2 NPTM x 90 Deg. (Brass).....	1
24	01-1M6496-00001	Water Supply Assy. (Incls. Items 17 thru 23).....	1


* Sold Per Inch

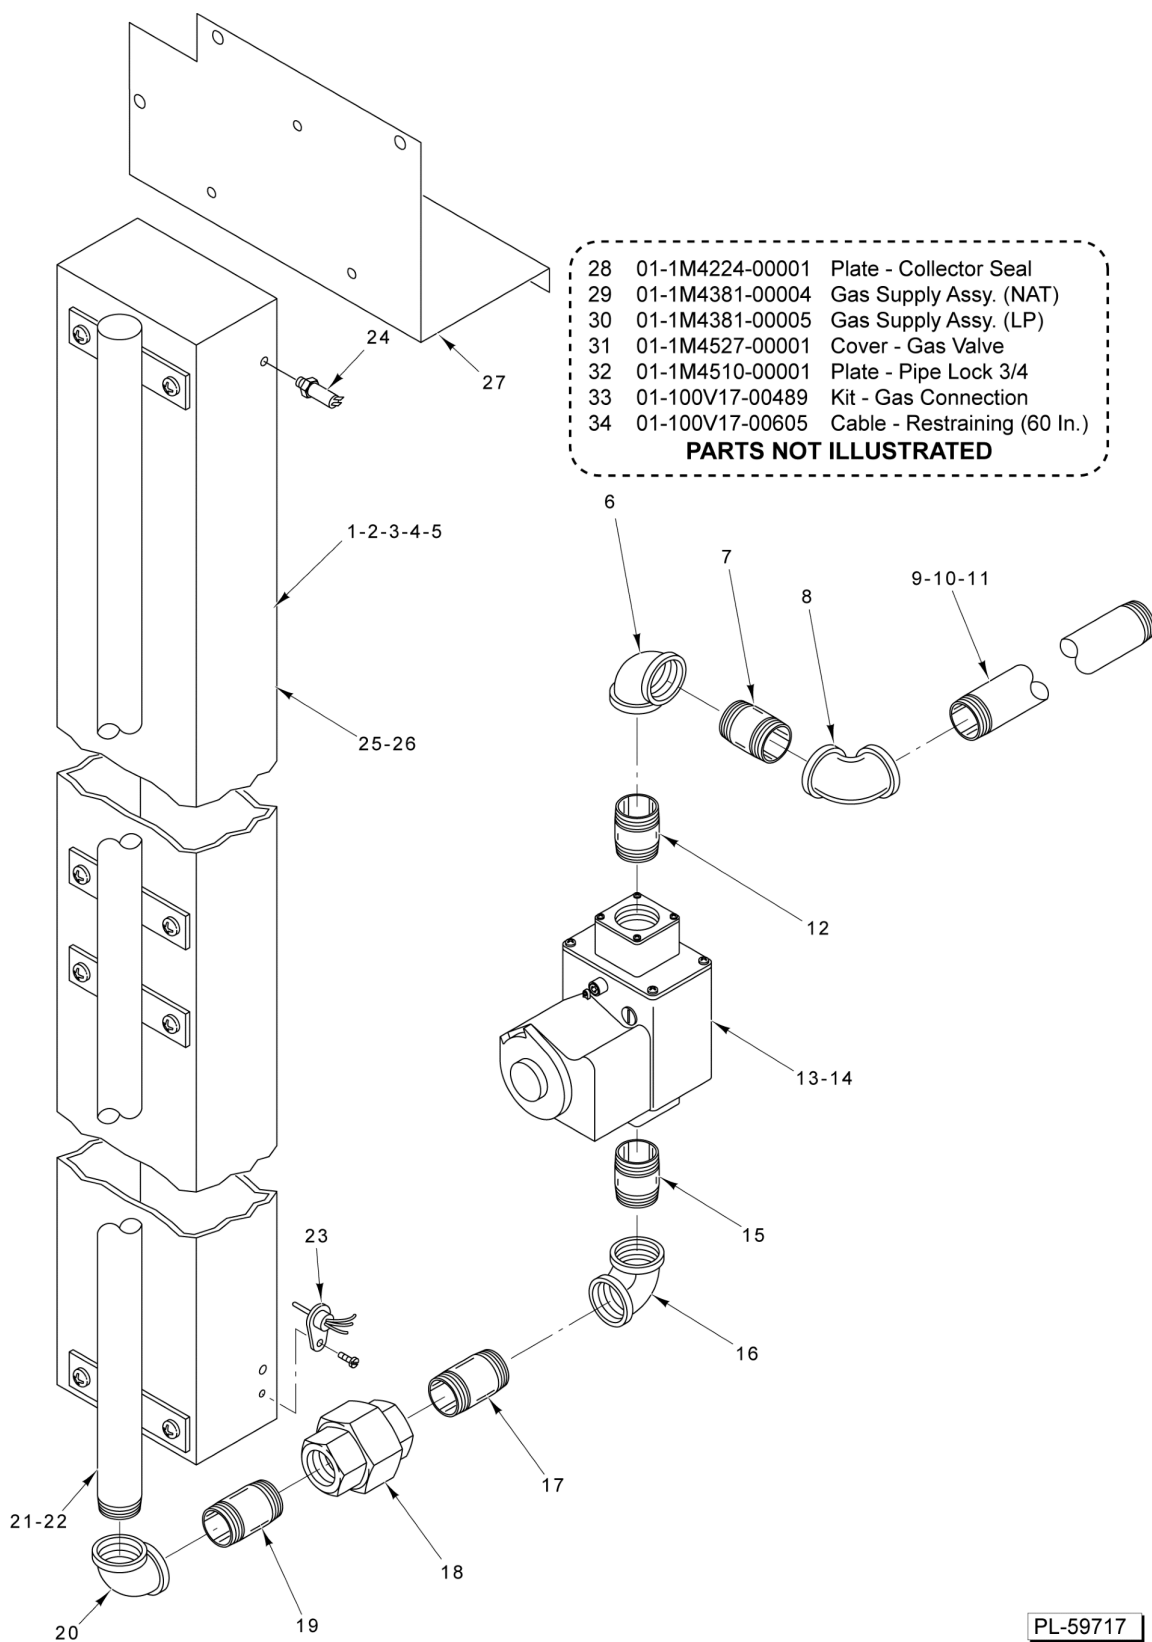

GAS HEAT SUPPLY

GAS HEAT SUPPLY

ILLUS. PL-59717	PART NO.	NAME OF PART	AMT.
1	01-1M4267-00002	Burner - Rack Assy. (Incls. Items 2 thru 5).....	1
2	01-1000V9-00146	Burner - In-Shot (Crossover).....	8
3	01-1M4227-00001	Housing - Burner.....	2
4	01-1M4229-00001	Plate - Side Cover.....	2
5	01-1M4228-00001	Mount - Burner.....	2
6	01-100V17-00512	Elbow - Pipe 1/2 NPT x 90 Deg. (Black).....	1
7	01-100V17-00492	Pipe - Close 1/2 NPT (Black).....	1
8	01-100V17-00512	Elbow - Pipe 1/2 NPT x 90 Deg. (Black).....	1
9	01-10A981-02400	Pipe 1/2 x 24.....	1
10	01-100V17-00631	Coupler - Reducing (3/4 to 1/2).....	1
11	01-1M4381-00201	Pipe 3/4 x 4 NPT (Black).....	1
12	01-100V17-00492	Pipe - Close 1/2 NPT (Black).....	1
13	01-1000V9-00188	Valve - Gas (1 Stage) (Also Order Item 14 for LP Units).....	1
14	01-1000V9-00128	Kit - LP Conversion.....	1
15	01-100V17-00492	Pipe - Close 1/2 NPT (Black).....	1
16	01-100V17-00512	Elbow - Pipe 1/2 NPT x 90 Deg. (Black).....	1
17	01-10A981-00200	Pipe 1/2 x 2 NPT (Black).....	1
18	01-100V17-00463	Union 1/2 NPT (Black).....	1
19	01-100V17-00492	Pipe - Close 1/2 NPT (Black).....	1
20	01-100V17-00512	Elbow - Pipe 1/2 NPT x 90 Deg. (Black).....	1
21	01-100V16-0482B	Manifold (NAT).....	1
22	01-100V16-0482C	Manifold (LP).....	1
23	01-1000V9-00149	Ignitor - Hot Surface.....	1
24	01-1000V9-00151	Sensor - Flame Rod.....	1
25	01-1M4348-00002	Pipe - Crossover Assy.....	1
26	01-100V16-00481	Gasket - Heat Exchanger (Burner).....	2
27	01-1M4466-00001	Angle - Draft Inducer Duct.....	1
28	01-1M4224-00001	Plate - Collector Seal.....	1
29	01-1M4381-00004	Gas Supply Assy. (NAT) (Incls. Items 6 thru 13 & 15 thru 19).....	1
30	01-1M4381-00005	Gas Supply Assy. (LP) (Incls. Items 6 thru 19).....	1
31	01-1M4527-00001	Cover - Gas Valve.....	1
32	01-1M4510-00001	Plate - Pipe Lock 3/4.....	1
33	01-100V17-00489	Kit - Gas Connection (Flexible Quick Disconnect) (Optional Part) (Incls. Item 34).....	1
34	01-100V17-00605	Cable - Restraining (60 In.).....	1

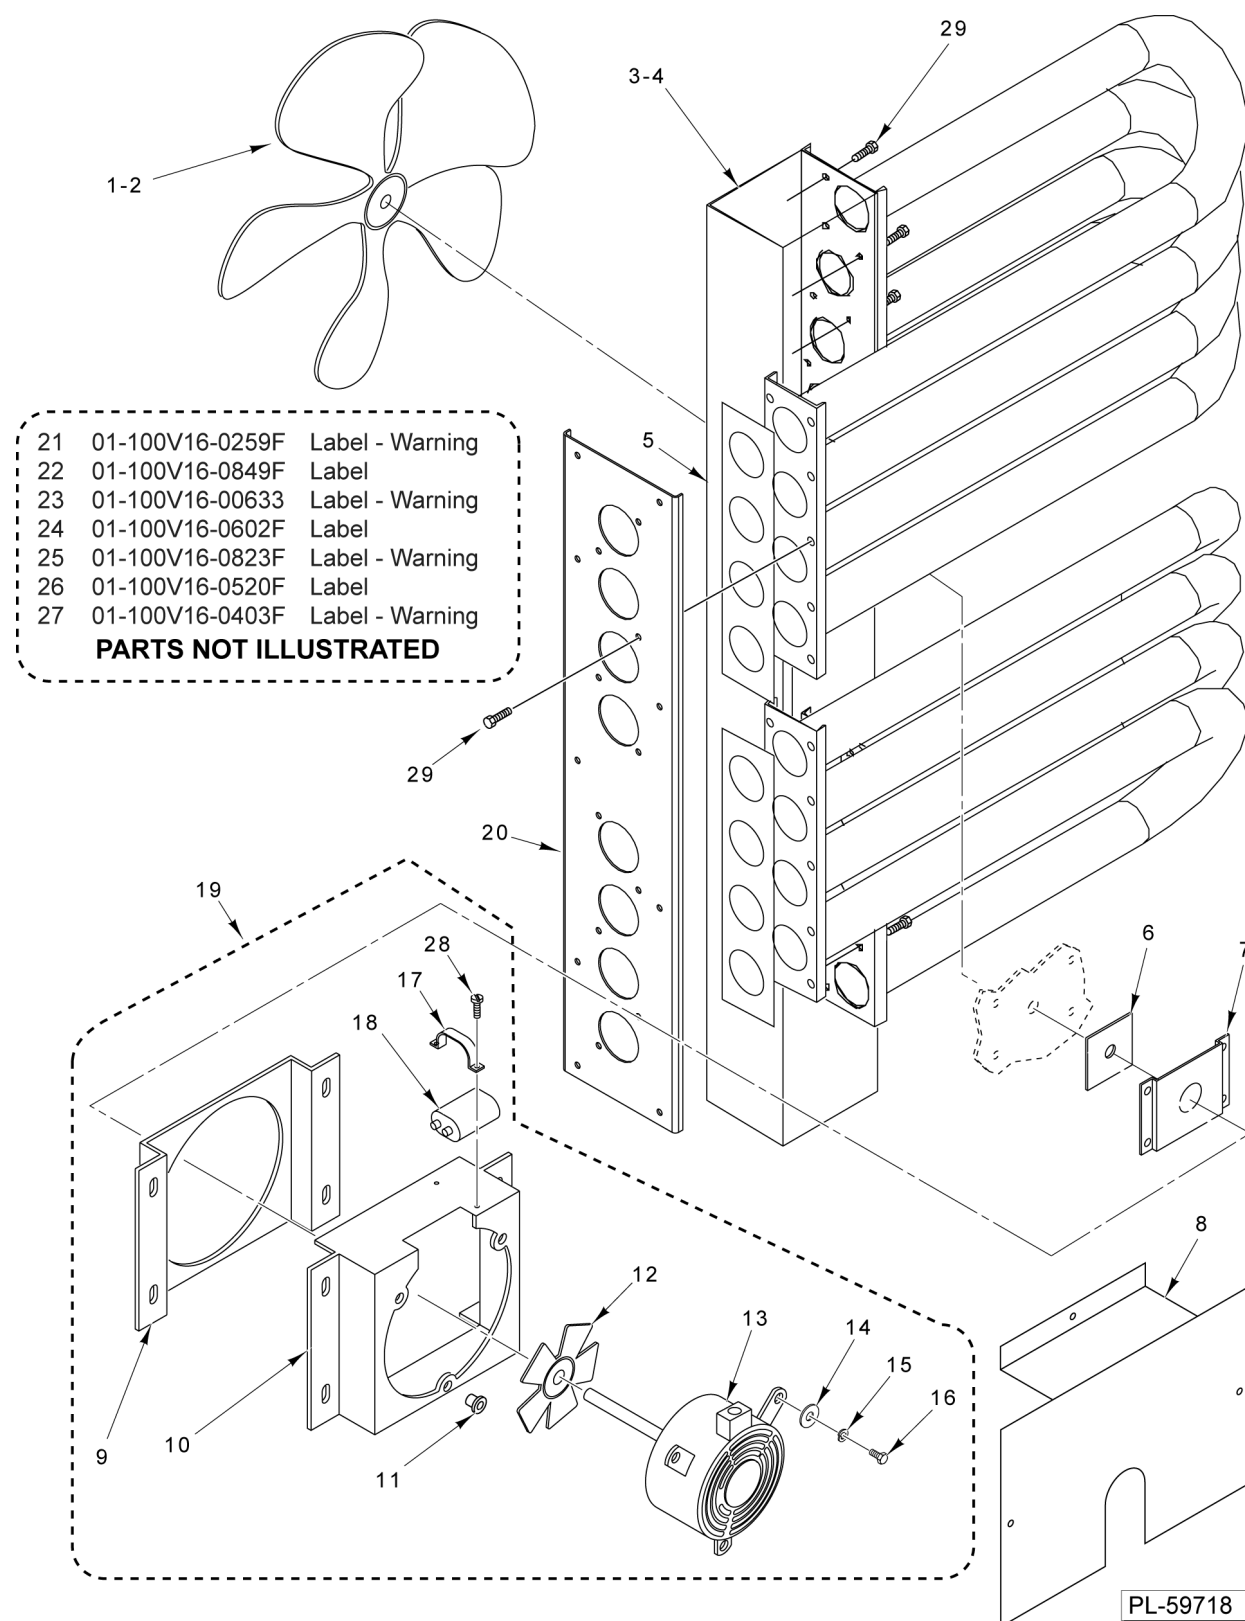

HEAT EXCHANGER AND AIR CIRCULATION SYSTEM

HEAT EXCHANGER AND AIR CIRCULATION SYSTEM

ILLUS. PL-59718	PART NO.	NAME OF PART	AMT.
1	01-1000V8-00160	Blade - Fan Circulation.....	1
2	01-1M6245-00001	Kit - Fan Blade (Incls. Chip) (Dunkin Donuts).....	1
3	01-1M4448-00002	Heat Exchanger.....	1
4	01-100V16-00510	Gasket - Heat Exchanger (Collector).....	2
5	01-100V16-00481	Gasket - Heat Exchanger (Burner).....	2
6	01-1M3343-00002	Seal - Fan.....	1
7	01-1M3342-00001	Retainer - Seal.....	1
8	01-1M4352-00002	Cover - Insulation.....	1
9	01-1M4447-00002	Channel - Fan Inlet.....	1
10	01-1M4390-00002	Base - Motor Bracket (Incls. Item 11).....	1
11	01-1000V4-00122	Insert - Threaded 1/4-20.....	3
12	01-1000V8-00097	Blade - Fan (Motor).....	1
13	01-1M4881-00001	Motor - Circulation.....	1
14		Washer 1/4.....	3
15		Lockwasher 1/4.....	3
16		Bolt 1/4-20 x 3/4 Hex Hd.....	3
17	01-1000V8-0049D	Bracket - Mounting.....	1
18	01-1A2141-00001	Kit - Capacitor (Incls. Item 17).....	1
19	01-1M4446-00001	Circulation Motor Assy. (Incls. Items 9 thru 18).....	1
20	01-1M5986-00002	Seal - Plate Assy.....	2
21	01-100V16-0259F	Label - Warning (Hot Air).....	1
22	01-100V16-0849F	Label (With Casters).....	1
23	01-100V16-00633	Label - Warning (Improper Install).....	1
24	01-100V16-0602F	Label (Do Not Store Items On Top).....	1
25	01-100V16-0823F	Label - Warning (Breaker Behind Cover).....	1
26	01-100V16-0520F	Label (Requires Exhaust Hood).....	1
27	01-100V16-0403F	Label - Warning (California).....	1
28	01-1000V4-00412	Mach. Screw 10-32 x 1/2 Phil. Truss Hd. (SST).....	AR
29	01-1000V4-00385	Screw - Sheet Metal, Hex Hd. 10-16 x 3/4.....	AR

