



# CATALOG OF REPLACEMENT PARTS



## 829A-PLUS SLICER


829A-PLUS

829A-PLUS-Q



**Table of Contents**

5	ELECTRICAL COMPONENTS
7	TRANSMISSION, KNIFE, AND BASE ASSEMBLY
9	GAUGE PLATE AND INDEX ASSEMBLY
11	MEAT TABLE AND CARRIAGE
15	SHARPENER ASSEMBLY

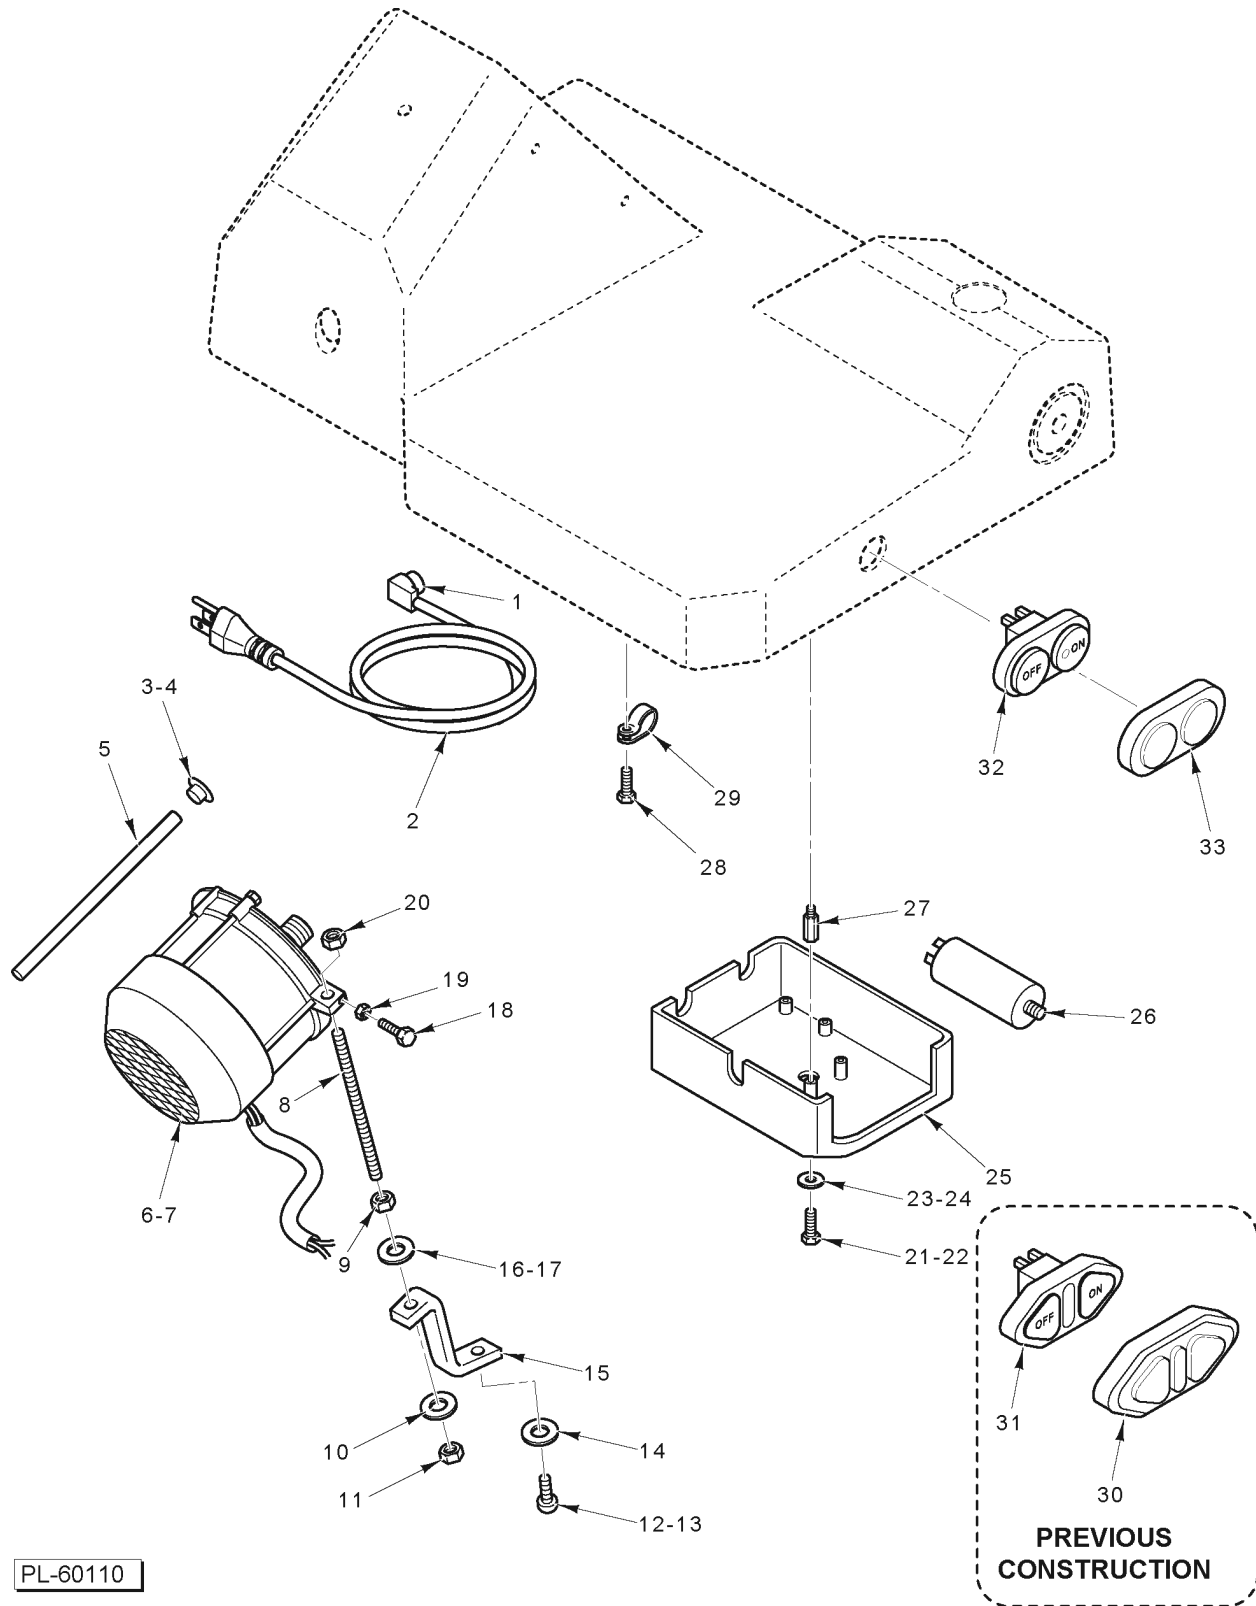


PL-60110

**ELECTRICAL COMPONENTS**

## ELECTRICAL COMPONENTS

ILLUS.	PART NO.	NAME OF PART	AMT.
1	01-402675-00562	Bushing - Strain Relief.....	1
2	01-404175-00031	Cord - Power.....	1
3	01-40829A-10010	Tap - Plastic.....	1
4	01-402275-00638	Tap - Plastic (PLUS-Q Only).....	1
5	01-402275-00631	Pin - Motor.....	1
6	01-400829-00048	Motor (1/2 Hp.).....	1
7	01-402575-00031	Motor - 110V (PLUS-Q Only).....	1
8	01-400829-00053	Rod - Tie.....	1
9	01-402101-07041	Nut.....	1
10	01-402275-03071	Washer.....	1
11	01-402101-07041	Nut.....	1
12	01-400827-00058	Screw.....	1
13	00-938008-00029	Screw (PLUS-Q Only).....	1
14	01-402275-03071	Washer.....	1
15	01-400829-00055	Plate - Motor.....	1
16	01-402275-03071	Washer.....	1
17	00-938012-00010	Washer (PLUS-Q Only).....	1
18	01-400827-00062	Screw.....	1
19	01-400827-00029	Nut.....	1
20	01-402101-07041	Nut.....	1
21	01-400825-00021	Screw.....	1
22	00-938005-00030	Screw (PLUS-Q Only).....	1
23	01-400825-00006	Washer.....	1
24	00-938012-00010	Washer (PLUS-Q Only).....	1
25	01-400825-00405	Cover - Switch Box.....	1
26	01-400829-00042	Capacitor.....	2
27	01-400829-00128	Spacer.....	1
28	01-400825-00087	Screw.....	1
29	01-403675-00224	Clamp - Cord.....	1
30		Cover - Switch (Part no longer available, order Item 26).....	1
31		Switch (Part no longer available, order Item 26).....	1
32	01-40823E-10102	Switch (On/Off) (Incls. Item 33).....	1
33	00-915504	Cover - Switch.....	1

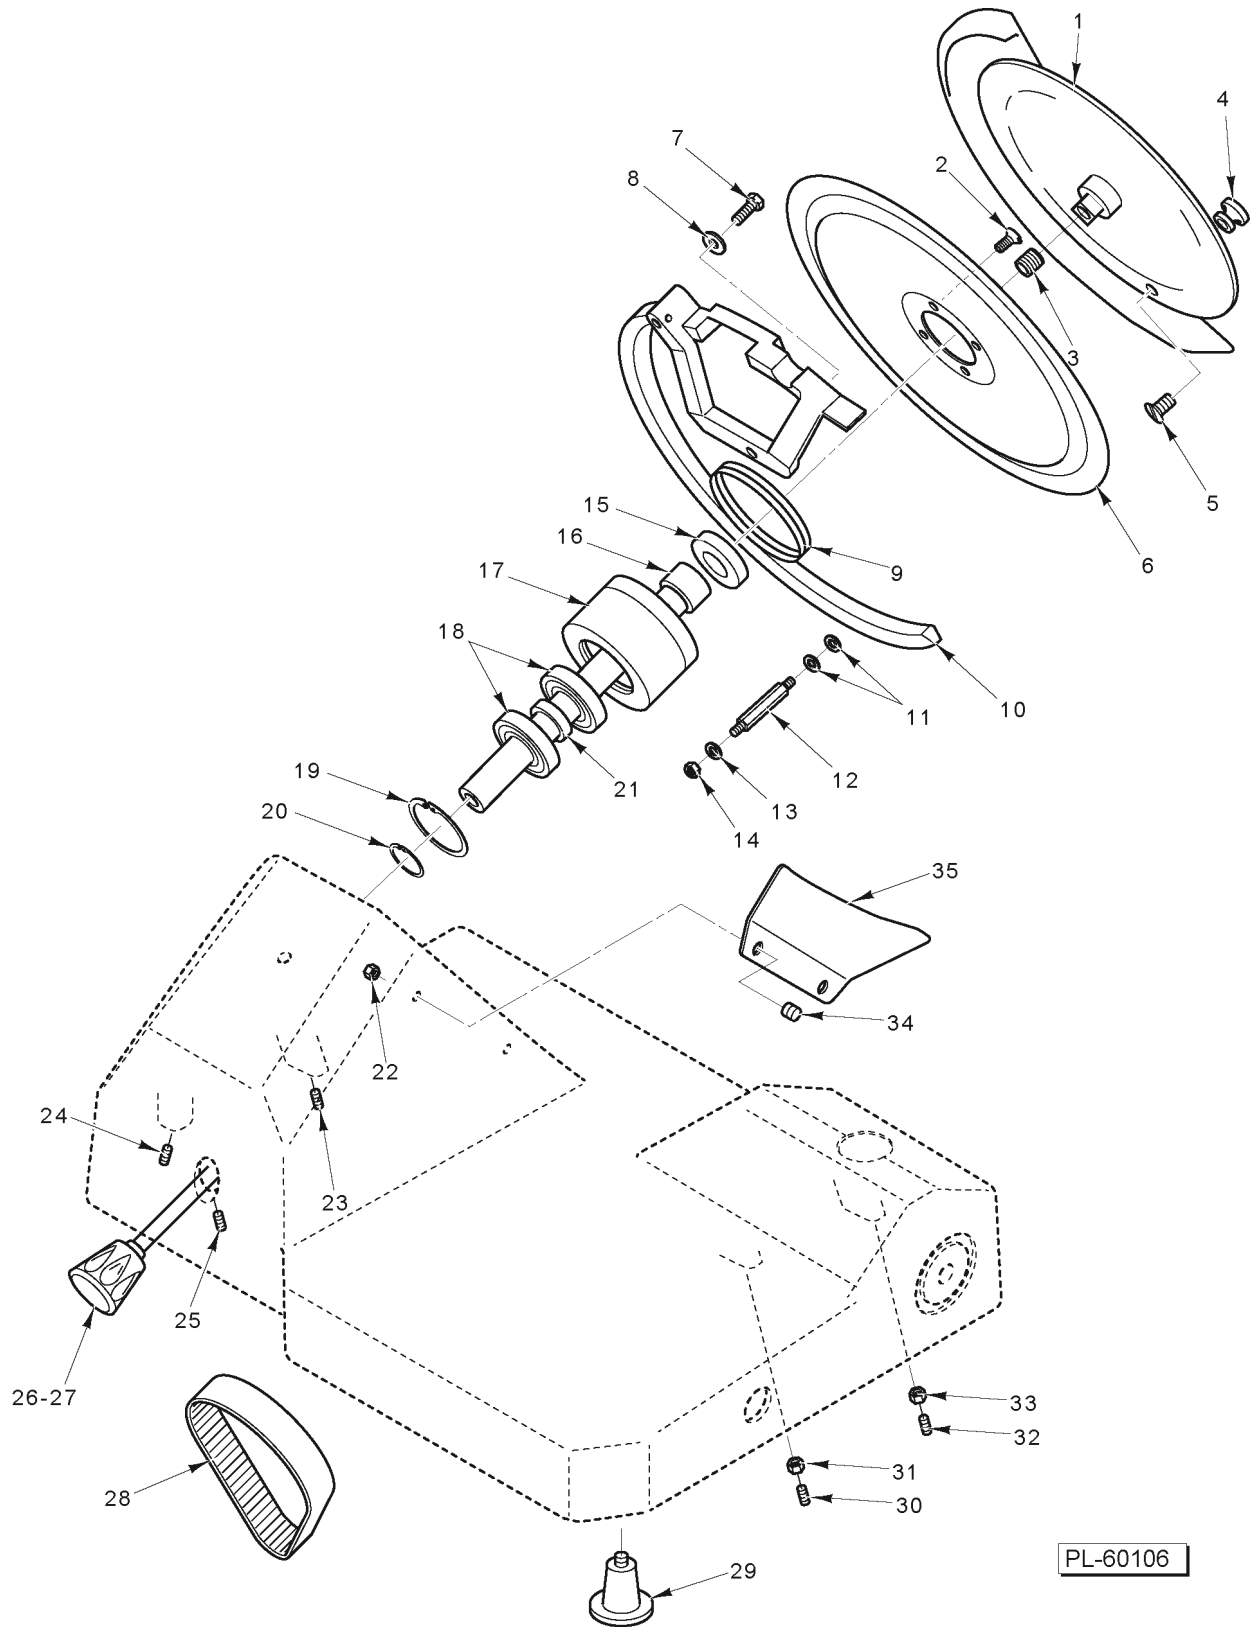


PL-60106

**TRANSMISSION, KNIFE, AND BASE ASSEMBLY**

## TRANSMISSION, KNIFE, AND BASE ASSEMBLY

ILLUS. PL-60106	PART NO.	NAME OF PART	AMT.
1	01-40829A-00002	Cover - Blade Starting Serial # 20137 .....	1
2	01-400827-00074	Screw - Knife.....	4
3	01-400827-00135	Insert - Center Plate.....	1
4	01-400823-00403	Knob - Knife Cover (Aluminum).....	1
5	01-400827-00074	Screw - Knife.....	1
6	01-400829-00073	Knife.....	1
7	01-40829A-10011	Screw.....	1
8	01-40829A-10012	Washer.....	1
9	01-40829A-10033	Seal - Ring.....	1
10	01-40829A-00257	Guard - Ring.....	1
11	01-40827A-00262	Washer.....	4
12	01-40829A-00613	Spacer - Knife Guard.....	2
13	01-40827A-00262	Washer.....	2
14	01-402101-07068	Nut.....	2
15	01-400827-00209	Ring - Rubber.....	1
16	01-40829A-10013	Shaft - Pulley.....	1
17	01-40829A-10014	Knife Pulley Assy.....	1
18	01-402375-00103	Bearing.....	2
19	01-400825-00071	Retaining Ring.....	1
20	01-400825-00072	Retaining Ring.....	1
21	01-400827-00070	Spacer - Bearing.....	1
22	01-402101-07008	Nut.....	2
23	01-400827-00086	Set Screw.....	1
24	01-400827-00086	Set Screw.....	1
25	01-400827-00086	Set Screw.....	1
26	01-400829-00075	Tie Rod.....	1
27	01-404575-01044	Red Tie Rod Assy. (PLUS-Q Only).....	1
28	01-400829-00066	Belt - Ribbed (Flat).....	1
29	01-400827-00093	Foot - Rubber.....	4
30	01-400827-00086	Set Screw.....	1
31	01-402101-07008	Nut.....	1
32	01-400827-00086	Set Screw.....	1
33	01-402101-07008	Nut.....	1
34	01-40823E-10002	Pin.....	1
35	01-40829A-10000	Deflector - Slicer.....	1

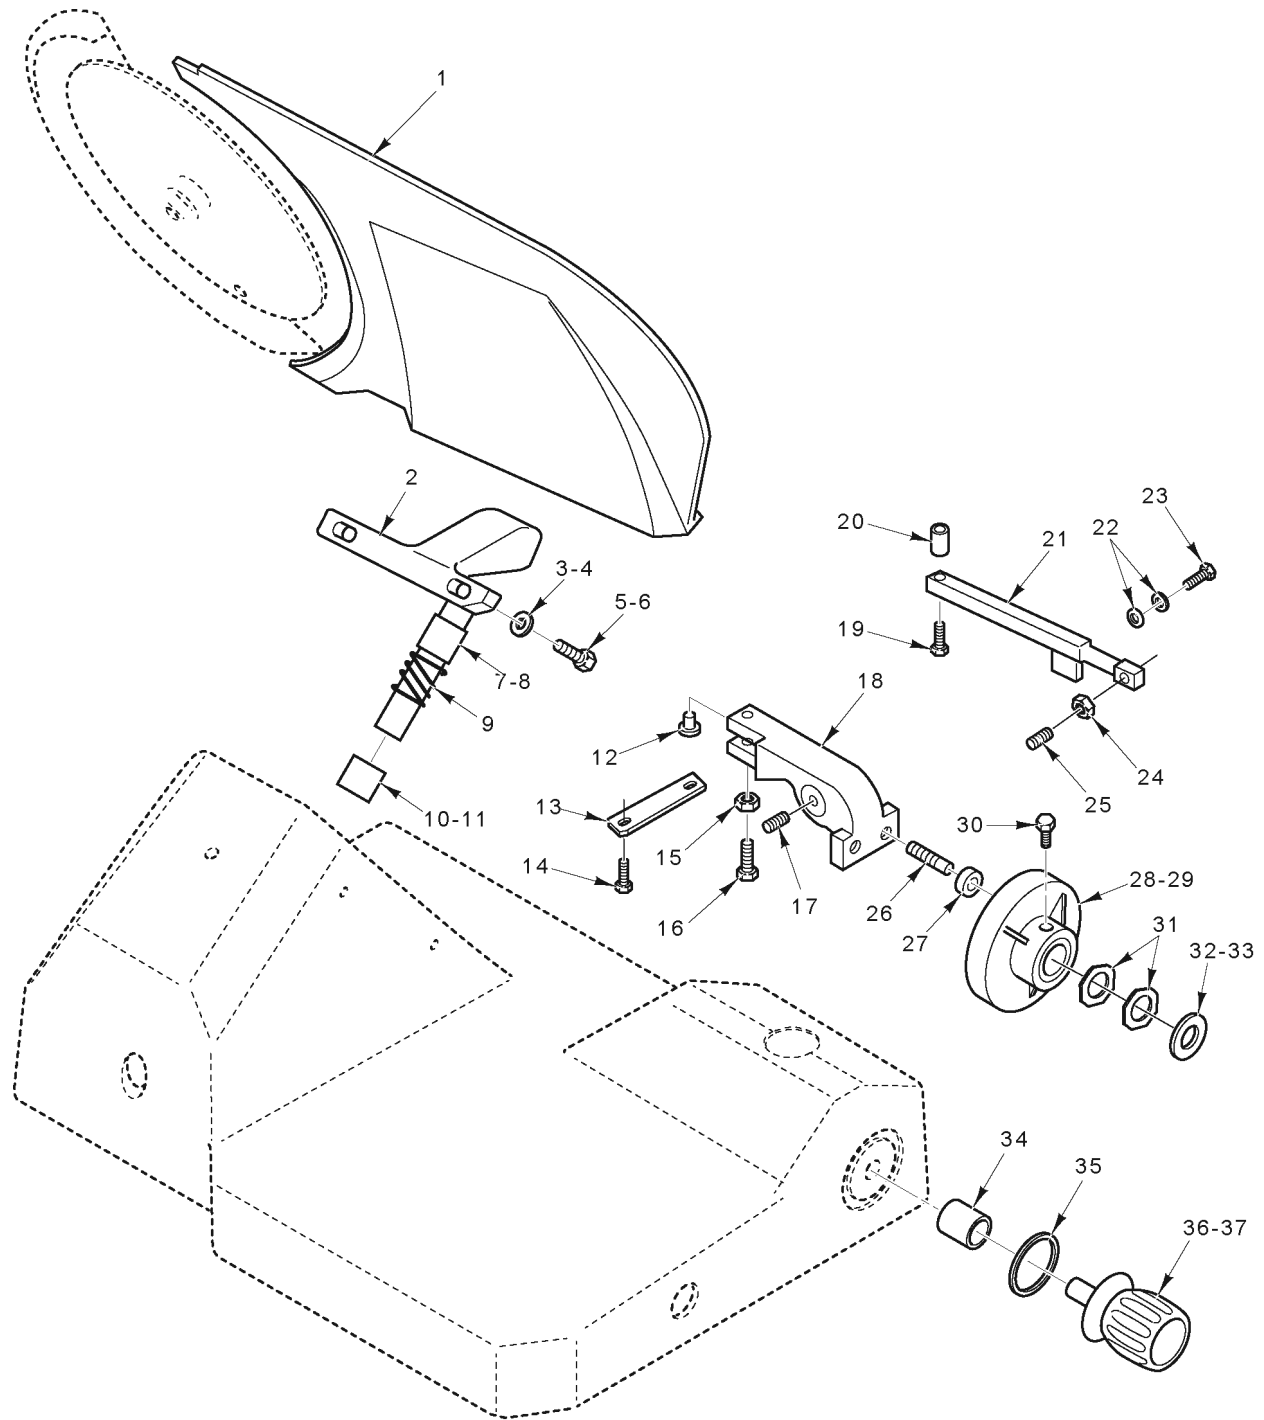


PL-60108

### GAUGE PLATE AND INDEX ASSEMBLY

## GAUGE PLATE AND INDEX ASSEMBLY

ILLUS. PL-60108	PART NO.	NAME OF PART	AMT.
1	01-40829A-10007	Plate - Gauge.....	1
2	01-40829A-10008	Support - Gauge Plate.....	1
3	01-403301-03812	Washer.....	2
4	00-938012-00008	Washer (PLUS-Q Only).....	2
5	01-400825-00005	Screw.....	2
6	00-938005-00028	Screw (PLUS-Q Only).....	2
7	01-400827-00219	Bushing.....	1
8	01-402375-00199	Bushing (PLUS-Q Only).....	1
9	01-400829-00024	Spring.....	1
10	01-400827-00219	Bushing.....	1
11	01-402375-00200	Bushing (PLUS-Q Only).....	1
12	01-400825-00030	Pin.....	1
13	01-400827-00026	Plate.....	1
14	01-40829A-10034	Screw.....	1
15	01-400827-00029	Nut.....	1
16	01-400827-00028	Screw (Brass).....	1
17	01-400827-00031	Set Screw.....	2
18	01-400829-00022	Support.....	1
19	01-40829A-10016	Screw.....	1
20	01-40829A-10017	Bushing.....	1
21	01-40829A-10018	Plate.....	1
22	01-40829A-10019	Washer.....	2
23	01-40829A-10020	Screw.....	1
24	01-40829A-10021	Nut.....	1
25	01-40829A-10022	Pin.....	1
26	01-400827-00027	Pin - Cam.....	1
27	01-400827-00033	Nut.....	1
28	01-400829-00025	Cam.....	1
29	01-404675-01189	Cam Assembly (PLUS-Q Only).....	1
30	01-400825-00021	Screw.....	2
31	01-400829-00401	Washer.....	2
32	01-400825-00095	Washer - Spring.....	1
33	00-938012-00009	Washer - Spring (PLUS-Q Only).....	1
34	00-915491	Bushing.....	1
35	01-40829A-10023	Washer.....	1
36	01-40827A-10019	Knob (Red).....	1
37	01-402275-00642	Knob, Red (827A-PLUS & 827A-PLUS Q S/N EN1079347 and above; 829E-PLUS S/ N EN1075830 and above ONLY).....	1

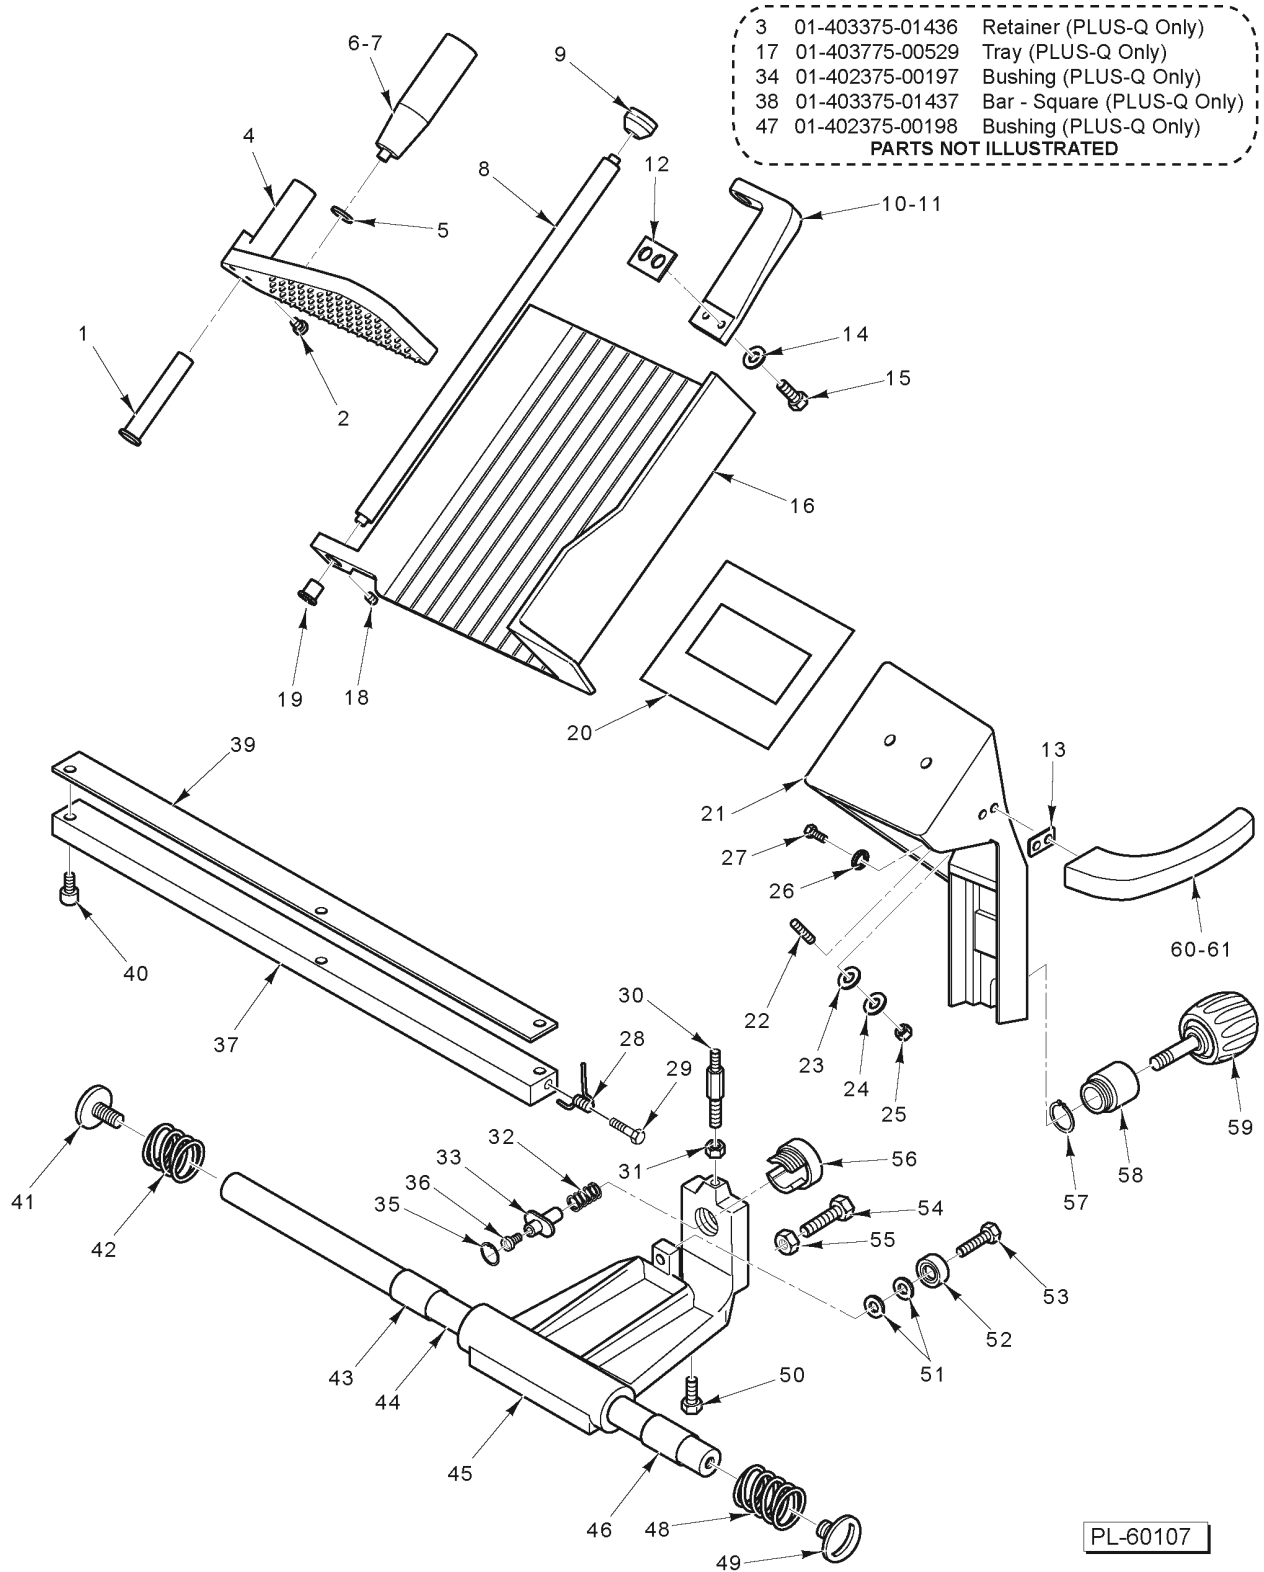

**MEAT TABLE AND CARRIAGE**

## MEAT TABLE AND CARRIAGE


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60107			
1	01-400827-0079N	Bushing (2-5/8 In. Lg.).....	1
2	01-40829E-00082	Pad - Wearing.....	1
3	01-403375-01436	Retainer (PLUS-Q Only).....	1
4	01-40829E-10005	Pusher Assy.....	1
5	01-40827A-10002	Gasket - Pusher Handle.....	1
6	01-40827A-10003	Handle - Pusher.....	1
7	01-402275-00640	Handle, Pusher (827A-PLUS S/N EN1079347 and above; 829A-PLUS S/N EN1075690 and above; 829E-PLUS S/N EN1075830 and above ONLY).....	1
8	01-40829E-10003	Rod.....	1
9	01-40823E-10007	Knob (Red).....	1
10	01-403875-00289	Bracket - Extension (Red).....	1
11	01-403875-00302	Bracket, Red Extension (827A-PLUS & 827A-PLUS Q S/N EN1079347 and above; 829A-PLUS & 829A-PLUS Q S/N EN1075690 and above; 829E-PLUS S/N EN1075830 and above ONLY).....	1
12	01-40823E-10009	Gasket - Extension.....	1
13	01-40823E-10016	Gasket - Carriage Handle.....	1
14	01-40330M-00090	Washer.....	2
15	01-40823E-10019	Screw.....	2
16	01-40829A-10002	Table - Product.....	1
17	01-403775-00529	Tray (PLUS-Q Only).....	1
18	01-400827-00086	Set Screw.....	1
19	01-40827A-10004	Bushing.....	1
20	01-40829A-10003	Gasket - Tray Support.....	1
21	01-40829A-10004	Support.....	1
22	01-40825A-10004	Screw.....	1
23	01-40823E-10014	Washer - Gasket.....	1
24	01-40827A-10011	Washer (Aluminum).....	1
25	01-40829E-10008	Nut.....	2
26	01-402101-08515	Washer.....	2
27	01-400827-00089	Screw.....	2
28	01-40829A-00614	Spring.....	1
29	01-40829A-10024	Screw.....	1
30	01-40829A-10006	Spacer.....	1
31	01-40300M-00098	Nut.....	1
32	01-40829A-00604	Spring.....	1
33	01-40829A-00605	Bushing.....	1
34	01-402375-00197	Bushing (PLUS-Q Only).....	1
35	01-40829A-00600	Retaining Ring.....	1
36	01-40829A-00606	Screw.....	1
37	01-400829-00014	Bar - Square.....	1
38	01-403375-01437	Bar - Square (PLUS-Q Only).....	1
39	01-400829-00092	Plate - Lexan.....	1
40	01-400827-00021	Screw.....	2
41	01-400829-00050	Screw.....	1
42	01-400829-00020	Spring.....	1
43	01-400827-00218	Bushing.....	1
44	01-400829-00013	Bar - Round.....	1
45	01-40829A-00012	Carriage.....	1
46	01-400827-00218	Bushing.....	1
47	01-402375-00198	Bushing (PLUS-Q Only).....	1
48	01-400829-00020	Spring.....	1
49	01-400829-00050	Screw.....	1
50	01-400827-00129	Screw (Nylon).....	1
51	01-40829A-10025	Washer.....	2
52	01-400827-00015	Bearing.....	1
53	01-400829-00017	Screw.....	1
54	01-40829A-10026	Screw.....	1
55	01-40829A-10027	Nut.....	1

### MEAT TABLE AND CARRIAGE

ILLUS. PL-60107	PART NO.	NAME OF PART	AMT.
56	01-40829A-00602	Bushing (Aluminum).....	1
57	01-40829A-10028	Retaining Ring.....	1
58	01-40829A-10029	Bushing.....	1
59	01-40829A-10005	Knob (Red).....	1
60	01-40823E-10017	Handle - Carriage (Red).....	1
*61	01-403875-00303	Handle, Red Carriage.....	1

\* (823E-PLUS S/N EN1076560 and above; 825A-PLUS S/N EN1076330-EN1076379 & EN1076429 and above; 825E-PLUS S/N EN1076490 and above; 827A-PLUS & 827A-PLUS Q S/N EN1079347 and above; 827E-PLUS S/N EN1073530 and above; 829A-PLUS & 829A-PLUS Q S/N EN1075690 and above; 829E-PLUS S/N EN1075830 and above ONLY)

# NOTES

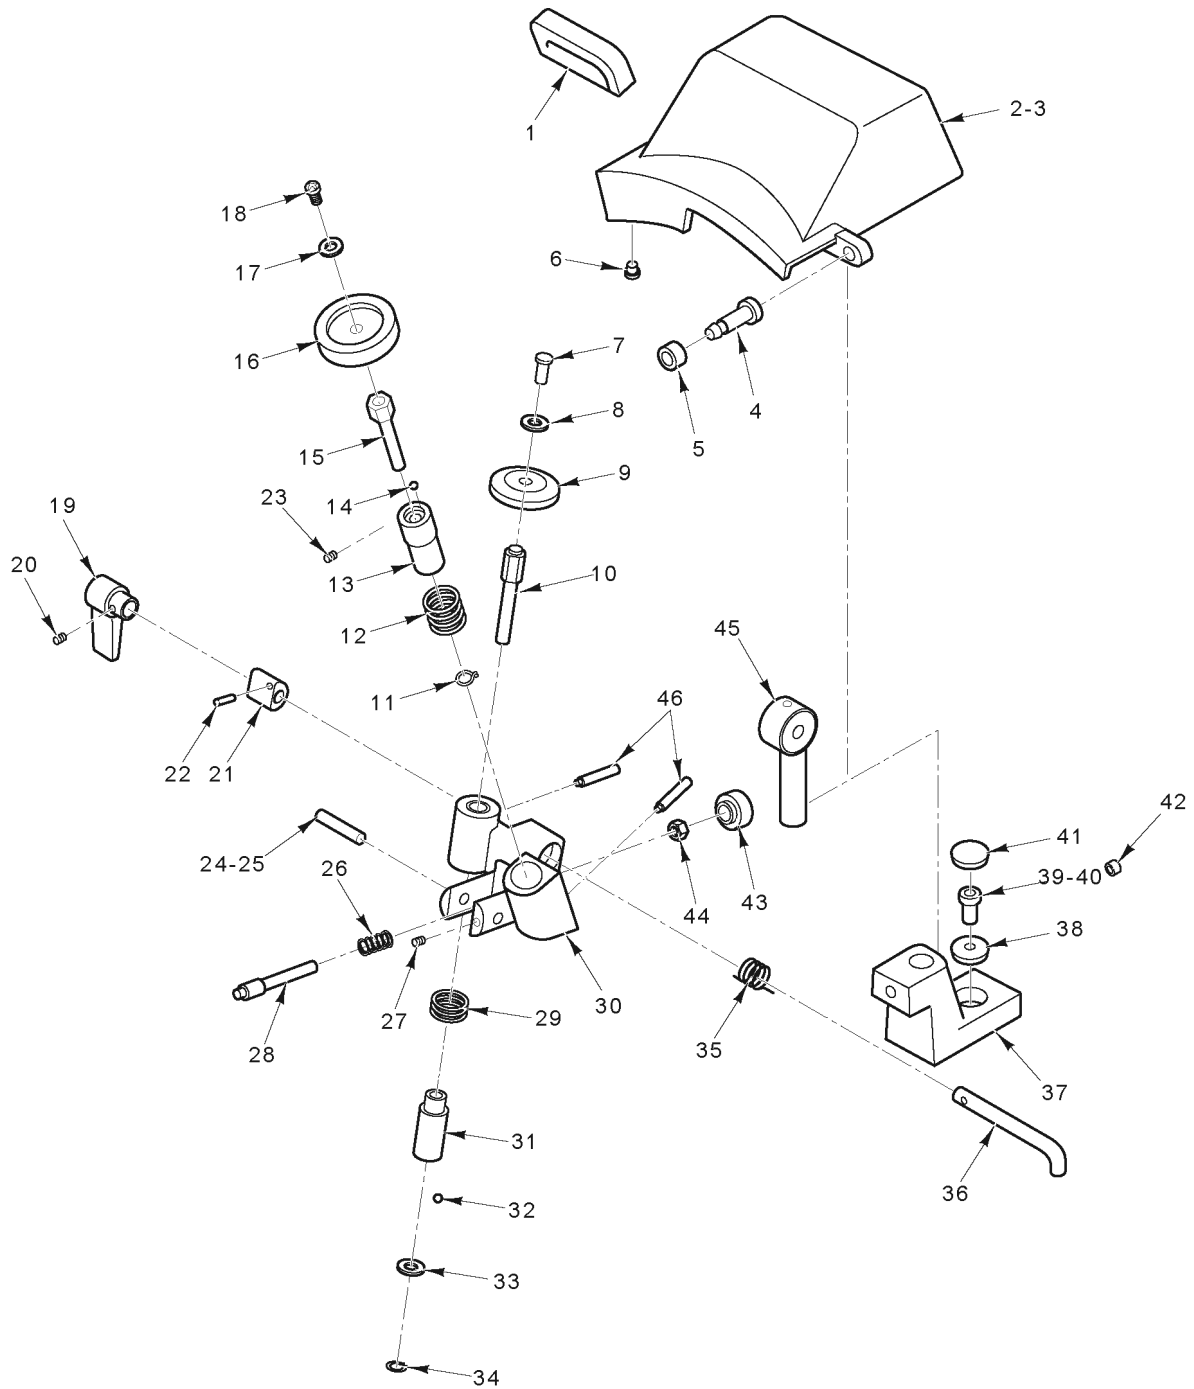

PL-60109

### SHARPENER ASSEMBLY

## SHARPENER ASSEMBLY

ILLUS. PL-60109	PART NO.	NAME OF PART	AMT.
1	01-412062-00RED	Flag - Berkel.....	1
2	01-400829-00010	Cover - Sharpener.....	1
3	01-403375-00531	Cover - Sharpener (PLUS-Q Only).....	1
4	01-400829-00405	Screw (SST).....	1
5	01-40829A-10030	Spacer (SST).....	1
6	01-400829-00115	Tap - Plastic.....	1
7	01-400827-00074	Screw - Knife.....	1
8	01-400829-00133	Washer.....	1
9	01-400829-00409	Wheel.....	1
10	01-400829-00132	Shaft - Wheel.....	1
11	01-400829-00112	Retaining Ring.....	1
12	01-400829-00113	Spring.....	1
13	01-400829-00111	Bushing.....	1
14	01-400829-00110	Ball 3/32.....	8
15	01-400829-00109	Shaft - Wheel.....	1
16	01-400829-00408	Wheel.....	1
17	01-400825-00006	Washer.....	1
18	01-400825-00021	Screw.....	1
19	01-400829-00127	Handle - Push.....	1
20	01-400829-00125	Set Screw.....	1
21	01-400829-00129	Bushing.....	1
22	01-400829-00126	Pin.....	1
23	01-400829-00125	Set Screw.....	1
24	01-400829-00114	Pin - Knurled.....	1
25	01-403375-01438	Pin - Knurled (PLUS-Q Only).....	1
26	01-400829-00120	Spring.....	1
27	01-400829-00407	Set Screw.....	1
28	01-400829-00116	Shaft.....	1
29	01-400829-00124	Spring.....	1
30	01-40829A-10031	Frame - Sharpener.....	1
31	01-400829-00123	Bushing.....	1
32	01-400829-00110	Ball 3/32.....	8
33	01-400829-00121	Washer.....	1
34	01-400829-00112	Retaining Ring.....	1
35	01-400829-00134	Spring.....	1
36	01-400829-00122	Lever - Sharpener.....	1
37	01-400829-00118	Support - Sharpener.....	1
38	01-402275-03071	Washer.....	1
39	01-400825-00122	Screw.....	1
40	00-938008-00029	Screw (PLUS-Q Only).....	1
41	01-40829A-10009	Tap - Plastic.....	1
42	01-400829-00119	Set Screw.....	1
43	01-400829-00131	Knob.....	1
44	01-400827-00146	Nut.....	1
45	01-400829-00117	Support - Joint.....	1
46	01-400829-00130	Shaft.....	2
	01-400829-00135	Sharpener Assy.....	1

