




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

General Assembly

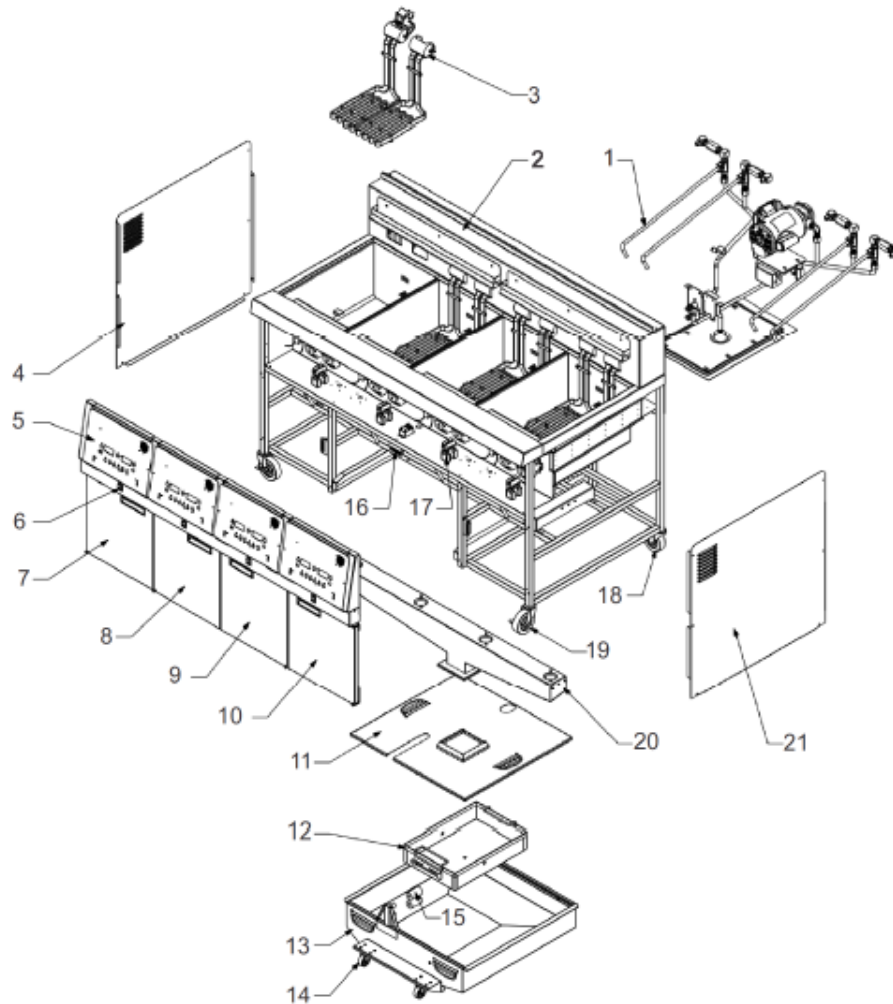

Item No.	Part No.	Description	Qty.	Stocking Level
1	94959	Piping system assembly	1	
2	95109	Vat assembly and enclosure	1	
3	-	See Element and Hub Assembly - Full	-	



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.


Item No.	Part No.	Description	Qty.	Stocking Level
4	92223	Left panel	1	
5	166891	Dicos C8000 control panel assembly	4	A
6	52224	Covered power switch	4	B
7	94947	Door assembly, left	1	
8	95595	Door assembly, left, middle	1	
9	95594	Door assembly, right, middle	1	
10	94948	Door assembly, right	1	
11	166338	Filter pan cover weld assembly	1	
12	96174	Crumb catcher weld assembly	1	
13	95850	Filter pan weld assembly	1	
14	19004	Swivel caster mounting plate, 2 in	4	
15	83429	End tube adapter	2	
16	17002	Magnet	3	
17	95148	Electrical parts assembly	1	
18	52064	Swivel caster with brake, 4 in	2	
19	60312	Swivel caster without brake, 4 in	2	
20	95718	Trough assembly	1	
21	92196	Right panel	1	

Recommended Parts: A = Truck Stock; B = Dist. Stock
*** = Not Shown**



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

C8000 Control Assembly

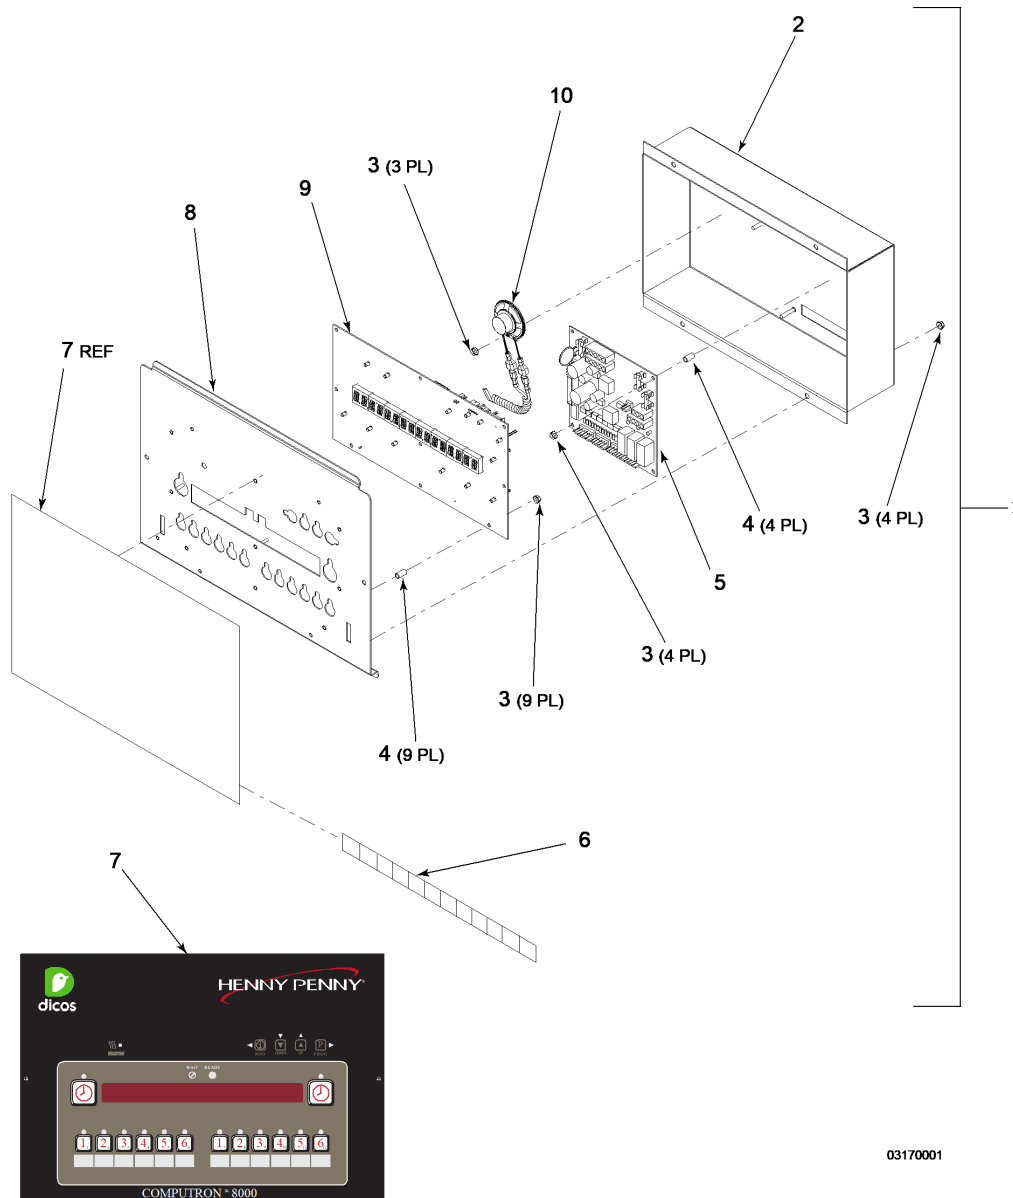

Item No.	Part No.	Description	Qty.	Stocking Level
1	166891	Dicos C8000 control assembly	1	



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.


Item No.	Part No.	Description	Qty.	Stocking Level
2	165932	- C8000 Control rear cover stud assembly	1	
3	NS02-005	- Hex keps nut, #6-32	20	
4	ME50-034	-Spacer,.250 ODX.171ID X.469 long	13	
5	58790	- PC board assembly, I/O	1	
6	59566	- Menu card, blank	1	
7	166125	- Dicos C8000 control panel decal	1	
8	165857	- C8000 Control panel stud assembly	1	
9	166956	- Dicos C8000 control	1	
10	26974	- Speaker assembly	1	A
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Filter Motor and Pump Assembly

Flange Mount Filter Pump Motor Assembly

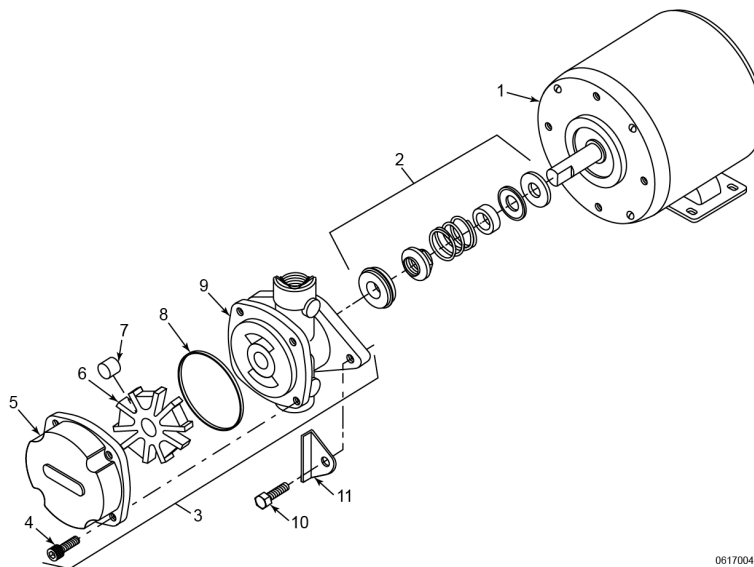

06170040

Item No.	Part No.	Description	Qty.	Stocking Level
1	153608	Motor, 1/2 HP, 50/60 Hz	1	A
2	17476	Seal kit	1	A
3	171168	5 GPM pump assembly	1	B
4	SC01-132	- Pump cover screw	1	
5	171171	- Pump cover	1	
6	171170	- Pump rotor	1	
7	171169	- Pump roller (set of 5)	1	A
8	162498	- O-ring	1	B
9	N/A	Pump body not sold separately. Use 171168 .		




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
10	SC01-026	Pump motor shield screw	1	
11	17456	Pump motor shield, CE	1	
Recommended Parts: A = Truck Stock; B = Dist. Stock				



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Element and Hub Assembly - Full Vat

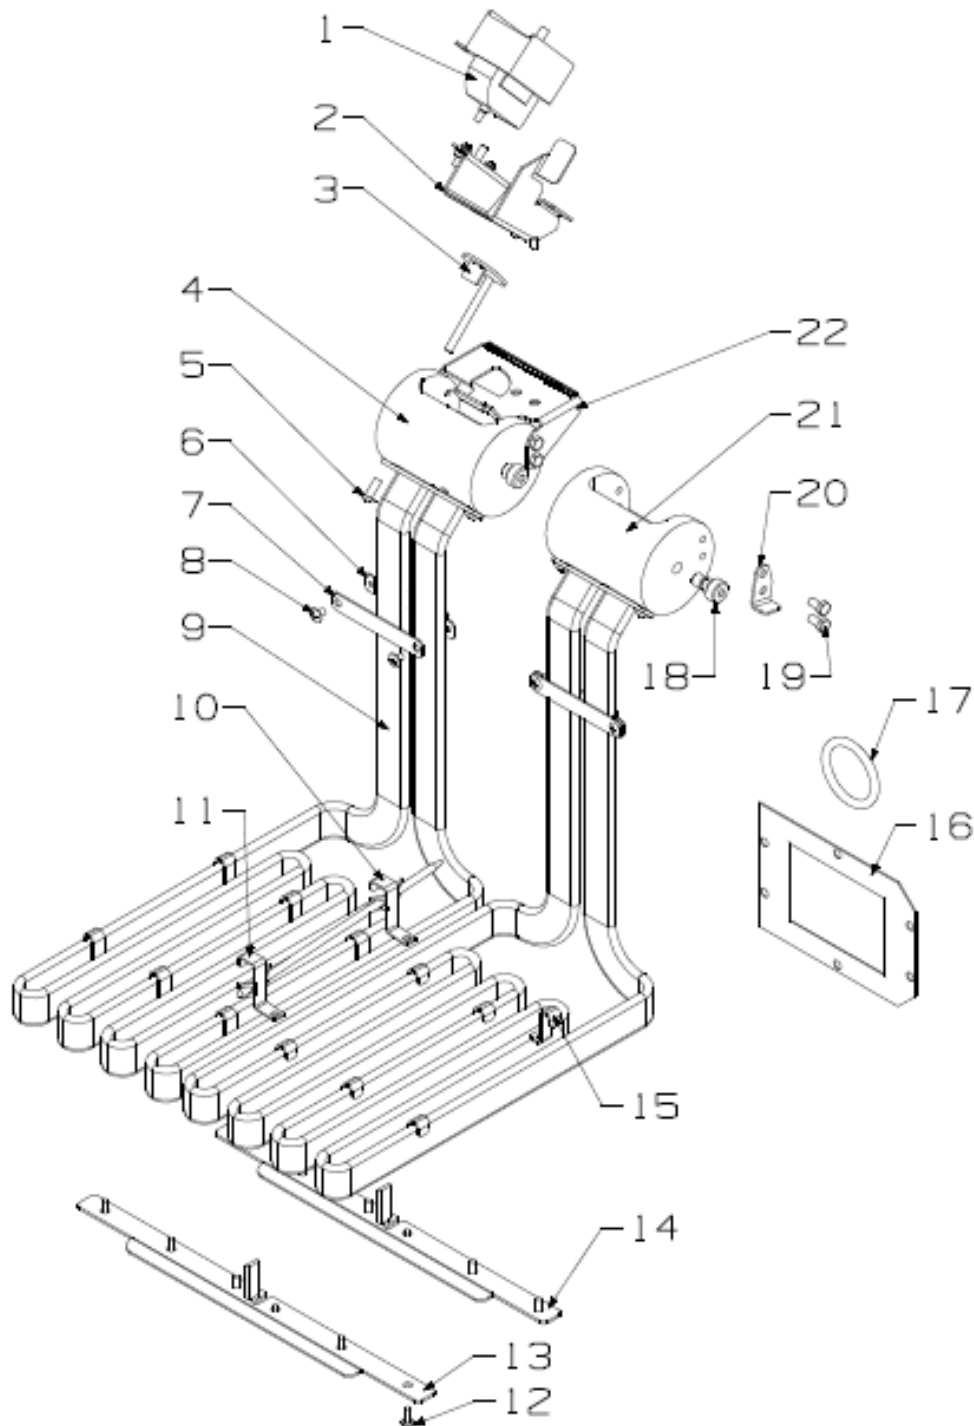



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
1	60241	High limit, 425° F, CE	1	A
2	91635	High limit pivot bracket stud assembly	1	
3	91624	High limit reset pin weld assembly	1	
4	74209	Element pivot housing	1	
5	SC01074	Screw, #10-32 X 1/2, CT	4	
6	75818	Rear capillary bracket	2	
7	75819	Front capillary plate	2	
8	SC01-076	Screw, #8-32 X 1/4, CT	4	
9	78484-005	Heating element, 220 VAC, 7 KW	2	B
10	78615	High limit rear guard, full	1	
11	78614	High limit front guard, full	1	
12	SC04-003	Screw, #8-32 X 3/8, CT	12	
13	92323	Spreader weld assembly, full	1	
14	92444	Spreader weld assembly, full	1	
15	78499	Spreader strap	12	
16	76964	Pivot hub gasket, .015	2	B
17	OR01-004	O-ring, #8115	4	A
18	75022	Shoulder screw, reworked, 3/8	4	
19	SC01-084	Hex screw, #10-32 X 3/8	6	
20	91599	Heater limit bracket	1	




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
21	82459	Element pivot housing, right, full	1	
22	92393	High limit mounting bracket	1	
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Trough Assembly

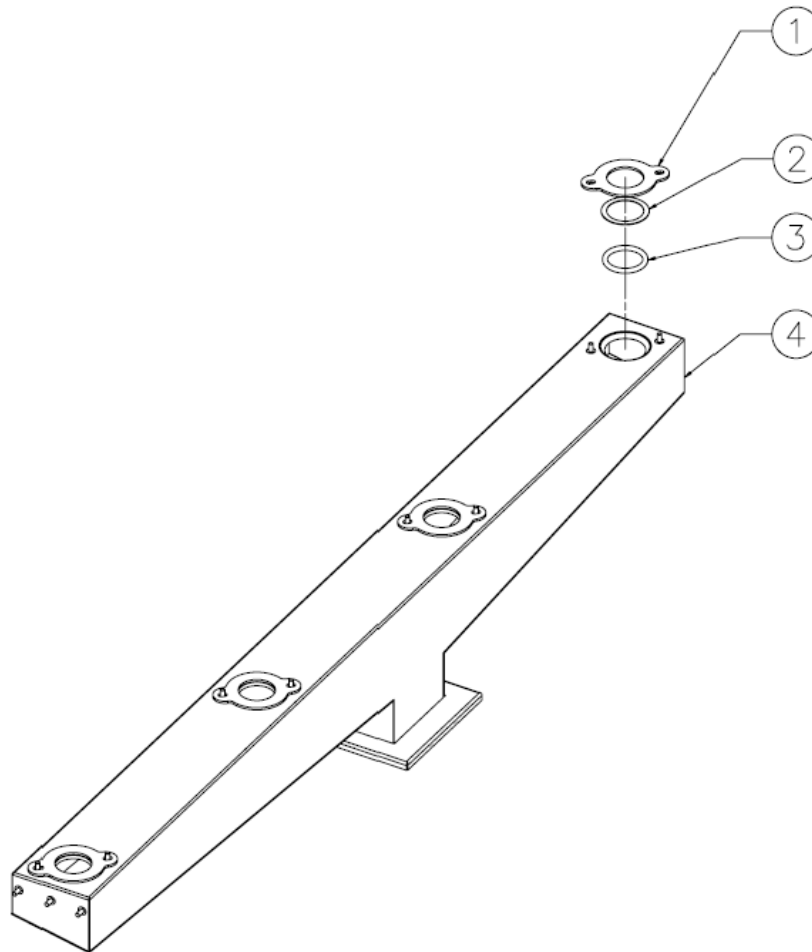

Item No.	Part No.	Description	Qty.	Stocking Level
1	84419	Drain trough seal clamp	4	
2	86442	Trough seal shim	4	
3	76948	Drain valve o-ring	4	A




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
4	94988	Trough weld assembly	1	
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Piping System

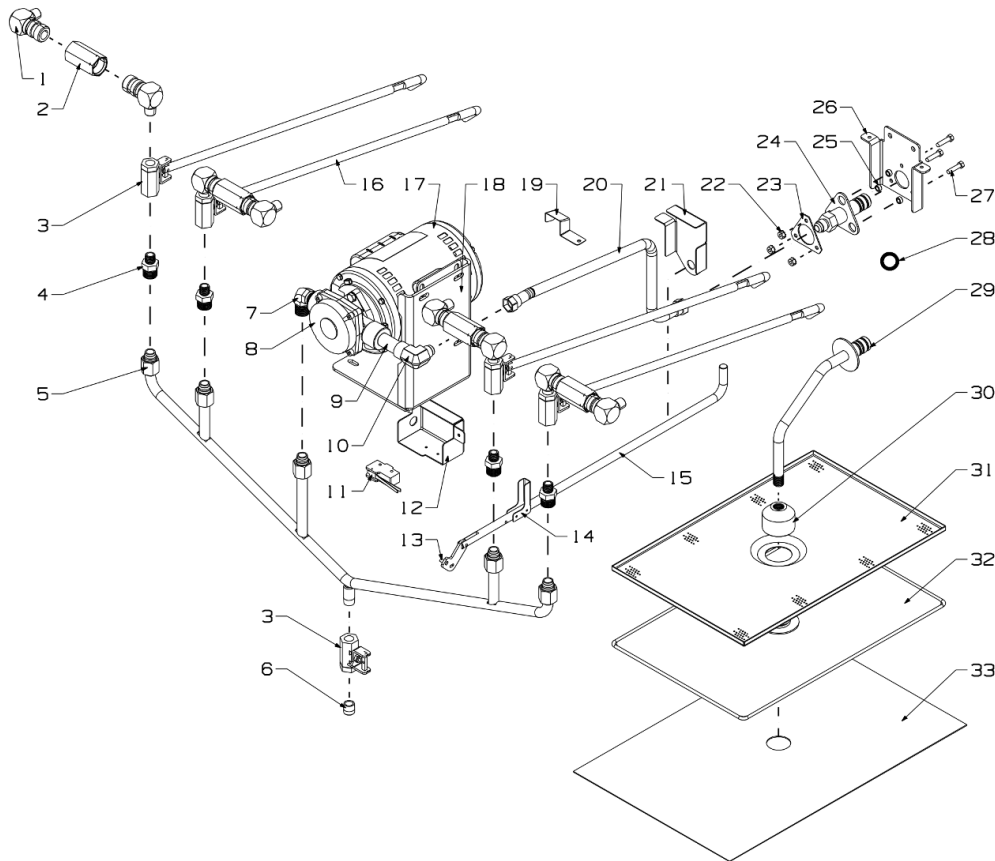

Item No.	Part No.	Description	Qty.	Stocking Level
1	95831	Fitting	8	
2	90506-001	Check valve, SAE 12	4	A
3	17308	Filter valve	5	
4	91231	Connector fitting, male	4	
5	151814	Vale to vat weld tube assembly	1	
6	95610	Nipple, 3/8 NPT	1	



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
7	17407	Elbow connector, male, 1/2	1	
8	171168	Sub pump assembly, 5 GPM	1	B
9	151875	Tube, 1/2 NPT	1	
10	152155	Elbow, 3/4 UNF, 1/2 NPT, female	1	
11	95757	Rigid lever microswitch	1	
12	95029	Motor rod support brace, A	1	
13	93402	Rocker weld assembly	1	
14	95031	Limit board	1	
15	95028	Motor switch rod, B	1	
16	96187	Open drain return rod	4	
17	153608	Motor, 1/2 HP, 50/60 Hz	1	A
18	151894	Motor soleplate	1	
19	152305	Ensure angle bracket	1	
20	77523-003	Dormont suction tube, tabulated	1	
21	95033	Motor rod support brace, B	1	
22	NS02-002	Keps nut, 1/4-20	3	
23	95343	Adapter brace, B	1	
24	95424	Pick up to pump tube, B	1	
25	95345	Liner	1	
26	95341	Adapter brace ,A	1	




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
27	SC01-039	Hex screw, 1/4-20 X 1	3	
28	86349	Suction line o-ring, 116	6	A
29	94994	Pickup to pump tube, C	1	
30	65208	Motor switch rod, B	1	
31	65211	Crumb catcher	1	
32	89412	Filter section weldment assembly	1	
33	12102	PHT filter envelopes, pack of 100	1	
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Electrical Assembly

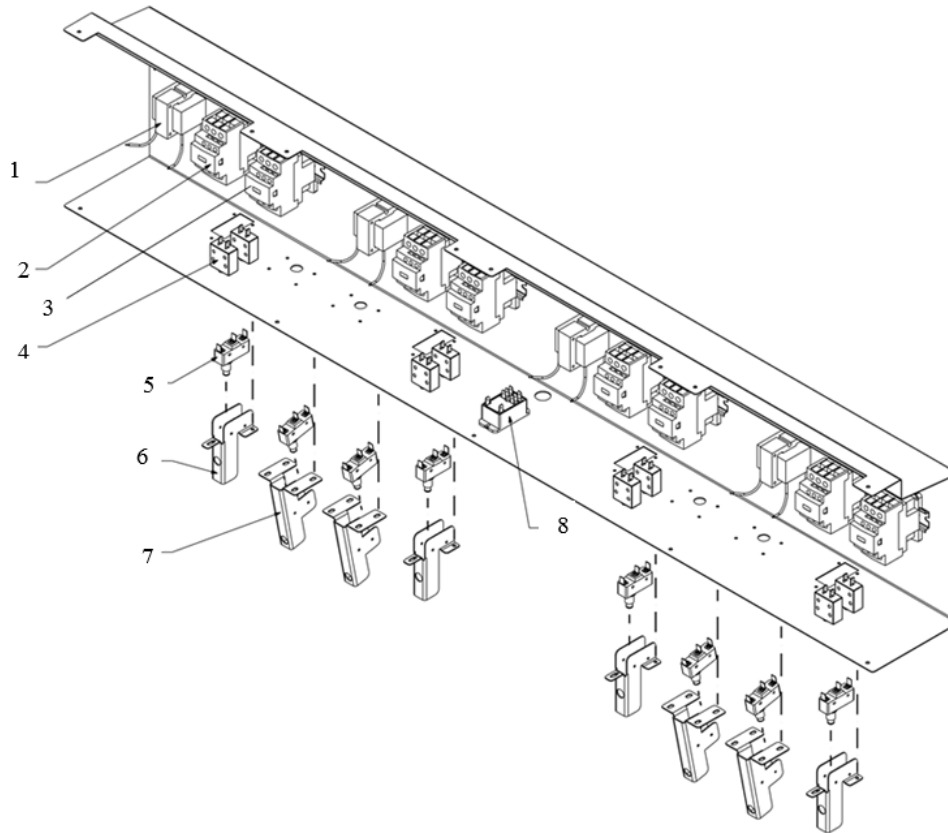

Item No.	Part No.	Description	Qty.	Stocking Level
1	86087	Transformer assembly, 24V/240VAC, 75VA	4	A
2	51795	Contactor, 24 VAC	4	A
3	65073	Contactor, square, D, 24 VAC	4	A
4	EF02-125	Push button reset breaker	8	A
5	18227	Microswitch, 250°F	8	A
6	91347	Drain rod bracket	4	A




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
7	96183	Fill rod bracket	4	A
8	91727	Power relay, DPDT, 240 VAC	1	B
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit <https://parts.hennypennyhelp.com>.

Vat Assembly

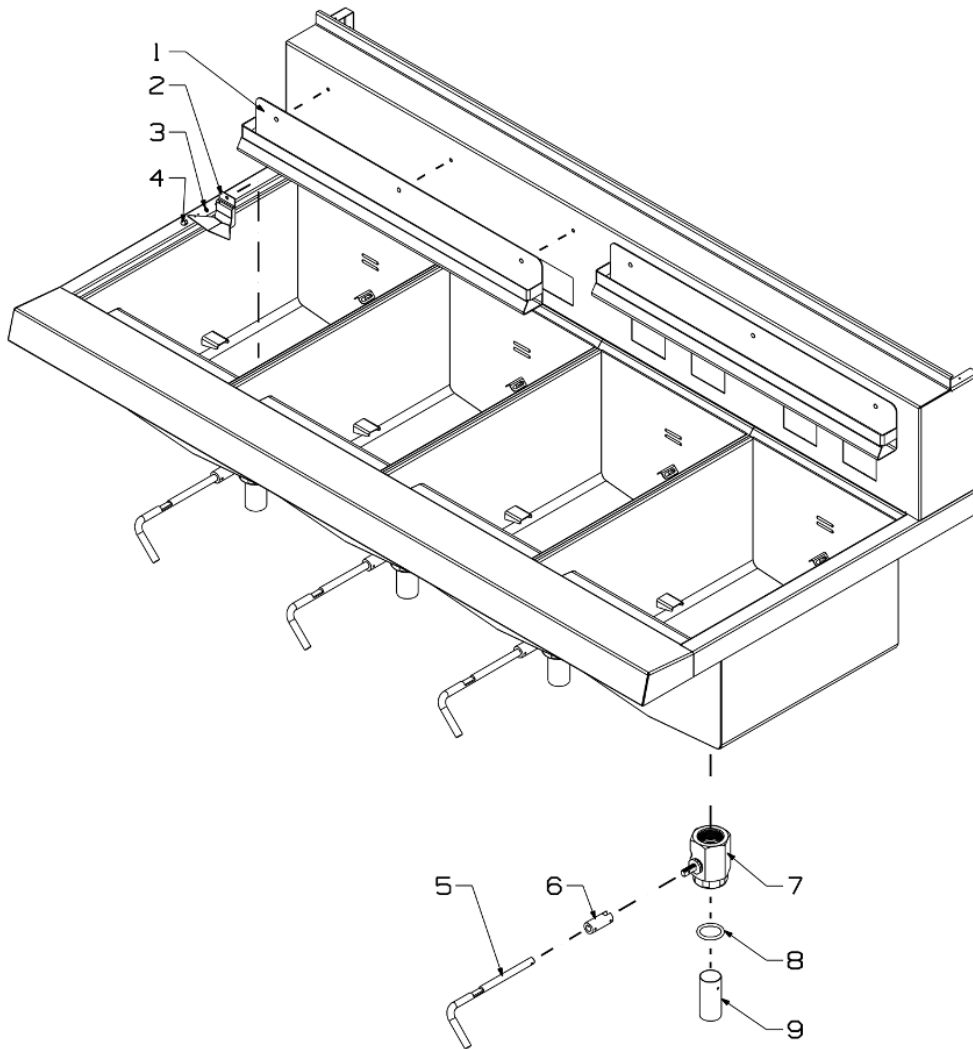

Item No.	Part No.	Description	Qty.	Stocking Level
1	166287-002	Basket hanger	2	
2	157339-002	Oil diverter hood	4	



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.


Item No.	Part No.	Description	Qty.	Stocking Level
3	LW01-012	Split ring, #10, SS	4	
4	NS03-030	Acorn nut, #10-32	4	
5	91348	Open drain rod	4	
6	55142	Drain valve coupling	4	
7	89764	Drain valve and cam lock, 1 1/2 NPT	4	B
8	84415	Drain valve o-ring, 326	4	A
9	96027	S/F valve to trough tube	4	
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Door Assembly

Left Door Assembly

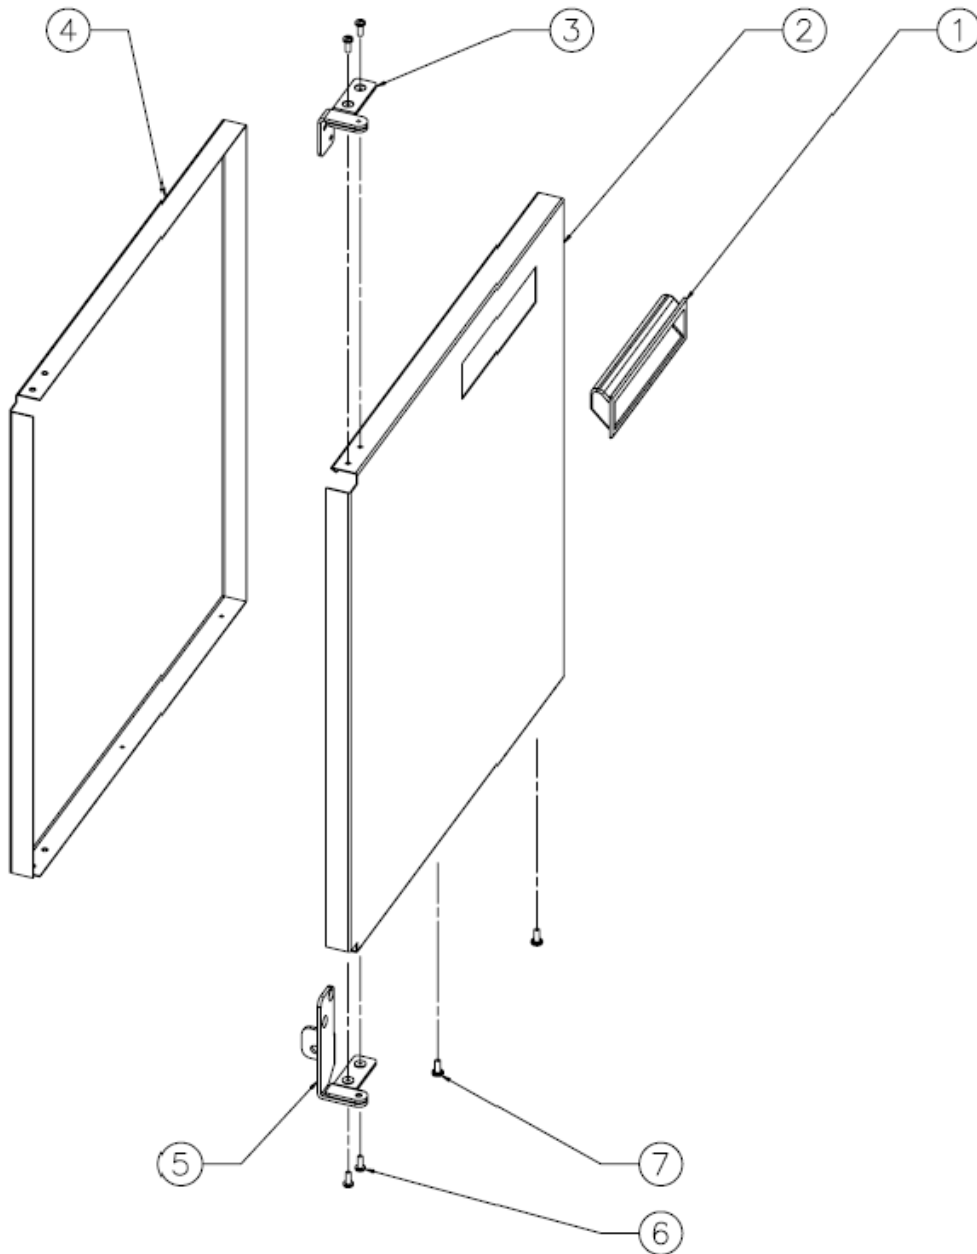




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
1	41836	Pocket pull	1	
2	94950	Outer door panel, left	1	
3	17618	Top hinge assembly	1	
4	94949	Inner door panel, left	1	
5	21034	Bottom hinge assembly	1	
6	SC01-049	Screw, #6-32 X 3/8, CT	4	
7	SC04-003	Screw, #8-32 X 3/8, CT	2	
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Right Door Assembly

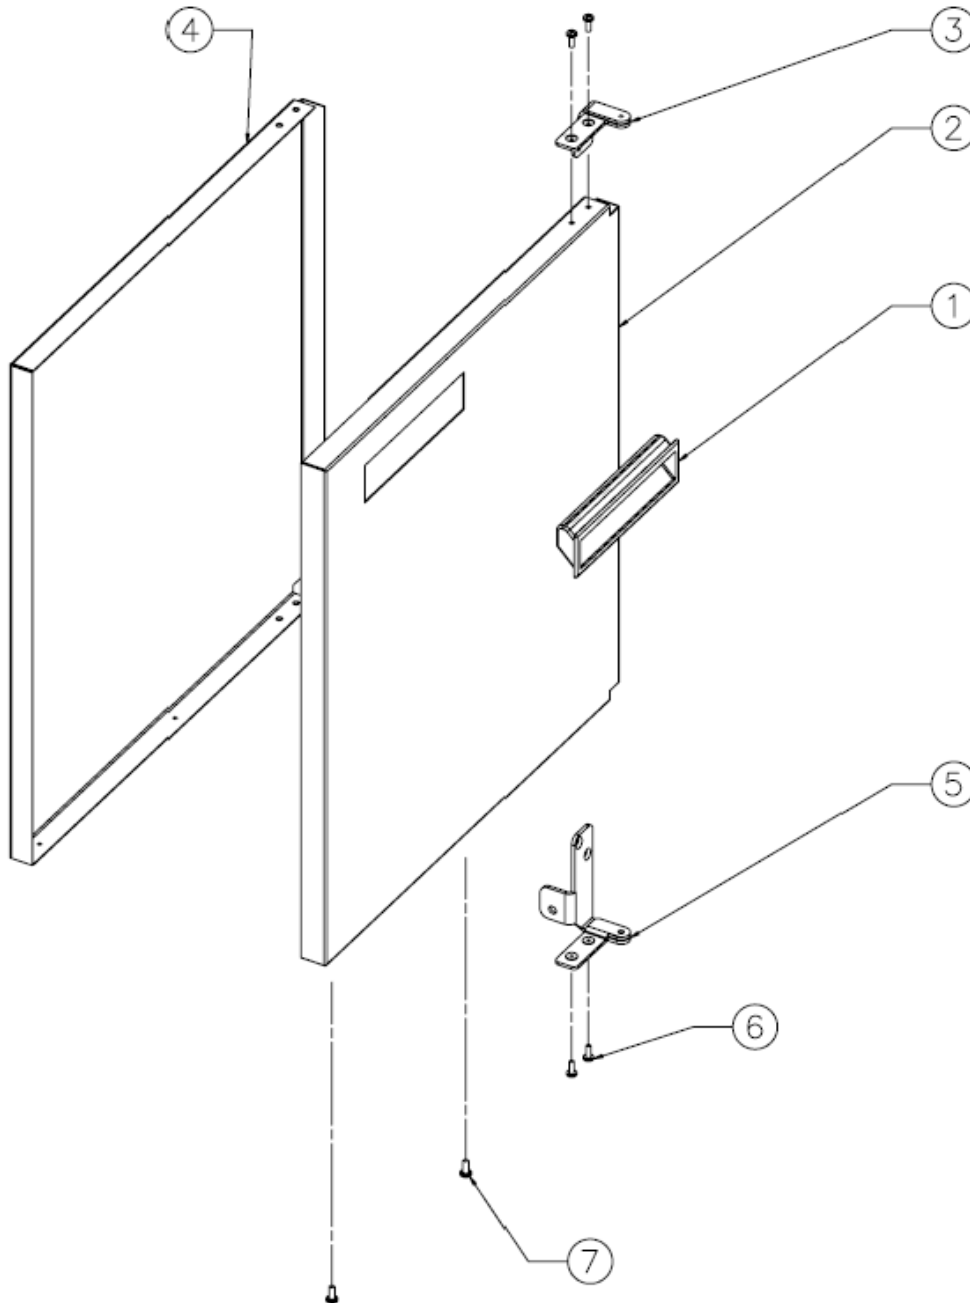




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
1	41836	Pocket pull	1	
2	94954	Outer door panel, right	1	
3	17620	Bottom hinge assembly	1	
4	94953	Inner door panel, right	1	
5	21433	Bottom hinge assembly, right, 342	1	
6	SC01-049	Screw, #6-32 X 3/8, CT	4	
7	SC04-003	Screw, #8-32 X 3/8, CT	2	
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Middle Left Door Assembly

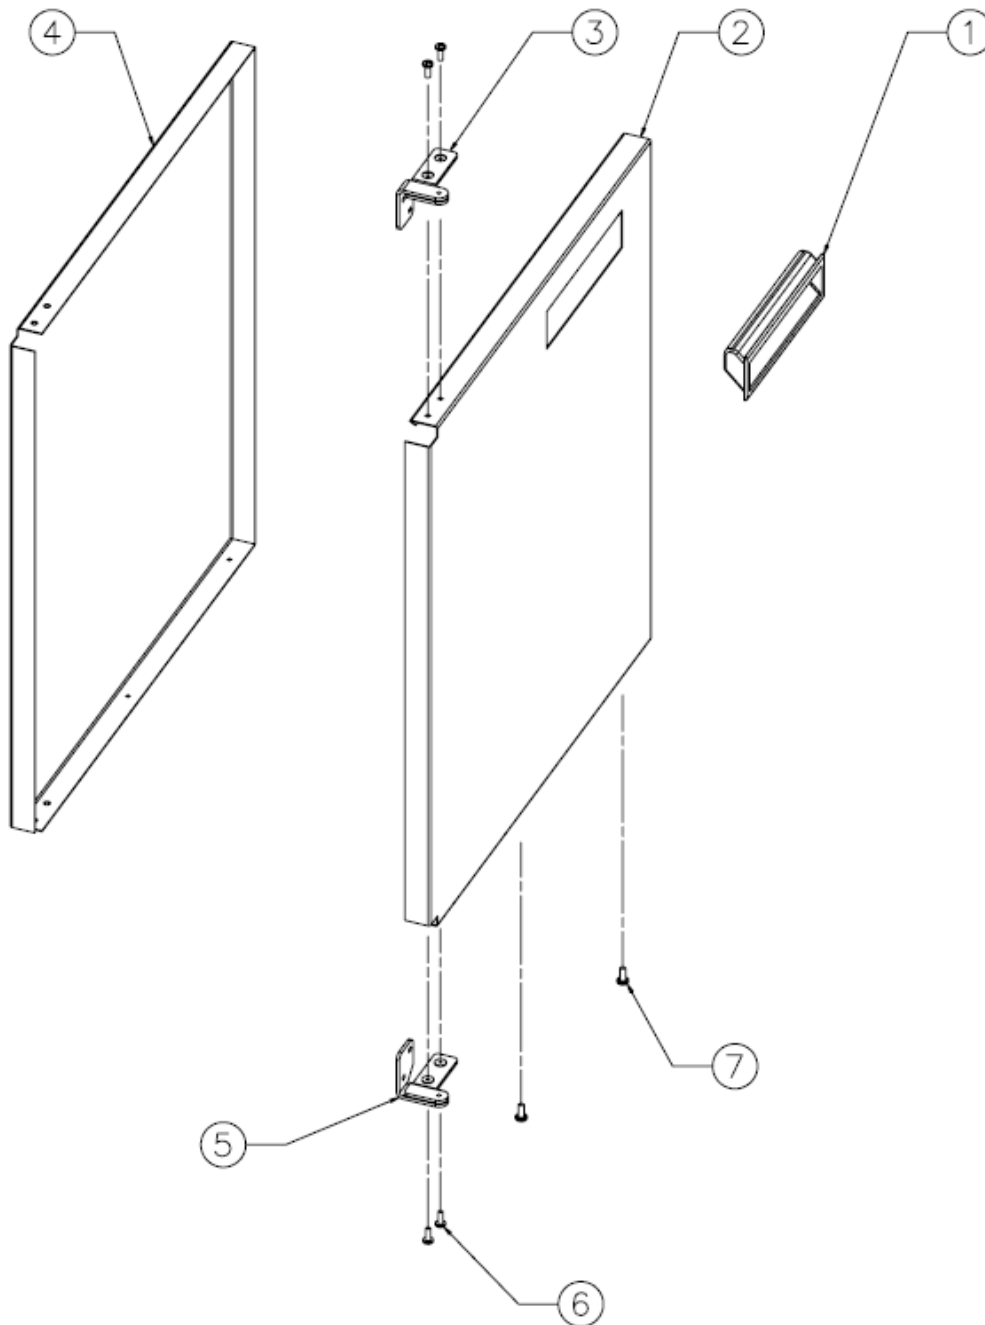




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
1	41836	Pocket pull	1	
2	94950	Outer door panel, left	1	
3	17618	Top hinge assembly	1	
4	94949	Inner door panel, left	1	
5	17620	Bottom hinge assembly	1	
6	SC01-049	Screw, #6-32 X 3/8, CT	4	
7	SC04-003	Screw, #8-32 X 3/8, CT	2	
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit <https://parts.hennypennyhelp.com>.

Middle Right Door Assembly

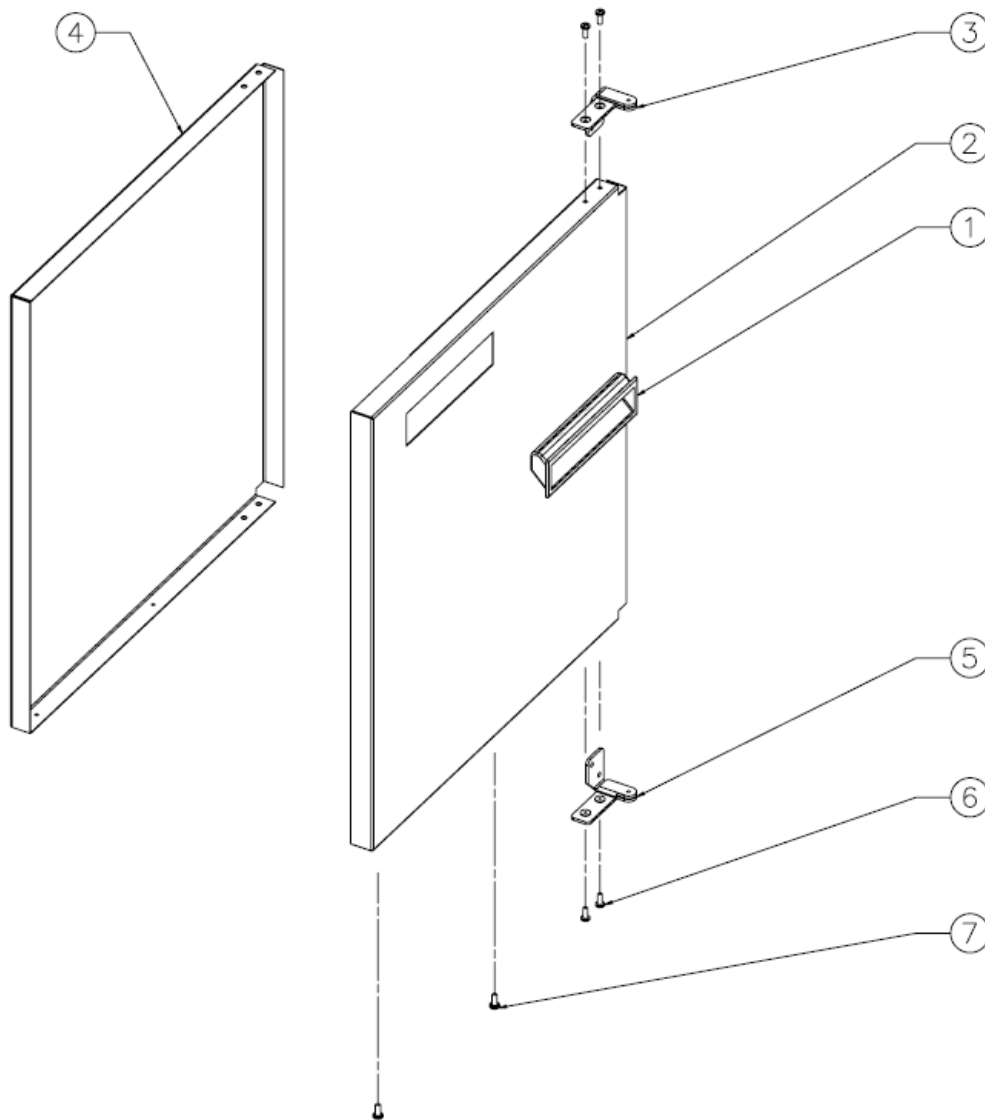

Item No.	Part No.	Description	Qty.	Stocking Level
1	41836	Pocket pull	1	
2	94954	Outer door panel, right	1	




For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
3	17620	Bottom hinge assembly	1	
4	94953	Inner door panel, right	1	
5	17618	Top hinge assembly	1	
6	SC01-049	Screw, #6-32 X 3/8, CT	4	
7	SC04-003	Screw, #8-32 X 3/8, CT	2	
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Accessories

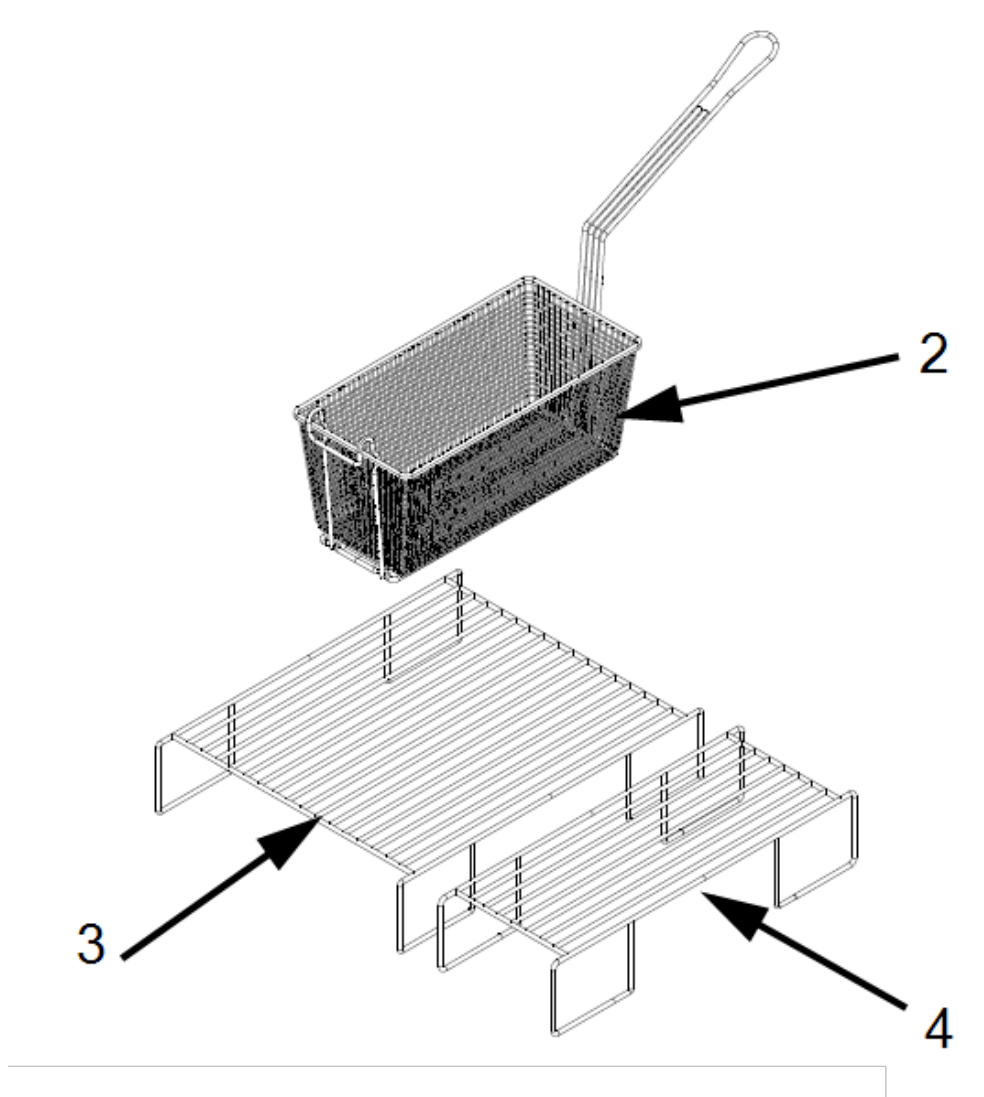

Item No.	Part No.	Description	Qty.	Stocking Level
1*	74725	Element lift handle	1	B
2	92476	1/2 size basket	2/full 1/split	B



For the most up-to-date parts information, visit
<https://parts.hennypennyhelp.com>.

Item No.	Part No.	Description	Qty.	Stocking Level
3	88521	Fry basket support, full	1	B
4	91142	Fry basket support, split	1	B
Recommended Parts: A = Truck Stock; B = Dist. Stock * = Not Shown				