



CATALOG OF REPLACEMENT PARTS




LX SERIES DISHWASHERS

LX18 COLD	ML-104349
LX18 COLD	ML-104350
LX18 HOT	ML-104351
LX30 COLD	ML-104353
LX30 HOT	ML-104354
LX40 HOT	ML-104356
LXG COLD	ML-110380
LXG HOT	ML-110381
LXi COLD	ML-130016
LXi HOT	ML-130017
LXiG COLD	ML-130018
LXiG HOT	ML-130019

PRIOR MLS COVERED IN THIS MANUAL

LX30	ML-104352
LX40 COLD	ML-104355

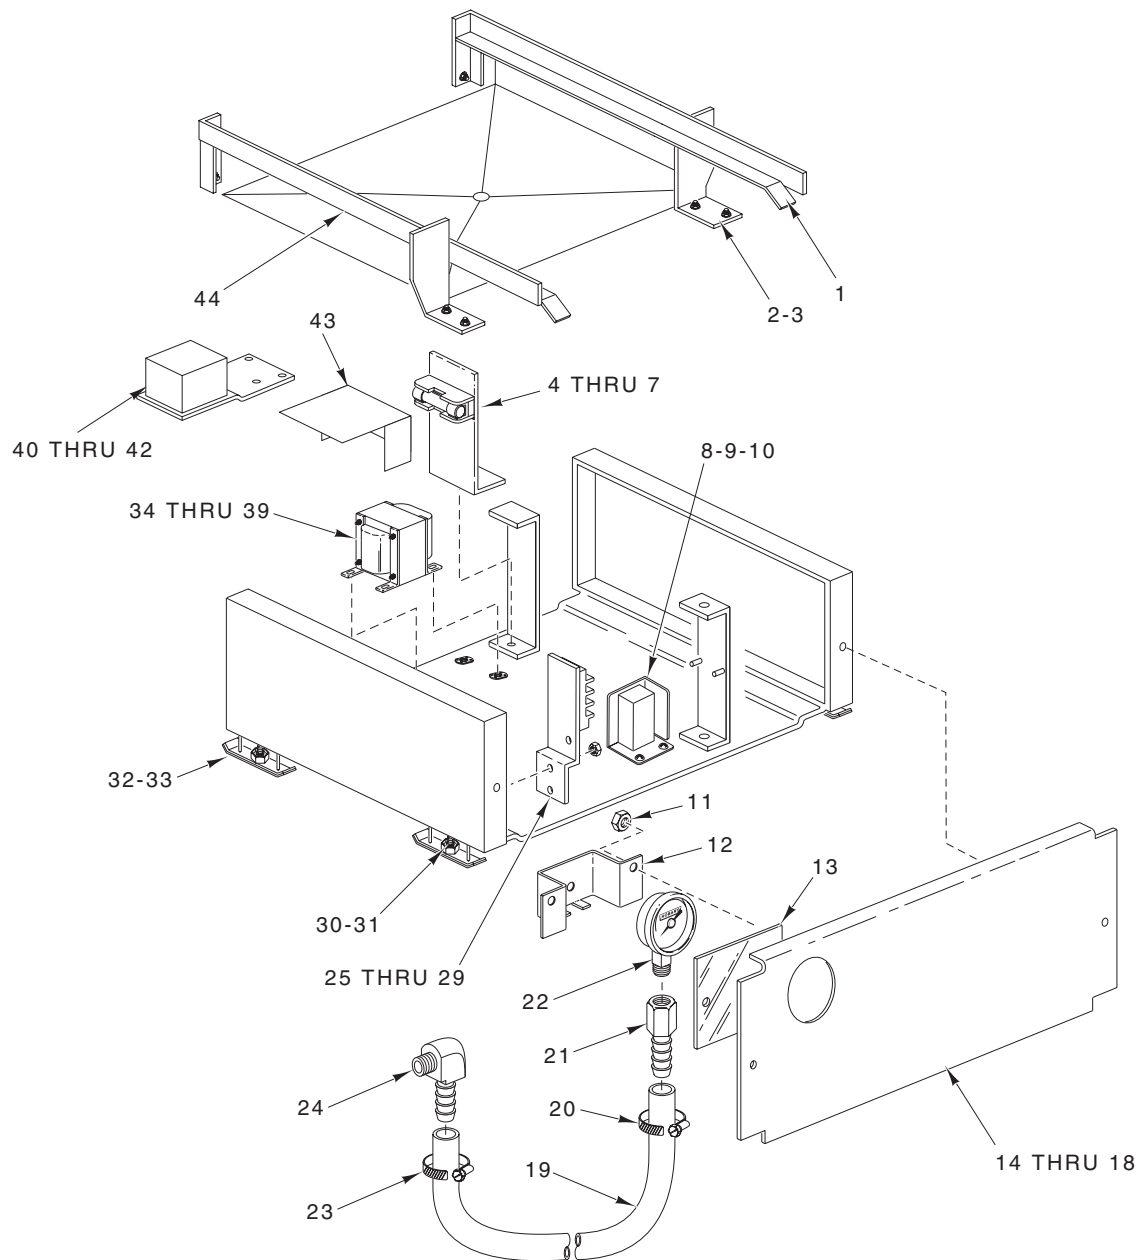


PL-56625

BASE ASSEMBLY

BASE ASSEMBLY


ILLUS. PL-56625	PART NO.	NAME OF PART	AMT.
1	00-328634	Track Assy. (RH)	1
2	NS-015-01	Nut 1/4-20 Hex (SST)	8
3	WL-006-17	Lockwasher 1/4 Medium	8
4	FE-023-78	Fuse (1.25 Amp.) (500 V.) (LX & LXG Series)	1
5	00-473195	Bracket & Fuse Assy. (LX & LXG Series)	1
6	SC-041-86	Cap Screw 1/4-20 x 3/8 Hex Hd.	1
7	WL-006-17	Lockwasher 1/4 Medium	1
8	00-749657	Barrier – Mylar-Relay (3 Ph.) (LX & LXG Series)	1
9	00-749610	Bracket – Relay Mounting (3 Ph.) (LX & LXG Series)	1
10	00-087714-046-1	Relay – 2 Pole (30 Amp.) (3 Ph.) (LX & LXG Series)	1
11	NS-047-82	Stop Nut 1/4-20 Hex (SST) (LX30/40, LXG, LXi, & LXiG Series)	2
12	00-475136	Bracket – Pressure Gauge (LX30/40 LXG, LXi, & LXiG Series)	1
13	00-328569	Plate – Window (LX30/40 & LXG Series)	1
14	00-328600-00001	Cover – Base (LX30/40 & LXi Series)	1
15	00-328600-00002	Cover – Base (LX18 Series)	1
16	00-474935	Cover – Base (LXG & LXiG Series)	1
17	SC-122-54	Mach. Screw 10-24 x 3/4 Phil. Truss Hd.	AR
18	00-329267	Retainer – Screw #10	AR
19	00-475060	Hose – 1/4 x 12 Pressure Gauge to Fill Valve	1
20	00-528501	Clamp – Hose #4	1
21	FP-088-30	Fitting – Hose Barb (LX30/40, LXG, & LXi Series)	1
22	00-475226	Gauge – Water Pressure (LX30/40, LXG, LXi, & LXiG Series)	1
23	00-528501	Clamp – Hose #4	1
24	FP-088-29	Fitting – Hose 1/4 Barb x 1/8-27 NPTM	1
25	00-475299-00001	Connector Assembly	1
26	SC-018-24	Mach. Screw 6-32 x 3/4 Phil. Pan Hd.	2
27	00-473138	Bracket – Terminal Block	1
28	NS-031-50	Stop Nut 6-32 Hex (SST)	2
29	NS-031-16	Stop Nut 10-24 Hex Elastic (SST)	2
30	00-241857	Foot – Leveling	4
31	00-329284	Spacer – Leveling Foot (LX18 Series)	4
32	00-473137	Pad – Skid Assy. (LX30/40, LXG, & LXi Series)	4
33	00-294855-00001	Cap – Skid Retaining (LX30/40, LXG, LXi, & LXiG Series)	8
34	00-294500-027-3	Transformer (150 VA, 240 V., 50/60 Hz.) (LX & LXG Series)	1
35	00-294500-027-4	Transformer (150 VA, 208 V., 50/60 Hz.) (LX & LXG Series)	1
36	WL-014-07	Lockwasher #10 External Shakeproof (SST)	2
37	SC-066-05	Mach. Screw 10-24 x 3/8 Phil. Truss Hd.	2
38	00-294500-027-6	Transformer (480 V.) (3 Ph.) (LXH & LXGH Series)	1
39	00-294500-027-8	Transformer (240 V.) (3 Ph.) (LXH, LXGH, LXiH, & LXiGH)	1
40	00-087713-040-2	Contact – 3 Pole (30 Amp.) (3 Ph.)	1
41	00-294500-046-1	Transformer (208-240/480 V., 60 Hz.) (LXi & LXiG Series)	1
42	00-749468	Bracket – Contactor Mounting (3 Ph.)	1
43	00-749584	Cover – Fuse & Transformer (3 Ph.)	1
44	00-328635	Track Assy. (LH)	1

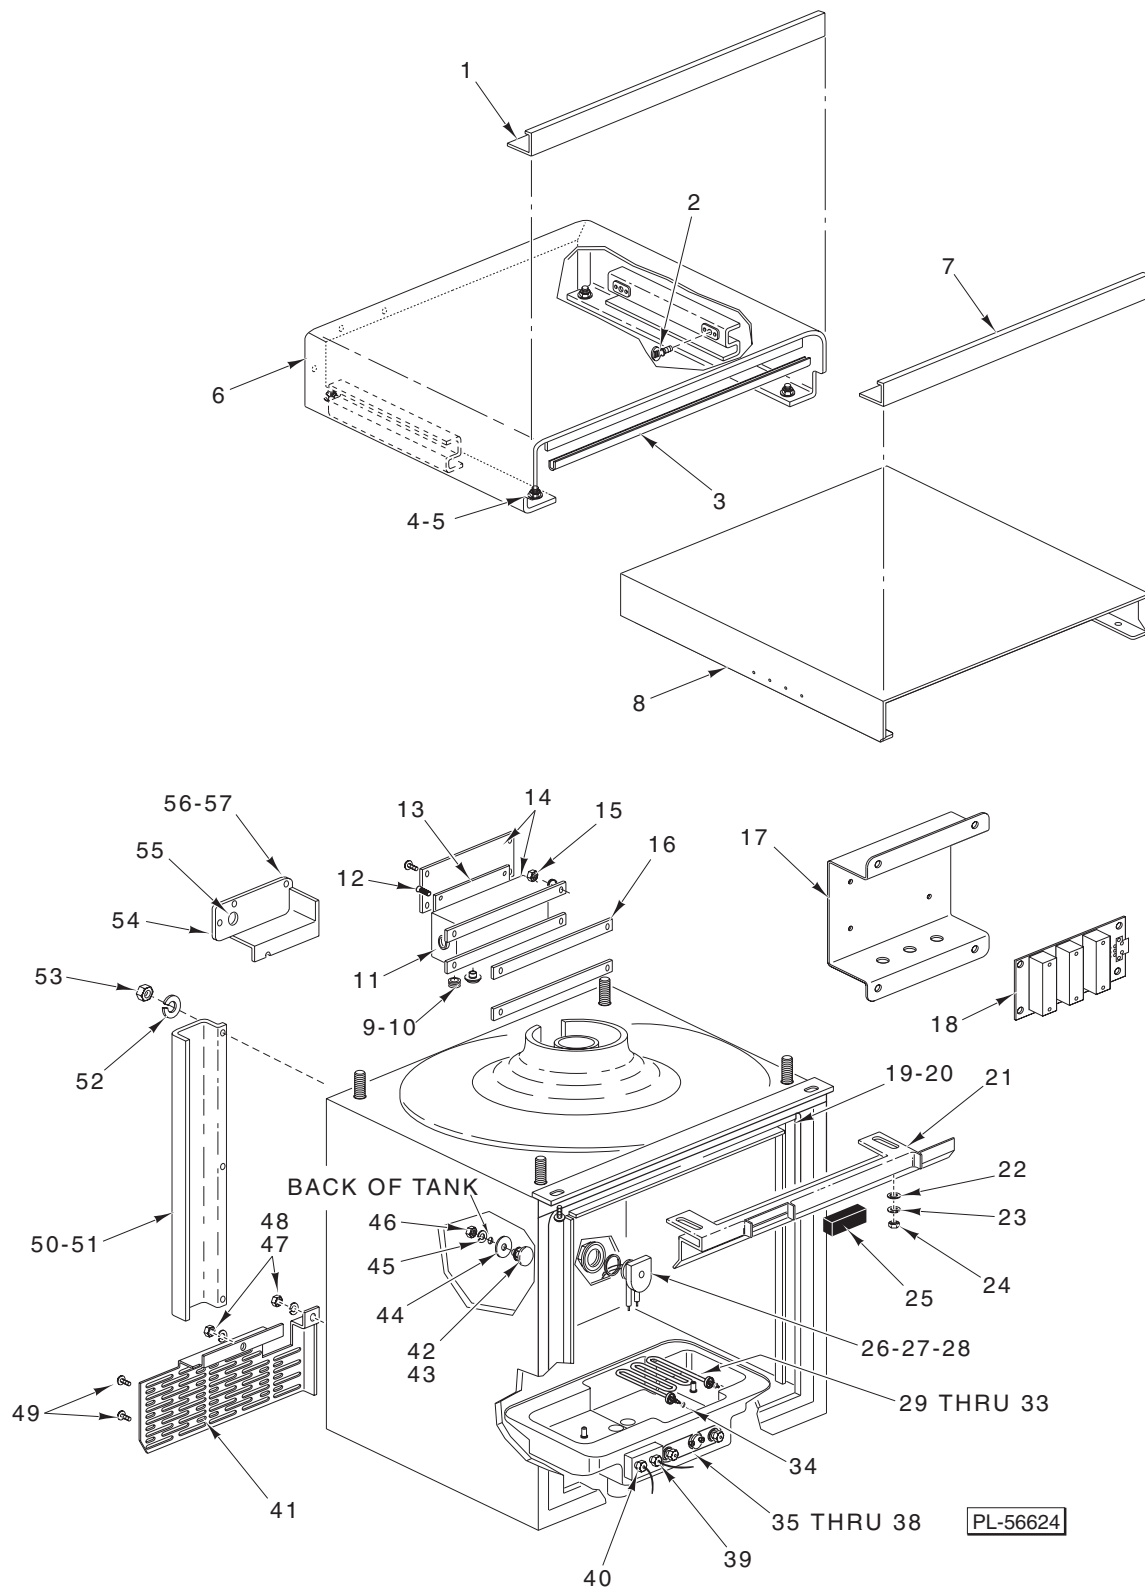

TANK ASSEMBLY

TANK ASSEMBLY

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56624			
1	00-329286	Kit – Top Cover Trim Assy. (LX Series)	1
2	00-070641-00004	Thumb Screw 1/4-20 (LX & LXG Series)	2
3	00-544559	Tape – Foam (21 1/2) (LX & LXG Series)	1
4	WL-006-17	Lockwasher 1/4 Medium (LX & LXG Series)	4
5	NS-015-01	Nut 1/4-20 Hex (SST) (LX & LXG Series)	4
6	00-328571-00001	Cover – Top Weldment (LX & LXG Series)	1
7	00-329286	Kit – Top Cover Trim Assy. (LXi & LXiG Series)	1
8	00-892595	Cover – Top Weldment (LXi & LXiG Series)	1
9	00-329246	Grommet – Chemical Box (LX40 Series)	3
10	00-329247	Cap – Chemical Box (LX40 Series)	2
11	FE-025-03	Bushing – Electrical Str. (LX40 Series)	1
12	SD-033-14	Self-Tapping Screw 4-20 x 1/4 Phil. Pan Hd. (LX40 Series)	4
13	00-329086	Board – Chemical Sensor Assy. (LX40 Series)	1
14	00-329837	Box Assy. – Chemical Sensor (LX40 Series)	1
15	NS-031-08	Stop Nut 8-32 Special (LX40 Series)	4
16	00-329206	Gasket – Chemical Sensor Box (LX40 Series)	2
17	00-892803	Bracket – Chemical Sensor (LXiC & LXiGC)	1
18	00-892715	Board – Chemical Sensor (LXiC & LXiGC)	1
19	00-474465	Seal – Labyrinth	1
20	00-474466	Bracket – Labyrinth Seal	1
21	00-473078	Retainer – Magnet Tank	1
22	WS-017-06	Washer	2
23	WL-006-17	Lockwasher 1/4 Medium	2
24	NS-015-01	Nut 1/4-20 Hex (SST)	2
25	00-329224	Magnet – Door (Ceramic)	4
26	00-329274	Tank Probe And Wire Assy.	1
27	00-293014	Gasket	1
28	00-116198-00003	Nut – Probe	1
29	00-328605-00001	Element – Sump Heater (208 V., 1500 W.) (LX30/40 & LXG Series)	1
30	00-328605-00002	Element – Sump Heater (240 V., 1500 W.) (LX30/40 & LXG Series)	1
31	00-328605-00003	Element – Sump Heater (120 V., 1500 W.) (LX30, LX30C, LX40C, LXGC, LXiC, & LXiGC Series)	1
32	00-328605-00004	Element – Sump Heater (480 V.) (3 Ph.)	1
33	00-892725-00001	Element – Sump Heater (240 V., 1997 W.) (LXi & LXiG Series)	1
34	00-067500-00007	O-Ring (LX30/40 & LXG Series)	2
35	00-328980-00001	Control – Temperature Limiting (LX18H, LX30/40, LXG, LXi, & LXiG Series)	1
36	NS-031-50	Stop Nut 6-32 Hex (SST)	2
37	00-289364-00003	Spacer (LX18H, LX30/40, & LXG Series)	2
38	00-749400	Bracket – Overtemp Mounting	1
39	00-328994	Sensor – Probe	AR
40	00-329275	Probe – Sump Level	1
41	00-328614	Cover – Motor	1
42	00-119244	Cap & Stud Assy. (LX30/40 Series)	1
43	00-067500-00031	O-Ring (LX30/40 Series)	1
44	00-329242	Retainer – Cap (LX30/40 Series)	1
45	WL-006-17	Lockwasher 1/4 Medium (LX30/40 Series)	1
46	NS-015-01	Nut 1/4-20 Hex (SST) (LX30/40 Series)	1
47	NS-015-01	Nut 1/4-20 Hex (SST)	2
48	WL-006-17	Lockwasher 1/4 Medium	2
49	SC-122-54	Mach. Screw 10-24 x 1/4 Phil. Truss Hd.	2
50	00-328623	Wireway (LX & LXi Series)	1
51	00-474160	Wireway (LXG & LXiG Series)	1
52	WL-006-17	Lockwasher 1/4 Medium	3
53	NS-015-01	Nut 1/4-20 Hex (SST)	3
54	00-328613	Cover – Service	1
55	00-532395	Tape – Filament	1
56	NS-015-01	Nut 1/4-20 Hex (SST)	4
57	WL-006-17	Lockwasher 1/4 Medium	4
	00-473318-00002	Barrier – Sump Heater (Mylar)	1
	00-294677-00004	Clamp – Wire	5
	00-526454	Tape – Foam	AR
	00-113703	Tie – Cable	1
	00-749400	Over Temp Bracket	1

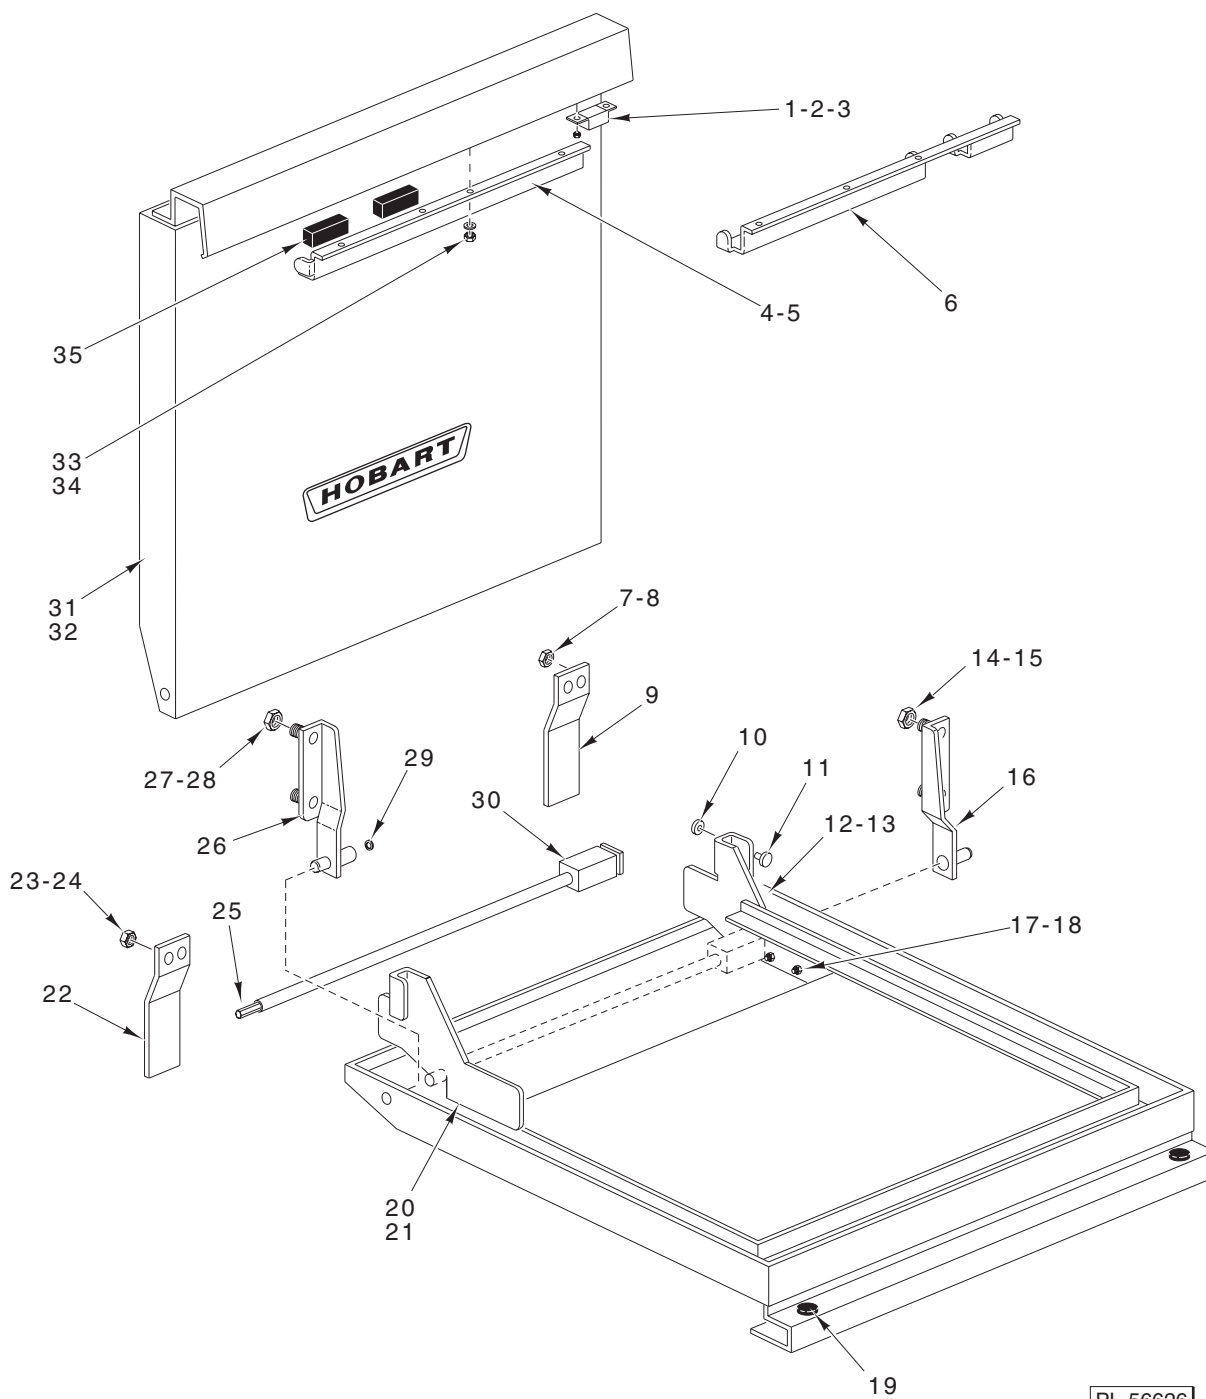


PL-56626

DOOR ASSEMBLY

DOOR ASSEMBLY


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56626			
1	NS-031-50	Stop Nut 6-32 Hex (SST) (LX & LXG Series)	2
2	00-328609	Retainer – Magnet (LX & LXG Series)	1
3	00-436091	Magnet – Door Cycle Switch	1
4	00-473340	Retainer – Magnet Door (LX & LXG Series)	1
5	00-542857	Tape – Foam (18 In.)	2
6	00-892600	Retainer – Magnet Door (LXi & LXiG Series)	1
7	NS-015-01	Nut 1/4-20 Hex (SST)	1
8	WL-006-17	Lockwasher 1/4 Medium	1
9	00-329070	Guard – Splash	1
10	00-474117	Receiver – Push-On	2
11	00-474116	Bumper – Door Stop	2
12	00-328987	Brace – Door (RH) (LX & LXi Series)	1
13	00-474885-00001	Brace – Door (RH) (LXG & LXiG Series)	1
14	NS-015-01	Nut 1/4-20 Hex (SST)	2
15	WL-006-17	Lockwasher 1/4 Medium	2
16	00-473115-00001	Hinge – Door (RH)	1
17	NS-015-01	Nut 1/4-20 Hex (SST)	4
18	WL-006-17	Lockwasher 1/4 Medium	4
19	00-473466	Button – Door Handle	2
20	00-328597	Brace – Door (LH) (LX & LXi Series)	1
21	00-474884-00001	Brace – Door (LH) (LXG & LXiG Series)	1
22	00-329070	Guard – Splash	1
23	NS-015-01	Nut 1/4-20 Hex (SST)	1
24	WL-006-17	Lockwasher 1/4 Medium	1
25	00-329007	Bar – Torsion	1
26	00-328570	Hinge – Door (LH)	1
27	NS-015-01	Nut 1/4-20 Hex (SST)	2
28	WL-006-17	Lockwasher 1/4 Medium	2
29	OR-001-06	O-Ring	2
30	00-329310	Torsion Bar Assy.	1
31	00-473114	Door Assy. (LX & LXi Series)	1
32	00-474161	Door Assy. (Short) (LXG & LXiG Series)	1
33	NS-031-16	Stop Nut 10-24 Hex Elastic (SST)	3
34	WS-023-34	Washer	3
35	00-329224	Magnet – Door (Ceramic)	4
	00-473668	Door Assy. – Service Only (Incls. Items 4, 16, 31, 33, & 35)	1
	00-473668-00002	Door Assy. – Service Only (Incls. Item 31)	1

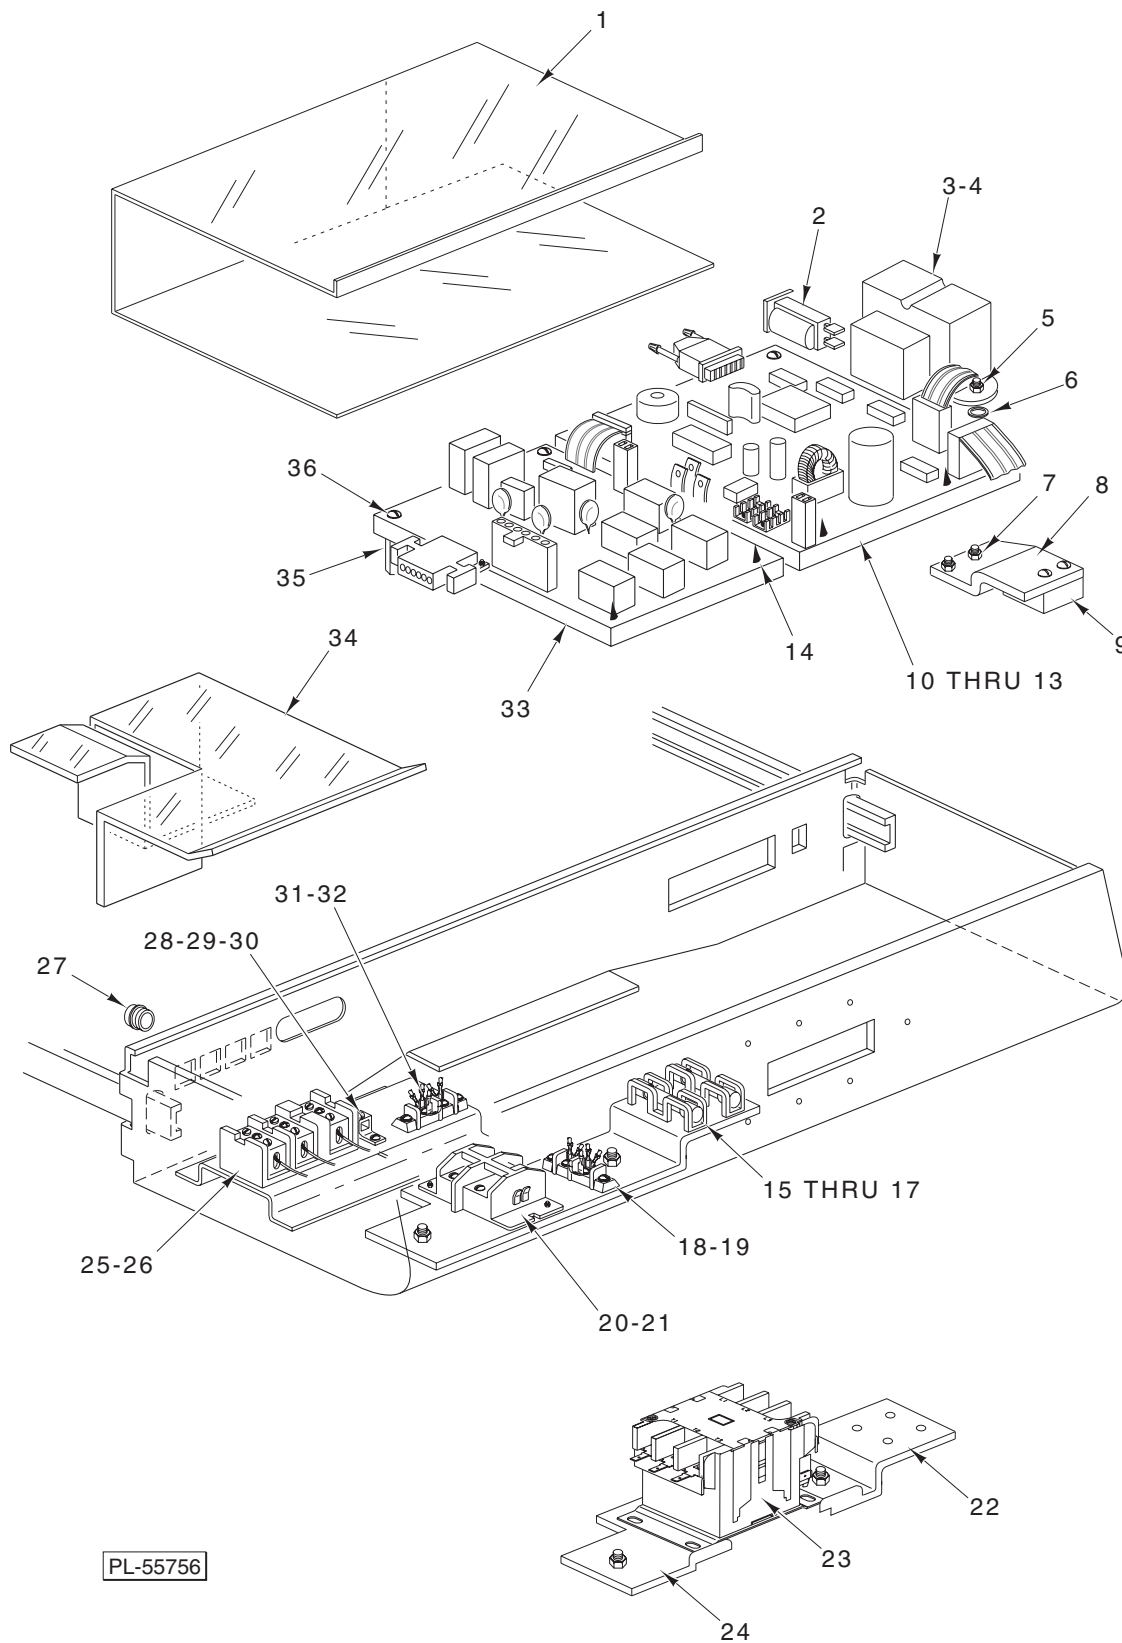

**ELECTRICAL CONTROL DRAWER
(LX SERIES)**

ELECTRICAL CONTROL DRAWER (LX SERIES)

ILLUS. PL-55756	PART NO.	NAME OF PART	AMT.
1	00-329079	Barrier – Board (Mylar)	1
2	00-328981-00001	Breaker – Circuit (5 Amp.)	1
3	00-294500-025-1	Transformer (45 VA, 50/60 Hz.)	1
4	00-328971-00001	Transformer Harness Assy.	1
5	NS-031-08	Stop Nut 8-32 Special	2
6	WS-017-06	Washer	2
7	NS-031-08	Stop Nut 8-32 Special	2
8	00-329065	Bracket – Reed Switch Mounting (Incls. Locating Screws)	1
9	00-473109	Reed Switch Assy.	1
10	00-328670	Board – Control (LX40 Series)	1
11	00-473173	Board – Control (LX18/30 Series)	1
12	00-473173-00002	Board – Control (LXG Series)	1
13	00-473173-00003	Board – Control (LX30C W/Booster)	1
14	00-329056-00001	Standoff – Dual Locking	4
15	00-294436-00003	Block – Fuse	2
16	FE-021-19	Fuse (3.2 Amp.) (250 V.)	2
17	SC-021-08	Mach. Screw 6-32 x 3/8 Rd. Hd. (SST)	2
18	00-294325-016-1	Block – Terminal	1
19	SC-080-12	Mach. Screw 10-24 x 5/8 Fil. Hd. (SST)	2
20	00-087713-085-1	Contactor – Double Pole (50/60 Hz.) (LXH & LXGH)	1
21	NS-031-08	Stop Nut 8-32 Special	2
22	00-749728	Bracket – Contactor (Short) (3 Ph.)	1
23	00-087713-104-1	Contactor – 3 Pole (30 amp.) (3 Ph.)	1
24	00-749727	Bracket – Contactor (Long) (3 Ph.)	1
25	00-294325-015-1	Block – Terminal	1
26	SC-112-39	Mach. Screw 8-32 x 3/4 Rd. Hd. (SST)	2
27	FE-019-43	Strain Relief (All H Series)	AR
28	00-118544-00002	Lug – Grounding	1
29	SC-093-23	Mach. Screw 10-32 x 3/8 Phil. Pan Hd. (SST)	2
30	WL-014-07	Lockwasher #10 External Shakeproof (SST)	2
31	00-294325-016-1	Block – Terminal	1
32	SC-080-12	Mach. Screw 10-24 x 5/8 Fil. Hd. (SST)	2
33	00-328721-00006	Board – Relay W/Pump (LX30C, LX40C, & LXGC/LXGH)	1
34	00-329080	Barrier – Power (Mylar)	1
35	00-474281	Standoff (Male/Female Hex)	4
36	SC-021-08	Mach. Screw 6-32 x 3/8 Rd. Hd. (SST)	4
	00-328967-00001	Harness – Booster (Contactor to Booster) (LXH & LXGH)	1
	00-328969-00001	Harness – Sensor (Cntrl. Bd. to Sensors) (LX18H, LX30, & LXG Series)	1
	00-328970-00001	Harness – Sensor (Cntl. Bd. to Sensors) (LX18 & LX18C)	1
	00-474929-00001	Harness – Sensor (Cntl. Bd. to Sensors) (LX40 Series)	1
	00-473221-00001	Harness – Standard (Relay Board to Base Components)	1
	00-475300-00001	Harness – Chemical Pump (Prom Relay Board to Terminal Block in Base)	1
	00-749497-00001	Harness – Booster (3 Ph.)	1
	00-749135-00001	Harness – Sump Heater (3 Ph.)	1
	00-749551-00001	Harness – LX Standard (3 Ph.)	1
	00-087714-046-1	Relay – 2 Pole (30 Amp.)	1
	00-087713-040-2	Contactor – 3 Pole (30 Amp.)	1
	00-749610	Bracket – Relay Mounting	1
	00-749657	Barrier – Mylar-Relay	1
	00-749468	Bracket – Contactor-Mounting	1
	00-329787	Nut 10-24 Weld	2

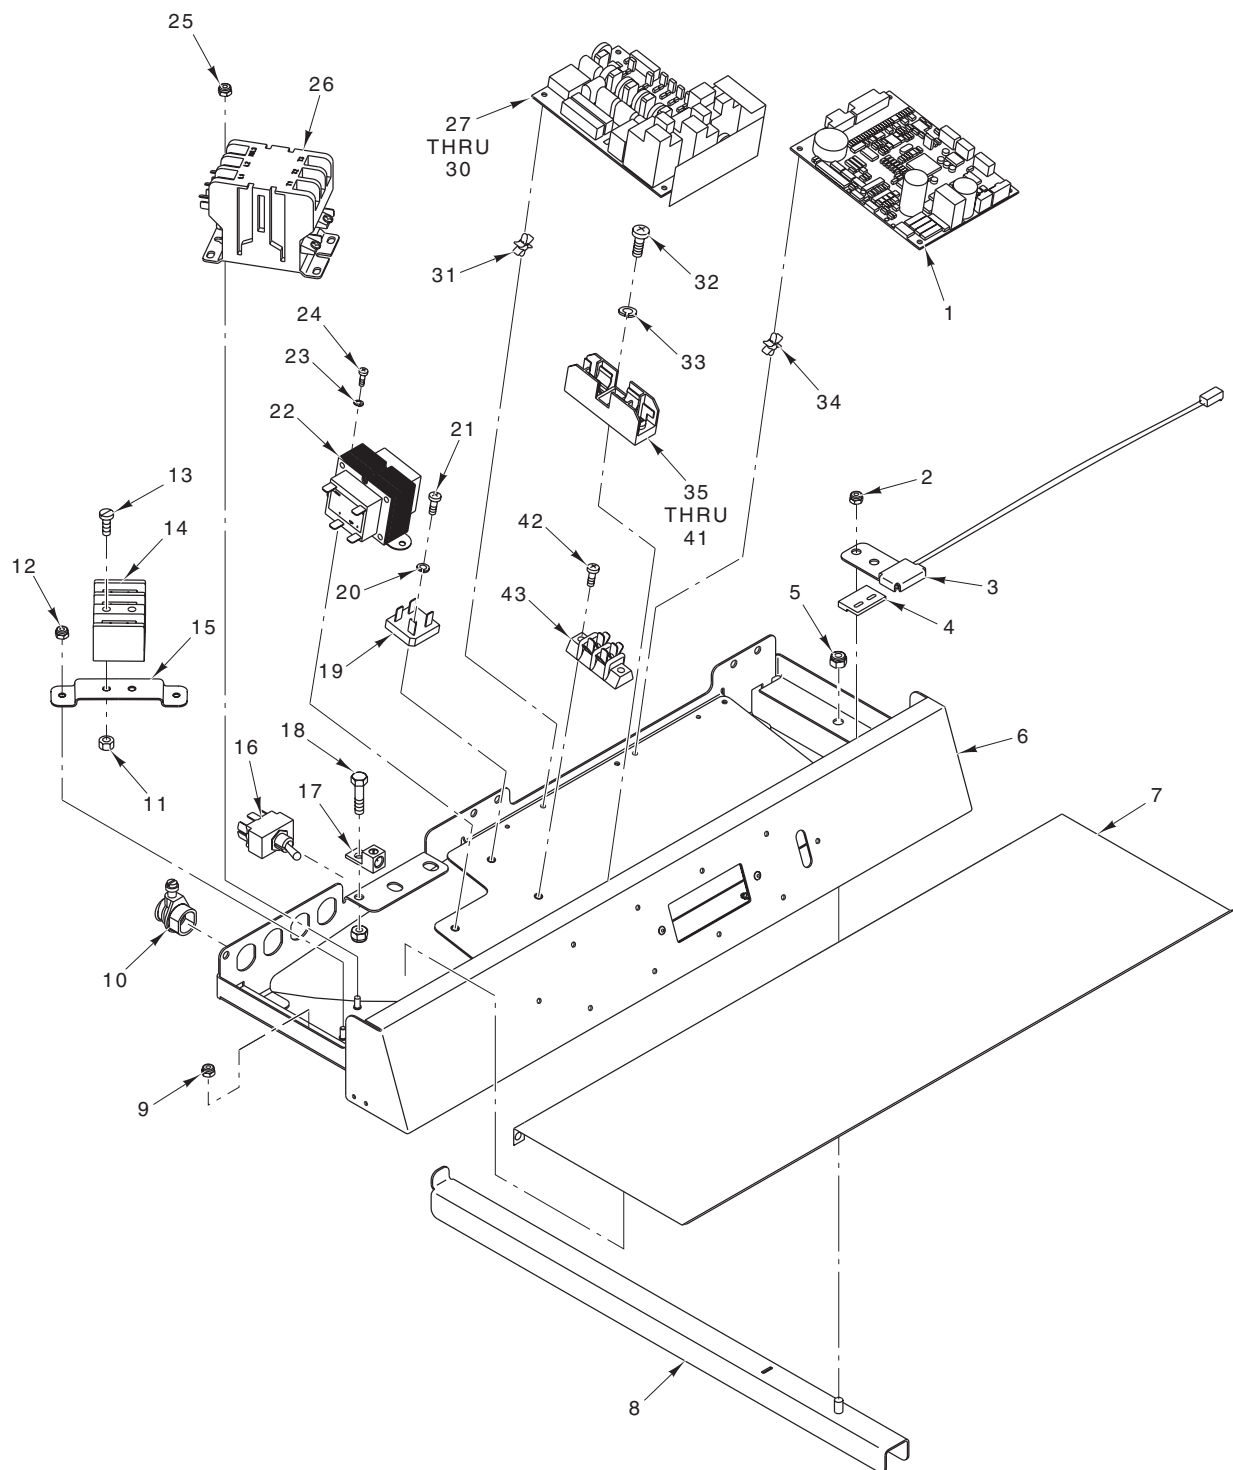


PL-56623

ELECTRICAL CONTROL DRAWER (LXI SERIES)

ELECTRICAL CONTROL DRAWER (LXI SERIES)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56623			
1	00-892563	Control Board Assy.	1
2	NS-031-08	Stop Nut 8-32 Special (SST)	2
3	00-892624	Bracket – Reed Switch Mtg.	1
4	00-473109	Switch Assy. – Door	1
5	NS-047-82	Stop Nut Special 1/4-20 (SST)	3
6	00-892469	Drawer Weldment – Top	1
7	00-892713	Barrier – Mylar	1
8	00-892471	Drawer – Rail	2
9	NS-031-08	Stop Nut 8-32 Special (SST) (LXiC)	2
10	FE-019-43	Strain Relief	4
11	NS-031-08	Stop Nut 8-32 Special (SST) (LXiC)	2
12	NS-031-08	Stop Nut 8-32 Special (SST) (LXiC)	1
13	SC-112-39	Mach. Screw 8-32 x 3/4 Slotted Rd. Hd. (SST) (LXiC)	2
14	00-294325-015-1	Block Terminal (LXiC)	1
15	00-892602	Bracket – Terminal Connector (LXiC)	1
16	00-087711-180-1	Switch – Toggle D.P.D.T.	1
17	00-118544-00002	Lug	1
18	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd. (SST)	1
19	00-473660	Rectifier	1
20	WL-006-07	Lockwasher #10 Helical (SST)	1
21	SC-080-12	Mach. Screw 10-24 x 5/8 Phil. Fil. Hd. (SST)	1
22	00-294500-00051	Transformer (30 VA, 50/60 Hz.)	1
23	WL-006-07	Lockwasher #10 Helical (SST)	2
24	SC-066-05	Mach. Screw 10-24 x 3/8 Phil. Truss Hd. (SST)	2
25	NS-031-08	Stop Nut 8-32 Special (SST) (LXiH)	3
26	00-087713-00106	Contactor (25 Amp., 3 Pole) (LXiH)	1
27	00-892565	Relay – Board Assy.	1
28	00-749657	Barrier – Mylar Relay (3 Ph.)	1
29	00-749610	Bracket – Relay Mounting (3 Ph.)	1
30	00-087714-046-1	Relay – 2 Pole (30 Amp.) (3 Ph.)	1
31	00-329056-00001	Standoff	4
32	SC-066-05	Mach. Screw 10-24 x 3/8 Phil. Truss Hd. (SST)	1
33	WL-006-07	Lockwasher #10 Helical (SST)	1
34	00-329056-00001	Standoff	4
35	00-294436-00002	Block – Fuse	1
36	FE-023-78	Fuse (1.25 Amp.) (500 V.)	1
37	FE-022-74	Fuse (0.6 Amp.) (500 V.)	1
38	00-473196	Bracket – Fuse	1
39	SC-080-12	Mach. Screw 10-24 x 5/8 Phil. Fil. Hd. (SST)	1
40	WS-017-06	Washer	1
41	NS-031-15	Stop Nut Special 10-24 Hex (SST)	1
42	SC-080-12	Mach. Screw 10-24 x 5/8 Phil. Fil. Hd. (SST)	2
43	00-294325-016-1	Block – Terminal	1
	00-892636	Harness – Booster	1
	00-892651	Harness – Sensor	1
	00-892625	Harness – Low Volt Transformer	1
	00-892649	Harness – Power Transformer	1
	00-892728	Harness – Standard	1
	00-892793	Harness – Jumper (Conn. To Socket)	1
	00-892799	Harness – Standard (3 Ph.)	1
	00-892798	Harness – Booster/Sump (3 Ph.)	1
	00-892802	Harness – Chemical Sensor	1
	00-113703	Tie – Cable	4
	FE-024-94	Fuse – Time Delay (4.0 Amp.) (For Item 27)	2

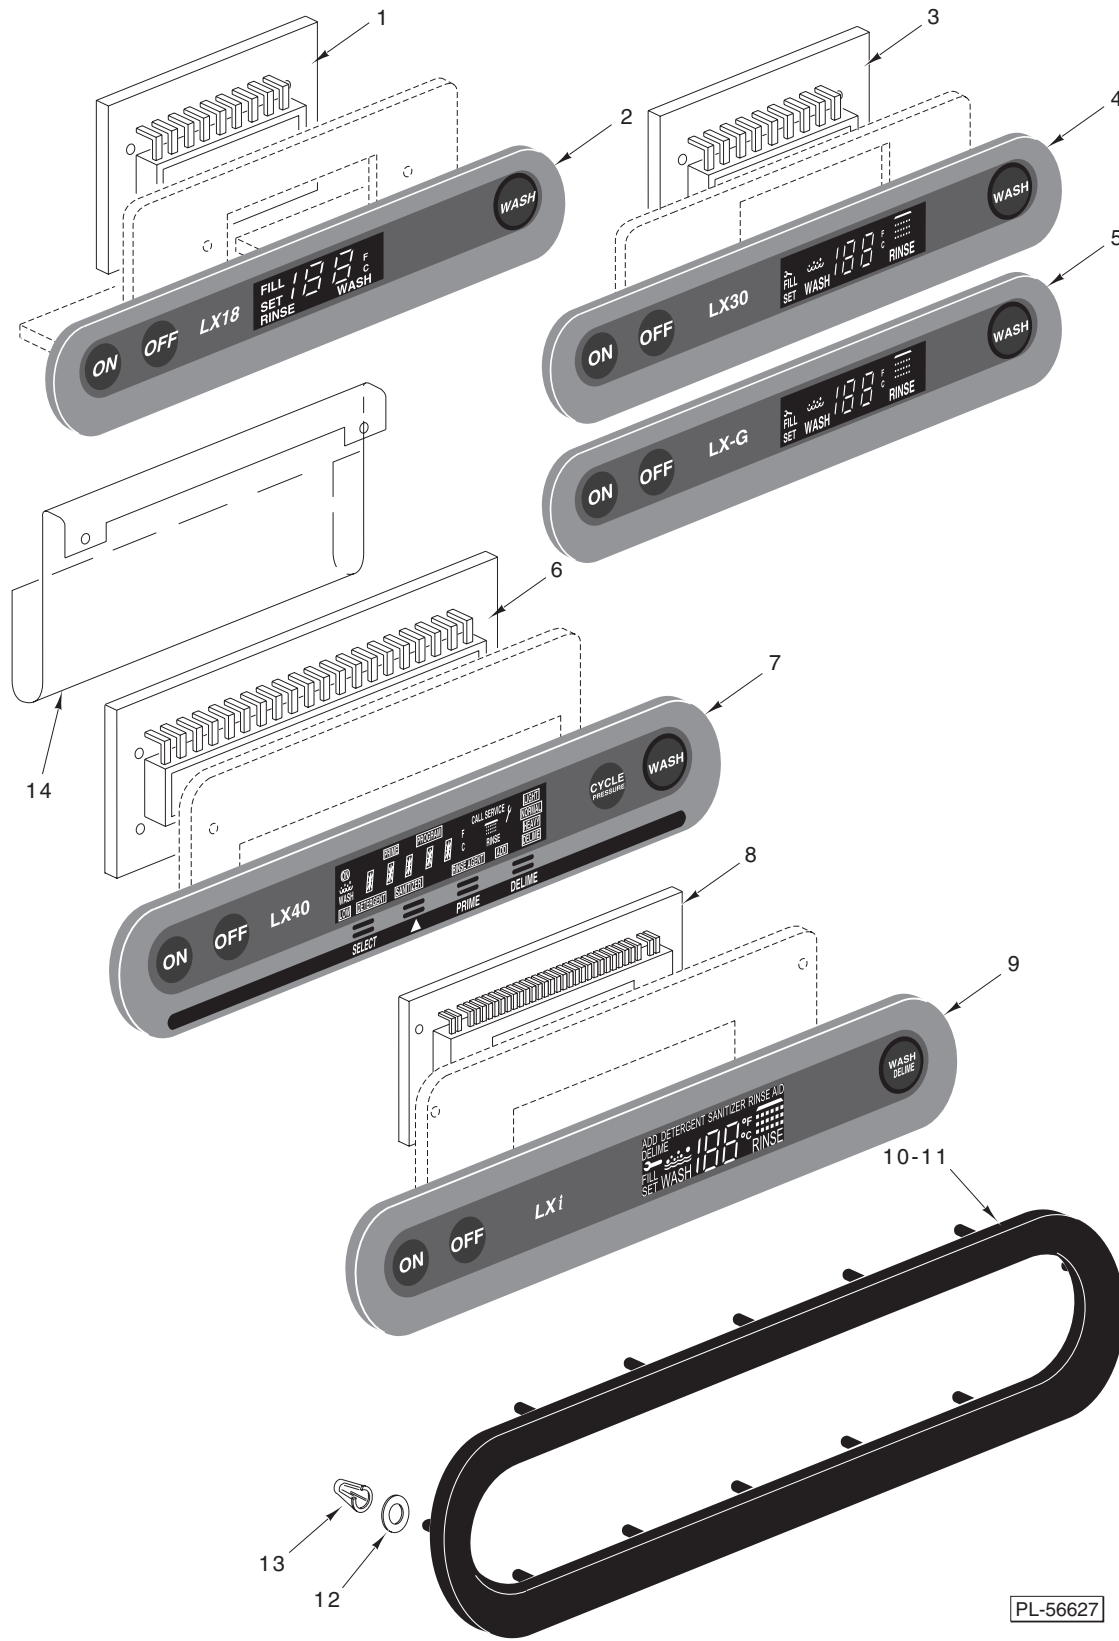


PL-56627

DISPLAY

DISPLAY


ILLUS.	PART NO.	NME OF PART	AMT.
PL-56627			
1	00-329062	Display Module (LX18 Series)	1
2	00-328741	Switch – Keypad Membrane (LX18 Series)	1
3	00-329063	Display Module (LX30 Series & LXG Series)	1
4	00-328739	Switch – Keypad Membrane (LX30 Series)	1
5	00-474170	Switch – Keypad Membrane (LXG Series)	1
6	00-329054	Display Module (LX40 Series)	1
7	00-474923	Switch – Keypad Membrane (LX Series)	1
8	00-892458	Display Module (LXi & LXiG Series)	1
9	00-892473	Switch – Keypad Membrane (LXi & LXiG Series)	1
10	00-328622	Bezel – Display (LX18/30, LXG, & LXi Series)	1
11	00-328620	Bezel – Display (LX40 Series)	1
12	00-329037	Ring – Gasket	AR
13	00-328993	Stud – Receiver	AR
14	00-329207	Barrier – Display Board (Mylar) (LX40 Series)	1
	00-329205-00001	Harness – Display (LX40 Series)	1

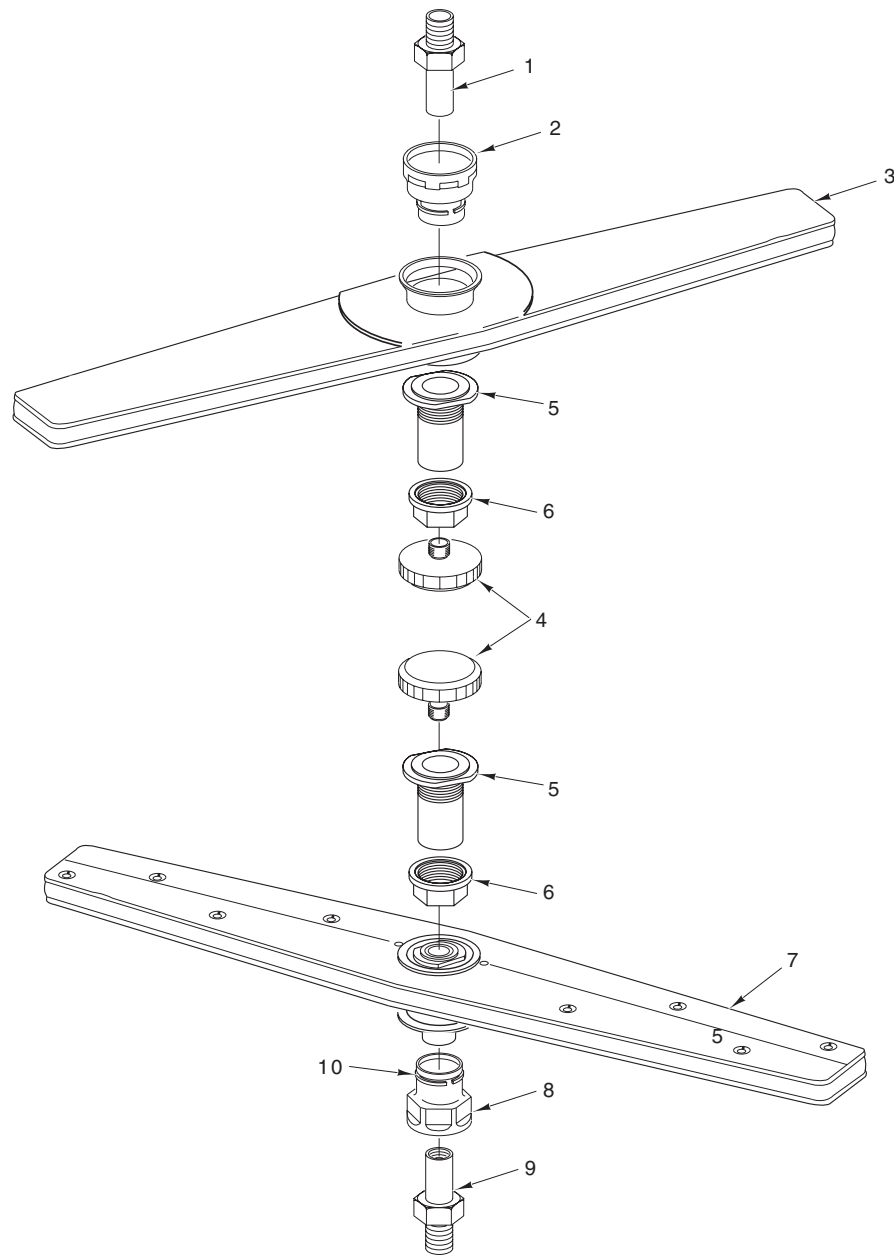

PL-56646

WASH ARM ASSEMBLY (LX18 SERIES)


ILLUS.	PART NO.	NAME OF PART	AMT.
	PL-56646		
1	00-473095	Shaft – Wash Arm	1
2	00-329308	Nut – Wash Arm (Incls. Item 10)	1
3	00-892101	Wash Arm Assy. (Plugless)	1
4	00-329010	Screw – Wash Arm Retaining	2
5	00-328610	Guide – Wash Arm	2
6	00-436109	Nut – Wash Arm	2
7	00-892101	Wash Arm Assy. (Plugless)	1
8	00-329308	Nut – Wash Arm (Incls. Item 10)	1
9	00-473095	Shaft – Wash Arm	1
10	00-436106	Ring	2

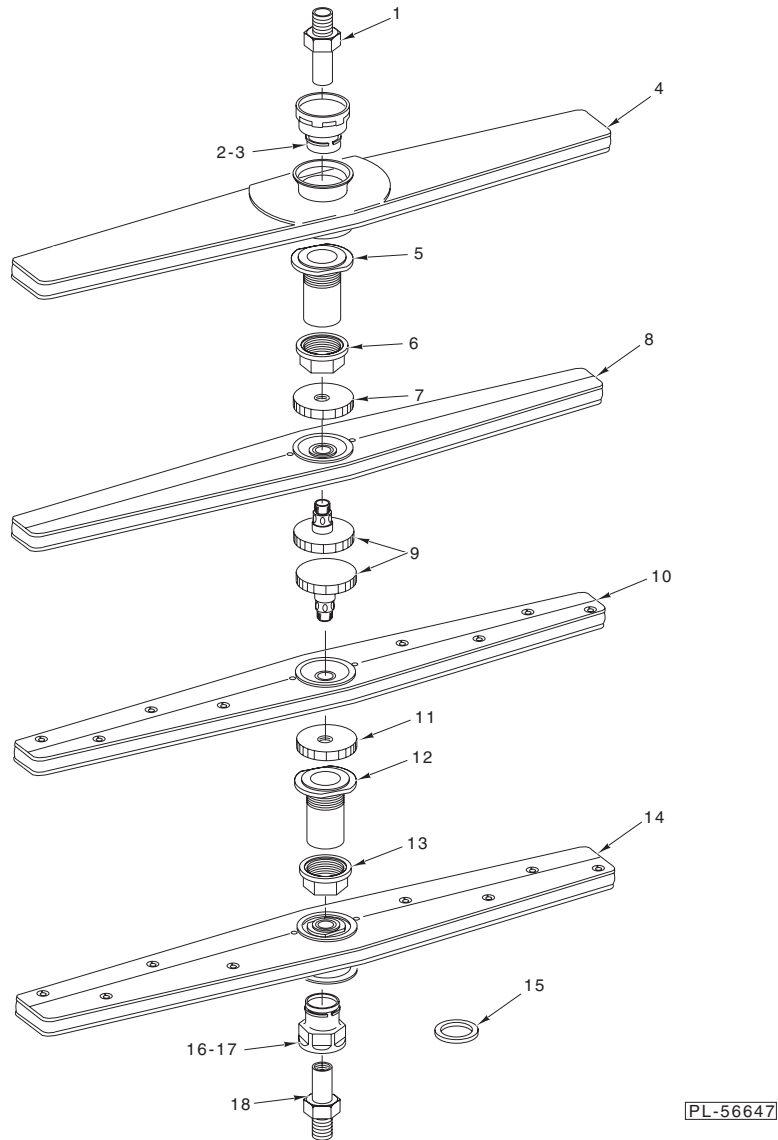

PL-56647

**WASH ARM ASSEMBLY
(LX30/40, LXG, LXI, & LXIG SERIES)**

ILLUS.	PART NO.	NAME OF PART	AMT.
	PL-56647		
1	00-473096	Shaft – Wash Arm	1
2	00-329308	Nut – Wash Arm (Incls. Item 3)	1
3	00-436106	Ring	1
4	00-892101	Wash Arm Assy. (Plugless)	1
5	00-328610	Guide – Wash Arm	1
6	00-436109	Nut – Wash Arm	1
7	00-328748	Washer – Rinse Arm	1
8	00-749369	Rinse Arm (Plugless)	1
9	00-328746	Shaft – Rinse Arm	2
10	00-749369	Rinse Arm (Plugless)	1
11	00-328748	Washer – Rinse Arm	1
12	00-328610	Guide – Wash Arm	1
13	00-436109	Nut – Wash Arm	1
14	00-892101	Wash Arm Assy. (Plugless)	1
15	00-474886	Washer – Restrictor (LXG & LXIG Series)	1
16	00-329308	Nut – Wash Arm (Incls. Item 17)	1
17	00-436106	Ring	1
18	00-473096	Shaft – Wash Arm	1

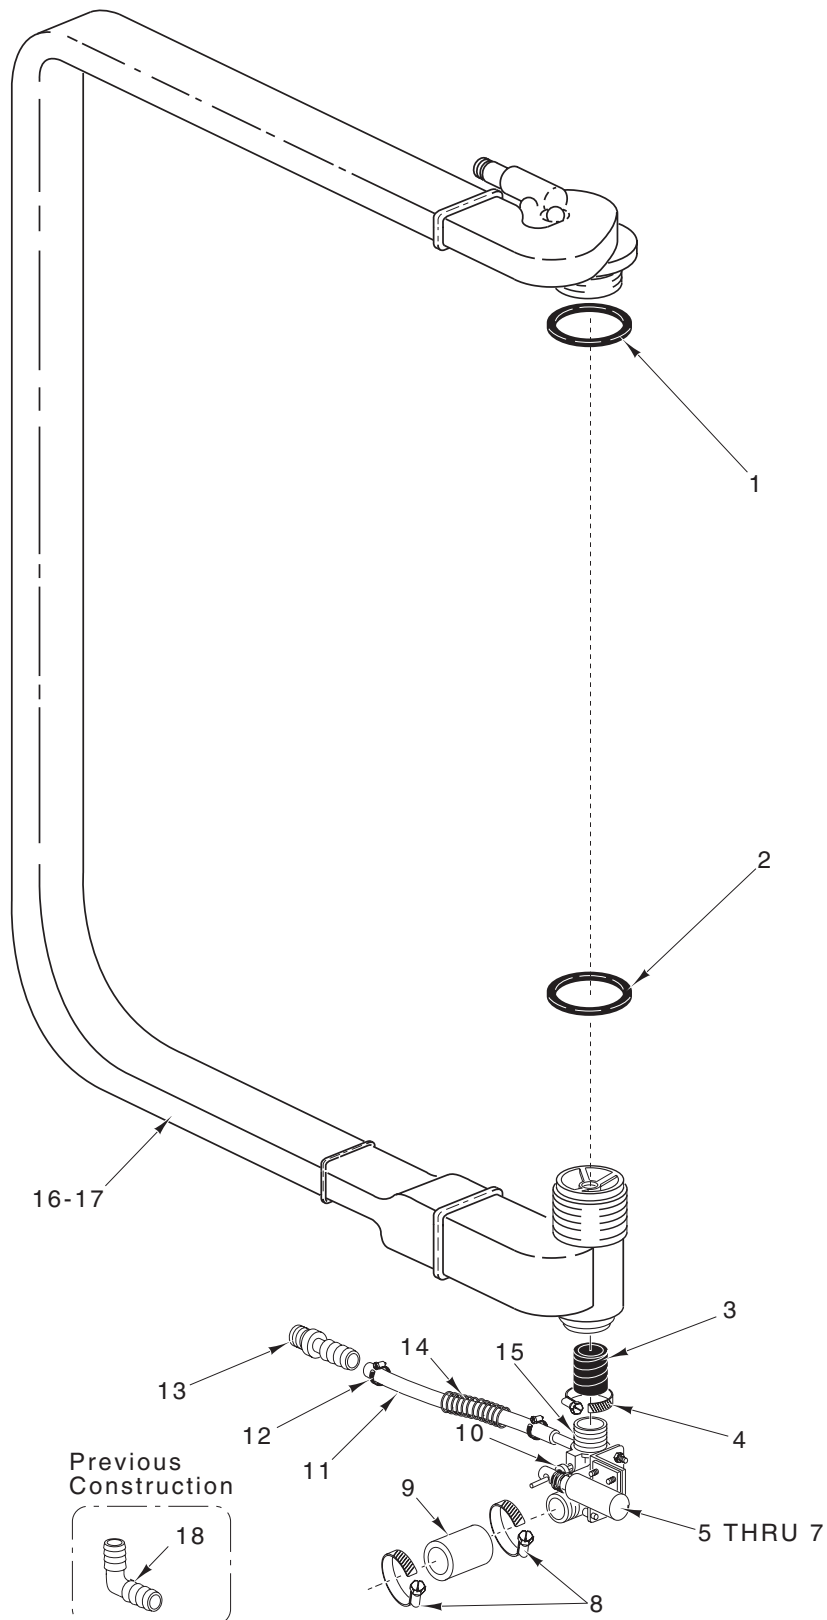


PL-56648

WASH PIPE ASSEMBLY

WASH PIPE ASSEMBLY


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56648			
1	00-328998	Gasket – Wash Arm Support	1
2	00-328998	Gasket – Wash Arm Support	1
3	00-328641	Hose – Outlet Drain Valve	1
4	00-534651	Clamp – Hose #32	2
5	00-473011	Solenoid – Ledex	1
6	00-067500-00007	O-Ring	1
7	00-473010	Bracket – Solenoid	1
8	00-538412	Clamp – Hose #24	2
9	00-328607	Hose – Pump Outlet	1
10	00-473009	Bushing – Valve Rod	1
11	00-292856-00002	Hose – Drain	1
12	00-544424	Clamp – Hose #8	2
13	00-186527	Adapter – Hose	1
14	00-476664-00001	Spring – Drain Hose	1
15	00-329241	Drain Body Valve Assy.	1
16	00-476521	Pipe – Wash Assy. (LX & LXi Series)	1
17	00-476570	Pipe – Wash Assy. (LXG & LXiG Series)	1
18	00-473144	Elbow – Union (Previous Construction)	1
	00-113703	Tie – Cable	1
	00-528499	Clamp – Hose	1
	00-294677-00004	Clamp – Wire	1

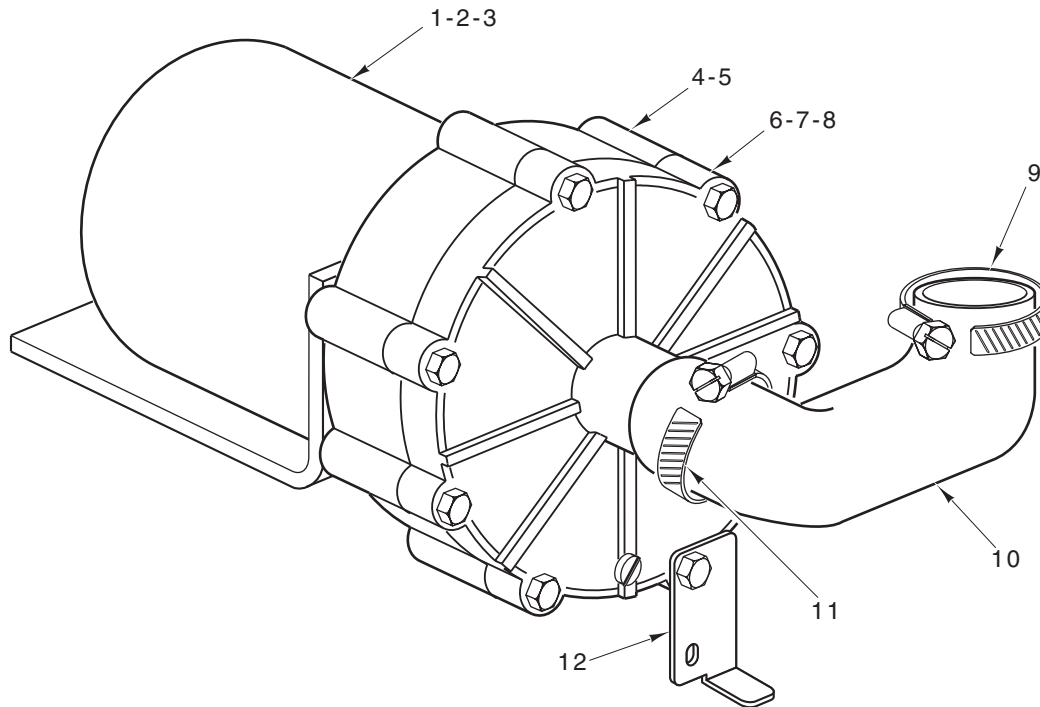

PL-55742

50 HZ., 60 HZ. PUMP AND MOTOR ASSEMBLY (INGERSOLL OR CRANE)



ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55742			
1	00-329240-00001	Motor – Pump LX 60 Hz. – Ingersoll	1
2	00-329240-00008	Motor – Pump LX 50 Hz. – Ingersoll	1
3	00-476734-00001	Pump Motor Kit LX 50/60 Hz. – Crane (Incls. Motor, Casing/Cover Screws, & O-Ring)	1
4	00-329240-00002	Support – Head (Pump Rear) – Ingersoll	1
5	00-476734-00002	Pump Casing Kit – Crane (Incls. Casing, Screws & O-Ring)	1
6	00-329240-00003	Casing (Pump Front) – Ingersoll	1
7	00-329240-00014	Casing O-Ring – Ingersoll	1
8	00-476734-00003	Pump Cover Kit – Crane (Incls. Cover, Screws, & O-Ring)	1
9	00-538412	Clamp – Hose #24	1
10	00-328606	Hose – Pump Inlet	1
11	00-538412	Clamp – Hose #24	1
12	00-328626	Bracket	1
	00-474837-00001	Pump & Motor Assy. (115/230 V., 60 Hz.) (Incls. All Pump & Motor Parts)	1
	00-474837-00002	Pump & Motor Assy. (115/230 V., 50 Hz.) (Incls. All Pump & Motor Parts)	1
	00-749564-00001	Pump & Motor Assy. (380-400/480 V., 60 Hz.)	1
	00-329240-00004	Shaft Seal Kit – Ingersoll (Incls. Seal, O-Ring, Casing O-Ring, & Shims)	1
	00-476734-00004	Shaft Seal Kit – Crane (Incls. Seal, O-Ring, Casing O-Ring, & Shims)	1
	00-329240-00006	Plug Kit – Ingersoll (Incls. Rytan Plug & O-Ring)	1
	00-329240-00005	Impeller Kit – LX 60 Hz. – Ingersoll (Incls. Impeller, Casing O-Ring, & Hardware)	1
	00-329240-00009	Impeller Kit – LX 50 Hz. – Ingersoll (Incls. Impeller, Casing O-Ring, & Hardware)	1
	00-476734-00005	Impeller Kit – LX 60 Hz. – Crane (Incls. Impeller, Casing O-Ring, & Screws)	1
	00-476734-00008	Impeller Kit – LX 50 Hz. – Crane (Incls. Impeller, Casing O-Ring, & Screws)	1
	00-476734-00011	Impeller Kit (60 Hz., 3 Ph.)	1
	00-476734-00012	Impeller Kit (50 Hz., 3 Ph.)	1
	00-476734-00010	Pump Motor Kit (60 Hz., 3 Ph.)	1
	00-476734-00006	Plug Kit – Crane (Incls. Pipe Plug & O-Ring)	1
	00-329240-00007	Shim Kit – Ingersoll (Incls. 0.002, 0.015, & 0.025)	1
	00-476734-00007	Shim Kit – Crane (Incls. 0.005, 0.015, & 0.030)	1
	00-476734-00009	Motor Shaft Flinger Kit – Crane	1

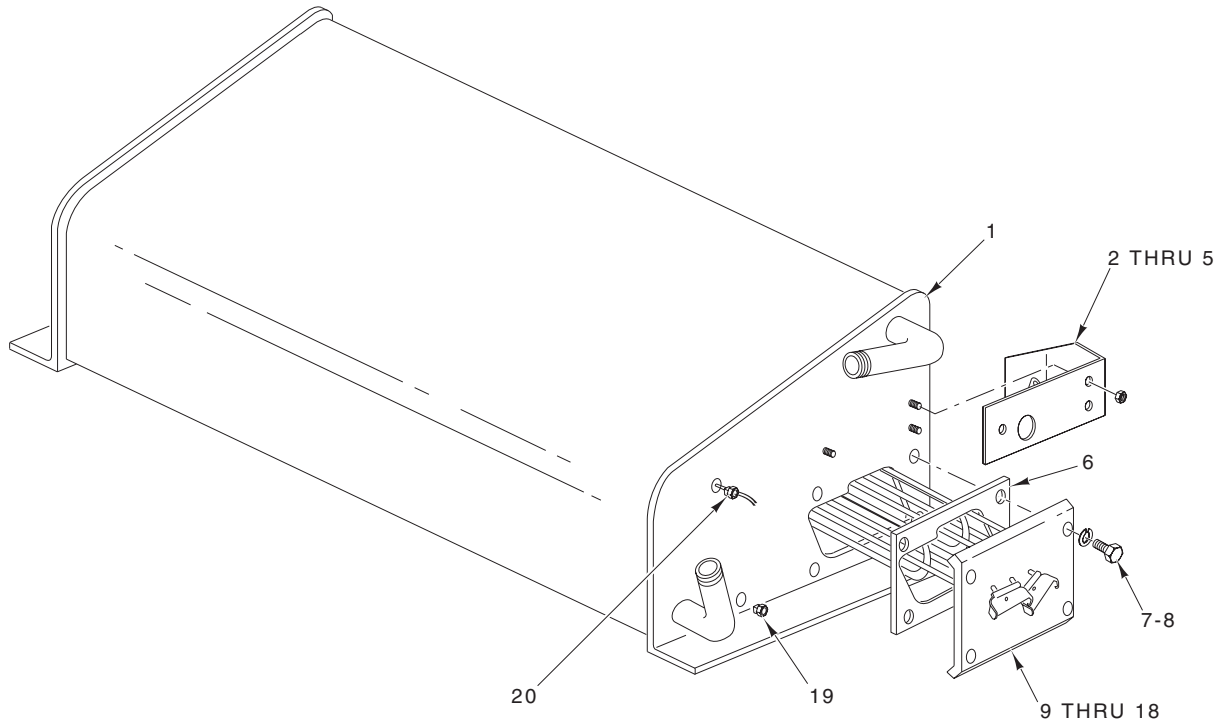

PL-56684

BOOSTER ASSEMBLY

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56684			
1	00-329027	Booster Tank Weldment	1
2	00-328980-00001	Protector – High Limit (LXH Series, LXGH, LXiH, & LXiGH)	1
3	00-748833	Bracket	1
4	NS-031-16	Stop Nut Special 10-24 (SST)	3
5	00-328980-00001	Protector – High Limit (LXH Series, LXGH, LXiH, & LXiGH)	1
6	00-329009	Gasket – Heater Mounting	1
7	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd.	4
8	WL-006-17	Lockwasher 1/4 Medium	4
9	00-474713-00001	Element – Booster Heater (208 V., 6000 W.) (Incls. Item 6) (LX & LXG Series)	1
10	00-474713-00002	Element – Booster Heater (240 V., 6000 W.) (Incls. Item 6) (LX & LXG Series)	1
11	00-474713-00003	Element – Booster Heater (208 V., 7000 W.) (Incls. Item 6) (LX & LXG Series)	1
12	00-474713-00004	Element – Booster Heater (240 V., 7000 W.) (Incls. Item 6) (LX & LXG Series)	1
13	00-812349-00001	Element – Booster Heater (240/60) (3 Ph.) (LXH Series & LXGH)	1
14	00-812349-00002	Element – Booster Heater (208/60) (3 Ph.) (LXH Series & LXGH)	1
15	00-812349-00003	Element – Booster Heater (480/60) (3 Ph.) (LXH Series & LXGH)	1
16	00-812349-00004	Element – Booster Heater (380-415/60) (3 Ph.) (LXH Series & LXGH)	1
17	00-892726-00001	Element – Booster Heater (208-240 V., 4507-6000 W.) (LXi & LXiG Series)	1
18	00-892727-00001	Element – Booster Heater (208-240 V., 5255-7000 W.) (LXiH & LXiGH)	1
19	FP-052-20	Pipe Plug 1/8 Sq. Hd. (SST)	1
20	00-328994	Sensor – Probe	1
	00-329603	Barrier – Mylar Booster	1
	00-294677-00004	Clamp – Wire	1

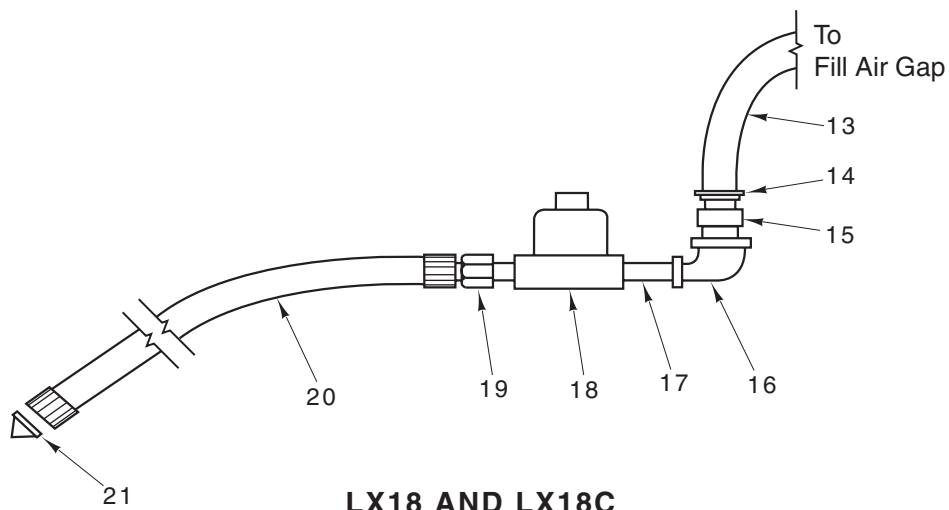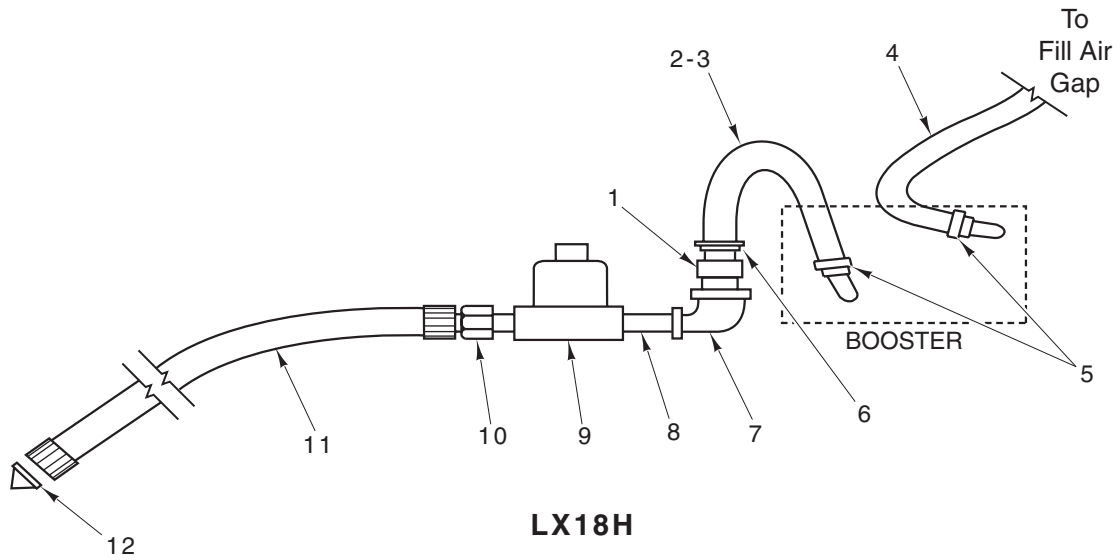


PL-55744

LX18 PLUMBING

LX18 PLUMBING


ILLUS. PL-55744	PART NO.	NAME OF PART	AMT.
1	00-473748	Fitting – Flow Restrictor $\frac{3}{4}$ MPT W/Barbed Adaptor	1
2	00-436397-00001	Spring – $\frac{5}{8}$ Hose Support $\frac{1}{2}$ x $13\frac{1}{2}$ (Inside Item 3)	1
3	00-329015-00006	Hose – $\frac{5}{8}$ x 18 Fill Valve to Booster Inlet	1
4	00-892244-00004	Hose – $\frac{5}{8}$ x 31 Booster to Fill Air Gap	1
5	00-544424	Clamp – Hose #8	3
6	00-544424	Clamp – Hose #8	1
7	FP-016-12	Elbow – Reducing $\frac{3}{4}$ to $\frac{1}{2}$	1
8	FP-040-45	Pipe $\frac{1}{2}$ x $1\frac{1}{2}$ Lg. (TBE)	1
9	00-329972-00001	Valve – Solenoid $\frac{1}{2}$ (110-120 V.)	1
10	FP-081-15	Fitting – Hose $\frac{5}{8}$ x $\frac{3}{4}$ Hose Male to $\frac{1}{2}$ MPT	1
11	00-293408	Hose – Fill Assy.	1
12	00-292787	Filter – Fill Hose Assy.	1
13	00-892244-00004	Hose – $\frac{5}{8}$ x 31 Fill Valve to Fill Air Gap	1
14	00-544424	Clamp – Hose #8	1
15	00-473748	Fitting – Flow Restrictor $\frac{3}{4}$ MPT W/Barbed Adaptor	1
16	FP-016-12	Elbow – Reducing $\frac{3}{4}$ to $\frac{1}{2}$	1
17	FP-040-45	Pipe $\frac{1}{2}$ x $1\frac{1}{2}$ Lg. (TBE)	1
18	00-329972-00001	Valve – Solenoid $\frac{1}{2}$ (110-120 V.)	1
19	FP-081-15	Fitting – Hose $\frac{5}{8}$ x $\frac{3}{4}$ Hose Male to $\frac{1}{2}$ MPT	1
20	00-293408	Hose – Fill Assy.	1
21	00-292787	Filter – Fill Hose Assy.	1
	00-271837	Service Kit – $\frac{1}{2}$ Solenoid Valve	1
	00-270380	Coil – Solenoid Valve (115 V.) (Jackes – Evans)	1

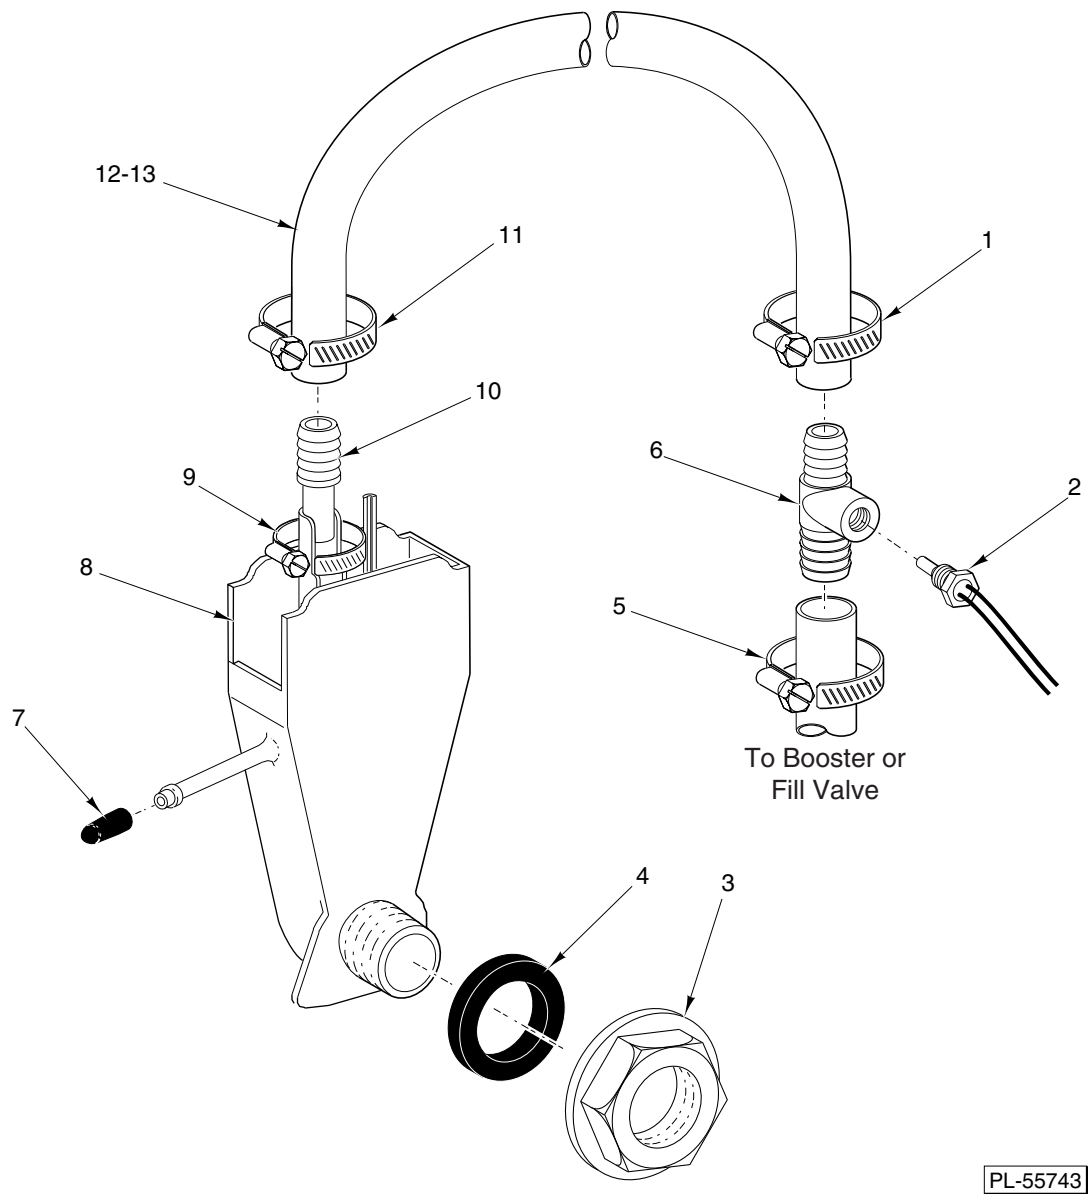

LX18 FILL AIR GAP

LX18 FILL AIR GAP

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55743			
1	00-544424	Clamp – Hose #8	1
2	00-328994	Sensor – Probe	1
3	00-116198-00003	Nut – Fill Air Gap	1
4	00-293014	Gasket – Fill Air Gap	1
5	00-544424	Clamp – Hose #8	1
6	00-473107	Union – Barbed	1
7	00-292621	Cap – Vinyl	1
8	00-292458	Air Gap – Fill	1
9	00-528501	Clamp – Hose #4	1
10	00-473036	Connector – Barbed	1
11	00-544424	Clamp – Hose #8	1
12	00-436397-00002	Spring – 1/2 Hose Support 7/16 x 10 1/2 (Inside Item 13)	1
13	00-329017-00002	Hose – 1/2 x 13 Barbed Union to Fill Air Gap	1


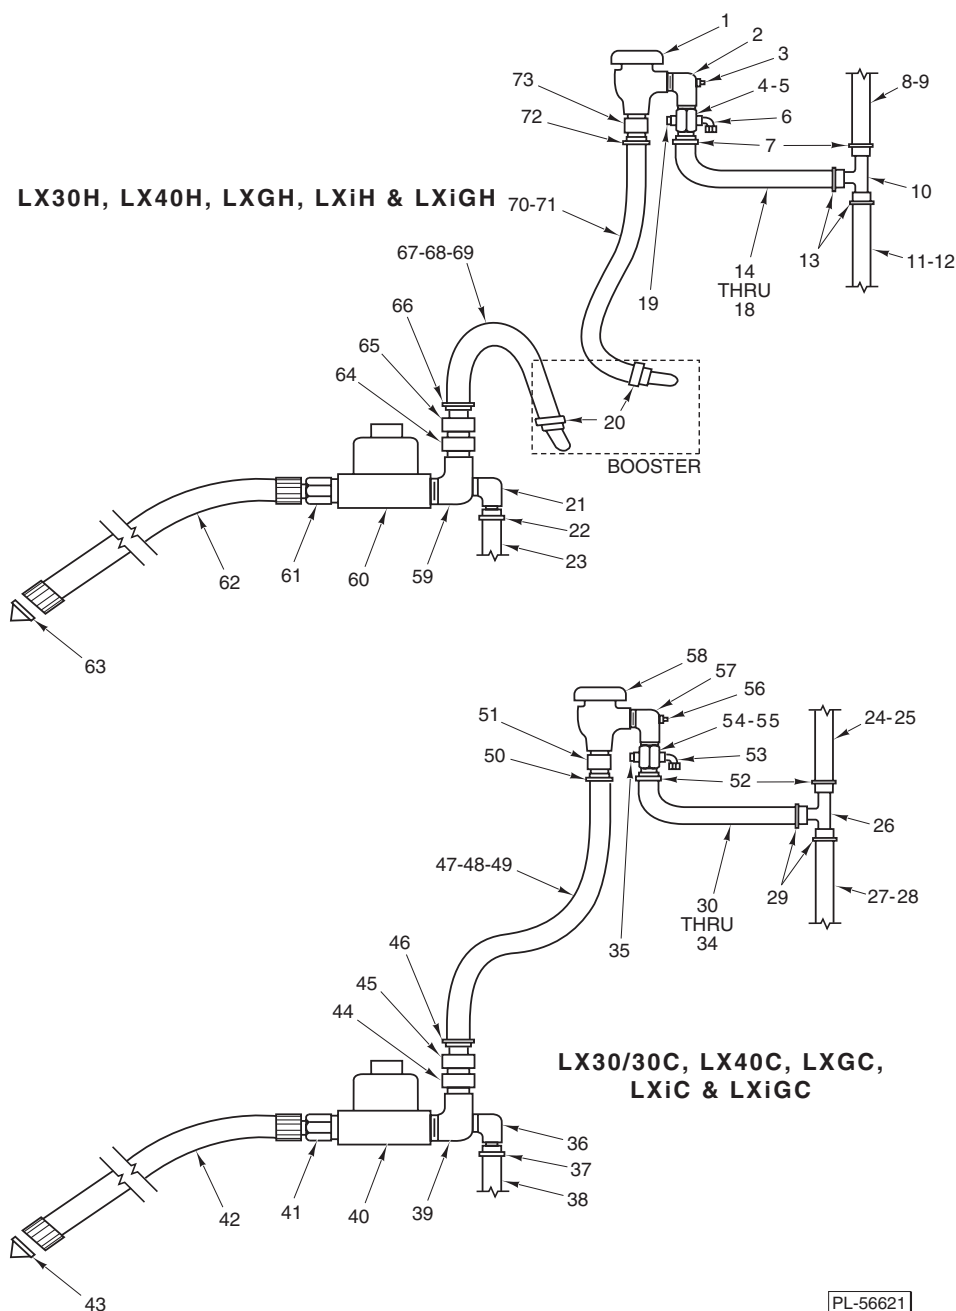


LX30/40, LXG, LXI, & LXIG SERIES PLUMBING

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56621			
1	00-277112-00002	Vacuum Breaker (3/4)	1
2	00-475052	Elbow – 90 Deg. Modified Street	1
3	00-328994	Sensor – Rinse Assy. Probe	1
4	00-329222	Connector – Chemical Feeder (Used with Rinse Aid Option)	1
5	FP-087-31	Fitting – Hose 3/4 MPT W/Barbed Adaptor (Used W/O Rinse Aid Option)	1
6	FP-087-46	Fitting – 1/4 Tube (Used With Rinse Aid Option)	1
7	00-544424	Clamp – Hose #8	1
8	00-329017	Hose – 1/2 x 22 Rinse Tee to Wash Arm (LX30/40 & LXi Series)	1
9	00-329017-00003	Hose – 1/2 x 19 3/8 Rinse Tee to Wash Arm (LXG & LXiG Series)	1
10	00-328612	Tee – Rinse	1
11	00-329017	Hose – 1/2 x 22 (LX30/40 & LXi Series)	1
12	00-329017-00003	Hose – 1/2 x 19 3/8 (LXG & LXiG Series)	1
13	00-544424	Clamp – Hose #8	1

LX30/40, LXG, LXI, & LXIG SERIES PLUMBING (CONT.)

ILLUS. PL-56621	PART NO.	NAME OF PART	AMT.
14	00-436397-00001	Spring – $\frac{5}{8}$ Hose Support $\frac{1}{2}$ x $13\frac{1}{2}$ (Inside Items 16, 17, & 18)	1
15	00-528499	Clamp – Hose	1
16	00-892244-00001	Hose – $\frac{5}{8}$ x 11 Vacuum Breaker to Rinse Tee (LX30/40 & LXI Series)	1
17	00-892244-00002	Hose – $\frac{5}{8}$ x $7\frac{3}{4}$ Vacuum Breaker to Rinse Tee (LXG & LXIG Series)	1
18	00-329015-00001	Hose – $\frac{5}{8}$ x $11\frac{3}{4}$ Vacuum Breaker to Rinse Tee (LX30/40 Series W/O R.A. Option)	1
19	FP-052-20	Pipe Plug $1\frac{1}{8}$ Sq. Hd. (SST) (Used With Rinse Aid Option)	1
20	00-544424	Clamp – Hose #8	1
21	FP-088-29	Fitting – Hose $\frac{1}{4}$ Barb x $\frac{1}{8}$ -27 NPTM	1
22	00-528501	Clamp – Hose #4	2
23	00-475060	Hose – $\frac{1}{4}$ x 12 Pressure Gauge to Fill Valve	1
24	00-329017	Hose – $\frac{1}{2}$ x 22 Rinse Tee to Wash Arm (LX30/40 & LXI Series)	1
25	00-329017-00003	Hose – $\frac{1}{2}$ x $19\frac{3}{8}$ Rinse Tee to Wash Arm (LXG & LXIG Series)	1
26	00-328612	Tee – Rinse	1
27	00-329017	Hose – $\frac{1}{2}$ x 22 (LX30/40 Series)	1
28	00-329017-00003	Hose – $\frac{1}{2}$ x $19\frac{3}{8}$ (LXG Series)	1
29	00-544424	Clamp – Hose #8	1
30	00-436397-00001	Spring – $\frac{5}{8}$ Hose Support $\frac{1}{2}$ x $13\frac{1}{2}$ (Inside Items 32, 33, & 34)	1
31	00-528499	Clamp – Hose	1
32	00-892244-00001	Hose – $\frac{5}{8}$ x 11 Vacuum Breaker to Rinse Tee (LX30/40 & LXI Series)	1
33	00-892244-00002	Hose – $\frac{5}{8}$ x $7\frac{3}{4}$ Vacuum Breaker to Rinse Tee (LXG & LXIG Series)	1
34	00-329015-00001	Hose – $\frac{5}{8}$ x 11 Vacuum Breaker to Rinse Tee (LX30/40 Series W/O R.A. Option)	1
35	FP-052-20	Pipe Plug $\frac{1}{8}$ Sq. Hd. (SST) (Used with Rinse Aid Option)	1
36	FP-088-29	Fitting – Hose $\frac{1}{4}$ In. Barb x $\frac{1}{8}$ -27 NPTM	1
37	00-528501	Clamp – Hose #4	2
38	00-475060	Hose – $\frac{1}{4}$ x 12 Pressure Gauge to Fill Valve	1
39	00-475052	Elbow – 90 Deg. Modified Street	1
40	00-475227-00001	Valve – Solenoid $\frac{3}{4}$ (110-120 V.)	1
41	FP-087-32	Fitting – Hose $\frac{5}{8}$ x $\frac{3}{4}$ MPT W/Garden Adapter	1
42	00-293408	Hose – Fill Assy.	1
43	00-292787	Filter – Fill Hose Assy.	1
44	00-328818-00002	Regulator – Flow	1
45	FP-087-31	Fitting – Hose $\frac{5}{8}$ x $\frac{3}{4}$ MPT W/Barbed Adapter	1
46	00-544424	Clamp – Hose #8	1
47	00-329015-00002	Hose – $\frac{5}{8}$ x 48 In. – Fill Valve to Vacuum Breaker (LX30/30C, LX40C, & LXiC)	1
48	00-892244-00004	Hose – $\frac{5}{8}$ x 43 In. – Fill Valve to Vacuum Breaker (LXGC & LXiGC)	1
49	00-892244-00005	Hose $\frac{5}{8}$ (LXiC & LXiGC)	1
50	00-544424	Clamp – Hose #8	1
51	FP-087-31	Fitting – Hose $\frac{5}{8}$ x $\frac{3}{4}$ MPT W/Barbed Adaptor	1
52	00-544424	Clamp – Hose #8	1
53	FP-087-46	Fitting – $\frac{1}{4}$ Tube (Used with Rinse Aid Option)	1
54	00-329222	Connector – Chemical Feeder (Used with Rinse Aid Option)	1
55	FP-087-31	Fitting – Hose $\frac{3}{4}$ MPT W/Barbed Adaptor (Used W/O Rinse Aid Option)	1
56	00-328994	Sensor – Rinse Assy. Probe	1
57	00-475052	Elbow – 90 Deg. Modified Street	1
58	00-277112-00002	Vacuum Breaker ($\frac{3}{4}$)	1
59	00-475052	Elbow – 90 Deg. Modified Street	1
60	00-475227-00001	Valve – Solenoid $\frac{3}{4}$ (110-120 V.)	1
61	FP-087-32	Fitting – Hose $\frac{5}{8}$ x $\frac{3}{4}$ MPT W/Garden Adaptor	1
62	00-293408	Hose – Fill Assy.	1
63	00-292787	Filter – Fill Hose Assy.	1
64	00-328818-00002	Regulator – Flow	1
65	FP-087-31	Fitting – Hose $\frac{5}{8}$ x $\frac{3}{4}$ MPT W/Barbed Adaptor	1
66	00-544424	Clamp – Hose #8	1
67	00-436397-00001	Spring – $\frac{5}{8}$ Hose Support $\frac{1}{2}$ x $13\frac{1}{2}$ (Inside Item 69)	1
68	00-528449	Clamp – Hose	1
69	00-329015-00006	Hose – $\frac{5}{8}$ x 18 Fill Valve to Booster Inlet (LX30H, LX40H, LXGH, LXiH, & LXiGH)	1
70	00-329015-00002	Hose – $\frac{5}{8}$ x 43 Booster to Vacuum Breaker (LX30H, LX40H, & LXiH)	1
71	00-892244-00004	Hose – $\frac{5}{8}$ x 43 Booster to Vacuum Breaker (LXGH & LXiGH)	1
72	00-544424	Clamp – Hose #8	1
73	FP-087-31	Fitting – Hose $\frac{5}{8}$ x $\frac{3}{4}$ MPT W/Barbed Adaptor	1
	00-475228	Service Kit – $\frac{3}{4}$ Solenoid Valve (Incls. Cap, Bonnet Gasket, Stem Spring, & Pin)	1
	00-270380	Coil – Solenoid Valve	1
	00-118270	Vacuum Bracket Kit	1

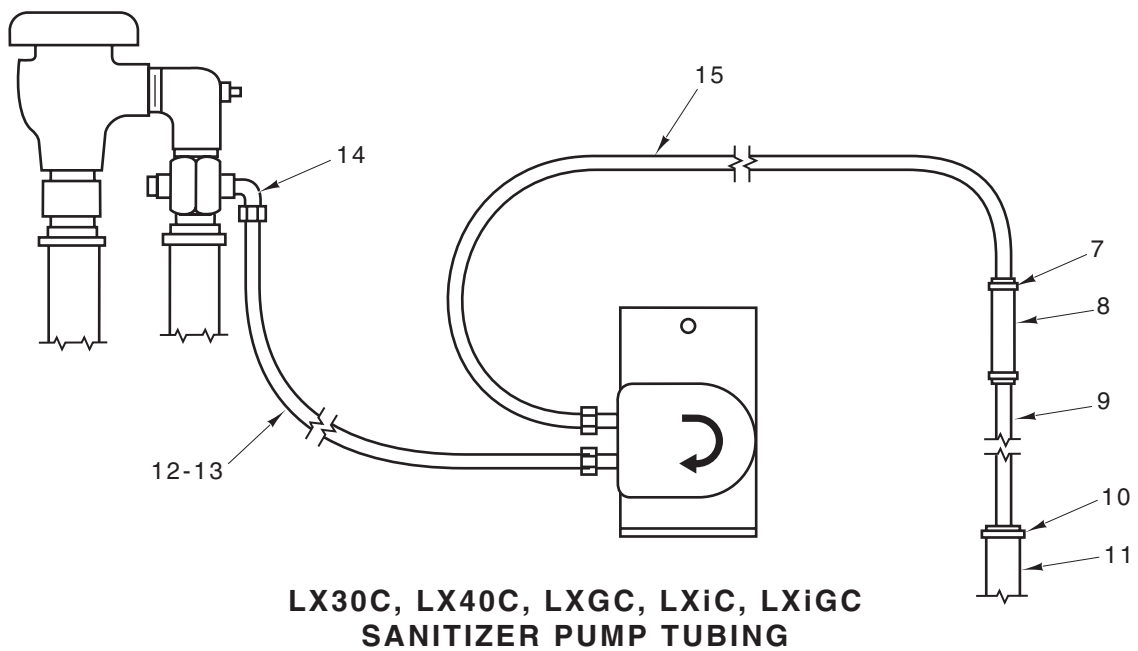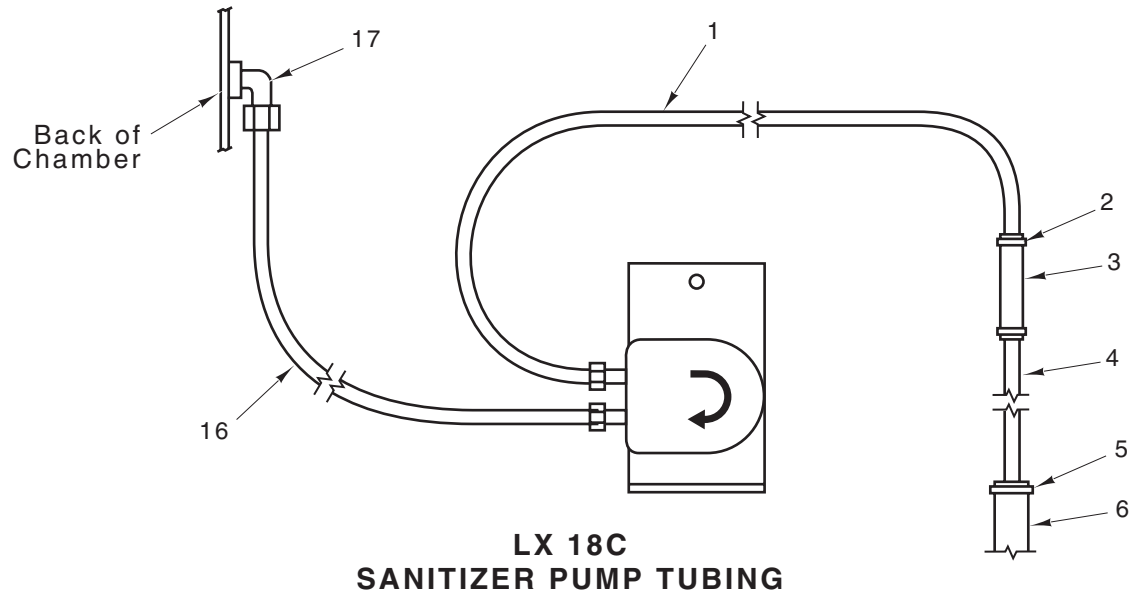


PL-56622

**LXC SERIES, LXGC, LXIC, & LXIGC
SANITIZER PUMP TUBING**

**LXC SERIES, LXGC, LXIC, & LXIGC
SANITIZER PUMP TUBING**


ILLUS. PL-56622	PART NO.	NAME OF PART	AMT.
1	00-185105-00019	Tubing – 1/4 x 84 Indicator to Pump (White)	1
2	00-185111-00001	Clamp – Hose 3/8	2
3	00-123213-00012	Tubing – 5/16 x 4 Indicator (Clear)	1
4	00-185105-00012	Tubing – 1/4 x 22 Supply to Indicator (White)	1
5	00-185111-00002	Clamp – Hose 7/16	1
6	00-185112	Stand Pipe 20 1/2 Lg.	1
7	00-185111-00001	Clamp – Hose 3/8	2
8	00-123213-00012	Tubing – 5/16 x 4 Indicator (Clear)	1
9	00-185105-00012	Tubing – 1/4 x 22 Supply to Indicator (White)	1
10	00-185111-00002	Clamp – Hose 7/16	1
11	00-185112	Stand Pipe 20 1/2 Lg.	1
12	00-185105-00018	Tubing – 1/4 x 48 Pump to Chemical Feeder (White) (LX30C, LX40C, & LXiC)	1
13	00-185105-00022	Tubing – 1/4 x 43 Pump to Chemical Feeder (White) (LXGC & LXiGC)	1
14	FP-087-46	Fitting – Tube 1/4	1
15	00-185105-00019	Tubing – 1/4 x 84 Indicator to Pump (White)	1
16	00-185105-00017	Tubing – 1/4 x 30 Pump to Chamber (White)	1
17	FP-087-46	Fitting – Tube 1/4	1
	00-294677-00002	Clamp – Wire	1

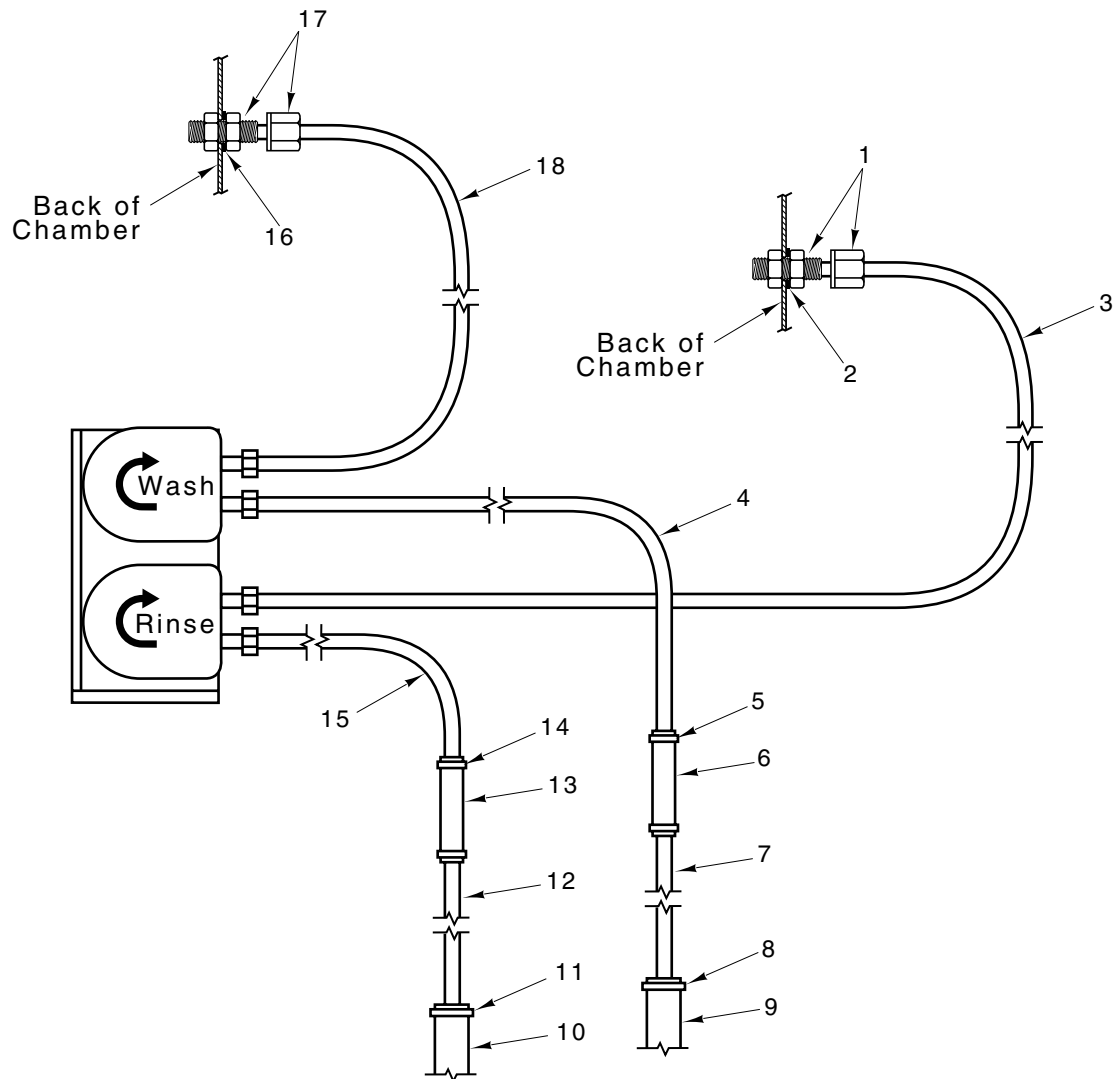

PL-55731

LX18 DETERGENT/RINSE AID PUMP TUBING


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55731			
1	00-329981	Union – Bulkhead (Rinse Aid)	AR
2	00-329982	Gasket – Union Bulkhead	AR
3	00-185105-00017	Tubing – 1/4 x 30 Rinse Aid Pump to Chamber (White)	1
4	00-185105-00020	Tubing – 1/4 x 120 Indicator to Detergent Pump (Red)	1
5	00-185111-00001	Clamp – 3/8	2
6	00-123213-00012	Tubing – 5/16 x 4 Indicator (Clear)	1
7	00-185105-00012	Tubing – 1/4 x 22 Supply to Indicator (White)	1
8	00-185111-00002	Clamp – Hose 7/16	1
9	00-185112	Stand Pipe 20 1/2 Detergent	1
10	00-185112	Stand Pipe 20 1/2 Rinse Aid	1
11	00-185111-00002	Clamp – Hose 7/16	1
12	00-185105-00012	Tubing – 1/4 x 22 Supply to Indicator (White)	1
13	00-123213-00012	Tubing – 5/16 x 4 Indicator (Clear)	1
14	00-185111-00001	Clamp – Hose 3/8	2
15	00-185105-00021	Tubing – 1/4 x 84 Indicator to Rinse Aid Pump (Blue)	1
16	00-329982	Gasket – Union Bulkhead	AR
17	00-329981	Union – Bulkhead (Detergent)	AR
18	00-185105-00017	Tubing – 1/4 x 30 Detergent Pump to Chamber (White)	1

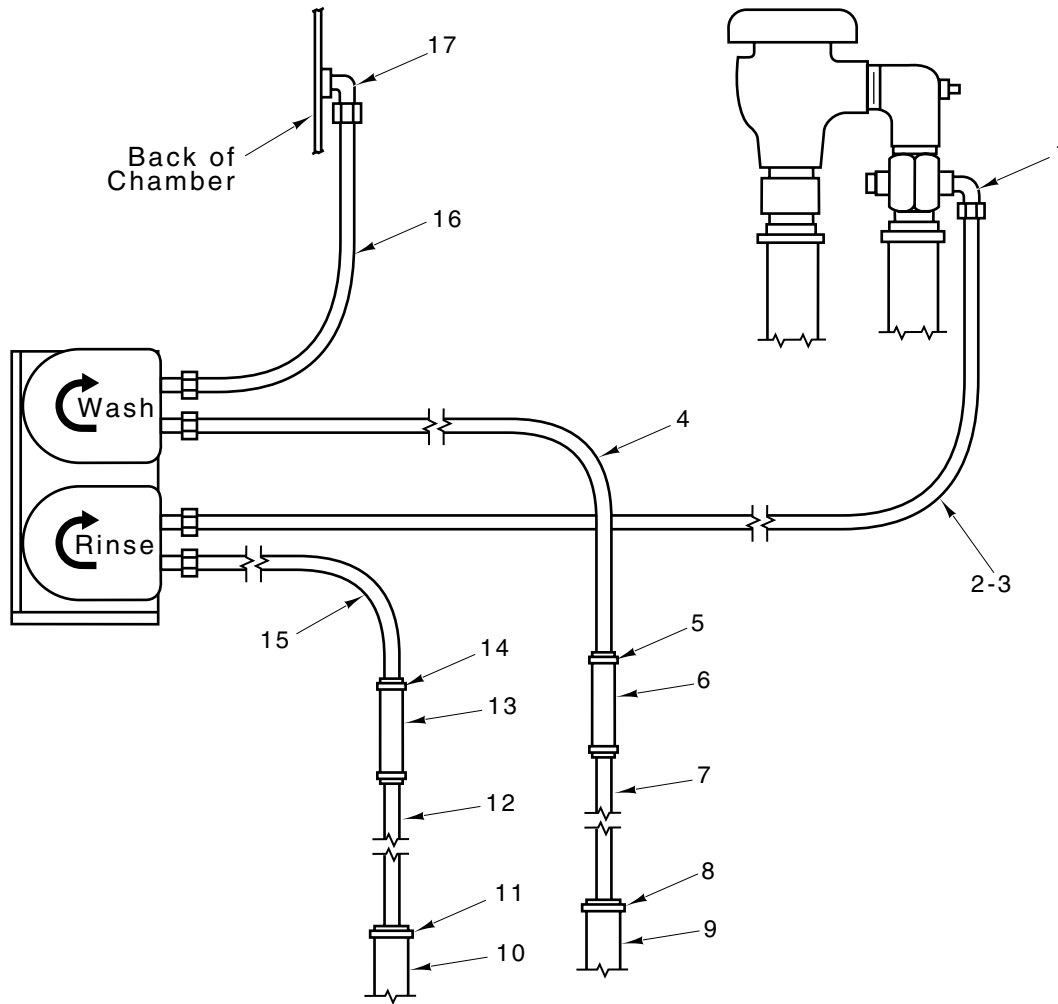

PL-55733


LX30/40, LXG, LXI, & LXIG SERIES DETERGENT/RINSE AID PUMP TUBING

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55733			
1	FP-087-46	Fitting - Tube $\frac{1}{4}$	1
2	00-185105-00018	Tubing - $\frac{1}{4}$ x 48 R.A. Pump to Chemical Feeder (White) (LX30/40 & LXi Series)	1
3	00-185105-00022	Tubing - $\frac{1}{4}$ x 43 R.A. Pump to Chemical Feeder (White) (LXG & LXiG Series)	1
4	00-185105-00020	Tubing - $\frac{1}{4}$ x 120 Indicator to Detergent Pump (Red)	1
5	00-185111-00001	Clamp - Hose $\frac{3}{8}$	2
6	00-123213-00012	Tubing - $\frac{5}{16}$ x 4 Indicator (Clear)	1
7	00-185105-00012	Tubing - $\frac{1}{4}$ x 22 Supply to Indicator (White)	1
8	00-185111-00002	Clamp - Hose $\frac{7}{16}$	1
9	00-185112	Stand Pipe 20 $\frac{1}{2}$ Detergent	1
10	00-185112	Stand Pipe 20 $\frac{1}{2}$ Rinse Aid	1
11	00-185111-00002	Clamp - Hose $\frac{7}{16}$	1
12	00-185105-00012	Tubing - $\frac{1}{4}$ x 22 Supply to Indicator (White)	1
13	00-123213-00012	Tubing - $\frac{5}{16}$ x 4 Indicator (Clear)	1
14	00-185111-00001	Clamp - Hose $\frac{3}{8}$	2
15	00-185105-00021	Tubing - $\frac{1}{4}$ x 84 Indicator to Rinse Aid Pump (Blue)	1
16	00-185105-00017	Tubing - $\frac{1}{4}$ x 30 Detergent Pump to Chamber (White)	1
17	FP-087-46	Fitting - Tube $\frac{1}{4}$	1

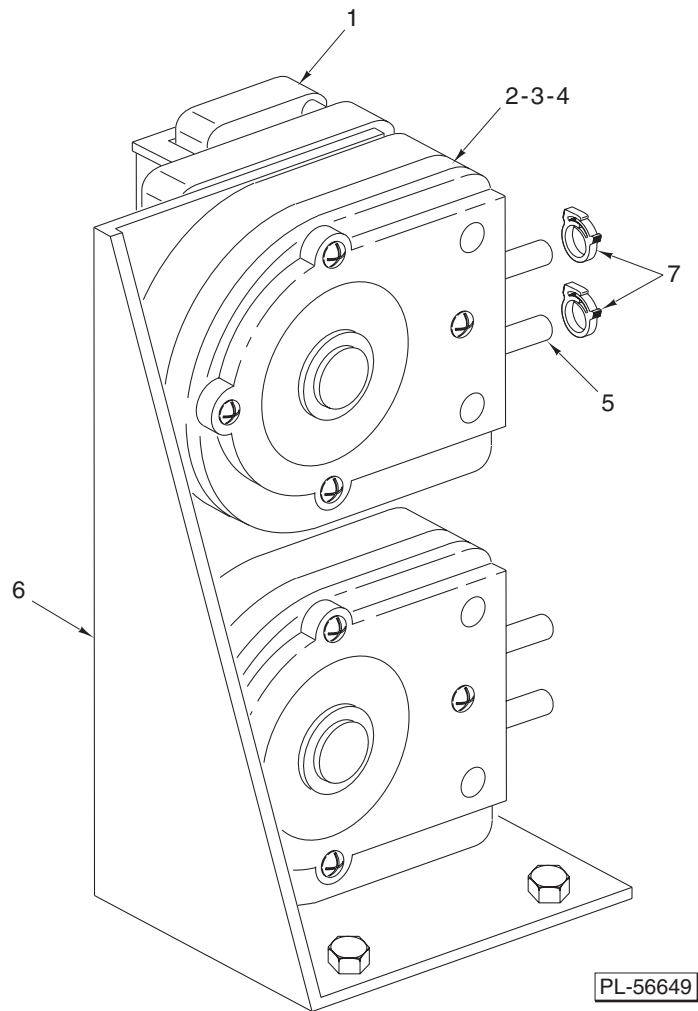

CHEMICAL PUMPS

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56649			
1	00-185097-00001	Pump Motor Assy. (115 V., 60 Hz.)	1
2	00-329871	Chemical Pump	1
3	SC-022-09	Mach. Screw 8-32 x 1/2 Slotted Flat Hd. (SST)	2
4	SC-116-20	Mach. Screw 6-32 x 1/2 Slotted Bndg. Hd. (SST)	4
5	00-328252	Tubing – Chemical Pump	1
6	00-328585	Bracket – Peristaltic Pump	1
7	00-185111-00001	Clamp – Hose	2

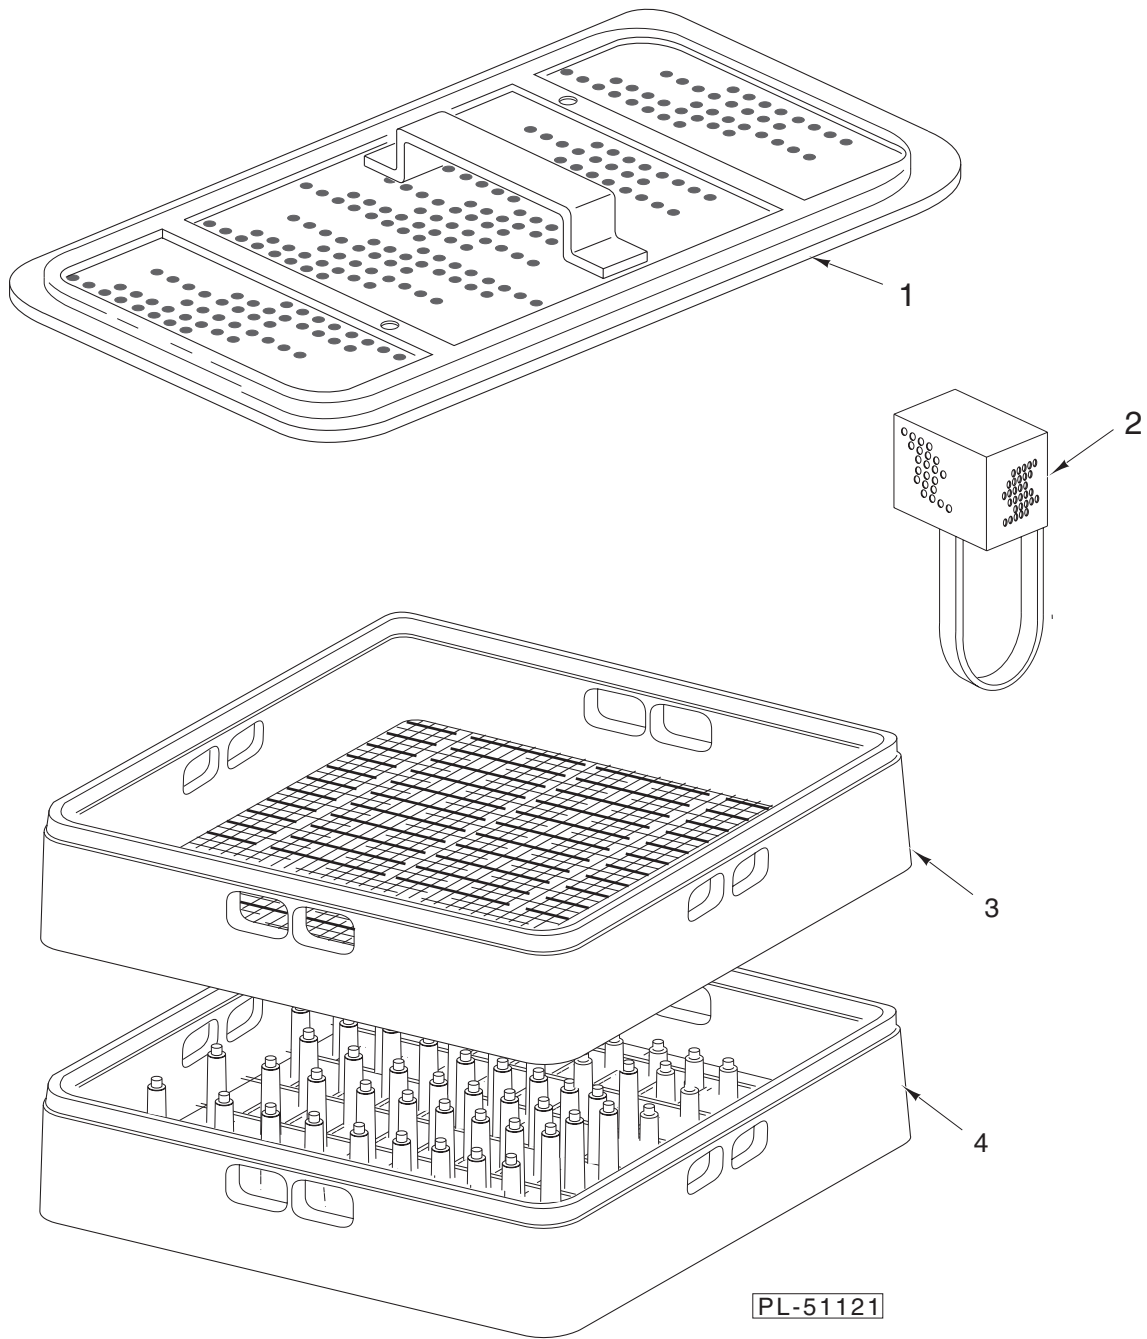

MISCELLANEOUS

ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-328997-00001	Strainer – Sump	1
2	00-329060	Strainer – Sump Tube	1
3	00-315193	Rack – Combination (Packaged)	1
4	00-315191	Rack – Peg (Packaged)	1
	00-329313	Paper – Litmus (Vial) (100 Strips 2 1/4 Lg.)	1
	00-329277	Power Cord Kit (Incls. Reliefs) (LX Series)	1
	00-892839	Power Cord Kit (380-400/3) (LXi Series)	1
	00-473042-00001	Drawer Assy. (LX18 Series)	1
	00-473042-00002	Drawer Assy. (LX30 Series)	1
	00-473042-00003	Drawer Assy. (LX40 Series)	1
	00-473042-00004	Drawer Assy. (LXG Series)	1

NOTES