




CATALOG OF REPLACEMENT PARTS

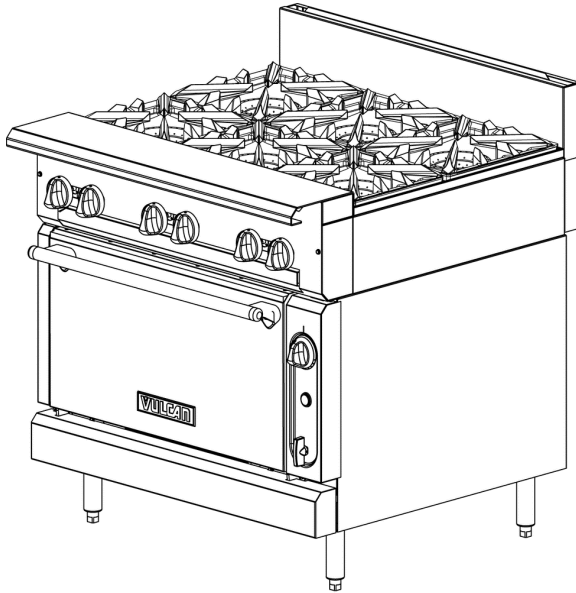

V6B36S Shown

V Series HDR Gas Ranges

TOPS

Open Top
Hot Top
Griddle Top
Work Surface

BASES

Standard Oven
Convection Oven
Cabinet Base


*Add "B" for Cabinet Base.

*Add "S" for Standard Oven Base on
36" Models.

*Add "C" for Convection Oven Base on
36" Models.

Table of Contents

5	"B" MODEL 36", 24", 18", 12" CABINET BASE
7	"S" MODEL OVEN
9	"S" MODEL GAS MANIFOLD ASSY
11	"C" MODEL OVEN
13	"C" MODEL GAS MANIFOLD ASSY
15	36", 24" & 12" OPEN TOP BURNER
17	36"- 4 & 18"- 2 OPEN TOP BURNER
19	36" & 24" CHAR BROILER
21	36" & 18" FRENCH TOP RADIAL FIN HOT TOP
23	36", 24" & 18" THERMO CONTROL GRIDDLE TOP
25	36", 24" & 18" MANUAL CONTROL GRIDDLE TOP
27	36", 24", 18" & 12" WORK TOP
29	36" AND 18" STEP UP OPEN TOP BURNER
31	36" 6 OPEN TOP STEP UP BURNER
33	STEP UP BURNER ASSEMBLY

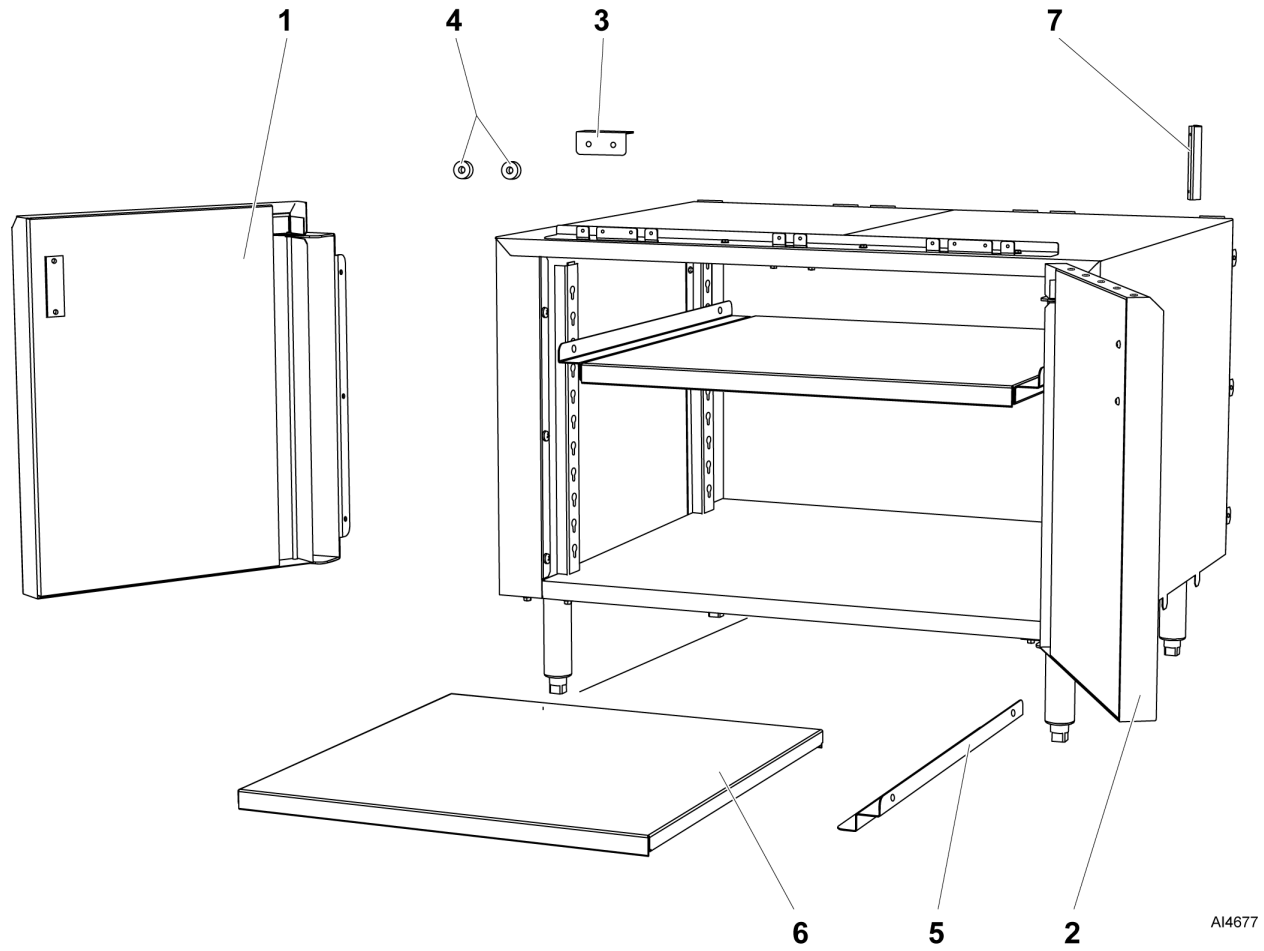


AI4677

"B" MODEL 36", 24", 18", 12" CABINET BASE

"B" MODEL 36", 24", 18", 12" CABINET BASE


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-AI4677			
1	00-958087-000G4	Door Assy. L/H (36" Base Cabinet Only).....	1
	00-958087-000G3	Door Assy. (24" Base Cabinet Only).....	1
	00-958087-000G2	Door Assy. (18" Base Cabinet Only).....	1
	00-958087-000G1	Door Assy. (12" Base Cabinet Only).....	1
2	00-958087-000G5	Door Assy. R/H.....	1
3	00-499740-00001	Bracket - Cabinet Door Magnet.....	1
4	00-497296-00001	Magnet - Door.....	2
5	00-499744-000G1	Support - Shelf.....	2
6	00-499747-00001	Shelf (36" Base Cabinet Only).....	1
	00-499747-00002	Shelf (24" Base Cabinet Only).....	1
	00-499747-00003	Shelf (18" Base Cabinet Only).....	1
7	00-408615-00021	Handle - Door Keeler R3122.....	2

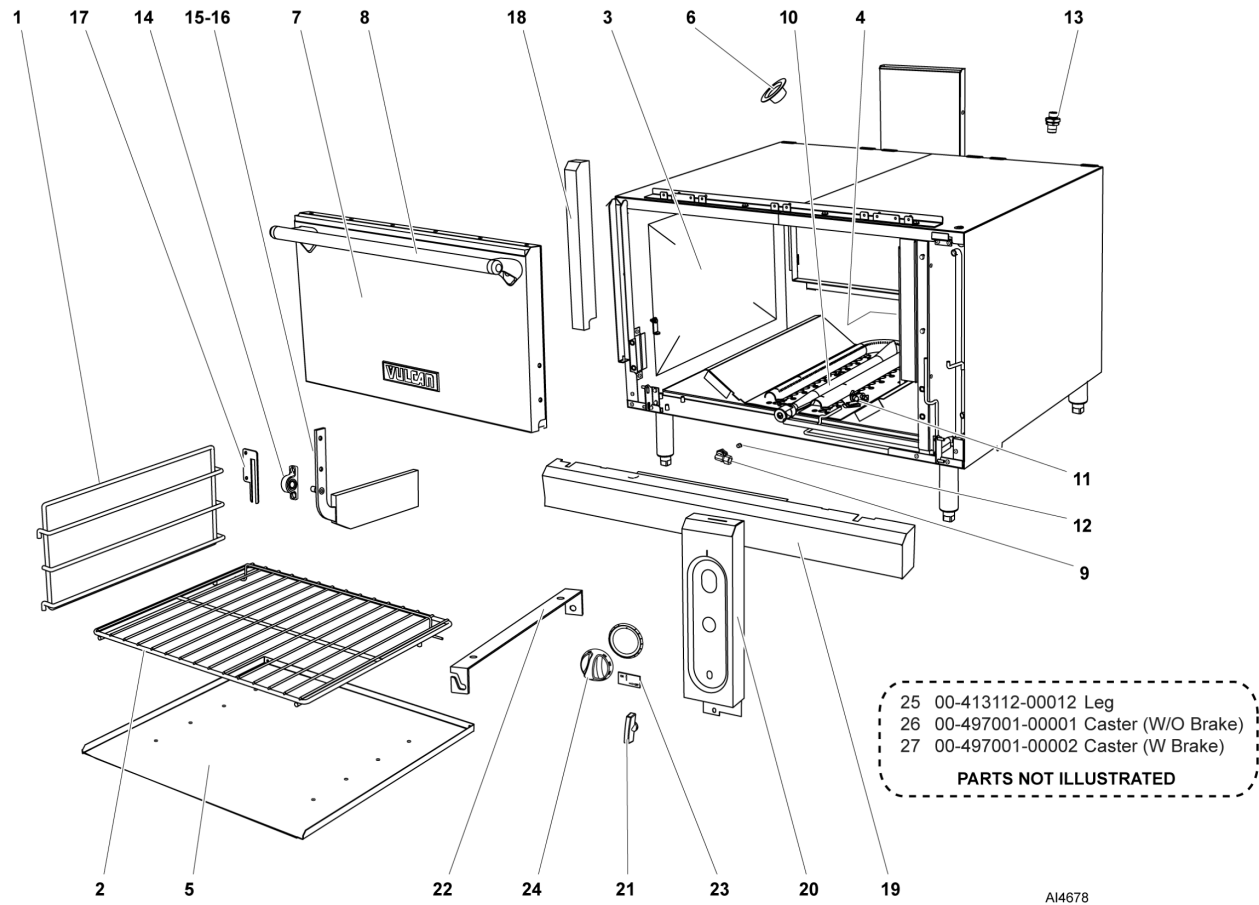

"S" MODEL OVEN

"S" MODEL OVEN


ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-499468-00001	Support - Wire Rack.....	2
2	00-499517-00002	Rack, Oven.....	1
3	00-499467-00001	Oven - Side Liner R/H (Porcelain).....	1
	00-499467-00003	Oven - Side Liner R/H (SST).....	1
4	00-499467-00002	Oven - Side Liner L/H (Porcelain).....	1
	00-499467-00004	Oven - Side Liner L/H (SST).....	1
5	00-499800-000G1	Bottom Liner (Porcelain).....	1
	00-499800-000G2	Bottom Liner (SST).....	1
6	00-405930-00001	NLA - Obsolete--Eyelet - Brass.....	1
7	00-499513-000G3	Door (Porcelain) less handle.....	1
	00-499513-000G4	Door (SST) less handle.....	1
8	00-956635-00001	Handle - Oven Door.....	1
9	00-404079-0000F	Nozzle, 90 Deg. Burner.....	1
10	00-497891-00001	Burner - Oven.....	1
11	00-412787-00001	Pilot - Oven (NAT).....	1
	00-412787-00002	Pilot - Oven (LP).....	1
12	00-010901-00031	Orifice - Spud (31 Drill) (Sea Level - 2499 Ft.)(NAT).....	1
	00-010901-00047	Orifice - Spud (47 Drill) (Sea Level - 2499 Ft.) (LP).....	1
13	00-499554-00001	Disconnect - Main Male Q.....	1
14	00-497906-00001	Bearing - Pillow Block.....	2
15	00-499512-000G3	Counterweight - Oven L.H.....	1
16	00-499512-000G4	Counterweight - Oven R.H.....	1
17	00-499452-00001	Coverplate.....	1
18	00-958353-00001	Cover - Moulain Panel.....	1
19	00-958470-000G1	Kick Panel.....	1
20	00-499507-00001	Panel - Oven Control.....	1
21	00-413157-00001	Knob - Shut Off.....	1
22	00-497883-00001	Bracket - Thermostat Bulb.....	1
23	00-414708-00001	Plate - On-Off.....	1
24	00-499168-00001	Knob - Oven 650 Deg. F.....	1
	00-499168-00002	Knob - Oven 550 Deg. F.....	1
25	00-413112-00012	Leg (6 In.).....	4
26	00-497001-00001	Caster (Without Brake).....	AR
27	00-497001-00002	Caster (With Brake).....	AR

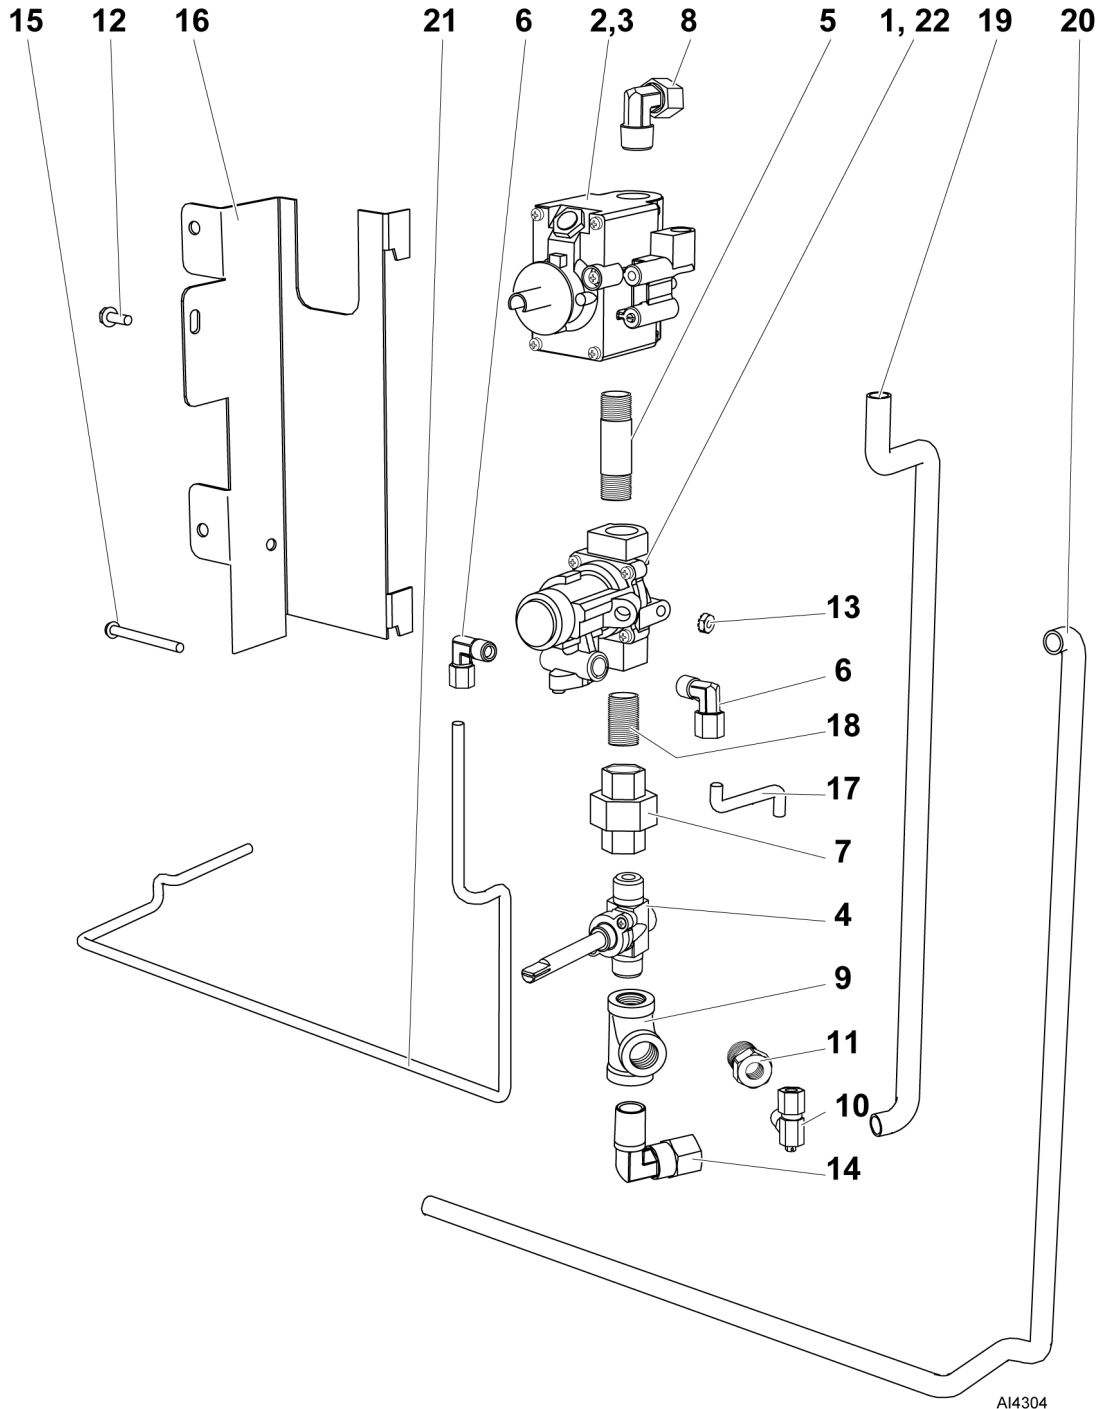

"S" MODEL GAS MANIFOLD ASSY

"S" MODEL GAS MANIFOLD ASSY


ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-497765-00001	Valve - Pilot Safety.....	1
2	00-407522-00007	Thermosat - 550 Deg. F.....	1
3	00-407522-00008	Thermostat - 400-650 Deg. F.....	1
4	00-719971	Valve - Gas Manual Shut-Off.....	1
5	FP-035-54	Pipe - 3/8 X 2.250 (BLKSTL) (TBE).....	1
6	FP-012-21	Elbow 90 Deg. (1/8 Male Pipe x 1/4 Tube).....	2
7	00-719032	Union.....	1
8	FP-085-68	Fitting- Elbow (7/16 TBG X 3/8 MPT).....	1
9	FP-019-10	Tee - 3/8 X 3/8 X 3/8 (BLKSTL).....	1
10	00-404193-00001	Valve - Pilot 260 BROILER.....	1
11	00-719066	Bushing - Pipe 3/8 -1/8.....	1
12	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT.....	1
13	NS-044-09	Nut Assy. 10-24 Hex KEPS.....	1
14	FP-012-03	Fitting - Elbow 1/2 TBG X 3/8 MPT.....	1
15	SC-060-38	Cap Screw 1/4-20 X 5/8 Hex Hd.....	1
16	00-499465-00001	Bracket - Gas Mounting.....	1
17	00-426505-00009	Tube - Flex 1/4" O.D. 9" Lg.....	1
18	FP-035-46	Pipe 3/8 x 1 Lg. TBE.....	1
19	00-426509-00024	Tube - Flex 1/2" O.D. 24" Lg.....	1
20	00-426508-00048	Tube - Flex 7/16" O.D. 48" Lg.....	1
21	00-426505-00036	Tube - Flex 1/4" O.D. 36" Lg.....	1
22	00-412788-00048	Thermocouple (48 In.).....	1

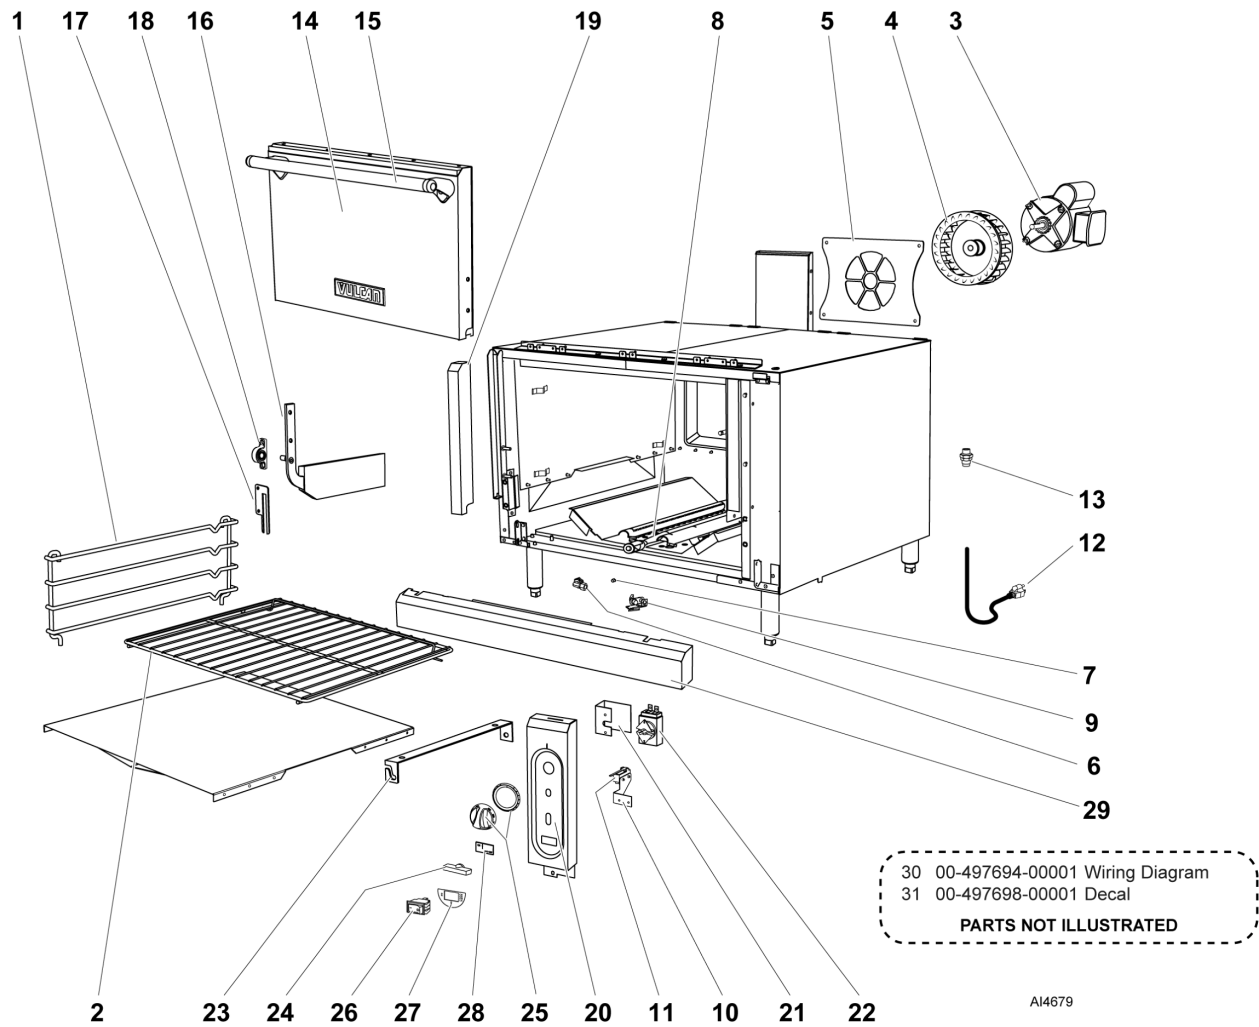

"C" MODEL OVEN

"C" MODEL OVEN

ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-499468-00002	Support - Wire Rack R.H.....	1
	00-499468-00003	Support - Wire Rack L.H.....	1
2	00-499517-00002	Rack, Oven.....	2
3	00-499547-000G1	Motor - 1/6 HP, 120V.....	1
4	00-415780-00008	Wheel - Blower (Incls. Set Screws).....	1
5	00-499641-00001	Grate - Motor Convection Oven.....	1
6	00-404079-0000F	Nozzle, 90 Deg. Burner.....	1
7	00-010901-00042	Orifice - Spud (Drill 42) (Nat.) (Sea Level - 2499 FT.).....	1
	00-010901-00051	Orifice - Spud (51 Drill) Orifice - Spud (Drill 51) (Pro) (Sea Level - 2499 Ft.).....	1
8	00-497891-00001	Burner - Oven.....	1
9	00-412787-00001	Pilot - Oven (NAT).....	1
	00-412787-00002	Pilot - Oven (LP).....	1
10	00-956633-00002	Bracket - Switch Door.....	1
11	00-411496-000F1	Switch - Micro Door.....	1
12	00-405016-00001	Cord - Electric Supply (120 V. Only).....	1
13	00-499554-00001	Disconnect - Main Male Q.....	1
14	00-499513-000G3	Door (Porcelain) less handle.....	1
14A	00-499513-000G4	Door (SST) less handle.....	1
15	00-956635-00001	Handle - Oven Door.....	1
16	00-499512-000G6	Counterweight - Oven Convection R.H.....	1
	00-499512-000G3	Counterweight - Oven L.H.....	1
17	00-499452-00001	Coverplate.....	1
18	00-497906-00001	Bearing - Pillow Block.....	1
19	00-958353-00001	Cover - Moulain Panel.....	1
20	00-499507-00003	Cover - Control Panel.....	1
21	00-957464-00001	Guard - Thermostat.....	1
22	00-411506-00015	Thermostat (200-550 Deg. F).....	1
23	00-497883-00002	Bracket - Thmostat Bulb.....	1
24	00-413157-00001	Knob - Shut Off.....	1
25	00-499168-00003	Knob - Oven 550F Convection.....	1
26	00-715112	Switch - Rocker, Lighted.....	1
27	00-957609-00001	Label - On - Off Cool Down.....	1
28	00-414708-00001	Plate - On-Off.....	1
29	00-499515-000G1	Kick Plate Assy.....	1
30	00-497694-00001	Wiring Diagram.....	1
31	00-497698-00001	Decal - Wire Schematic.....	1

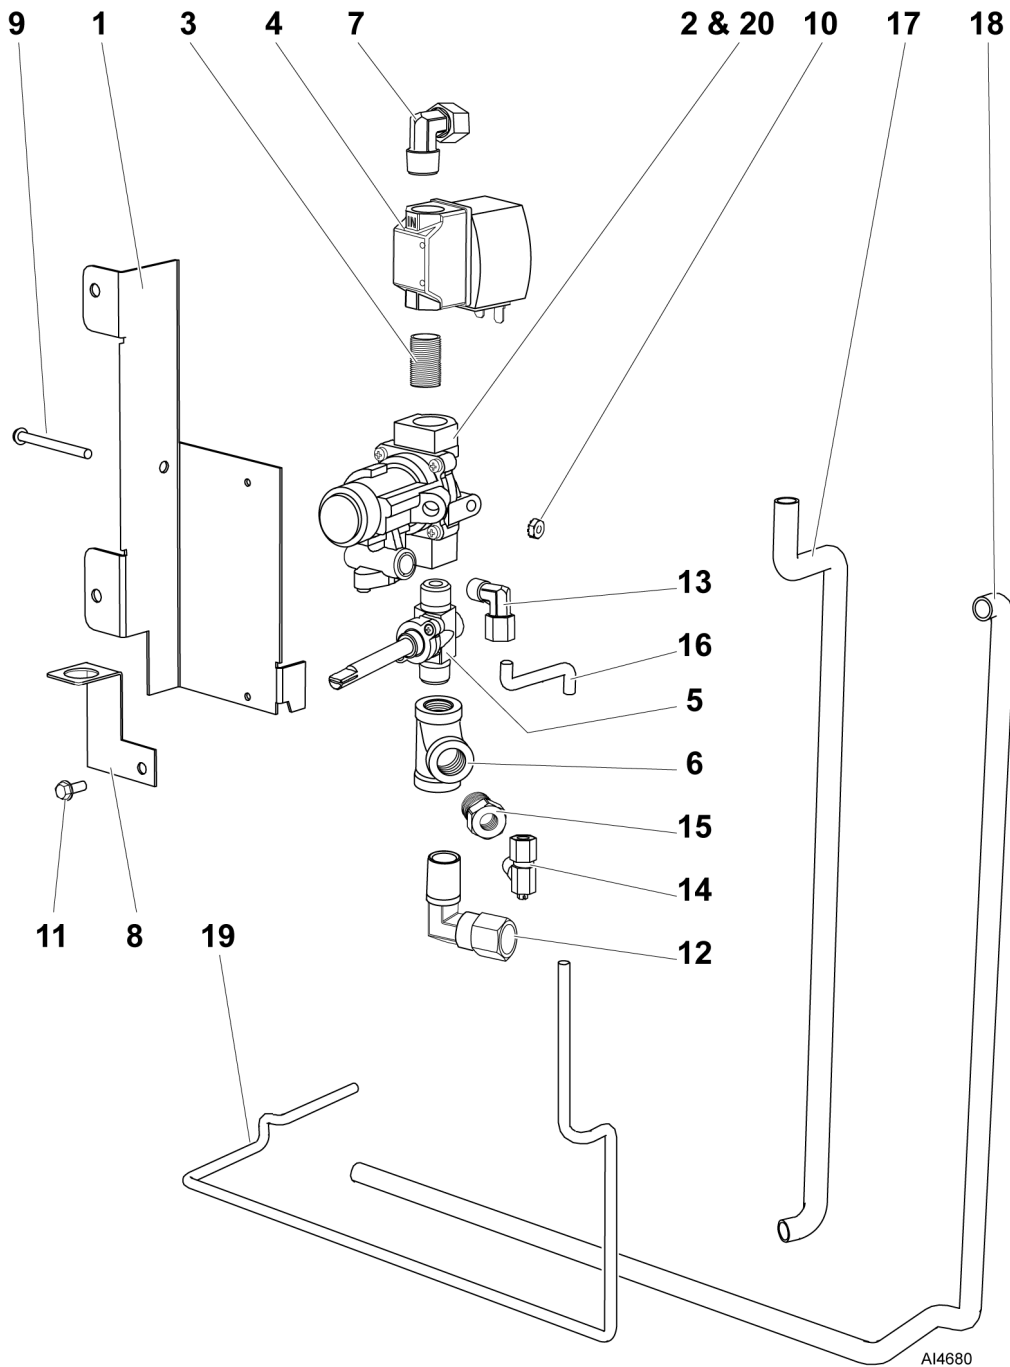


AI4680

"C" MODEL GAS MANIFOLD ASSY

"C" MODEL GAS MANIFOLD ASSY


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-AI4680			
1	00-499651-00003	Bracket - Mounting Gas (Convection).....	1
2	00-497765-00001	Valve - Pilot Safety - Basso.....	1
3	FP-035-47	PIPE - 3/8 X 1.125 (TBE) (BLKSTL).....	1
4	00-428045-00001	Gas Solenoid Valve.....	1
5	00-719971	Valve - Gas Manual Shut-Off.....	1
6	FP-019-10	Tee - 3/8 X 3/8 X 3/8 (BLKSTL).....	1
7	FP-085-68	Fitting- Elbow (7/16 TBG X 3/8 MPT).....	1
8	00-956615-00002	Bracket - Manifold Support.....	1
9	SC-060-38	Cap Screw 1/4-20 X 5/8 Hex Hd.....	1
10	NS-044-09	Nut Assy. 10-24 Hex KEPS.....	1
11	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT.....	1
12	FP-012-03	Fitting - Elbow 1/2 TBG X 3/8 MPT.....	1
13	FP-012-21	Elbow 90 Deg. (1/8 Male Pipe x 1/4 Tube).....	1
14	00-404193-00001	Valve - Pilot.....	1
15	FP-026-04	Bushing - Pipe 3/8 to 1/8.....	1
16	00-426505-00006	Tube - Flex (1/4 x 6 In.).....	1
17	00-426509-00024	Tube - Flex 1/2" O.D. 24" Lg.....	1
18	00-426508-00048	Tube - Flex 7/16" O.D. 48" Lg.....	1
19	00-426505-00036	Tube - Flex 1/4" O.D. 36" Lg.....	1
20	00-412788-00048	Thermocouple (48 In.).....	1

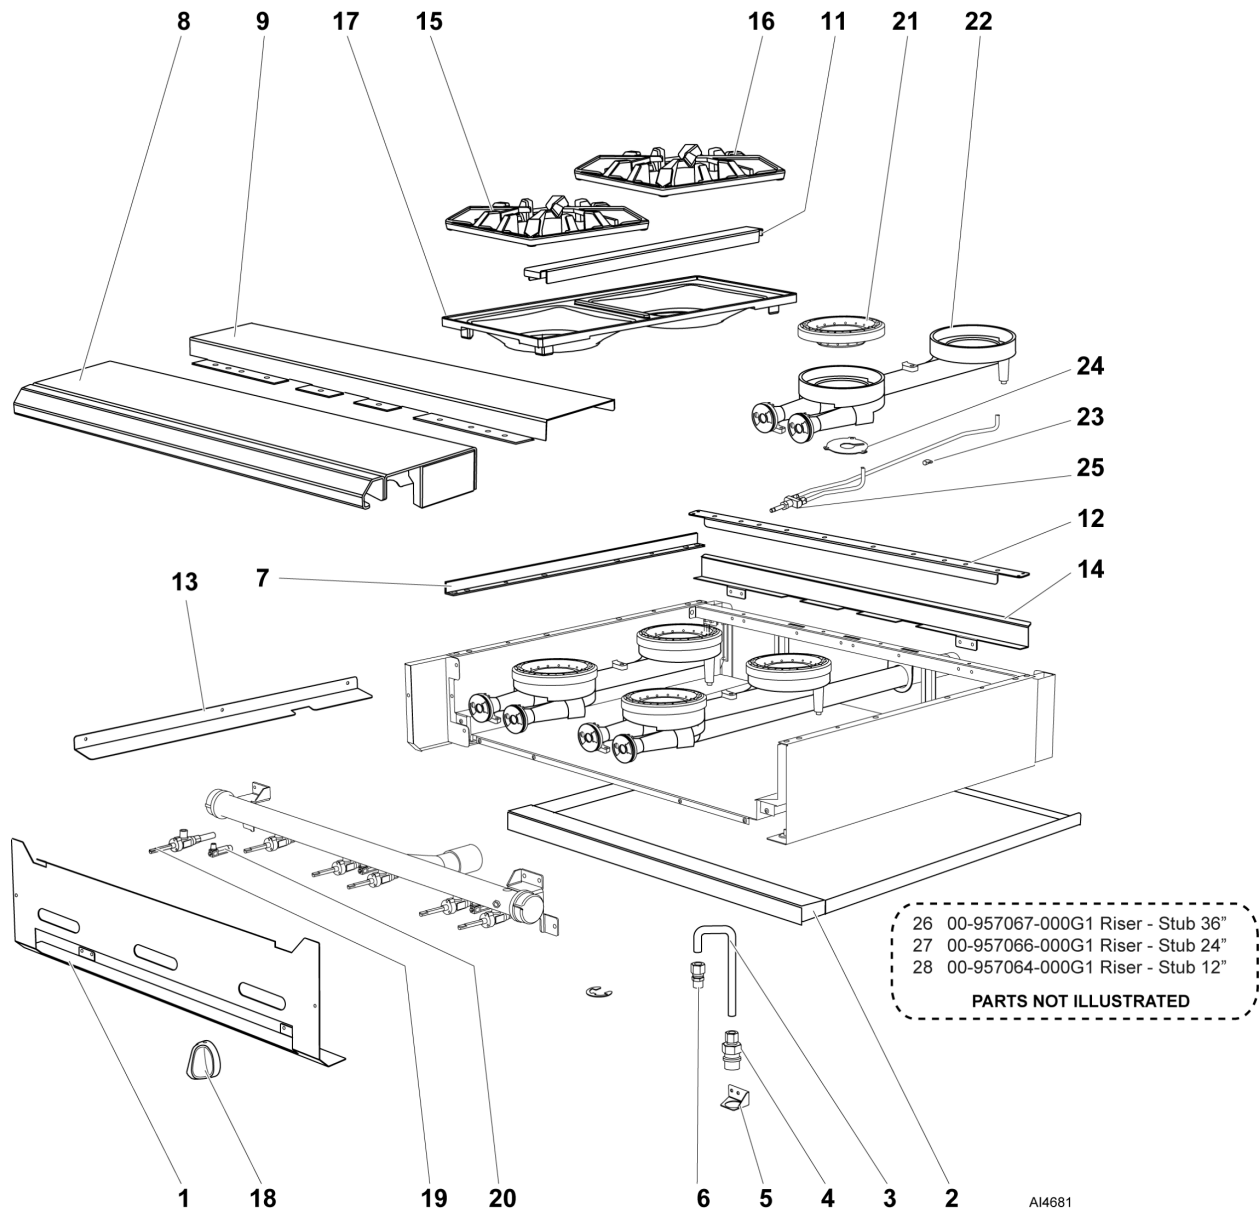

36", 24" & 12" OPEN TOP BURNER

36", 24" & 12" OPEN TOP BURNER


ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-957575-00001	Cover - Manifold 36" (6 Open Top Burner).....	1
	00-957570-00001	Cover Manifold 24" (4 Open Top Burner).....	1
	00-957559-00001	Cover - Manifold 12" (2 Open Top Burner).....	1
2	00-499006-000G2	Tray - Crumb (SST) 36" (6 Open Top Burner).....	1
	00-956724-000G2	Tray - Crumb (SST) 24" (4 Open Top Burner).....	1
	00-499969-000G2	Tray - Crumb (SST) 12" (2 Open Top Burner).....	1
3	00-426509-00010	Tube - Flex 1/2" O.D. 10" Lg.....	1
4	00-499555-00001	Disconnect - Gas Female.....	1
5	00-499047-00001	Bracket - Disconnect.....	1
6	FP-012-02	Fitting - Tube 1/2 TBG X 3/8 MPT.....	1
7	00-497984-00001	Retainer - Grate.....	2
8	00-499425-000G1	Front Top Assy. 36" (6 Open Top Burner).....	1
	00-956705-000G1	Front Top Assy. 24" (4 Open Top Burner).....	1
	00-499966-000G1	Front Top Assy. 12" (2 Open Top Burner).....	1
9	00-957235-000G1	Front Top Assy - Condiment Rail 36" (6 Open Top Burner).....	1
	00-957239-000G1	Front Top Slide Rail Assy. 36" (6 Open Top Burner).....	1
	00-957357-000G1	Front Top Assy. - Condiment Rail 24" (4 Open Top Burner).....	1
11	00-499493-00001	Support - Grate (Alum.).....	1
	00-499493-00002	Support - Grate (SST).....	1
12	00-499001-00002	Support - HD Burner (SST) 36" (6 Open Top Burner).....	1
	00-956718-00002	Support - HD Burner (SST) 24" (4 Open Top Burner).....	1
	00-499965-00002	Support - HD Burner (SST) 12" (2 Open Top Burner).....	1
13	00-499002-00003	Deflector - HD Splash L.H. (SST).....	1
	00-499002-00004	Deflector - HD Splash R.H. (SST).....	1
14	00-499615-00002	Deflector - Rear (SST) 36" (6 Open Top Burner).....	1
	00-956725-00002	Deflector - Rear (SST) 24" (4 Open Top Burner).....	1
	00-499935-00001	Deflector - Rear (SST) 12" (2 Open Top Burner).....	AR
15	00-957368-00001	Grate - Front 12".....	AR
16	00-957369-00001	Grate - Rear 12".....	AR
17	00-957341-00001	Bowl - Rear 12" Double.....	AR
18	00-499712-00001	Knob - HD Burner.....	AR
19	00-957367-00001	Valve - Burner.....	AR
20	00-499970-00001	Valve - Pilot Quick Disconnect.....	AR
21	00-957343-00002	Burner - Head 6".....	AR
22	00-957342-00001	Venturi Assy.....	AR
23	00-402558-00004	Clip - Tubing.....	AR
24	00-958073-00002	Plate - Restrictor.....	AR
25	00-959108-000G1	Pilot - Kit Open Top Burners.....	AR
26	00-957067-000G1	Riser - Stub 36" W/Alum. Back 36" (6 Open Top Burner).....	1
27	00-957066-000G1	Riser - Stub 24" W/Alum. Back 24" (4 Open Top Burner).....	1
28	00-957064-000G1	Riser - Stub 12" W/Alum. Back 12" (2 Open Top Burner).....	1

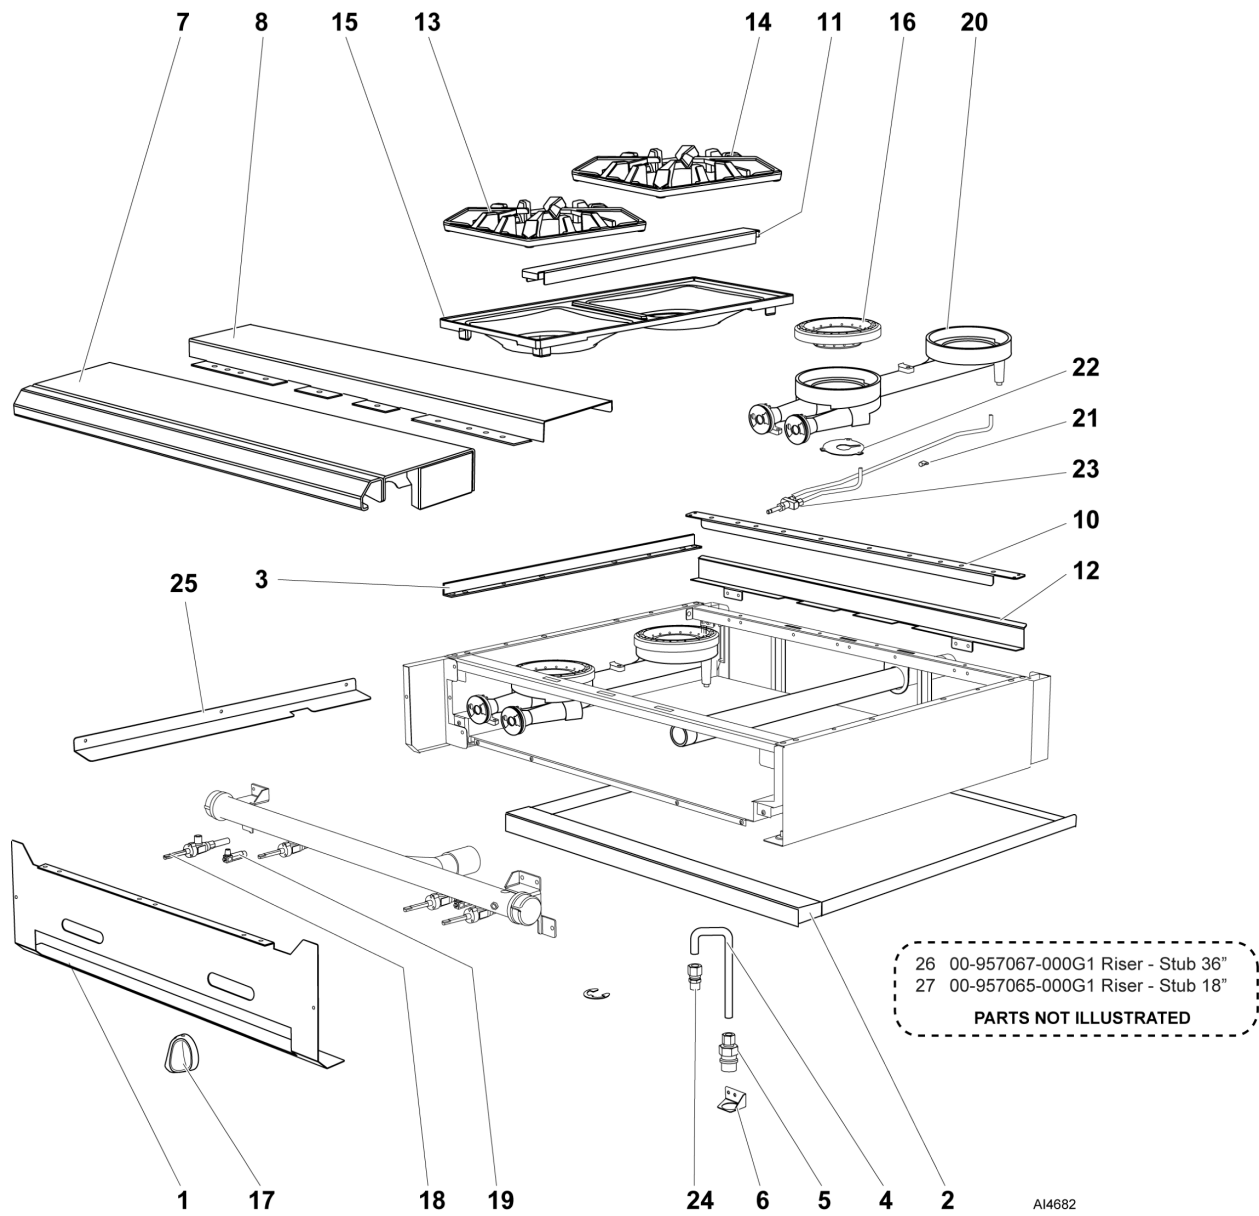

36"- 4 & 18"- 2 OPEN TOP BURNER

36"- 4 & 18"- 2 OPEN TOP BURNER


ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-957573-00001	Manifold Cover 36" (4 Open Top Burner).....	1
	00-957564-00001	Manifold Cover 18" (2 Open Top Burner).....	1
2	00-499006-000G2	Tray - Crumb (SST) 36" (4 Open Top Burner).....	1
	00-956696-000G2	Tray - Crumb (SST) 18" (2 Open Top Burner).....	AR
3	00-497984-00001	Retainer - Grate.....	2
4	00-426509-00010	Tube - Flex 1/2" O.D. 10" Lg.....	1
5	00-499555-00001	Disconnect - Gas Female.....	1
6	00-499047-00001	Bracket - Disconnect.....	1
7	00-499425-000G1	Front Top Assy. 36" (4 Open Top Burner).....	1
	00-957235-000G1	Front Top Assy - Condiment Rail 36" (4 Open Top Burner).....	4
	00-956658-000G1	Front Top Assy 18" (2 Open Top Burner).....	AR
8	00-957239-000G1	Front Top Slide Rail Assy.....	4
10	00-499001-00004	Support - (4) OTB Burner (SST).....	1
	00-956690-00001	Support - (2) OTB Burner (SST).....	1
11	00-499493-00001	Support - Grate (Alum.).....	1
	00-499493-00002	Support - Grate (SST).....	1
12	00-499615-00002	Deflector - Rear (SST) 36" (4 Open Top Burner).....	1
	00-956697-00002	Deflector - Rear (SST) 36" (4 Open Top Burner).....	1
13	00-957370-00001	Grate - Front 18".....	AR
14	00-957371-00001	Grate - Rear 18".....	AR
15	00-957372-00001	Bowl - 18" Double.....	AR
16	00-957343-00002	Burner - Head 6".....	AR
17	00-499712-00001	Knob - HD Burner.....	AR
18	00-957367-00001	Valve - Burner.....	AR
19	00-499970-00001	Valve - Pilot Quick Disconnect.....	AR
20	00-957398-000G1	Venturi Assy.....	1
21	00-402558-00004	Clip - Tubing.....	AR
22	00-958073-00001	Plate - Restrictor.....	1
23	00-959108-000G1	Pilot - Kit Open Top Burners.....	1
24	FP-012-02	Fitting - Tube 1/2 TBG X 3/8 MPT.....	1
25	00-499002-00003	Deflector - HD Splash L.H. (SST).....	1
	00-499002-00004	Deflector - HD Splash R.H. (SST).....	1
26	00-957067-000G1	Riser - Stub 36" W/Alum. Back 36" (4 Open Top Burner).....	1
27	00-957065-000G1	Riser - Stub 18" W/Alum. Back 36" (4 Open Top Burner).....	1

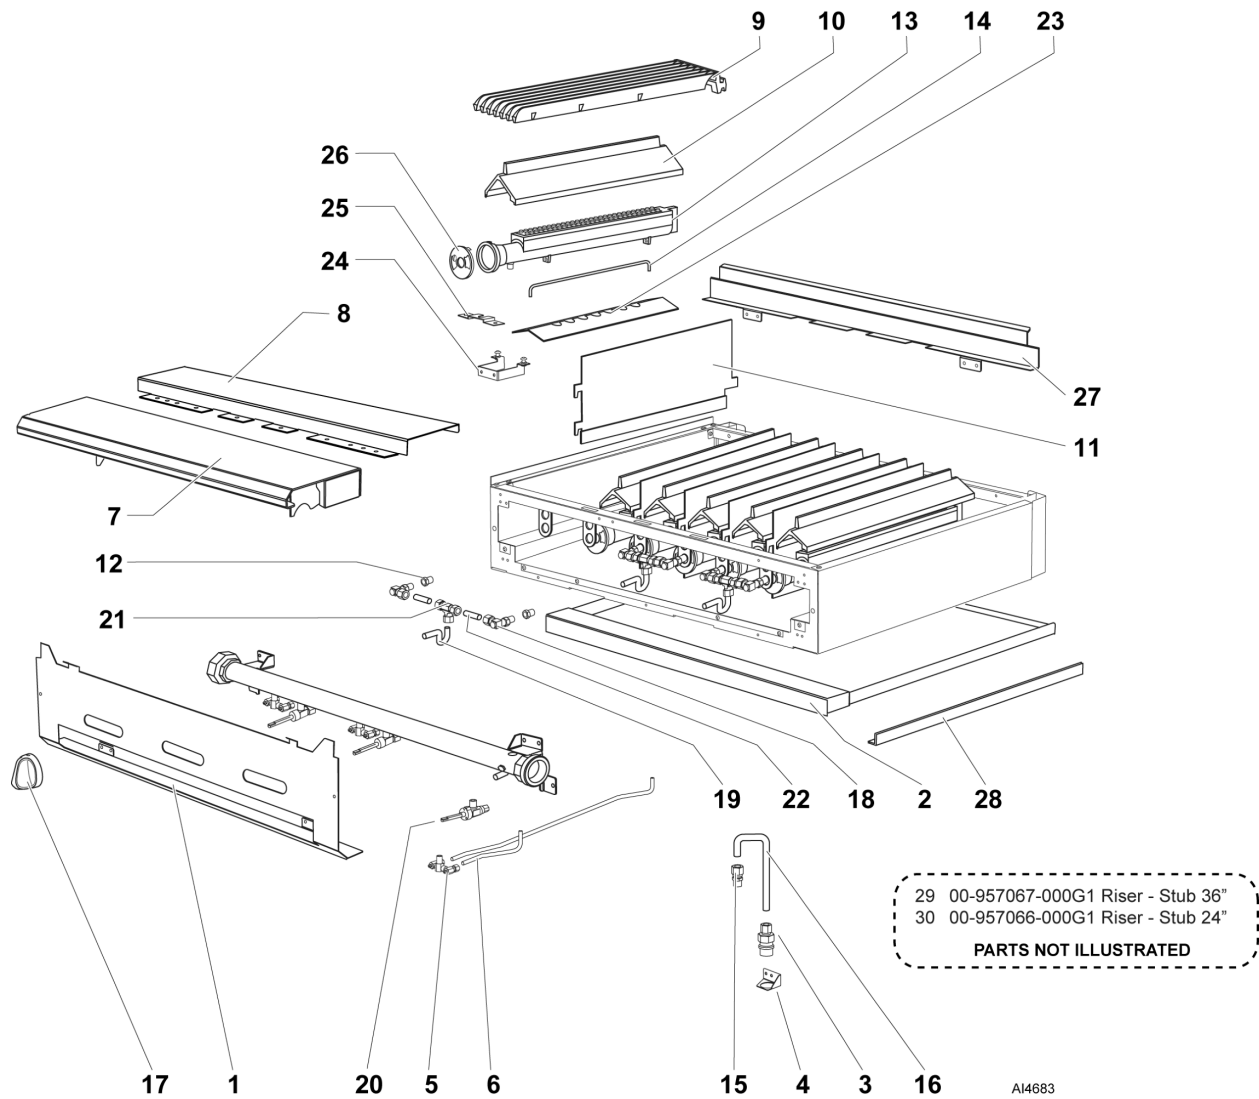

36" & 24" CHAR BROILER

36" & 24" CHAR BROILER


ILLUS.	PART NO.	NAME OF PART	AMT.
	PL-AI4683		
1	00-957574-00001	Cover - Manifold 36" Char Broiler.....	1
	00-957567-00001	Cover - Manifold 24" Char Broiler.....	1
2	00-499006-000G2	Tray - Crumb (SST) 36" Char Broiler.....	1
	00-956724-000G2	Tray - Crumb (SST) 24" Char Broiler.....	1
3	00-499555-00001	Disconnect - Gas Female.....	1
4	00-499047-00001	Bracket - Disconnect.....	1
5	00-957814-00001	Valve - Dual Pilot.....	1
6	00-788541-0000A	Tube - Pilot, Flex (W/Tip).....	1
7	00-499425-000G1	Front Top Assy. 36" Char Broiler.....	1
	00-956705-000G1	Front Top Assy. 24" Char Broiler.....	1
8	00-957235-000G1	Front Top Assy - Condiment Rail 36" Char Broiler.....	1
	00-957239-000G1	Front Top Slide Rail Assy. 36" Char Broiler.....	1
	00-957357-000G1	Front Top Assy. - Condiment Rail 24" Char Broiler.....	1
9	00-412852-00001	Grate - Top Straight.....	6
	00-722131	Grate - Slanted 6-RIB 24" Char Broiler.....	2
	00-710424	Grate - Slanted 7-RIB 24" Char Broiler.....	2
10	00-710407	Radiant.....	6
11	00-956614-00002	Supercharger.....	5
12	00-418051-0000F	Hood - Orifice.....	6
13	00-957413-00001	Burner Assy.....	6
14	00-710455	Burner Rod.....	6
15	FP-012-02	Fitting - Tube 1/2 TBG X 3/8 MPT.....	1
16	00-426509-00010	Tube - Flex 1/2" O.D. 10" Lg.....	1
17	00-499712-00001	Knob - HD Burner.....	3
18	00-719383	W/O Plug.....	6
19	00-722425	Tubing - Flex 3/8" X 8" Lg.....	3
20	00-957348-00001	Valve - Gas.....	3
21	00-714676	New Part.....	1
22	00-722468	NLA - Obsolete--3/8" Tube 1-1/4" Long.....	1
23	00-956748-00001	Heat Deflector.....	6
24	00-957412-00001	Bracket - Dual Pilot.....	AR
25	00-957335-00001	Stabilizer - Burner.....	6
26	00-719329	Air Mixer Assy.....	6
27	00-499615-00002	Deflector - Rear (SST) 36" Char Broiler.....	1
	00-956725-00002	Deflector - Rear (SST) 24" Char Broiler.....	1
28	00-497984-00001	Retainer - Grate.....	2
29	00-957067-000G1	Riser - Stub 36" W/Alum. Back 36" Char Broiler.....	1
30	00-957066-000G1	Riser - Stub 24" W/Alum. Back 24" Char Broiler.....	1

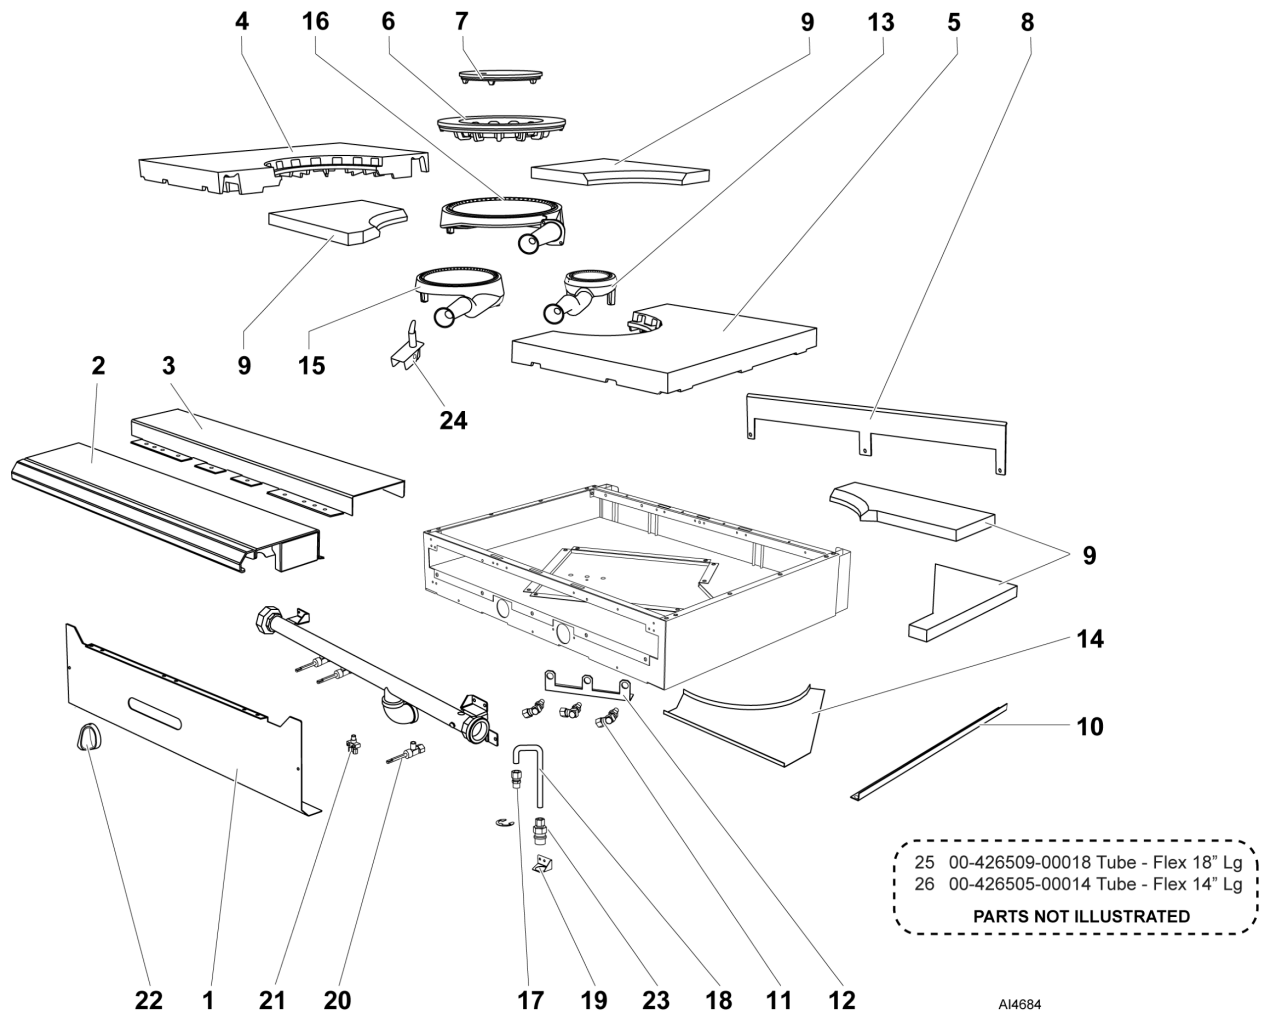

36" & 18" FRENCH TOP RADIAL FIN HOT TOP

36" & 18" FRENCH TOP RADIAL FIN HOT TOP


ILLUS.	PART NO.	NAME OF PART	AMT.
	PL-AI4684		
1	00-957576-00001	Cover - Manifold W/Rail 36" Radial Fin. Hot Top.....	1
	00-957563-00001	Cover Manifold 18" Radial Fin. Hot Top.....	1
2	00-499425-000G1	Front Top Assy. 36" Radial Fin. Hot Top.....	1
	00-956658-000G1	Front Top Assy 18" Radial Fin. Hot Top.....	1
3	00-957235-000G1	Front Top Assy - Condiment Rail.....	1
	00-957239-000G1	Front Top Slide Rail Assy.....	1
4	00-499814-00001	Casting - LH Radial Fin. 36" 36" Radial Fin. Hot Top.....	1
	00-956800-00001	Casting - Radial Fin. 18" Radial Fin. Hot Top.....	1
5	00-499814-00002	Casting - RH Radial Fin. 36".....	1
6	00-400705-00001	Ring - TOP.....	1
7	00-715211-000GR	Plate - Top.....	1
8	00-956809-00002	Deflector - Radial Fin. Rear 36" Radial Fin. Hot Top.....	1
	00-956663-00001	Deflector - Radial Fin. 18" Radial Fin. Hot Top.....	1
9	00-956622-000G1	Brick Set 36" Radial Fin. Hot Top.....	1
	00-956799-000G1	Brick Set 18" Radial Fin. Hot Top.....	1
10	00-497984-00001	Retainer - Grate.....	1
11	00-719383	Elbow 3/8 Orifice W/O Plug.....	1
12	00-499810-00002	Bracket - Pilot.....	1
13	00-957801-000G1	Burner - Inner, Radial Fin 36" Radial Fin. Hot Top.....	1
	00-956794-00001	Burner - 18" Inner 18" Radial Fin. Hot Top.....	1
14	00-957946-000G1	Plate - Aeration Assy. 36" Radial Fin. Hot Top.....	1
	00-957710-000G1	Plate - Aeration, Assy. 18" Radial Fin. Hot Top.....	1
15	00-409413-00001	Burner - Casting 36" Radial Fin. Hot Top.....	1
	00-956793-00001	Burner - 18" Outer 18" Radial Fin. Hot Top.....	1
16	00-409412-000G1	Burner - Top Outer.....	1
17	FP-012-02	Fitting - Tube 1/2 TBG X 3/8 MPT.....	1
18	00-426509-00010	Tube - Flex 1/2" O.D. 10" Lg.....	1
19	00-499047-00001	Bracket - Disconnect.....	1
20	00-408379-00004	Valve - Burner (Top).....	3
21	00-957814-00001	Valve - Dual Pilot.....	1
22	00-499712-00001	Knob - HD Burner.....	3
23	00-499555-00001	Disconnect - Gas Female.....	1
24	00-409839-00003	Burner - Pilot.....	3
25	00-426509-00018	Tube - Flex 1/2" O.D. 18" Lg.....	3
26	00-426505-00014	Tube - Flex 1/4" O.D. 14" Lg.....	2

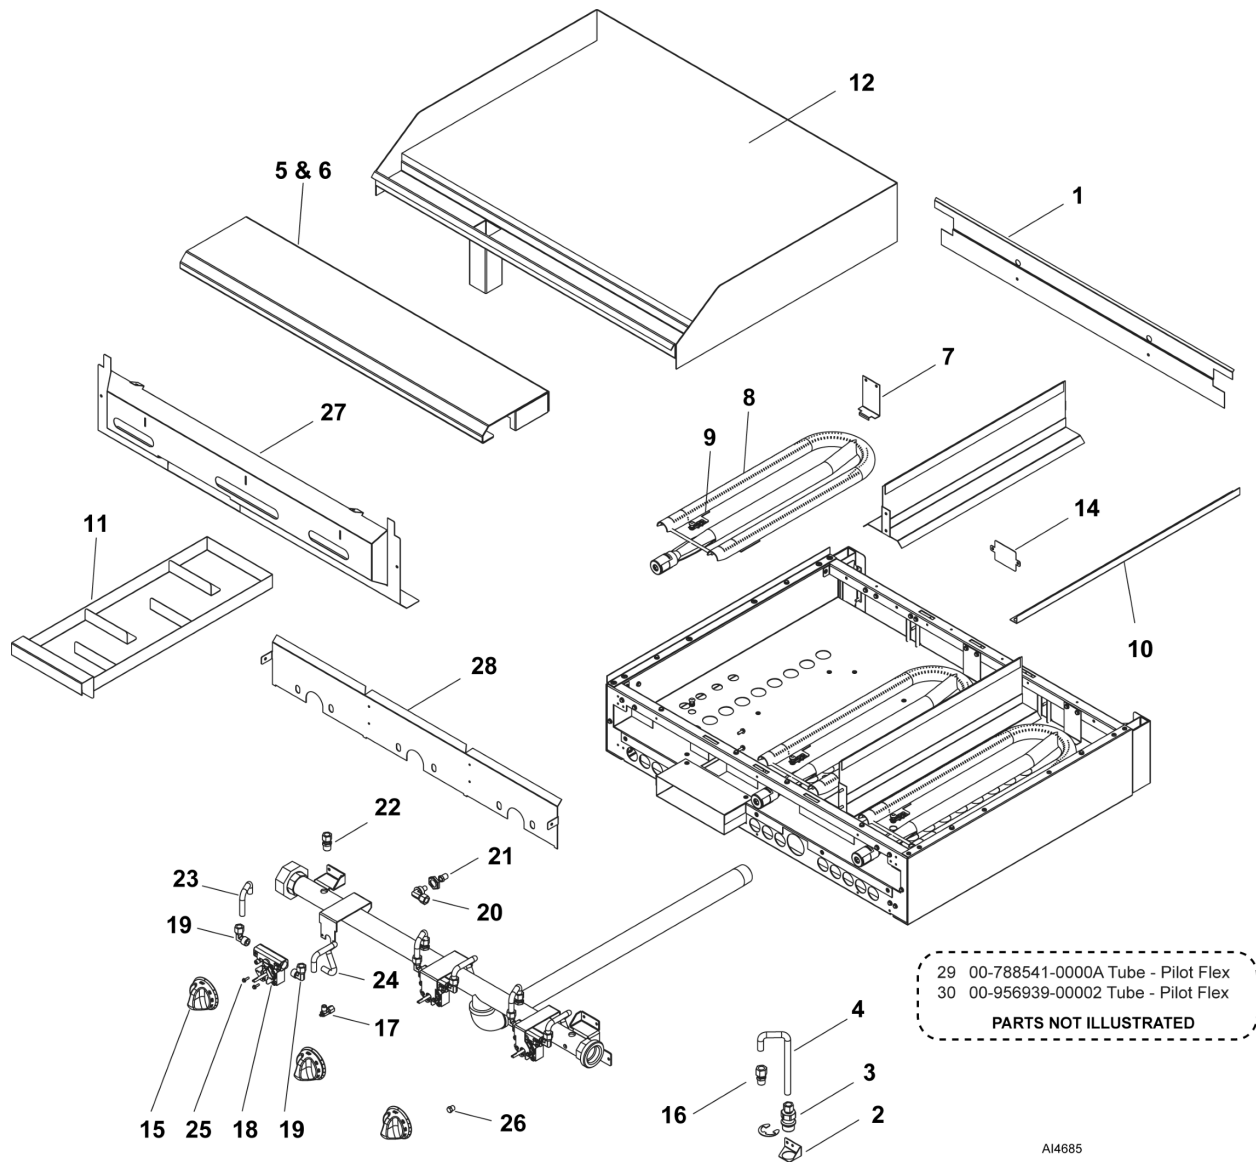

36", 24" & 18" THERMO CONTROL GRIDDLE TOP

36", 24" & 18" THERMO CONTROL GRIDDLE TOP

ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-957961-00001	Panel - Rear Closure 36" (Alum.) 36" Griddle Top.....	1
	00-957989-00001	Panel - Rear Closure 24" 24" Griddle Top.....	1
	00-957993-00001	Panel - Rear Closure 18" 18" Griddle Top.....	AR
2	00-499047-00001	Bracket - Disconnect.....	1
3	00-499555-00001	Disconnect - Gas Female.....	1
4	00-426509-00010	Tube - Flex 1/2" O.D. 10" Lg.....	1
5	00-499425-000G1	Front Top Assy. 36" Griddle Top.....	1
	00-956705-000G1	Front Top Assy. 24" Griddle Top.....	1
	00-956658-000G1	Front Top Assy 18" Griddle Top.....	1
6	00-957235-000G1	Front Top Assy - Condiment Rail 36" Griddle Top.....	1
	00-957239-000G1	Front Top Slide Rail Assy. 36" Griddle Top.....	1
	00-957357-000G1	Front Top Assy. - Condiment Rail 24" Griddle Top.....	1
	00-957235-000G1	Front Top Assy - Condiment Rail 18" Griddle Top.....	1
7	00-499112-00001	Bracket - Griddle Burner Support.....	3
8	00-499635-00001	Griddle Burner Assy.....	3
9	00-413302-00001	Clip - Pilot Mounting.....	3
10	00-497984-00001	Retainer - Grate.....	2
11	00-957982-000G4	Grease Drawer Assy. 36" Griddle Top.....	1
	00-956709-000G4	Grease Drawer Assy. 24" Griddle Top.....	1
	00-956677-000G4	Grease Drawer Assy. 18" Griddle Top.....	1
12	00-499622-000G2	NLA - Obsolete--36" Griddle Assy.....	1
	00-499957-000G2	NLA - Obsolete--24" Griddle Assy.....	1
	00-956674-000G2	NLA - Obsolete--18" Griddle Assy.....	1
13	00-957170-000G1	Griddle Baffle Assy. Center (Not Shown).....	2
14	00-956662-00001	Cover - Rear Manifold.....	1
	00-956710-00001	Cover - Hot Top 24" Griddle.....	1
15	00-499488-00002	Knob - Gas Thermostat.....	3
16	FP-012-02	Fitting - Tube 1/2 TBG X 3/8 MPT.....	1
17	00-404193-00001	Valve - Pilot.....	3
18	00-499488-00001	Thermostat - Gas.....	3
19	FP-085-68	Fitting- Elbow (7/16 TBG X 3/8 MPT).....	6
20	00-404079-0000F	Nozzle.....	3
21	00-418051-0000F	Hood - Orifice.....	3
22	FP-085-42	Fitting - Tube (7/16 TBG X 3/8 MPT).....	3
23	00-426508-00006	Tube - Flex 7/16" O.D. 6" Lg.....	3
24	00-426508-00010	Tube - Flex 7/16" O.D. 10" Lg.....	3
25	SD-036-79	Self-Tapping Screw 6-32 x 1/2 Type TT Hex Hd. (SST).....	6
26	FP-085-53	Pipe Plug 1/8.....	1
27	00-957604-000G2	Cover - Manifold 36" Thermo Griddle (Condiment Rail).....	1
	00-957602-000G2	Cover - Manifold 24" Thermo Griddle (Condiment Rail).....	1
	00-957594-000G1	Cover - Manifold 18" Thermo Griddle.....	1
28	00-957396-00002	Baffle - Griddle.....	1
	00-957988-00002	Baffle - 24" Forward Griddle.....	1
	00-957992-00002	Baffle - 18" Forward Griddle.....	1
29	00-788541-0000A	Tube - Pilot, Flex (W/Tip).....	2
30	00-956939-00002	Tube - Pilot, Flex (W/Tip).....	1

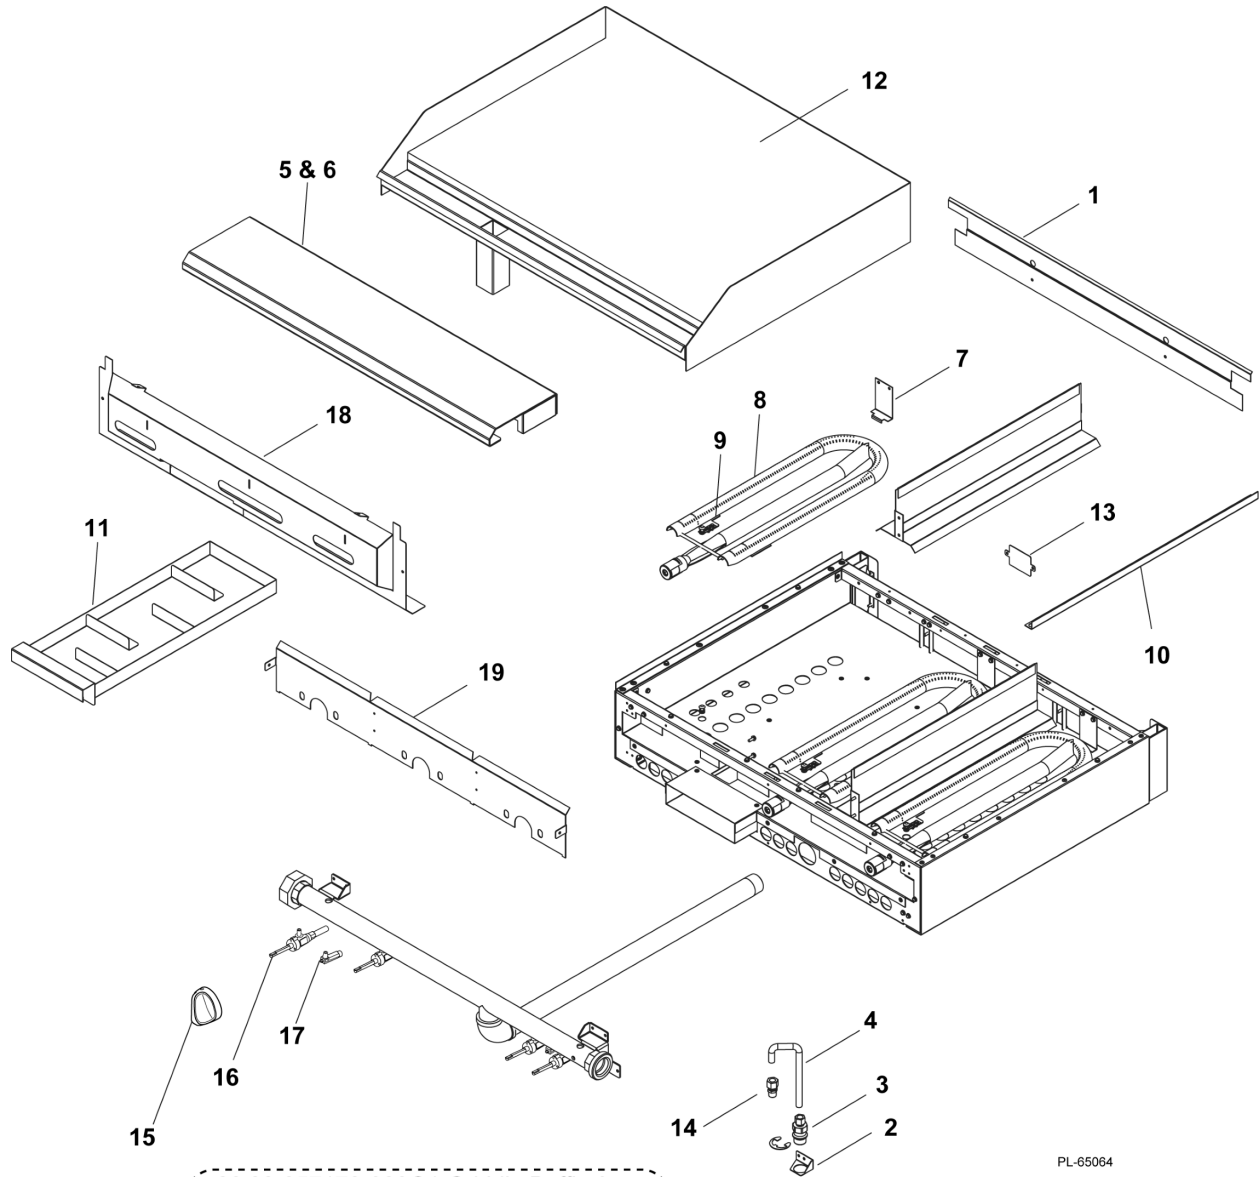


20 00-957170-000G1 Griddle Baffle Assy.
 21 00-788541-0000A Tube - Pilot Flex
 22 00-956939-00002 Tube - Pilot Flex
PARTS NOT ILLUSTRATED

PL-65064

36", 24" & 18" MANUAL CONTROL GRIDDLE TOP

36", 24" & 18" MANUAL CONTROL GRIDDLE TOP


ILLUS.	PART NO.	NAME OF PART	AMT.
1	00-957961-00001	Panel - Rear Closure 36" (Alum.) 36" Griddle Top.....	1
	00-957989-00001	Panel - Rear Closure 24" 24" Griddle Top.....	1
	00-957993-00001	Panel - Rear Closure 18" 18" Griddle Top.....	AR
2	00-499047-00001	Bracket - Disconnect.....	1
3	00-499555-00001	Disconnect - Gas Female.....	1
4	00-426509-00010	Tube - Flex 1/2" O.D. 10" Lg.....	1
5	00-499425-000G1	Front Top Assy. 36" Griddle Top.....	1
	00-956705-000G1	Front Top Assy. 24" Griddle Top.....	1
	00-956658-000G1	Front Top Assy 18" Griddle Top.....	1
6	00-957235-000G1	Front Top Assy - Condiment Rail 36" Griddle Top.....	1
	00-957239-000G1	Front Top Slide Rail Assy. 36" Griddle Top.....	1
	00-957357-000G1	Front Top Assy. - Condiment Rail 24" Griddle Top.....	1
	00-957235-000G1	Front Top Assy - Condiment Rail 18" Griddle Top.....	1
7	00-499112-00001	Bracket - Griddle Burner Support.....	3
8	00-499635-00001	Griddle Burner Assy.....	3
9	00-413302-00001	Clip - Pilot Mounting.....	3
10	00-497984-00001	Retainer - Grate.....	2
11	00-957982-000G4	Grease Drawer Assy. 36" Griddle Top.....	1
	00-956709-000G4	Grease Drawer Assy. 24" Griddle Top.....	1
	00-956677-000G4	Grease Drawer Assy. 18" Griddle Top.....	1
12	00-499622-000G2	NLA - Obsolete--36" Griddle Assy.....	1
	00-499957-000G2	NLA - Obsolete--24" Griddle Assy.....	1
	00-956674-000G2	NLA - Obsolete--18" Griddle Assy.....	1
13	00-956662-00001	Cover - Rear Manifold.....	1
	00-956710-00001	Cover - Hot Top 24" Griddle.....	1
14	FP-012-02	Fitting - Tube 1/2 TBG X 3/8 MPT.....	1
15	00-499712-00001	Knob - HD Burner.....	AR
16	00-957367-00001	Valve - Burner.....	AR
17	00-499970-00001	Valve - Pilot Quick Disconnect.....	AR
18	00-957604-000G2	Cover - Manifold 36" Thermo Griddle (Condiment Rail).....	1
	00-957602-000G2	Cover - Manifold 24" Thermo Griddle (Condiment Rail).....	1
	00-957594-000G1	Cover - Manifold 18" Thermo Griddle.....	1
19	00-957396-00002	Baffle - Griddle.....	1
	00-957988-00002	Baffle - 24" Forward Griddle.....	1
	00-957992-00002	Baffle - 18" Forward Griddle.....	1
20	00-957170-000G1	Griddle Baffle Assy. Center.....	2
21	00-788541-0000A	Tube - Pilot, Flex (W/Tip).....	2
22	00-956939-00002	Tube - Pilot, Flex (W/Tip).....	1

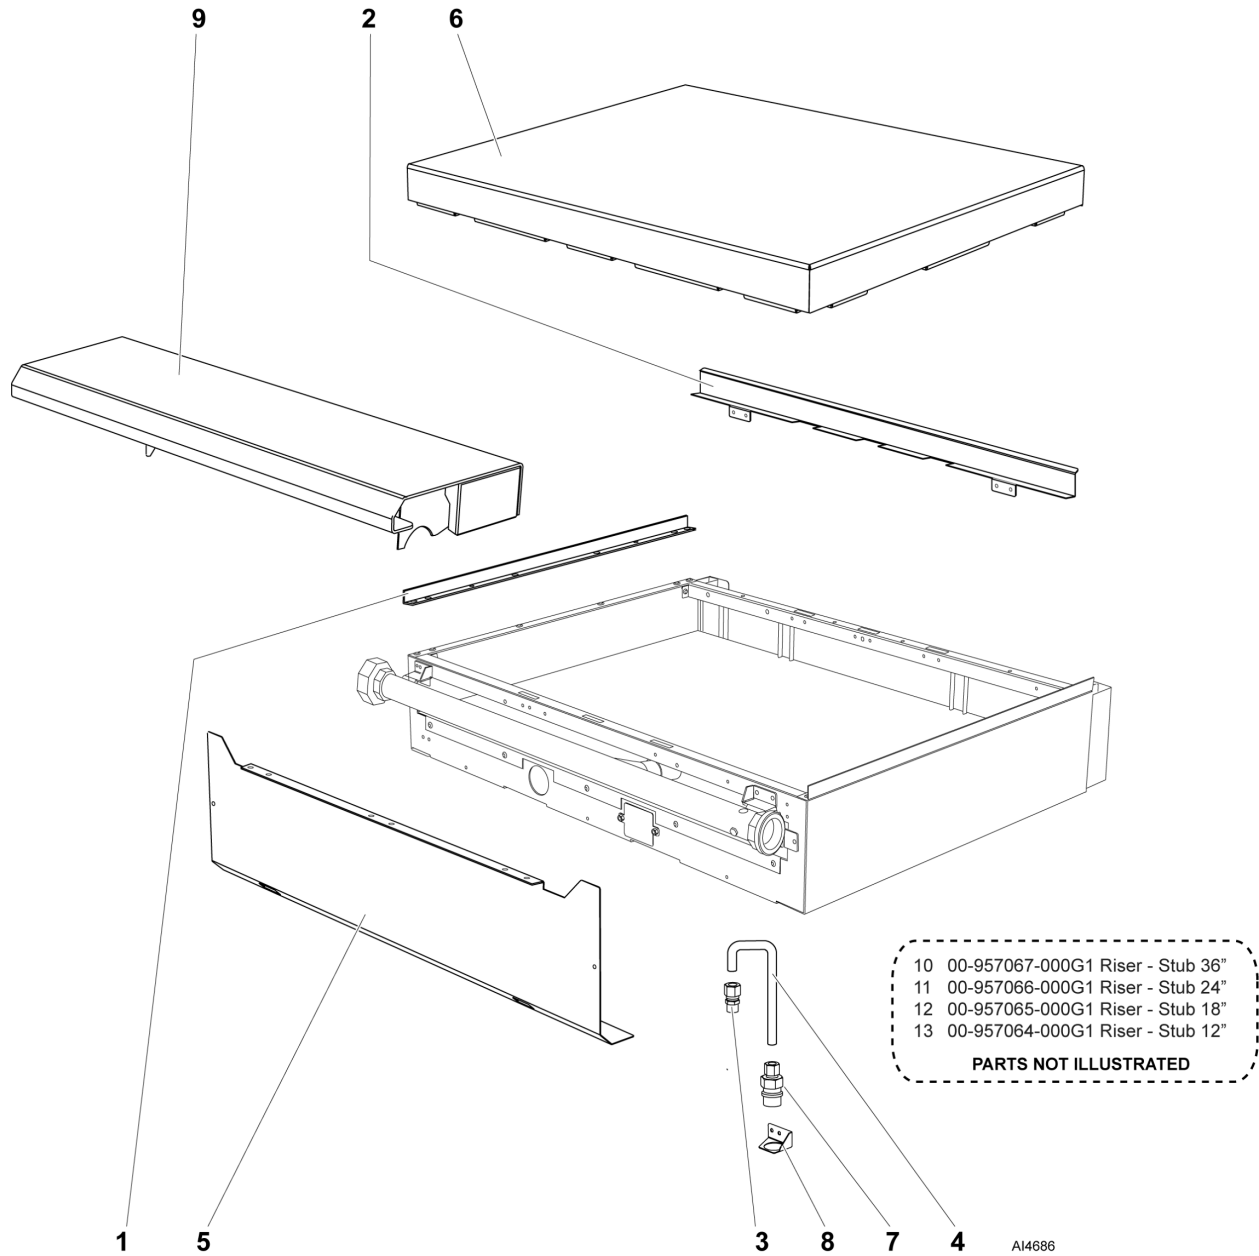

36", 24", 18" & 12" WORK TOP

36", 24", 18" & 12" WORK TOP


ILLUS.	PART NO.	NAME OF PART	AMT.
	PL-AI4686		
1	00-497984-00001	Retainer - Grate.....	2
2	00-499615-00002	Deflector - Rear (SST) 36" Work Top.....	1
	00-956725-00002	Deflector - Rear (SST) 24" Work Top.....	1
	00-956697-00002	Deflector - Rear (SST) 18" Work Top.....	1
	00-499935-00002	Deflector - Rear (SST) 12" Work Top.....	1
3	FP-012-02	Fitting - Tube 1/2 TBG X 3/8 MPT.....	1
4	00-426509-00010	Tube - Flex 1/2" O.D. 10" Lg.....	1
5	00-957590-00001	Cover Manifold 36" Work Top.....	1
	00-957572-00001	Cover Manifold 24" Work Top.....	1
	00-957566-00001	Cover - Manifold 18" Work Top.....	1
	00-957558-00001	Cover - Manifold 12" Work Top.....	1
6	00-956639-000G1	Work Top Assy. 36".....	1
	00-956639-000G2	Work Top Assy. 24".....	1
	00-956639-000G3	Work Top Assy. 18".....	1
	00-956639-000G4	Work Top Assy. 12".....	1
7	00-499555-00001	Disconnect - Gas Female.....	1
8	00-499047-00001	Bracket - Disconnect.....	1
9	00-499425-000G1	Front Top Assy. 36" Work Top.....	1
	00-957235-000G1	Front Top Assy - Condiment Rail 36" Work Top.....	1
	00-956705-000G1	Front Top Assy. 24" Work Top.....	1
	00-957357-000G1	Front Top Assy. - Condiment Rail 24" Work Top.....	1
	00-956658-000G1	Front Top Assy 18" Work Top.....	1
	00-499966-000G1	Front Top Assy. 12" Work Top.....	1
10	00-957067-000G1	Riser - Stub 36" W/Alum. Back.....	1
11	00-957066-000G1	Riser - Stub 24" W/Alum. Back.....	1
12	00-957065-000G1	Riser - Stub 18" W/Alum. Back.....	1
13	00-957064-000G1	Riser - Stub 12" W/Alum. Back.....	1

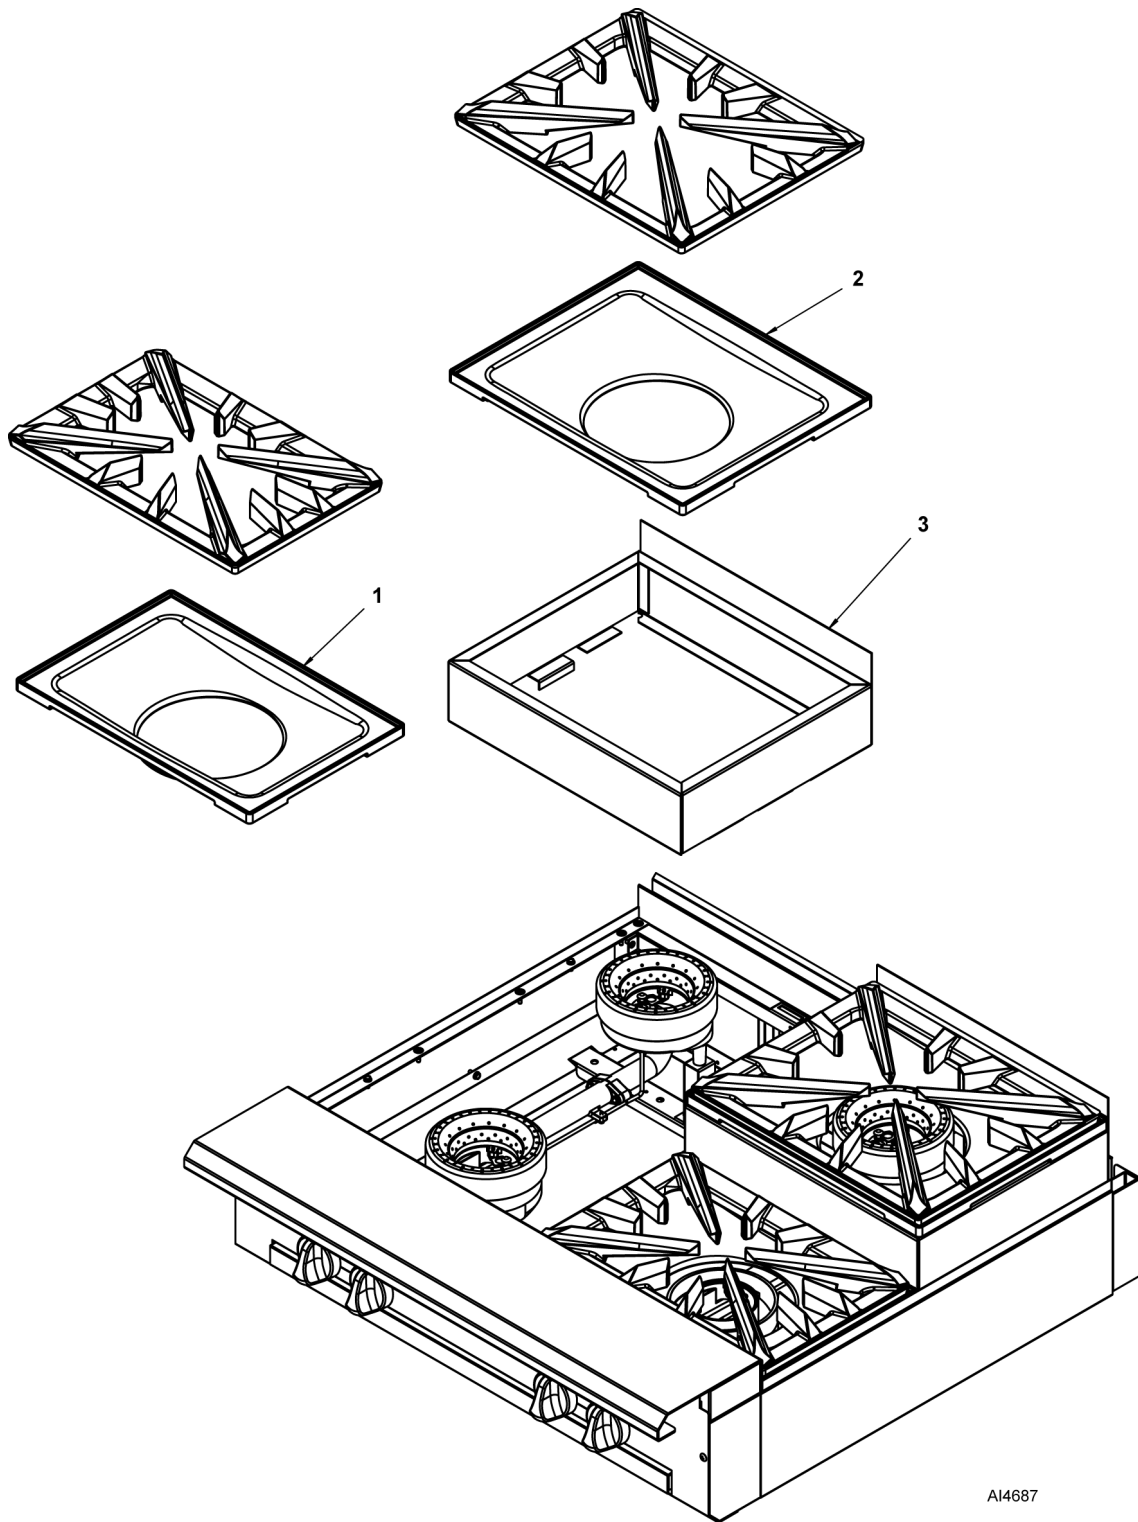

36" AND 18" STEP UP OPEN TOP BURNER

36" AND 18" STEP UP OPEN TOP BURNER

ILLUS. PL-AI4687	PART NO.	NAME OF PART	AMT.
1	00-957882-00001	Bowl - Front 18" Step Up.....	2
2	00-957881-00001	Bowl - Rear 18" Step Up.....	2
3	00-957877-000G1	Frame - 18" Step Up.....	2

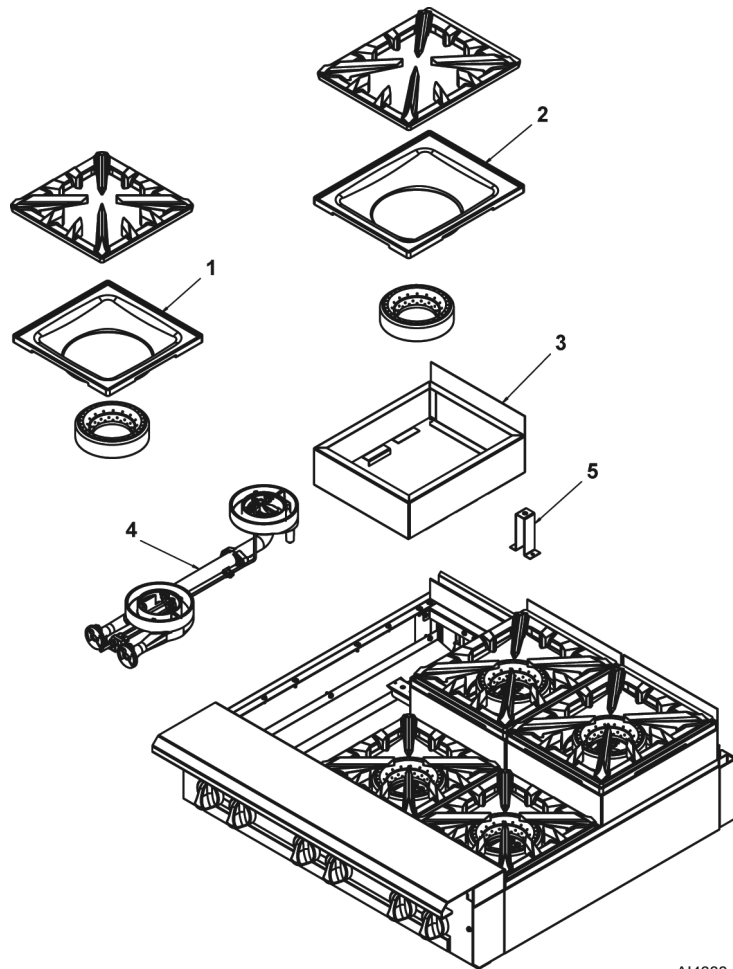


A14688

36" 6 OPEN TOP STEP UP BURNER

36" 6 OPEN TOP STEP UP BURNER

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-AI4688			
1	00-957878-00001	Bowl - 12" Front.....	1
2	00-958879-00001	Bowl - 12" Rear.....	1
3	00-957877-000G1	Frame - 18" Step Up.....	1
4	00-957817-000G1	Burner Assy. - Step Up.....	AR
5	00-957880-00001	Support - Burner Step Up.....	AR

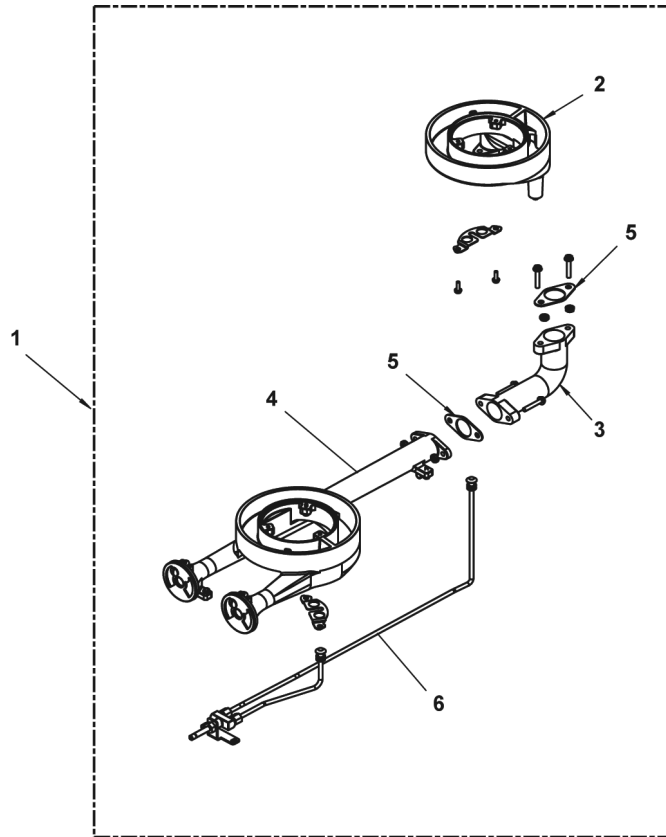

AI4689

STEP UP BURNER ASSEMBLY

STEP UP BURNER ASSEMBLY

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-AI4689			
1	00-957817-000G1	Burner Assy. - Step Up.....	1
2	00-957826-00001	Burner - Rear Step Up.....	1
3	00-957825-00001	Elbow - Center Step Up.....	1
4	00-957824-00001	Burner - Front Step Up.....	1
5	00-957823-00001	Gasket.....	1
6	00-959108-000G2	Pilot Assy. - Step Up.....	1

