




WARING COMMERCIAL®

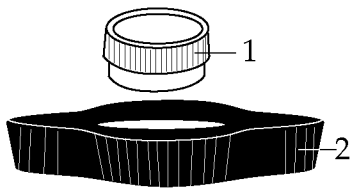


004315
2 Piece Lid
for Glass Containers

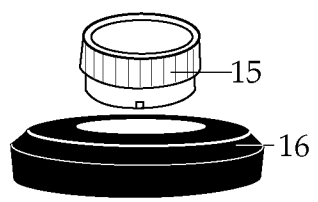


500665
2 Piece Lid
for Stainless Steel Containers

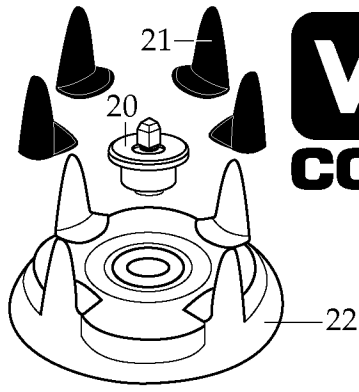


LB10G
LB10S

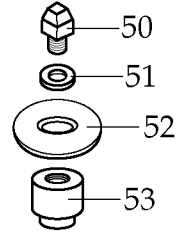



002518
Drive Coupling
(parts that can be purchased separately)

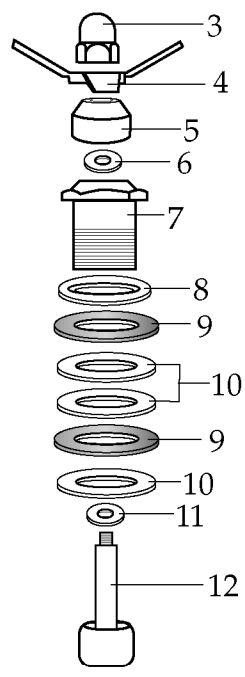

501017
Stainless Steel Lid *(optional)*
for Stainless Steel Containers
013617 - actuator switch nut
020491 - screw
014598 - lid

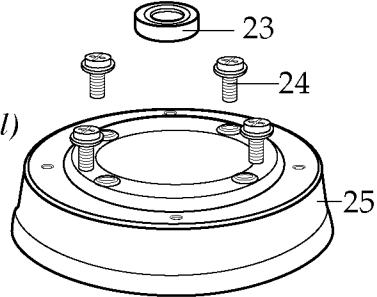



Unit Information	
.4 HP	
3.0 Amps.	
Speed Adjusted (free spin)	
0 - 20,000 RPM's	

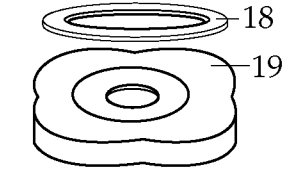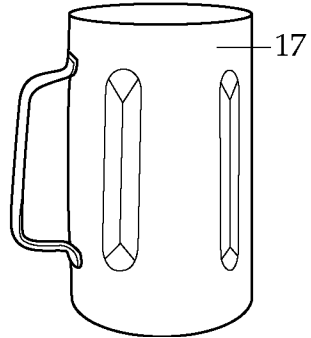

003548
Blending Assy.






500758
Container /S.S.
with Blending Assy.

008065
Container /S.S.
with Blending Assy.
and Vinyl Lid

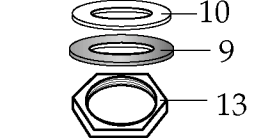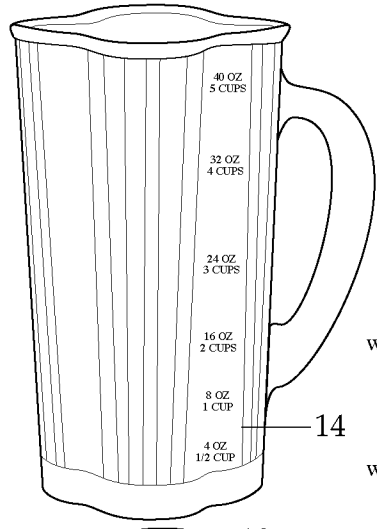

003548
Blending Assy.

500204
Container /glass
with Blending Assy.

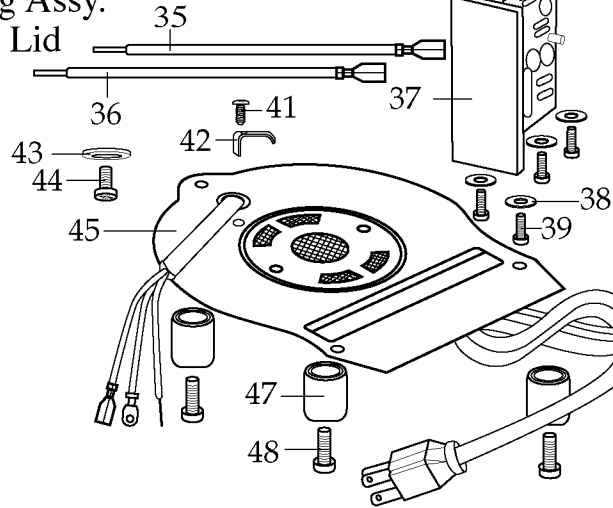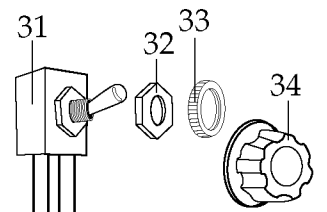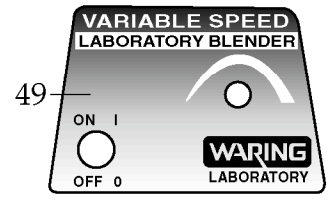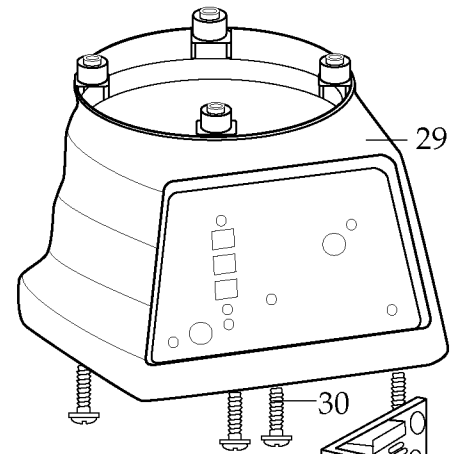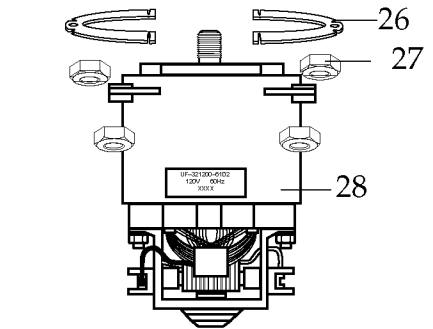

Catalog

LB10G

LB10S

Model

38BL54 or LB10G

38BL54 or LB10S



Illustration#	Part#	Description
1	003146	Center Lid
2	003574	Outer Lid
3	003504	Cap Nut
4	003540	Blade
5	003503	Bearing Cap
6	003508	Washer
7	010012	Bearing Holder
8	009724	Washer /nylon
9	003737	Washer /stainless steel
10	003509	Washer /neoprene
11	003510	Washer /linen-phen.
12	003500	Shaft
13	009780	Hex Nut /left handed
14	003573	Glass Jar 40 oz.
15	011700	Center Lid
16	013443	Outer Lid
17	012860	Stainless Steel Jar 32 oz.
18	009762	Gasket
19	015055	Container Base
20	002644	Square Drive Coupling
21	003498	Jar Pad 4 Req.'d
22	018996	Jar Holder
23	019936	Housing Seal
24	012370	Screw 4 Req.'d
25	017283	Bracket /plated
26	016610	Half Baffle 2 Req.'d
27	012369	Kep Nut 4 Req.'d
28	027655	Motor
29	019266	Base
30	005240	Screw 4 Req.'d
31	502219	Switch Assy. /003550 - Switch Only (no leads)

Catalog

Model

LB10G


38BL54 or LB10G

LB10S

38BL54 or LB10S

Waring
 Waring Factory Service Center
 P.O. Box 3201
 314 Ella T. Grasso Avenue
 Torrington, CT 06790
 Tel.# 1-800-269-6640
 Fax# 860-496-9017
 www.waringproducts.com
COMMERCIAL

Illustration#	Part#	Description
32	014603	Locking Ring
33	015098	Ring Nut
34	019270	Knob
35	502220	Lead /black 3 Req.'d
36	502232	Lead /blue
37	019268	Speed Control (potentiometer)
38	010955	Washer 4 Req.'d
39	019181	Screw 4 Req.'d
40	009051	Wire Nut 2 Req.'d
41	002962	Screw
42	016410	Clamp /cord set
45	503013	Bottom Plate Assy. (502732 bottom plate w/ screen & eylet)
46	003565	Cord Set (<i>current production</i>)
	500830	Cord Set (<i>older units</i>)
47	002891	Foot 3 Req.'d
48	003569	Screw 3 Req.'d
49	019248	Name Plate
50	002644	Square Drive Coupling
51	003507	Washer
52	003514	Slinger
53	002882	Drive Coupling

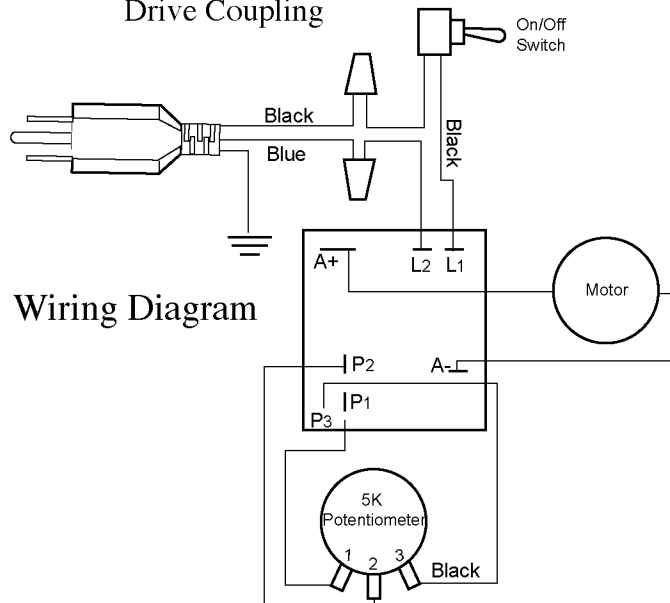

Wiring Diagram