



AQUASPEC[®] FAUCETS

MODEL - Z81200-XL SERIES

4" [102] CENTERSET

TECHNICAL INFORMATION

FLOW: 2.2 GPM [8.3 L] PRESSURE COMPENSATING AERATOR

MAXIMUM PRESSURE: 125 PSI

MAXIMUM TEMPERATURE: 180°F

HANDLE NUT TORQUE: 15-20 IN-LBS

CARTRIDGE STYLE: QUARTER TURN CERAMIC DISK

(CAN USE ZURN METERING CARTRIDGE)

**OTHER AERATORS AVAILABLE BY REQUEST*

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

INSTALLATION INSTRUCTIONS

1. REMOVE FAUCET BODY FROM CARTON AND APPLY PLUMBERS PUTTY TO UNDERSIDE OF BODY
2. PLACE FAUCET ON SINK AND REMOVE MOUNTING NUTS (ITEM #7A OR #9A) FROM BAG G68042.
3. HAND TIGHTEN MOUNTING NUTS FROM UNDER SINK. MAKE SURE FAUCET IS CENTERED PROPERLY. DO NOT OVER TIGHTEN.
4. ATTACH LAVATORY SUPPLIES TO FAUCET WITH RISER NUTS (ITEM #7B OR #9B).
5. OPTIONAL: POP-UP (-P)
GRID STRAINER (-G)
ADA OFFSET GRID DRAIN (-GH)
INSTALL POP-UP OR GRID STRAINER IN SINK OUTLET AND PLUMB WASTE CONNECTION.
6. INSTALL SPOUT INTO BASE AND TIGHTEN NUT (SEE VIEWS FOR SWING/RIGID CONNECTION). REFER TO "140° SWING INSTALLATION INSTRUCTIONS" FOR RESTRICTED SWING CONNECTION.
7. TURN WATER SUPPLY ON AND OPERATE FAUCET CHECKING FOR LEAKS.
8. IT MAY BE NECESSARY TO SHUT WATER OFF AND REMOVE CARTRIDGES TO CLEAN SUPPLY LINES. CARTRIDGES CAN BE REMOVED BY FIRST REMOVING THE HANDLES. COLOR INDEXES CAN BE REMOVED BY INSERTING A PIN INTO THE HOLE ON THE UNDERSIDE OF THE HANDLE. AFTER THE HANDLES HAVE BEEN REMOVED, UNSCREW THE HANDLE NUTS AND PULL UP ON THE CARTRIDGE.
9. REPLACE CARTRIDGES IN BODY AND HAND TIGHTEN HANDLE NUTS. PLACE HANDLES ON THE CARTRIDGE STEM AND LOCATE THEM AS DESIRED. TIGHTEN HANDLE NUT TO 15-20 IN-LBS OF TORQUE.
10. REPLACE HANDLE SCREWS AND COLOR INDEX BUTTONS.
11. INSTALL AERATOR INTO FAUCET AND HAND TIGHTEN. IT MAY BE NECESSARY TO UNSCREW AND CLEAN AERATOR AT START-UP.

MAINTENANCE

1. YOUR ZURN AQUASPEC FAUCET HAS A HIGHLY POLISHED NICKEL CHROME PLATED FINISH. CLEAN WITH SOAP AND WATER OR A MILD CLEANER WHICH IS SAFE FOR CHROME PLATING. DO NOT USE ACIDS OR TOILET BOWL CLEANER AS THEY WILL DAMAGE THE FINISH.
2. AQUASPEC FAUCETS CONTAIN CERAMIC DISK CARTRIDGES WHICH REQUIRE NO MAINTENANCE. TO REMOVE THE CARTRIDGE, SHUT THE WATER OFF, LOOSEN THE HANDLE NUTS AND PULL UP ON THE CARTRIDGE.

REPLACEMENT PARTS

| | |
|----------------------|----------|
| COLD WATER CARTRIDGE | 59517005 |
| HOT WATER CARTRIDGE | 59517006 |
| INDEX BUTTONS | G60500 |


Z812A1-XL PICTURED

Z812A1-XL-P PICTURED

SWING SPOUT
CONFIGURATION



RIGID SPOUT
CONFIGURATION

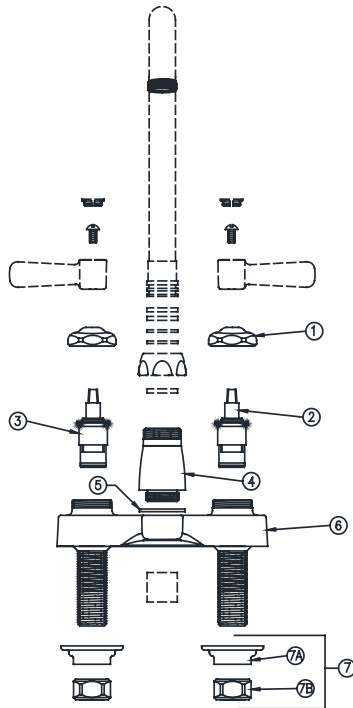

| Item | Part Number | Description | Qty. |
|------|-------------|--------------------------------|------|
| 1 | 59440001 | Handle Nut | 2 |
| 2 | 59517005 | Short Cold Cartridge XL | 1 |
| 3 | 59517006 | Short Hot Cartridge XL | 1 |
| 4 | 60467005 | Base XL | 1 |
| 5 | 58155019 | O-Ring | 1 |
| 6 | 60454004 | 4" Centerset Gooseneck Body XL | 1 |
| 7 | GP60502 | Mounting Hardware Bag | 1 |
| 7A | G68042 | Shank Nut Hardware Bag | 1 |
| 7B | G68043 | 1/2" NPSM Riser Nut Bag | 1 |

| Item | Part Number | Description | Qty. |
|------|-------------|--------------------------------|------|
| 1 | 59440001 | Handle Nut | 2 |
| 2 | 59517005 | Short Cold Cartridge XL | 1 |
| 3 | 59517006 | Short Hot Cartridge XL | 1 |
| 4 | 60467005 | Base XL | 1 |
| 5 | 58155019 | O-Ring | 1 |
| 6 | 60454005 | 4" Centerset Gooseneck Body XL | 1 |
| 7 | GP60502 | Mounting Hardware Bag | 1 |
| 7A | G68042 | Shank Nut Hardware Bag | 1 |
| 7B | G68043 | 1/2" NPSM Riser Nut Bag | 1 |
| 8 | 60505001 | Pop-up Drain Assembly | 1 |

Z812B4-XL PICTURED



| Item | Part Number | Description | Qty. |
|------|--------------------------|---|------|
| 1 | G67852 | 5-3/8" Centerline Gooseneck 'B' Spout Assembly XL | 1 |
| 1A | 92866002 | 5-3/8" Centerline Gooseneck Spout | 1 |
| 1B | 58155018 | O-Rings | 2 |
| 1C | 59666001 | Plastic Split Washers (Swing) | 2 |
| 1D | 59435001 | Spout Nut | 1 |
| 1E | 59436001 | Spacer Washer (Rigid) | 1 |
| 2 | GP68091 | 4" [102mm] Vandal-Resistant Metal Wrist Blade Handles | 1 |
| 2A | G60500 | Hot/Cold Color-Coded Indexes | 1 |
| | 59454001 | Hot Index | 1 |
| | 59454002 | Cold Index | 1 |
| 2B | 62464001 | 10-32 Screw | 2 |
| 2C | 59453001 | Wrist Blade Handle | 2 |
| 3 | 59440001 | Handle Nut | 2 |
| 4 | 59517005 | Short Cold Cartridge XL | 1 |
| 5 | 59517006 | Short Hot Cartridge XL | 1 |
| 6 | 60467005 | Base XL | 1 |
| 7 | 58155019 | O-Ring | 1 |
| 8 | 60454004 | 4" Centerset Gooseneck Body XL | 1 |
| 9 | GP60502 | Mounting Hardware | 1 |
| 9A | G68042 | Mounting Nut | 1 |
| 9B | G68043 | 1/2" NPSM Riser Nut | 1 |
| 10 | G63504 | 3/4"-27 Female Aerator - 2.2 GPM [8.3 L] | 1 |

Rev. F | Date: 11/21/22 | C.N. No. 144877 | Prod./Dwg. No. CF1170

Patent zurn.com/patents

US 1.855.ONE.ZURN CANADA 1.877.892.5216

ZURN.COM

by **ZURN ELKAY** Water Solutions

Z812A4-XL PICTURED



| Item | Part Number | Description | Qty. |
|------|--------------------------|---|------|
| 1 | G67851 | 3-1/2" Centerline Gooseneck 'A' Spout Assembly | 1 |
| 1A | 92866001 | 3-1/2" Centerline Gooseneck Spout | 1 |
| 1B | 58155018 | O-Rings | 2 |
| 1C | 59666001 | Plastic Split Washers (Swing) | 2 |
| 1D | 59435001 | Spout Nut | 1 |
| 1E | 59436001 | Spacer Washer (Rigid) | 1 |
| 2 | GP68091 | 4" [102mm] Vandal-Resistant Metal Wrist Blade Handles | 1 |
| 2A | G60500 | Hot/Cold Color-Coded Indexes | 1 |
| | 59454001 | Hot Index | 1 |
| | 59454002 | Cold Index | 1 |
| 2B | 62464001 | 10-32 Screw | 2 |
| 2C | 59453001 | Wrist Blade Handle | 2 |
| 3 | 59440001 | Handle Nut | 2 |
| 4 | 59517005 | Short Cold Cartridge | 1 |
| 5 | 59517006 | Short Hot Cartridge | 1 |
| 6 | 60467005 | Base | 1 |
| 7 | 58155019 | O-Ring | 1 |
| 8 | 60454004 | 4" Centerset Gooseneck Body XL | 1 |
| 9 | GP60502 | Mounting Hardware | 1 |
| 9A | G68042 | Mounting Nut | 1 |
| 9B | G68043 | 1/2" NPSM Riser Nut | 1 |
| 10 | G63504 | 3/4"-27 Female Aerator - 2.2 GPM [8.3 L] | 1 |

Rev. F | Date: 11/21/22 | C.N. No. 144877 | Prod./Dwg. No. CF1170

Patent zurn.com/patents

US 1.855.ONE.ZURN CANADA 1.877.892.5216

ZURN.COM

by **ZURN ELKAY** Water Solutions