

# AQUASPEC® FAUCETS

MODEL - Z81200 SERIES  
4" [102] CENTERSET



## TECHNICAL INFORMATION

---

**FLOW:** 2 GPM [7.6 L] PRESSURE COMPENSATING AERATOR \*

**MAXIMUM PRESSURE:** 125 PSI

**MAXIMUM TEMPERATURE:** 180° F

**HANDLE NUT TORQUE:** 15-20 FT - LBS.

**CARTRIDGE STYLE:** QUARTER TURN CERAMIC DISK  
(CAN USE ZURN METERING CARTRIDGE)

*\* OTHER AERATORS AVAILABLE BY REQUEST*

---

## INSTALLATION INSTRUCTIONS

1. REMOVE FAUCET BODY FROM CARTON AND APPLY PLUMBERS PUTTY TO UNDERSIDE OF BODY.
2. PLACE FAUCET ON SINK AND REMOVE MOUNTING NUTS (ITEM #7A) FROM BAG G60502.
3. HAND TIGHTEN MOUNTING NUTS FROM UNDER SINK. MAKE SURE FAUCET IS CENTERED PROPERLY.  
**DO NOT OVER TIGHTEN.**
4. ATTACH LAVATORY SUPPLIES TO FAUCET WITH RISER NUTS (ITEM #7B).
5. OPTIONAL: POP-UP (-P)  
GRID STRAINER (-G)  
ADA OFFSET GRID DRAIN (-GH)

INSTALL POP-UP OR GRID STRAINER IN SINK OUTLET AND PLUMB WASTE CONNECTION.

6. INSTALL SPOUT INTO BASE AND TIGHTEN NUT (SEE VIEWS FOR SWING/RIGID CONNECTION).  
REFER TO "140° SWING INSTALLATION INSTRUCTIONS" FOR RESTRICTED SWING CONNECTION.
7. TURN SUPPLY WATER ON AND OPERATE FAUCET CHECKING FOR LEAKS.
8. IT MAY BE NECESSARY TO SHUT WATER OFF AND REMOVE CARTRIDGES TO CLEAN SUPPLY LINES. CARTRIDGES CAN BE REMOVED BY FIRST REMOVING THE HANDLES. COLOR INDEXES CAN BE REMOVED BY INSERTING A PIN INTO THE HOLE ON THE UNDERSIDE OF THE HANDLE. AFTER THE HANDLES HAVE BEEN REMOVED, UNSCREW THE HANDLE NUTS AND PULL UP ON THE CARTRIDGE. ZURN WILL SUPPLY HANDLE PORT PLUGS (ZURN PART #61094001) AT YOUR REQUEST.
9. REPLACE CARTRIDGES IN BODY AND HAND TIGHTEN HANDLE NUTS. PLACE HANDLES ON THE CARTRIDGE STEM AND LOCATE THEM AS DESIRED. TIGHTEN HANDLE NUT TO 15-20 FT-LBS OF TORQUE.
10. REPLACE HANDLE SCREWS AND COLOR INDEX BUTTONS.
11. INSTALL AERATOR INTO FAUCET AND HAND TIGHTEN. IT MAY BE NECESSARY TO UNSCREW AND CLEAN AERATOR AT START-UP.


# MAINTENANCE

1. YOUR ZURN AQUASPEC FAUCET HAS A HIGHLY POLISHED NICKEL CHROME PLATED FINISH. CLEAN WITH SOAP AND WATER OR A MILD CLEANER WHICH IS SAFE FOR CHROME PLATING. DO NOT USE ACIDS OR TOILET BOWL CLEANER AS THEY WILL DAMAGE THE FINISH.
2. AQUASPEC FAUCETS CONTAIN CERAMIC DISK CARTRIDGES WHICH REQUIRE NO MAINTENANCE. TO REMOVE THE CARTRIDGE, SHUT THE WATER OFF, LOOSEN THE HANDLE NUTS AND PULL UP ON THE CARTRIDGE.

# REPLACEMENT PARTS

|                      |          |
|----------------------|----------|
| COLD WATER CARTRIDGE | 59517001 |
| HOT WATER CARTRIDGE  | 59517002 |
| INDEX BUTTONS        | G60500   |

Z812A1 PICTURED

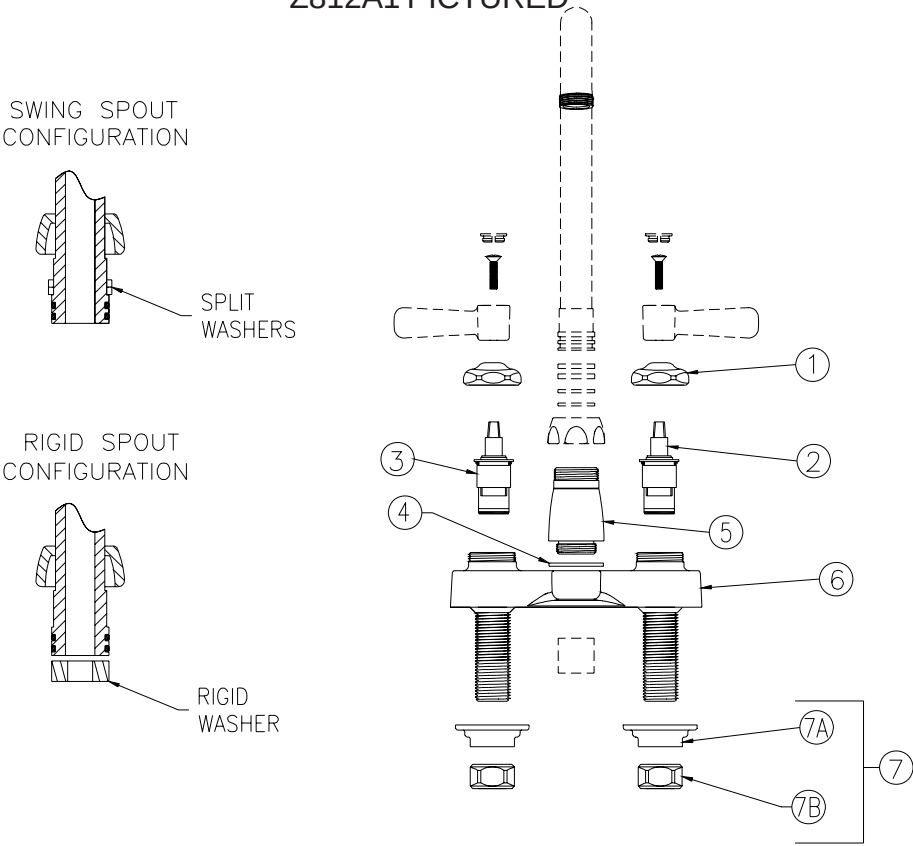

Z81200 PARTS LIST

| ITEM |          |                      |   | ITEM |          |                              |   |
|------|----------|----------------------|---|------|----------|------------------------------|---|
| QTY  |          |                      |   | QTY  |          |                              |   |
| 1    | 59440001 | HANDLE NUT           | 2 | 7    | G60502   | MOUNTING & COUPLING NUTS BAG | 1 |
| 2    | 59517001 | SHORT COLD CARTRIDGE | 1 | 7A   | 59530002 | MOUNTING NUT                 | 2 |
| 3    | 59517002 | SHORT HOT CARTRIDGE  | 1 | 7B   | 59532001 | 1/2" [13mm] NPSM RISER NUT   | 2 |
| 4    | 58155019 | O-RING               | 1 |      |          |                              |   |
| 5    | 60467001 | BASE                 | 1 |      |          |                              |   |
| 6    | 60454001 | BODY                 | 1 |      |          |                              |   |