

Manitowoc®

NEO™

UP Model R290 Refrigerant UnderCounter Ice Machines

Technician's Handbook

This manual is updated as new information and models are released. Visit our website for the latest manual.

www.manitowocice.com



Safety Notices

Read these precautions to prevent personal injury:

- Read this manual thoroughly before operating, installing or performing maintenance on the equipment. Failure to follow instructions in this manual can cause property damage, injury or death.
- Routine adjustments and maintenance procedures outlined in this manual are not covered by the warranty.
- Proper installation, care and maintenance are essential for maximum performance and trouble-free operation of your equipment.
- Visit our website www.manitowocice.com for manual updates, translations, or contact information for service agents in your area.
- This equipment contains high voltage electricity and refrigerant charge. Installation and repairs are to be performed by properly trained technicians aware of the dangers of dealing with high voltage electricity and refrigerant under pressure. The technician must also be certified in proper refrigerant handling and servicing procedures. All lockout and tag out procedures must be followed when working on this equipment.
- This equipment is intended for indoor use only. Do not install or operate this equipment in outdoor areas.
- As you work on this equipment, be sure to pay close attention to the safety notices in this handbook. Disregarding the notices may lead to serious injury and/or damage to the equipment.

We reserve the right to make product improvements at any time. Specifications and design are subject to change without notice.

Warning

Follow these electrical requirements during installation of this equipment.

- All field wiring must conform to all applicable codes of the authority having jurisdiction. It is the responsibility of the end user to provide the disconnect means to satisfy local codes. Refer to rating plate for proper voltage.
- This appliance must be grounded.
- This equipment must be positioned so that the plug is accessible unless other means for disconnection from the power supply (e.g., circuit breaker or disconnect switch) is provided.
- Check all wiring connections, including factory terminals, before operation. Connections can become loose during shipment and installation.
- For a cord-connected appliance, the following must be included:
 - Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
 - Unplug from outlet when not in use and before servicing or cleaning.
 - Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Contact the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment

Warning

Follow these precautions to prevent personal injury during installation of this equipment:

- Installation must comply with all applicable equipment fire and health codes with the authority having jurisdiction.
- To avoid instability the installation area must be capable of supporting the combined weight of the equipment and product. Additionally the equipment must be level side to side and front to back.
- Remove front panel before lifting and installing and use appropriate safety equipment during installation and servicing. Two or more people are required to lift or move this appliance to prevent tipping and/or injury.
- Do not damage the refrigeration circuit when installing, maintaining or servicing the unit.
- Connect to a potable water supply only.
- This equipment contains refrigerant charge.

Warning

Follow these precautions to prevent personal injury while operating or maintaining this equipment.

- Legs or casters must be installed and the legs/casters must be screwed in completely. When casters are installed the mass of this unit will allow it to move uncontrolled on an inclined surface. These units must be tethered/secured to comply with all applicable codes. Swivel casters must be mounted on the front and rigid casters must be mounted on the rear. Lock the front casters after installation is complete.
- Refer to nameplate to identify the type of refrigerant in your equipment.
- Only trained and qualified personnel aware of the dangers are allowed to work on the equipment.
- Read this manual thoroughly before operating, installing or performing maintenance on the equipment. Failure to follow instructions in this manual can cause property damage, injury or death.
- Crush/Pinch Hazard. Keep hands clear of moving components. Components can move without warning unless power is disconnected and all potential energy is removed.
- Moisture collecting on the floor will create a slippery surface. Clean up any water on the floor immediately to prevent a slip hazard.

Warning

Follow these precautions to prevent personal injury while operating or maintaining this equipment.

- Objects placed or dropped in the bin can affect human health and safety. Locate and remove any objects immediately.
- Never use sharp objects or tools to remove ice or frost.
- Do not use mechanical devices or other means to accelerate the defrosting process.
- When using cleaning fluids or chemicals, rubber gloves and eye protection (and/or face shield) must be worn.

DANGER

Do not operate equipment that has been misused, abused, neglected, damaged, or altered/modified from that of original manufactured specifications. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision concerning use of the appliance by a person responsible for their safety. Do not allow children to play with, clean or maintain this appliance without proper supervision.

DANGER

Follow these precautions to prevent personal injury during use and maintenance of this equipment:

- It is the responsibility of the equipment owner to perform a Personal Protective Equipment Hazard Assessment to ensure adequate protection during maintenance procedures.
- Do Not Store Or Use Gasoline Or Other Flammable Vapors Or Liquids In The Vicinity Of This Or Any Other
- Appliance. Never use flammable oil soaked cloths or combustible cleaning solutions for cleaning.
- All covers and access panels must be in place and properly secured when operating this equipment.
- Risk of fire/shock. All minimum clearances must be maintained. Do not obstruct vents or openings.
- Failure to disconnect power at the main power supply disconnect could result in serious injury or death. The power switch DOES NOT disconnect all incoming power.
- All utility connections and fixtures must be maintained in accordance with the authority having jurisdiction.
- Turn off and lockout all utilities (gas, electric, water) according to approved practices during maintenance or servicing.
- Units with two power cords must be plugged into individual branch circuits. During movement, cleaning or repair it is necessary to unplug both power cords.

Warning

When installing, using, or servicing this equipment, follow these flammable refrigeration system requirements.

- Refer to the nameplate - The ice machine contains up to 150 grams of R290 (propane) refrigerant. R290 (propane) is flammable in concentrations of air between approximately 2.1% and 9.5% by volume. R290 (propane) may burn if exposed to a heat source above 470 °C. Refer to nameplate to identify the type of refrigerant in your equipment.
- To reduce the risk of fire due to improper installation, replacement of parts, or improper use of procedure, only refrigeration technicians trained in flammable refrigerants who understand the dangers of high voltage electricity and refrigerants under pressure are allowed to work on this equipment.
- Only use parts recommended or provided by the manufacturer.
- This equipment cannot be installed in a corridor or hallway of a public building.
- Equipment installation must comply with local sanitation and fire regulations.
- When servicing this equipment, be sure to lock the circuit breaker, and display an in-service notice.
- This device contains a high-voltage power supply and refrigerant charge. Shorting wires to the cooling system piping may cause an explosion. Before servicing the system, be sure to disconnect all power to the system. Refrigerant leakage can result in serious injury or death from explosion, fire, or contact with refrigerant or lubricant mist.
- Do not damage the refrigeration circuit when installing, maintaining or servicing the unit.

Table of Contents

General Information

Model Numbers	17
How to Read a Model Number	17
Model/Serial Number Location	18
Warranty	19
Warranty Registration	19

Installation

Location of Ice Machine	21
Ice Machine Clearance Requirements	22
Ice Machine Heat of Rejection	22
Leveling the Ice Machine	23
Electrical Requirements	24
Electrical Specifications	25
Water Service/Drains	26
Water Supply	26

Maintenance

Detailed Descaling and Sanitizing Procedure	
UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/ UYP0310	29
Remedial Cleaning	39
Cleaning the Condenser	41
Removal from Service/Winterization	42
Bin Removal	43
Removal from Service/Winterization	44

Operation

Sequence of Operation UDP0140/UYP0140, UDP0240/UYP0140, UDP0310/UYP0310	45
Touch Pad Features	45
Ice Making Sequence of Operation.	48
Sequence of Operation	49
Control Board Timers	51
Safety Limits	52
UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310 Energized Parts Chart . . .	54
Operational Checks.	56
Ice Thickness Check	56
Ice Thickness Adjustment	56
Procedure to energize Dump Valve Every Cycle	57
Minimum/Maximum Slab weight	57

Troubleshooting

Troubleshooting UDP0140/UYP0140, UDP0240/ UYP0240, UDP0310/UYP0310.....	59
Problem Checklist	59
Control Board Test Mode	62
Operating Ice Machine with Bin and Touch Pad Removed	62
Safety Limit Feature	63
Diagnosing an Ice Machine that Will Not Run 70 Ice Machine Does Not Cycle Into Harvest when the Harvest Float is down/closed.	71
Ice Machine Cycles Into Harvest Before the Harvest Float is down/closed.	73
Ice Production Check	75
Installation/Visual Inspection Checklist.	77
Water System Checklist.	78
Refrigeration Diagnostics	81
Eliminate all non refrigeration problems before diagnosing the refrigeration system.	81
Ice Formation Pattern	82
Discharge Line Temperature Analysis	83
Comparing Evaporator Inlet/Outlet Temperatures.	84
Refrigeration Diagnostic Procedure	85
Flooding Expansion Valve Symptoms	86
Starving Expansion Valve/Low Refrigerant Charge Symptoms	86
Overcharged System Symptoms.	87
Higher than normal freeze cycle temperatures	87
Harvest Valve	88
Freeze Cycle Analysis Chart - All Models.....	92

Component Check Procedures

Main Fuse	93
Bin Switch	94
Touch Pad.	96
Float Switch	98
Water Trough Thermistor	100
Fan Cycle Control.	102
High Pressure Cutout (HPCO) Control	103
Compressor Electrical Diagnostics	104

Filter-Driers	106
--------------------------------	------------

Flammable Refrigerant Procedures

Servicing Requirements	107
Refrigerant Purging Requirements	108
Refrigerant Purging Procedure.	109
Brazing Procedure	109
Pressure Testing.	110
Evacuation	110

Refrigerant Charging	111
---------------------------------------	------------

System Contamination Cleanup.	113
--	------------

Determining Severity of Contamination	113
Mild System Contamination Cleanup Procedure	115

Severe System Contamination Cleanup Procedure.	116
--	-----

Total System Refrigerant Charge	117
--	------------

Charts

Cycle Times, 24 Hr. Ice Production and Refrigerant Temperature Charts	119
UDP0140/UYP0140 Self-contained Air-cooled ..	
.....	120
UDP0140/UYP0140 Operating Temperatures. . .	
.....	121
UDP0240/UYP0240 Self-contained Air-cooled ..	
.....	122
UDP0240/UYP0240 Operating Temperatures. . .	
.....	123
UDP0310/UYP0310 Self-contained Air-cooled ..	
.....	124
UDP0310/UYP0310 Operating Temperatures. . .	
.....	125

Diagrams

Wiring Diagrams	127
UDP0140/UYP0140, UDP0240/UYP0240 - 1Ph	
Air-cooled.	128
UDP0310/UYP0310 1Ph Air-cooled	130
Electronic Control Boards	132
Electronic Control Board UDP0140/UYP0140,	
UDP0240/UYP0240, UDP0310/UYP0310 ..	132
Tubing Schematics	134
Tubing Schematic UDP0140/UYP0140.	134
Tubing Schematic - UDP0240/UYP0240,	
UDP0310/UYP0310	134

THIS PAGE INTENTIONALLY LEFT BLANK


General Information

Model Numbers

This manual covers the following models:

Self-contained Air-cooled	
UDP0140A	UYP0140A
UDP0240A	UYP0240A
UDP0310A	UYP0310A

How to Read a Model Number

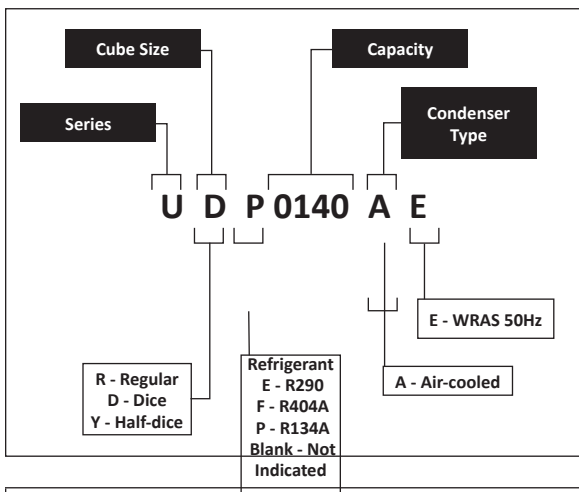

Warning

An ice machine contains high voltage electricity and refrigerant charge. Repairs are to be performed by properly trained refrigeration technicians aware of the dangers of dealing with high voltage electricity and refrigerant under pressure.

Model/Serial Number Location

These numbers are required when requesting information from your local Manitowoc Distributor, Service Representative, or Manitowoc Ice.

The model/serial number data plate is located in the evaporator compartment and on the back of the ice machine.

Warranty

For warranty information visit:

www.manitowocice.com/Service/Warranty

- Warranty Coverage Information
- Warranty Registration
- Warranty Verification

Warranty coverage begins the day the ice machine is installed.

WARRANTY REGISTRATION

Completing the warranty registration process is a quick and easy way to protect your investment.

Scan the QR code with your smart device or enter the link in a web browser to complete your warranty registration.



WWW.MANITOWOCICE.COM/SERVICE/WARRANTY#WARRANTY-REGISTRATION

Registering your product insures warranty coverage and streamlines the process if any warranty work is required.

THIS PAGE INTENTIONALLY LEFT BLANK

Installation

Location of Ice Machine

The location selected for the ice machine must meet the following criteria. If any of these criteria are not met, select another location.

- The location must be indoors.
- The location must be free of airborne and other contaminants.
- Air temperature: Must be at least 50°F (10°C) but must not exceed 113°F (43.4°C).
- The location must not be near heat-generating equipment or in direct sunlight.
- The location must be capable of supporting the weight of the ice machine and a full bin of ice.
- The location must allow enough clearance for water, drain, and electrical connections in the **rear of the ice machine**.
- The location must not obstruct airflow through or around the ice machine (condenser airflow is in and out the front). Refer to the chart below for clearance requirements.
- The ice machine must be protected if it will be subjected to temperatures below 32°F (0°C). Failure caused by exposure to freezing temperatures is not covered by the warranty.

Ice Machine Clearance Requirements

Self-contained Air-cooled	
Top/Sides	5" (127 mm)*
Back	5" (127 mm)*

*The ice machine may be built into a cabinet.

Ice Machine Heat of Rejection

Series Ice Machine	Heat of Rejection*	
	Air Conditioning**	Peak
UDP0140 UYP0140	2400	2900
UDP0240 UYP0240	2800	3300
UDP0310 UYP0310	3800	6000

* B.T.U./Hour

** Because the heat of rejection varies during the ice making cycle, the figure shown is an average.

Ice machines, like other refrigeration equipment, reject heat through the condenser. It is helpful to know the amount of heat rejected by the ice machine when sizing air conditioning equipment where self-contained air-cooled ice machines are installed.

Leveling the Ice Machine

1. Screw the legs onto the bottom of the ice machine.
2. Screw the foot of each leg in as far as possible.

 **Caution**

The legs must be screwed in tightly to prevent them from bending.

3. Move the ice machine into its final position.
4. Level the ice machine to ensure that the drain system functions correctly. Use a level on top of the ice machine. Turn each foot as necessary to level the ice machine from front to back and side to side.

Electrical Requirements

Voltage

The maximum allowable voltage variation is $\pm 10\%$ of the rated voltage on the ice machine model/serial number plate at start-up (when the electrical load is highest).

Fuse/Circuit Breaker

A separate fuse/circuit breaker must be provided for each ice machine.

Total Circuit Ampacity

The total circuit ampacity is used to help select the wire size of the electrical supply.

The wire size (or gauge) is also dependent upon location, materials used, length of run, etc., so it must be determined by a qualified electrician.

Electrical Specifications

Air-cooled Ice Machine

Ice Machine	Voltage Phase Cycle	Max. Fuse/ Circuit Breaker	Total Amps
UDP0140	115/1/60	15	5.0
UYP0140	208-230/1/60	15	2.5
	230/1/50	10	2.63
UDP0240	115/1/60	15	7.0
UYP0240	208-230/1/60	15	3.5
	230/1/50	10	4.0
UDP0310	115/1/60	15	10.0
UYP0310	208-230/1/60	15	4.5
	230/1/50	10	4.5

NOTE: Model/serial plate information overrides all data listed in this chart.

Warning

All wiring must conform to local, and national codes.

Warning

The ice machine must be grounded in accordance with national and local electrical code.

Water Service/Drains

WATER SUPPLY

Local water conditions may require treatment of the water to inhibit scale formation, filter sediment, and remove chlorine odor and taste.

Important

If you are installing a Manitowoc water filter system, refer to the Installation Instructions supplied with the filter system for ice making water inlet connections.

⚠ Warning

For ice making, connect to a potable water supply only.

Water Inlet Lines

Follow these guidelines to install water inlet lines:

- Do not connect the ice machine to a hot water supply. Be sure all hot water restrictors installed for other equipment are working. (Check valves on sink faucets, dishwashers, etc.)
- If water pressure exceeds the maximum recommended pressure, 80 psig (5.5 bar) obtain a water pressure regulator from your Manitowoc distributor.
- Install a water shut-off valve for ice making potable water.
- Insulate water inlet lines to prevent condensation.

Drain Connections

Follow these guidelines when installing drain lines to prevent drain water from flowing back into the ice machine and storage bin:

- Drain lines must have a 1.5-inch drop per 5 feet of run (2.5 cm per meter), and must not create traps.
- The floor drain must be large enough to accommodate drainage from all drains.
- Install a tee to vent the ice machine drain to the atmosphere.
- Insulate drain lines to prevent condensation.

 **Caution**

Plumbing must conform to state and local codes.

Water Supply and Drain Line Sizing/Connections

Location	Water Temperature	Water Pressure	Ice Machine Fitting	Tubing Size Up to Ice Machine Fitting
Ice Making Water Inlet	40°F (4°C) min. 90°F (32°C) max.	20 psi (138 kPa) min. 80 psi (550 kPa) max.	3/8" Female Pipe Thread	3/8" (9.5 mm) min. inside diameter
Bin Drain	---	---	1/2" Female Pipe thread	1/2" (12.7 mm) min. inside diameter

Maintenance

Interior Cleaning and Sanitizing

General

Descal and sanitize the ice machine every six months for efficient operation. If the ice machine requires more frequent descaling and sanitizing, consult a qualified service company to test the water quality and recommend appropriate water treatment.

The ice machine must be taken apart for descaling and sanitizing.

Caution

Use only Manitowoc approved Ice Machine Cleaner/Descaler ([9405463](#)) and Sanitizer ([9405463](#)). It is a violation of Federal law to use these solutions in a manner inconsistent with their labeling. Read and understand all labels printed on bottles before use.

Detailed Descaling and Sanitizing Procedure UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310

Ice machine cleaner/descaler is used to remove lime scale and mineral deposits. Ice machine sanitizer disinfects and removes algae and slime.

Touch Pad Operation

Pressing and holding the clean button for 3 seconds starts the cycle. The Clean & On/Off lights energize indicating the cycle has started and ice making will automatically start when the cycle is complete.

- **Setting the ice machine to stop after the cycle:** Press the On/Off button. The On/Off light will de-energize indicating the ice machine will stop after the cycle.
- **Pausing the cycle:** Press the Clean button. The clean light will flash indicating the cycle has paused. Pressing the Clean button again will restart the cycle.

Step 1 Press the On/Off button after ice falls from the evaporator at the end of a Harvest cycle. Or, press the On/Off button and allow the ice to melt off the evaporator.

Caution

Never use anything to force ice from the evaporator. Damage may result.

Step 2 Remove all ice from the bin.

Warning

Wear rubber gloves and safety goggles (and/or face shield) when handling Ice Machine Cleaner/Descaler or Sanitizer.

 **Caution**

Do not mix Ice Machine Cleaner/Descaler and Sanitizer solutions together. It is a violation of Federal law to use these solutions in a manner inconsistent with their labeling.

Step 3 To start a descaling cycle, select Clean. Water will flow through the water dump valve and down the drain. Wait until the water trough refills, then add the proper amount of ice machine cleaner/descaler to the water trough.

Model	Amount of Cleaner/Descaler Part Number 9405463
UDP0140 UYP0140	2 ounces (60 ml)
UDP0240 UYP0240	5 ounces (150 ml)
UDP0310 UYP0310	5 ounces (150 ml)

Wait until the cycle is complete (approximately 22 minutes) then press the On/Off button and disconnect power and water supplies to the ice machine.

Step 4 Remove parts for descaling.
Refer to the proper parts removal for your machine.
Continue with step 5 when the parts have been removed.

Step 5 Mix a solution of cleaner/descaler and warm water. Depending on the amount of mineral buildup, a larger quantity of solution may be required. Use the ratio in the table below to mix enough solution to thoroughly descale all parts.

Solution Type	Water	Mixed with
Cleaner/Descaler	1 gal. (4 l)	16 oz (500 ml) cleaner/descaler part number 9405463

 **Caution**

Do not immerse electrical connectors or motors for any components in water, cleaner/descaler or sanitizer solutions.

Use half of the cleaner/descaler and water solution to descale all components. The solution will foam when it contacts lime scale and mineral deposits; once the foaming stops use a soft bristle brush, sponge or cloth (not a wire brush) to carefully descale the parts. Soak the parts for 5 minutes (15 – 20 minutes for heavily scaled parts). Rinse all components with clean water.

Step 6 While components are soaking, use half of the cleaner/descaler and water solution to descale all foodzone surfaces of the ice machine and bin. Use a nylon brush or cloth to thoroughly descale the following ice machine areas:

- Evaporator plastic parts – including top, bottom and sides
- Bin bottom, sides and top
- Rinse all areas thoroughly with clean water.

Step 7 Mix a solution of sanitizer and warm water.

Solution Type	Water	Mixed With
Sanitizer	3 gal. (12 l)	2 oz (60 ml) sanitizer part number 9405653

Use half of the sanitizer/water solution to sanitize all removed components. Use a spray bottle to liberally apply the solution to all surfaces of the removed parts or soak the removed parts in the sanitizer/water solution. Do not rinse parts after sanitizing.

Step 8 Use half of the sanitizer/water solution to sanitize all foodzone surfaces of the ice machine and bin. Use a spray bottle to liberally apply the solution. When sanitizing, pay particular attention to the following areas:

- Evaporator plastic parts - including top, bottom and sides
- Bin bottom, sides and top

Do not rinse the sanitized areas.

Step 9 Replace all removed components, wait 10 minutes, then reapply power and water to the ice machine

Step 10 Select Clean. Water will flow through the water dump valve and down the drain. Wait until the water trough refills, then add the proper amount of ice machine sanitizer to the water trough.

Model	Amount of Sanitizer Part Number 9405653
UDP0140 UYP0140	1 ounces (30 ml)
UDP0240 UYP0240	2 ounces (60 ml)
UDP0310 UYP0310	2 ounces (60 ml)

Wait until the sanitize cycle is complete (approximately 22 minutes) then press the Ice button to start ice making.

Remove Parts for Descaling

Warning

Disconnect electric power to the ice machine at the electric switch box before proceeding.

1. Remove the Harvest Float Switch and Ice Thickness Float Switch
 - Pull forward on the bottom of the bracket until clear of the tab, then slide bracket upward to remove the bracket and float as an assembly. At this point, the float switches can easily be descaled. If complete removal is desired, follow the wires to the bulkhead grommet (exit point) in the back wall. Pull the wire connector through the bulkhead grommet, then disconnect the wire leads from the connector.



NOTE: The wire from the top grommet goes to the ice thickness float switch (front switch). The wire from the bottom grommet goes to the Harvest float switch (side switch).

Important

Reversing the mounting location of the ice thickness and the harvest floats will result in a safety limit 2 failure.

- Do not disassemble float for descaling - Incorrect reassembly will result in an ice machine that will not harvest.
- The ice thickness float must be mounted to the front of the water trough and the electrical connection must be in the top bulkhead grommet.
- The harvest float must be mounted to the side of the water trough and the electrical connection must be in the bottom bulkhead grommet.
- The wire connectors for each float are different and will not allow incorrect electrical bulkhead connection.



**WIRE CONNECTORS ARE LOCATED BEHIND BULKHEAD
PULL THROUGH GROMMET TO DISCONNECT**

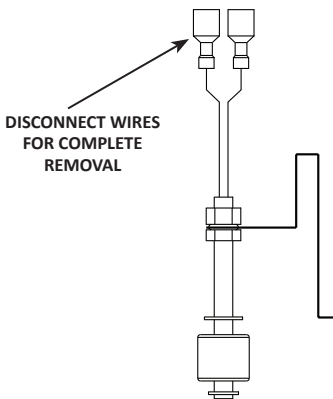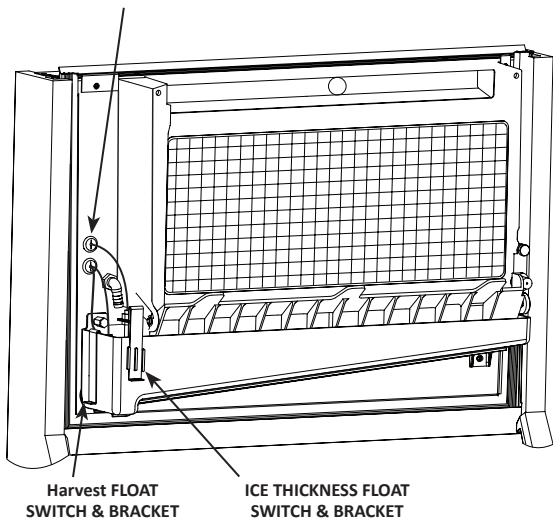

⚠ Caution


Do not disassemble float for descaling - Incorrect reassembly will result in an ice machine that will not harvest.

2. Remove the Water Trough Thermistor and Water Trough
- Remove the upper thumbscrew.
 - While supporting the water trough remove the thumbscrew and thermistor.
 - While supporting the water trough remove the lower thumbscrew from beneath the water trough.
 - Remove the water trough from the bin area.

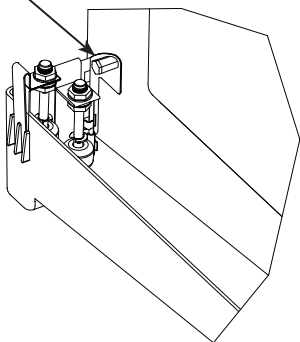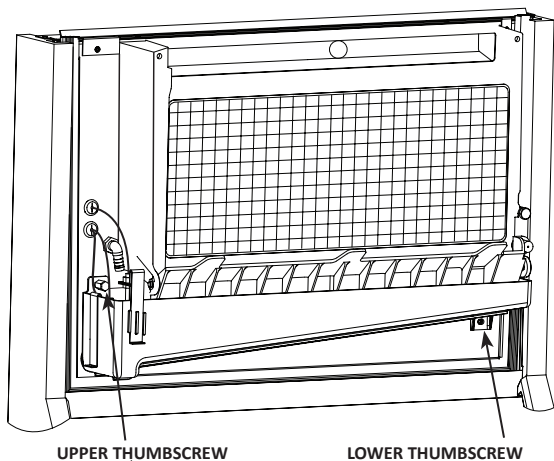

3. Remove the Ice Damper

- Remove thumbscrew from bin switch cover.
- Support ice damper and then pull bin switch cover and ice damper forward to remove.

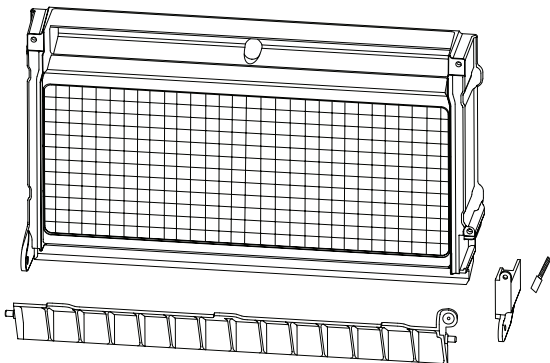


1. REMOVE THUMBSCREW

**2. SUPPORT ICE DAMPER THEN
SLIDE RIGHT SIDE FORWARD TO REMOVE**

4. Remove the Water Distribution Tube

- Distribution tube thumbscrews are retained to prevent loss. Loosen thumbscrews but do not pull thumbscrews out of distribution tube.
- Loosen the two outer screws and pull forward on the distribution tube to release.

NOTE: For ease of assembly when reinstalling the water distribution tube, install the top edge first.

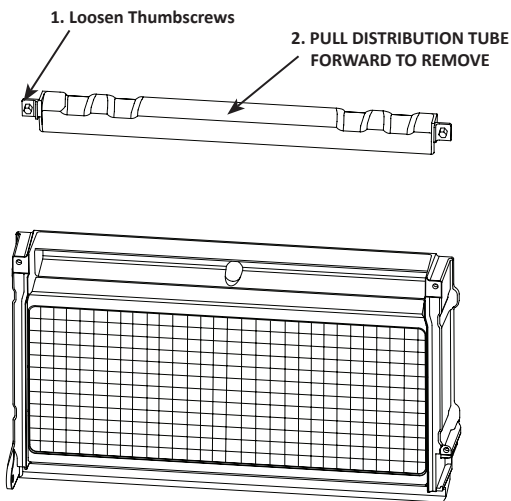

Remedial Cleaning

This procedure can be performed between the bi-annual detailed descaling and sanitizing cycles. This procedure does not require removing the ice from the bin.

Step 1 Press the On/Off button after ice falls from the evaporator at the end of a Harvest cycle. Or, press the On/Off button and allow the ice to melt off the evaporator.

Caution

Never use anything to force ice from the evaporator. Damage may result.

Warning

Wear rubber gloves and safety goggles (and/or face shield) when handling Ice Machine Cleaner/Descaler or Sanitizer.

Step 2 To start a cycle, press the Clean button. Water will flow through the water dump valve and down the drain. Wait until the water trough refills, then add the proper amount of ice machine cleaner/descaler to the water trough.

Model	Amount of Cleaner/Descaler Part Number 9405463
UDP0140 UYP0140	2 ounce (60 ml)
UDP0240 UYP0240	5 ounces (150 ml)
UDP0310 UYP0310	5 ounces (150 ml)

Wait until the cycle is complete (approximately 22 minutes) then press the On/Off button.

Ice Machine Inspection

Check all water fittings and lines for leaks. Also, make sure the refrigeration tubing is not rubbing or vibrating against other tubing, panels, etc.

Do not put anything (boxes, etc.) in front of the ice machine. There must be adequate airflow through and around the ice machine to maximize ice production and ensure long component life.

Exterior Cleaning

Clean the area around the ice machine as often as necessary to maintain cleanliness and efficient operation.

Sponge any dust and dirt off the outside of the ice machine with mild soap and water. Wipe dry with a clean, soft cloth.

Cleanup any fallen ice or water spills as they occur.

CLEANING THE CONDENSER

General

Warning

Disconnect electric power to the ice machine head section and the remote condensing unit at the electric service switches before cleaning the condenser.

A dirty condenser restricts airflow, resulting in excessively high operating temperatures. This reduces ice production and shortens component life.

- Clean the condenser at least every six months.

Warning

The condenser fins are sharp. Use care when cleaning them.

- Shine a flashlight through the condenser to check for dirt between the fins.
- Blow compressed air or rinse with water from the inside out (opposite direction of airflow).

NOTE: Cleaning the condenser will require the removal of the bin on some models.

REMOVAL FROM SERVICE/WINTERIZATION

Self-contained Air-cooled ice machines


1. Descale and sanitize the ice machine.
2. Press the On/Off button to turn off the ice machine.
3. Turn off the water supply, disconnect and drain the incoming ice-making water line at the rear of the ice machine and drain the water trough.
4. Energize the ice machine, wait one minute for the water inlet valve to open and blow compressed air in both the incoming water and the drain openings in the rear of the ice machine to remove all water.
5. Press the On/Off button and disconnect the electric power at the circuit breaker or the electric service switch.
6. Fill spray bottle with sanitizer and spray all interior food zone surfaces. Do not rinse and allow to air dry.
7. Replace all panels.

BIN REMOVAL

UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/
UYP0310

1. Disconnect power.
2. Remove all ice from bin.
3. Remove air filter and louver from lower front of machine.
4. Loosen screws and rotate clips to release bin from base.
5. Disconnect clamp and remove bin drain.
6. Remove control box panel.
7. Remove communication cable from control board.
8. Remove rear cover.
9. Slide bin forward to remove.

NOTE: When reinstalling the bin, ensure the bin seal is in place and is not pinched/folded as it mates to the cabinet. A watertight seal is required to prevent future condensation or water leakage from entering the ice machine base.

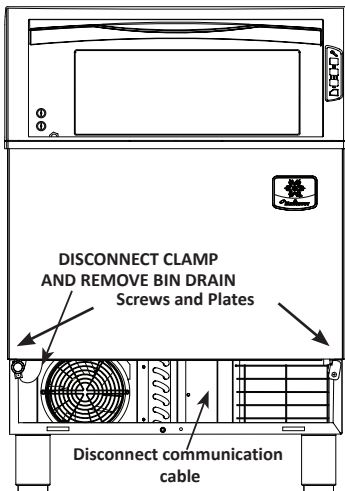

Removal from Service/Winterization

Self-contained Air-cooled ice machines

Special precautions must be taken if the ice machine is to be removed from service for an extended period of time or exposed to ambient temperatures of 32°F (0°C) or below.

1. Disconnect the electric power at the circuit breaker or the electric service switch.
2. Turn off the water supply.
3. Remove the water from the water trough.
4. Disconnect the drain and the incoming ice-making water line at the rear of the ice machine.
5. Make sure no water is trapped inside the ice machine incoming water lines, drain lines, distribution tubes, etc.

Operation

Sequence of Operation UDP0140/UYP0140, UDP0240/UYP0140, UDP0310/UYP0310

TOUCH PAD FEATURES

The touch pad offers a series of pressure sensitive buttons to control ice machine operation and provide operational status.



On/Off - Blue = Machine On
Off = Machine Is Off

Delay - Blue = Delay Mode On
Off = Delay Mode Is Off

Clean - Yellow = Clean Cycle On
Off = Cleaning is Off
Flashing = Cleaning Is Paused

Bin Full - Blue = Bin Is Full
Off = Bin Is Not Full

Service - Red = Needs Service
Off = Doesn't Need Service

On/Off

The On/Off Button is used to start and stop ice making. The blue light indicates whether the ice machine is in Ice Making (light on) or Off (light off).

NOTE: Stopping and restarting a freeze cycle with ice on the evaporator will result in a thick bridge and larger than normal cubes; or result in an ice slab that will not release from the evaporator.

Delay

Pressing the Delay button will start a delay period. The ice machine will finish the freeze and harvest cycle and then start the delay period.

- Pressing the button once will start a 4 hour delay period.
- Pressing the button twice will start a 12 hour delay period.
- Pressing the button three times will start a 24 hour delay period.
- Pressing the button four times will cancel the delay periods.

NOTE: The delay period will be canceled if power is interrupted to the ice machine. When power is restored, the ice machine will start an ice making cycle.

Clean

Pressing the Clean button for 3 seconds will start a clean cycle. After the clean cycle is complete, the ice machine will automatically start an ice making cycle.

- Pressing the Clean button again within 45 seconds of the clean cycle starting will abort the clean cycle.
- Pressing the On/Off button after 45 seconds will pause the Clean cycle. The On/Off light will flash on/off to indicate pause mode. Pressing the On/Off button again will continue the Clean cycle from the point of interruption.
- Pressing the control board test button anytime during the clean cycle will cancel the clean cycle.
- Opening the damper for 30 seconds during the clean cycle will start and automatic shutdown sequence.

Bin Full

The Bin Full light energizes when the bin is full or is de-energized if the bin is not full.

Service

The service light indicates the machine needs attention.

- Refer to safety limits if this light is energized.

Ice Making Sequence of Operation

CONTROL BOARD REVISIONS

1. Original control board
2. Control board with J4 terminal, which can utilize a occurs in the freeze cycle.
3. Control board with the addition of J8 & J9 terminals. The J8 terminal can control an EC fan motor.

NOTE: The replacement control board is backward compatible and can be used without thermistors or EC fan motors.

SOFTWARE REVISIONS

In addition to the primary sequence of operation the following software changes have been added.

Control boards with water trough thermistor and firmware version before 2.70

The water trough thermistor performs the following function in the freeze cycle:

- When the temperature of the water reaches 34° F the water pump de-energizes for 25 seconds, then re energizes.
- When the water pump restarts the water inlet solenoid energizes for 7 seconds.

Software Revision 2.70 and Higher

- 120 second prechill cycle on initial start and 60 second prechill cycles thereafter.

SEQUENCE OF OPERATION

The On/Off button must be depressed and the ice damper must be closed before the ice machine will start.

The following is the primary sequence of operation. Software revisions will alter some of the timing sequences and are noted in software revisions.

Initial Start-up From Shutoff

The dump valve energizes to purge any water in the water trough down the drain. The harvest valve energizes to equalize refrigerant pressures before the compressor starts.

Freeze Cycle

Prechill - The refrigeration system chills the evaporator before water flow over the evaporator starts. The water inlet valve energizes during the prechill and remains on until the ice thickness float switch is satisfied.

Freeze - Water flowing across the evaporator cools as the freeze cycle progresses. (Software version 2.58 or higher: The water pump turns off for 25 seconds and the water inlet valve energizes for 7 seconds when the pump restarts) Water flowing across the evaporator will start to freeze and build ice on the evaporator. After a sheet of ice has formed, the harvest float switch signals the control board to start a harvest cycle.

Harvest Cycle

Every third cycle the remaining water is purged down the drain. The refrigerant gas warms the evaporator and the sheet of cubes slides off the evaporator and into the storage bin. If all cubes fall clear of the ice damper the ice machine starts another freeze cycle. The maximum harvest time is a total of 7 minutes.

If the bin switch does not activate within 3.5 minutes, the harvest cycle extends another 3.5 minutes.

Full Bin Cycle

If the ice damper is held open by ice cubes the ice machine shuts off. When the ice damper closes the ice machine starts a new cycle at Initial Start-up From Shutoff. The ice machine will remain off for a 3 minute delay period.

Thaw Cycle

The maximum harvest time is a total of 7 minutes.

If the bin switch does not activate within 7 minutes a thaw cycle initiates using the following sequence:

1. The compressor de-energizes.
2. The water inlet valve energizes and fills the water trough.
3. The water pump energizes for 2 minutes and circulates water over the evaporator.

If the bin switch did not open & close.

4. The water dump valve energizes and drains water from the water trough.
 5. Step 1 through 4 repeat.
 6. If the damper does not open/close after step 5, the control board assumes no ice is on the evaporator and an initial startup cycle starts.
- If the bin switch opens & closes anytime during the thaw cycle the ice machine starts a new freeze cycle.
 - If the bin switch opens and remains open for 30 seconds at any point in the thaw cycle the ice machine will enter an automatic shutoff cycle.
 - The maximum water fill time for the thaw cycle is 105 seconds for each of the two possible thaw cycles.

CONTROL BOARD TIMERS

- The ice machine is locked into the freeze cycle for 6 minutes before a harvest cycle can be initiated.
- The freeze time lock in feature is bypassed on the initial cycle (manual start or after a full bin/safety limit condition).
- The water fill valve is de-energized 1 minute after the freeze cycle starts. The control board will energize the water inlet valve one more time 3 minutes into the freeze cycle.
- If the harvest float switch is in the down position for 10 continuous seconds during the start of a freeze cycle, a harvest sequence is initiated.
- The maximum freeze time is 45 minutes at which time the control board automatically initiates a harvest sequence.
- The maximum harvest time is a total of 7 minutes. If the bin switch does not activate within 3.5 minutes, the harvest cycle extends another 3.5 minutes. If 7 minutes is exceeded a thaw cycle starts.
- After the initial harvest cycle from either an automatic shut off or initial start the dump valve solenoid will only energize and purge the water in the water trough every third cycle.

The water trough thermistor performs the following function in the freeze cycle:

- When the temperature of the water reaches 34° F the water pump de-energizes for 25 seconds, then re energizes.
- When the water pump restarts the water inlet solenoid energizes for 7 seconds.

SAFETY LIMITS

Safety limits are stored and indicated by the control board. The number of cycles required to stop the ice machine varies for each safety limit.

Safety limits can be reset by pressing the On/Off button and starting a new ice making cycle.

A safety limit shutdown is indicated by the red Service light on the touch pad.

Safety Limit 1

If the freeze time reaches 35 minutes, the control board automatically initiates a harvest cycle.

- After 3 consecutive 35 minute cycles control board light SL#1 along with the touch pad Service (wrench) light will flash on/off at 1 second intervals.
- If 6 consecutive 35-minute freeze cycles occur, the ice machine stops and the SL#1 light on the control board and the Service (wrench) light on the touch pad will be on continuously.

Safety Limit 2

- If the harvest time reaches 3.5 minutes, the control board automatically energizes the water pump and extends the harvest cycle another 3.5 minutes (7 minutes total).
- If the ice damper does not open and close within the 7 minute harvest cycle the ice machine enters a water thaw cycle for 170 seconds.
- If the damper does not open/close within the 170 second thaw cycle, a second thaw cycle starts.
- The control board automatically initiates a freeze sequence when the thaw cycle(s) is complete.
- If 3 consecutive 7 minute harvest/thaw cycles occur, the ice machine stops.

Safety Limit 3

If the freeze time reaches 4 minutes and water is not sensed (float remains down for 10 continuous seconds) the ice machine stops.

- Safety Limit 3 is bypassed on the initial cycle (manual start or after a full bin/safety limit condition). For all subsequent cycles if the freeze time reaches 4 minutes and water is not sensed, the ice machine stops and initiates a 30 minute delay period. Control board lights SL#1 and SL#2 along with the touch pad Service (wrench) light will flash on/off at 1 second intervals.
- The ice machine automatically restarts at the end of the 30 minute delay period and stops flashing the control board and Service (wrench) lights.
- If 100 consecutive failures occur the ice machine stops and the touch pad Service (wrench) light remains energized.

UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310 ENERGIZED PARTS CHART

ICE MAKING SEQUENCE OF OPERATION	Water Pump	Harvest Valve	Water Inlet Valve	Dump Valve	Compressor & Condenser Fan Motor *	Harvest Float Switch	Ice Thickness Float Switch	Length of Time
Initial Start-up	Off	On	Off	On	Off	Closed	Closed	20 seconds
1. Water purge	Off	On	Off	Off	On	Closed	Closed	5 seconds
2. Refrigeration System Start-up	Off	Off	On	Off	On	Open	Closed	60 Seconds
Freeze Sequence	Off	Off	On	Off	On	Open Then Closed	Closed Then Open	120 Seconds Initial Cycle After Automatic Shutoff
3. Prechill	On**	Off	On**	Off	On	Open Then Closed	Closed Then Open	Until Harvest Float Switch closes for 10 continual seconds
4. Freeze	On**	Off	On**	Off	On	Open Then Closed	Closed Then Open	Until Harvest Float Switch closes for 10 continual seconds

ICE MAKING SEQUENCE OF OPERATION	Water Pump	Harvest Valve	Water Inlet Valve	Dump Valve	Compressor & Condenser Fan Motor *	Harvest Float Switch	Ice Thickness Float Switch	Length of Time
Harvest Sequence	Off	On	Off	Initial cycle, then every 3rd	On	Closed	Closed	20 seconds
5. Water Purge								Water purge initial cycle, then every 3rd cycle thereafter
6. Harvest	Off***	On	Off***	Off***	On	Closed	Closed	Bin switch activation
7. Automatic Shutoff	Off	Off	Off	Off	Off	Closed	Closed	3 Minute delay and bin switch re-closure

* Condenser Fan Motor: The fan motor is wired through a fan cycle pressure control; therefore, it may cycle on and off.

** When the water temperature reaches 34°F the water pump de-energizes for 25 seconds . When the pump restarts the water inlet valve energizes for 7 seconds.

*** Will be energized during harvest when time exceeds 3.5 minutes.

**** The water pump de-energizes for 25 seconds then re-energizes

Operational Checks


ICE THICKNESS CHECK

After a harvest cycle, inspect the ice cubes in the ice storage bin. The ice bridge connects the ice cubes and must be set to maintain an ice bridge thickness of 1/8" (3 mm). To adjust the thickness of the bridge refer to ice thickness adjustment.

ICE THICKNESS ADJUSTMENT

The ice thickness can be adjusted to three levels.

1. Pull forward on the bottom of the bracket until clear of the tab.
2. Slide the bracket over the desired tab and release.
 - The center position is the normal factory setting.
 - To increase bridge thickness, raise the water level.
 - To decrease bridge thickness, lower the water level.

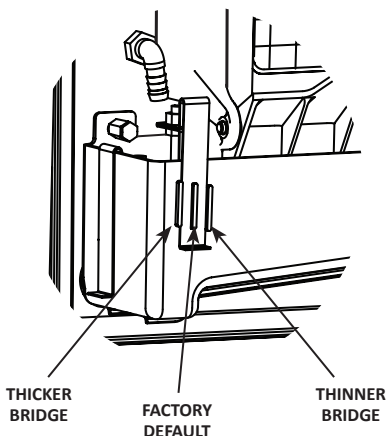

PROCEDURE TO ENERGIZE DUMP VALVE EVERY CYCLE

Control board default is to energize the dump valve and purge the water trough every third harvest cycle. This default can be changed to purge water every cycle by performing the following actions.

1. While in an ice making cycle press and hold the Clean Button for at least 3 seconds.
2. Momentarily press the Delay button - The Service LED will flash 5 times (1 sec ON-1 sec OFF) to indicate the ice machine will purge the sump trough water every cycle.

NOTE: Repeat steps one and two to return to the default state - The Service LED will flash 6 times (1 sec ON-1 sec OFF) to indicate the ice machine will purge the sump trough water every third cycle.

MINIMUM/MAXIMUM SLAB WEIGHT

Adjust the ice thickness float to maintain harvest weights as indicated in this chart.

Model	Minimum Ice Weight Per Cycle Grams	Maximum Ice Weight Per Cycle lbs Grams
UDP0140 UYP0140	480 grams - 17 oz	540 grams - 20 oz
UDP0240 UYP0240	1107 grams - 40 oz	1247grams - 44 oz
UDP0310 UYP0310	1107 grams - 40 oz	1247 grams - 44 oz

THIS PAGE INTENTIONALLY LEFT BLANK

Troubleshooting

Troubleshooting UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310

NOTE: Refer to “Freeze Cycle Analysis Chart - All Models” on page 92 for these models.

PROBLEM CHECKLIST

Problem	Possible Cause	Correction
Ice machine does not operate	No electrical power to the ice machine.	Replace the fuse/reset the breaker/turn on the main switch/plug power cord into receptacle.
	Ice machine needs to be turned on.	Press the On/Off button to start ice making.
	Damper in open position (down).	Damper must be in upright position and capable of swinging freely.
Ice machine stops, and can be restarted by turning the ice machine OFF/ ON.	Safety limit feature stopping the ice machine..	Refer to “Safety Limit Feature”
Ice sheet is thick	Water trough level is too high.	Adjust ice thickness float.
	Power button was turned off/on during freeze cycle and ice remained on evaporator.	Allow ice to thaw and release from evaporator, then restart
	Ice damper was opened then closed in the harvest cycle before the ice released.	Allow ice to thaw and release from evaporator, then restart
Ice machine does not release ice or is slow to harvest.	Ice machine is dirty.	Descale and sanitize the ice machine
	Ice machine is not level.	Level the ice machine
	Low air temperature around ice machine (air-cooled models).	Air temperature must be at least 40° F (4°C).

Problem	Possible Cause	Correction
Ice machine does not cycle into harvest mode.	The six-minute freeze time lock-in has not expired yet.	Wait for freeze lock-in to expire.
	Harvest float switch is dirty.	Descale and sanitize the ice machine.
	Harvest float switch wire is disconnected.	Connect the wire
	Harvest float switch is out of adjustment.	Adjust the harvest float switch.
	Uneven ice fill (thin at top of evaporator).	Refer to "Shallow or Incomplete Cubes"
Ice quality is poor (soft or not clear).	Poor incoming water quality.	Test the quality of the incoming water and make appropriate filter recommendations.
	Water filtration is poor.	Replace the filter.
	Ice machine is dirty.	Descale and sanitize the ice machine.
	Water softener is working improperly (if applicable).	Repair the water softener
Ice machine produces shallow or incomplete cubes, or the ice fill pattern on the evaporator is incomplete.	Ice thickness switch is out of adjustment.	Adjust the ice thickness switch
	Water trough level is too high or too low.	Check the water level.
	Water filtration is poor.	Replace the filter.
	Hot incoming water.	Connect the ice machine to a cold water supply.
	Incorrect incoming water pressure.	Water pressure must be 20-80 psi (137.9 -551.5 kPa)
	Ice machine is not level.	Level the ice machine
Low ice capacity.	The condenser is dirty.	Clean the condenser.
	High air temperature around ice machine (air-cooled models).	Air temperature must not exceed 110° F (43°C).
	Inadequate clearance around the ice machine.	Provide adequate clearance
	Objects stacked around ice machine, blocking condenser airflow	Remove items blocking airflow
	Hot incoming water.	Connect to cold water
	Incorrect incoming water pressure. Water pressure is too low or water filter is restricted.	Water pressure must be 20-80 psi (137.9 -551.5 kPa). Replace water filter.

Problem	Possible Cause	Correction
Ice sheet is thick	Water trough level is too high	Adjust ice thickness float
	Power button was turned off/on during the freeze cycle and ice remained on the evaporator	Allow ice to thaw and release from the evaporator, then restart
	Ice damper was opened and closed in the harvest cycle before the ice released	Allow ice to thaw and release from the evaporator, then restart
	Long harvest cycles with repeated safety limit indication	Descale the ice machine & perform diagnostic procedures as required

CONTROL BOARD TEST MODE

NOTE: The ice damper/bin switch can be open or closed and does not effect the operation of the test mode.

To enter the test mode press and hold the test switch on the control board for 3 seconds. Refer to “Electronic Control Board UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310” on page 132 for test button location. The control board test mode performs the following functions for a 2 minute time period:

- Energizes all control board relays
- Energizes all control board lights
- Energizes all touch pad control lights

After the 2 minute test period the control board will complete 500 ice making cycles, then stop.

Canceling a test cycle:

To cancel a test cycle press the test button a second time.

Restarting a test cycle:

The test cycle will restart each time the test button is pressed for a 3 second time period.

OPERATING ICE MACHINE WITH BIN AND TOUCH PAD REMOVED

The ice machine is designed to allow diagnostic procedures to be performed with the bin removed or to run ice making cycles if a touch pad is defective. The touch pad is attached to the bin and is disconnected during the removal process. Use the control board test mode to operate the ice machine without connecting the touch pad. Refer to “Electronic Control Board UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310” on page 132 for test button location

NOTE: Software versions before 2.70 operate for 1 cycle in test mode. Software versions after 2.70 operate for 500 cycles in test mode.

SAFETY LIMIT FEATURE

In addition to the standard safety controls, your Manitowoc ice machine features built-in safety limits that will stop the ice machine if conditions arise which could cause a major component failure.

Service Light: The Service light energizes whenever a safety limit has been exceeded.

Safety Limit 1

If the freeze time reaches 35 minutes, the control board automatically initiates a harvest cycle.

- After 3 consecutive 35 minute cycles, control board light SL#1 along with the touch pad service (wrench) light will flash on/off at 1 second intervals.
- If 6 consecutive 35-minute freeze cycles occur, the ice machine stops and the SL#1 light on the control board and the Service (wrench) light on the touch pad will be on continuously.

Safety Limit 2

- If the harvest time reaches 3.5 minutes, the control board automatically energizes the water pump and extends the harvest cycle another 3.5 minutes (7 minutes total).
- If the ice damper does not open and close within the 7 minute harvest cycle the ice machine enters a water thaw cycle for 170 seconds.
- If the damper does not open/close within the 170 second thaw cycle, a second thaw cycle starts.
- The control board automatically initiates a freeze sequence when the thaw cycle(s) is complete.
- If 3 consecutive 7 minute harvest/thaw cycles occur, the ice machine stops and the SL#2 light on the control board and the Service (wrench) light on the touch pad will be on continuously.

Safety Limit 3

If the freeze time reaches 4 minutes and water is not sensed (float remains down for 10 continuous seconds) the ice machine stops.

- Safety Limit 3 is bypassed on the initial cycle (manual start or after a full bin/safety limit condition). For all subsequent cycles if the freeze time reaches 4 minutes and water is not sensed, the ice machine stops and initiates a 30 minute delay period. Control board lights SL#1 and SL#2 along with the touch pad Service (wrench) light will flash on/off at 1 second intervals.
- The ice machine automatically restarts at the end of the 30 minute delay period and stops flashing the control board and Service (wrench) lights.
- If 100 consecutive failures occur the ice machine stops and the touch pad Service (wrench) light remains energized.

Determining Which Safety Limit Stopped the Ice Machine:

When a safety limit condition causes the ice machine to stop, the safety limit light on the control board continually flashes on and off.

CONTROL BOARD SAFETY LIMIT LIGHT OPERATION, BEFORE THE POWER BUTTON HAS BEEN CYCLED ON/OFF:

Watch the safety limit lights on the control board:

- SL#1 flashes = 3 or more 35 minute cycles
- SL#1 continuously on = Six 35 minute freeze cycles
- SL#2 flashes = One 3.5 minute harvest cycles
- SL#2 continuously on = 3 consecutive 3.5 minute harvest cycles
- SL#1 & SL#2 flash = SL#3, neither float opened within 4 minutes of the freeze cycle.

CONTROL BOARD SAFETY LIMIT LIGHT OPERATION USING THE POWER BUTTON:

1. Press the power button once.
2. Press the power button again to start ice making.
3. Watch the safety limit lights.
 - One will flash corresponding to safety limits 1 or 2.
4. Safety limit 3 is indicated by both SL#1 & SL#2 flashing.

After safety limit indication, the ice machine will restart and run until a safety limit is exceeded again.

Safety Limit Notes

- A continuous run of 100 harvests automatically erases the safety limit code.
- The control board will store and indicate only one safety limit – the last one exceeded.
- If the power button is cycled OFF and then ON prior to reaching the 100-harvest point, the last safety limit exceeded will be indicated.

Safety Limit Checklist

The following checklists are designed to assist the service technician in analysis. However, because there are many possible external problems, do not limit your diagnosis to only the items listed.

Safety Limit #1

Freeze time exceeds 35 minutes for 3 consecutive freeze cycles.

Possible Cause Checklist

Improper installation

- Refer to “Installation/Visual Inspection Checklist” on page 77

Water System

- Water Level too high or defective float switch (water escaping water trough)
- Low water pressure (20 psig min.)
- High water pressure (80 psig max.)
- High water temperature (90°F/32°C max.)
- Clogged water distribution tube
- Dirty/defective water inlet valve
- Defective water pump

Electrical System

- Harvest cycle not initiated electrically
- Contactor not energizing
- Compressor electrically non-operational
- Restricted condenser air flow
- High inlet air temperature (110°F/43°C max.)
- Condenser discharge air re-circulation
- Dirty condenser fins
- Defective fan cycling control
- Defective fan motor
- Low water pressure (20 psig min.)
- High water temperature (90°F/32°C max.)
- Dirty condenser

Refrigeration System

- Non-Manitowoc components
- Improper refrigerant charge
- Defective compressor
- TXV starving or flooding (check bulb mounting)
- Non-condensable in refrigeration system
- Plugged or restricted high side refrigerant lines or component
- Defective harvest valve

Safety Limit #2

Harvest time exceeds 7 minutes for 3 Consecutive harvest cycles.

Possible Cause Checklist

Improper installation

- Refer to “Installation/Visual Inspection Checklist” on page 77

Water System

- Water area (evaporator) dirty
- Dirty/defective water dump valve
- Vent tube not installed on water outlet drain
- Water freezing behind evaporator
- Plastic extrusions and gaskets not securely mounted to the evaporator
- Low water pressure (20 psig min.)
- Loss of water from sump area
- Clogged water distribution tube
- Dirty/defective water inlet valve
- Defective water pump

Electrical system

- Water inlet valve defective
- Bin switch defective
- Premature harvest

Refrigeration system

- Non-Manitowoc components
- Improper refrigerant charge
- Defective harvest valve
- TXV flooding (check bulb mounting)
- Defective fan cycling control

Safety Limit 3

Freeze time reaches 4 minutes and water is not sensed.

Possible Cause Checklist

Improper installation

- Refer to “Installation/Visual Inspection Checklist” on page 77

Water System

- Dirty/defective water dump valve
- Low water float valve dirty or defective
- Vent tube not installed on water outlet drain
- Low water pressure (20 psig min.)
- Dirty defective water filter (when used)
- Loss of water from sump area
- Dirty/defective water inlet valve

Electrical system

- Water inlet valve coil defective
- Low water float valve defective

DIAGNOSING AN ICE MACHINE THAT WILL NOT RUN

Warning

High (line) voltage is applied to the control board at all times. Removing the control board fuse or pressing the power button will not remove the power supplied to the control board.

1. Verify primary voltage is supplied to ice machine and the fuse/circuit breaker is closed.
2. Verify control board fuse is okay.

NOTE: If any control board lights are on, the fuse is okay.

3. Verify the bin switch functions properly. A defective bin switch can falsely indicate a full bin of ice.
4. Verify power button functions properly. A defective power button may keep the ice machine in the OFF mode. Refer to touch pad diagnostics page 96 when Steps 1 –3 test good.
5. Be sure Steps 1 – 4 were followed thoroughly. Intermittent problems are not usually related to the control board. Replace control board if touch pad operation is correct.

ICE MACHINE DOES NOT CYCLE INTO HARVEST WHEN THE HARVEST FLOAT IS DOWN/CLOSED

NOTE: The ice machine will make a thick or double slab when a new freeze cycle is started with ice already present on the evaporator.

Two of the most common scenarios are:

- Power is cycled off/on with ice on the evaporator.
- The ice damper/bin switch is opened/closed in the harvest cycle before the ice releases.

Remove all ice from the evaporator before starting diagnostic procedures.

Freeze Time Lock-In Feature

The ice machine control system incorporates a freeze time lock-in feature. This prevents the ice machine from short cycling in and out of harvest. The control board locks the ice machine in the freeze cycle for six minutes. After six minutes a harvest cycle can be initiated. To allow the service technician to initiate a harvest cycle without delay, this feature is not used on the first cycle after pressing the power button OFF and back to ON.

Step 1 Disconnect power to the ice machine, remove the electrical panel to allow viewing of the control board lights and pull the wire connector for the harvest float switch through the bulkhead and disconnect. Attach a jumper wire to the wire terminals connected to the control board.


Step 2 Bypass the freeze time lock-in feature by pressing the power button to cycle the ice machine on. Wait until water flows over the evaporator, then refer to chart.

Result	Correction
10 seconds into the freeze cycle the ice machine cycles from freeze to harvest and the control board harvest light energizes.	The ice thickness float switch, connectors or wiring is causing the malfunction.
The harvest light comes on, but the ice machine remains in the freeze cycle.	The ice machine is in a 6 minute freeze lock - Cycle on/off and retest.
The harvest light stays off and the ice machine remains in freeze.	Replace the control board.

ICE MACHINE CYCLES INTO HARVEST BEFORE THE HARVEST FLOAT IS DOWN/CLOSED

Step 1 Disconnect power to the ice machine, remove the electrical panel to allow viewing of the control board lights and pull the wire connector for the harvest float switch through the bulkhead and disconnect.

WIRE CONNECTORS ARE LOCATED BEHIND BULKHEAD
PULL THROUGH GROMMET TO DISCONNECT

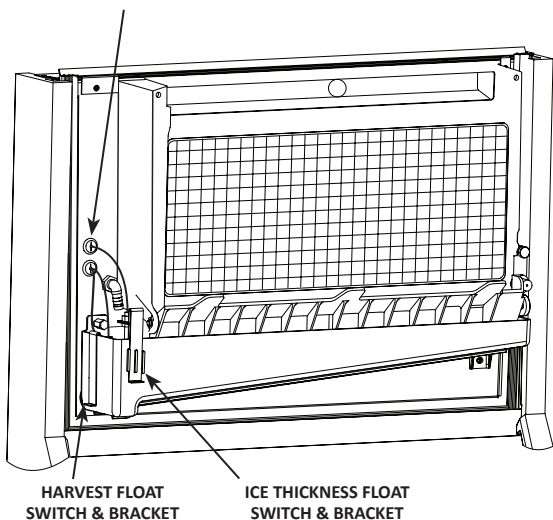

Caution

Do not disassemble a float for descaling/sanitizing or troubleshooting. The float magnet is not located in the center of the float and incorrect reassembly will result in an ice machine that will not harvest.

Step 2 Reapply power and press the power button to cycle the ice machine off/on and bypass the freeze time lock-in feature. Wait until water flows over the evaporator, then refer to chart.

Result	Correction
The harvest light does not come on and the ice machine stays in freeze.	The ice thickness float switch, connectors or wiring is causing the malfunction.
10 seconds into the freeze cycle the ice machine cycles from freeze to harvest and the control board harvest light energizes.	Replace the control board.

ICE PRODUCTION CHECK

The amount of ice a machine produces directly relates to the operating water and air temperatures. This means an ice machine with a 70°F (21°C) ambient temperature and 50°F (10°C) water produces more ice than the same ice machine with 90°F (32°C) ambient and 70°F (21°C) water.

1. Determine the ice machine operating conditions:
Air temp entering condenser: _____°
Air temp around ice machine: _____°
Water temp entering sump trough: _____°
2. Refer to the appropriate "Cycle Times, 24 Hr. Ice Production and Refrigerant Temperature Charts" on page 119. Use the operating conditions determined in Step 1 to find published 24-Hour Ice Production: _____
 - Times are in minutes.
Example: 1 min. 15 sec. converts to 1.25 min.
(15 seconds ÷ 60 seconds = .25 minutes)
 - Weights are in pounds.
Example: 2 lb. 6 oz. converts to 2.375 lb.
(6 oz. ÷ 16 oz. = .375 lb.)
3. Perform an ice production check using the formula below.

1.	$\frac{\text{Freeze Time}}{\text{Freeze Time}}$	+	$\frac{\text{Harvest Time}}{\text{Harvest Time}}$	=	$\frac{\text{Total Cycle Time}}{\text{Total Cycle Time}}$
2.	$\frac{1440}{\text{Minutes in 24 Hrs.}}$	÷	$\frac{\text{Total Cycle Time}}{\text{Total Cycle Time}}$	=	$\frac{\text{Cycles per Day}}{\text{Cycles per Day}}$
3.	$\frac{\text{Weight of One Harvest}}{\text{Weight of One Harvest}}$	x	$\frac{\text{Cycles per Day}}{\text{Cycles per Day}}$	=	$\frac{\text{Actual 24-Hour Production}}{\text{Actual 24-Hour Production}}$

Weighing the ice is the only 100% accurate check.

4. Compare the results of step 3 with step 2. Ice production is normal when these numbers match closely. If they match closely, determine if:
 - Another larger ice machine is required.
 - Relocating the existing equipment to lower the load conditions is required.

Contact the local Manitowoc distributor for information on available options and accessories.

INSTALLATION/VISUAL INSPECTION CHECKLIST

Ice machine is not level

- Level the ice machine

Condenser is dirty

- Clean the condenser

Water filtration is plugged (if used)

- Install a new water filter

Water drains are not run separately and/or are not vented

- Run and vent drains according to the Installation Manual

WATER SYSTEM CHECKLIST

A water-related problem often causes the same symptoms as a refrigeration system component malfunction.

Example: A water dump valve leaking during the freeze cycle, a system low on charge, and a starving TXV have similar symptoms.

Water system problems must be identified and eliminated prior to replacing refrigeration components.

Water area (evaporator) is dirty

- Descale as needed

Water inlet pressure not between 20 and 80 psig (1–5 bar, 138–552 kPa)

- Install a water regulator valve or increase the water pressure

Incoming water temperature is not between 40°F (3°C) and 90°F (32°C)

- If too hot, check the hot water line check valves in other store equipment

Water filtration is plugged (if used)

- Install a new water filter

Vent tube is not installed on water outlet drain

- See Installation Instructions

Hoses, fittings, etc., are leaking water

- Repair/replace as needed

Water valve is stuck open, closed or is leaking

- Descale/replace as needed

Water is spraying out of the sump trough area

- Stop the water spray

Uneven water flow across the evaporator

- Descale the ice machine

Water is freezing behind the evaporator

- Correct the water flow

Plastic extrusions and gaskets are not secured to the evaporator

- Remount/replace as need.

Extremely Thin at Evaporator Outlet

There is no ice, or a considerable lack of ice formation on the outlet of the evaporator.

Examples: No ice at all at the outlet of the evaporator, but ice forms at the inlet half of the evaporator. Or, the ice at the outlet of the evaporator reaches the correct thickness, but the outlet of the evaporator already has 1/2" to 1" of ice formation.

Possible cause: Water loss, low on refrigerant, starving TXV, hot water supply, faulty float valve, etc.

Extremely Thin at Evaporator Inlet

There is no ice, or a considerable lack of ice formation at the inlet of the evaporator. Examples: The ice at the outlet of the evaporator reaches the correct thickness, but there is no ice formation at all at the inlet of the evaporator.

Possible cause: Insufficient water flow, flooding TXV, etc.

Spotty Ice Formation

There are small sections on the evaporator where there is no ice formation. This could be a single corner, or a single spot in the middle of the evaporator. This is generally caused by loss of heat transfer from the tubing on the backside of the evaporator.

No Ice Formation

The ice machine operates for an extended period, but there is no ice formation at all on the evaporator.

Possible cause: Water float valve, water pump, starving expansion valve, low refrigerant charge, compressor, etc.

Refrigeration Diagnostics

These ice machines have a very small refrigerant charge and we do not recommend diagnosing the ice machine using refrigerant pressures. For this reason refrigeration access fittings are not installed during production and the ice machine is diagnosed with temperatures.


ELIMINATE ALL NON REFRIGERATION PROBLEMS BEFORE DIAGNOSING THE REFRIGERATION SYSTEM.

- Perform a visual inspection for clearances, drains, dirty condenser/filter and water filter replacement.
- Verify water flow is even across the entire evaporator.
- Verify ice fill pattern - Mineral build-up on the evaporator assembly will cause water tracking and an erratic ice fill pattern. Descale with Manitowoc Ice Machine cleaner/descaler to remove any mineral buildup.
- Check ice thickness bridge - Bridge should be 3 mm.
- Run an ice production check - Ice production checks within 10% are considered normal.

ICE FORMATION PATTERN

Evaporator ice formation pattern analysis is helpful in ice machine diagnostics.

Analyzing the ice formation pattern alone cannot diagnose an ice machine malfunction. However, when this analysis is used along with Manitowoc's Refrigeration System Operational Analysis Table, it can help diagnose an ice machine malfunction.

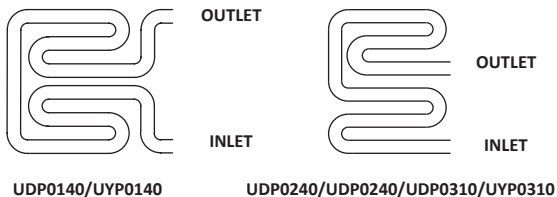

Examples of Evaporator Tubing Routing

Normal Ice Formation

Ice forms across the entire evaporator surface.

At the beginning of the Freeze cycle, it may appear that more ice is forming on the inlet of the evaporator than at the outlet. At the end of the Freeze cycle, ice formation at the outlet will be close to, or just a bit thinner than, ice formation at the inlet. The dimples in the cubes at the outlet of the evaporator may be more pronounced than those at the inlet. This is normal.

If ice forms uniformly across the evaporator surface, but does not do so in the proper amount of time, this is still considered a normal ice fill pattern.

DISCHARGE LINE TEMPERATURE ANALYSIS

Knowing if the discharge line temperature is increasing, decreasing or remaining constant can be an important diagnostic tool. Maximum compressor discharge line temperature on a normally operating ice machine steadily increases throughout the freeze cycle. Comparing the temperatures over several cycles will result in a consistent maximum discharge line temperature.

Ambient air temperatures affect the maximum discharge line temperature.

Higher ambient air temperatures at the condenser = higher discharge line temperatures at the compressor.

Lower ambient air temperatures at the condenser = lower discharge line temperatures at the compressor.

Discharge Line Temperature Procedure

1. Connect a temperature probe on the compressor discharge line within 6" (15 cm) of the compressor.
2. Observe the discharge line temperature for the last three minutes of the freeze cycle and view the maximum discharge line temperature.
3. Compare the maximum discharge line temperature with the published discharge line temperature. If the discharge line temperature is equal or higher to the published temperature this procedure is complete.
4. Discharge line temperature is lower than published temperature.
 - A. Verify the expansion valve sensing bulb is 100% insulated and sealed airtight. Ambient air contacting an incorrectly insulated sensing bulb will cause overfeeding of the expansion valve.
 - B. Ice machines that have a flooding expansion valve will have a maximum discharge line temperature that decreases each cycle.

COMPARING EVAPORATOR INLET/OUTLET TEMPERATURES

The temperatures of the suction lines entering and leaving the evaporator alone cannot diagnose an ice machine. However, comparing these temperatures during the freeze cycle, along with using Manitowoc's Refrigeration System Operational Analysis Table, can help diagnose an ice machine malfunction.

The actual temperatures entering and leaving the evaporator vary by model, and change throughout the freeze cycle. This makes documenting the "normal" inlet and outlet temperature readings difficult. The key to the diagnosis lies in the difference between the two temperatures five minutes into the freeze cycle. These temperatures must be within 7°F (4°C) of each other.

Use this procedure to document freeze cycle inlet and outlet temperatures.

1. Use a quality temperature meter, capable of taking temperature readings on curved copper lines.
2. Attach the temperature meter sensing device to the copper lines entering and leaving the evaporator.

Important

Do not simply insert the sensing device under the insulation. It must be attached to and reading the actual temperature of the copper line.

3. Wait five minutes into the freeze cycle.
4. Record the temperatures below and determine the difference between them.

_____	_____	_____
Inlet Temperature	Difference must be within 7°F (4°C) at 5 minutes into the freeze cycle	Outlet Temperature

5. Use this with other information gathered on the Refrigeration System Operational Analysis Table to determine the ice machine malfunction.

REFRIGERATION DIAGNOSTIC PROCEDURE

1. Install and insulate a temperature lead on the compressor suction line within 6" of the compressor.
2. Install and insulate a temperature lead on the compressor discharge line within 6" of the compressor.
3. All doors and panels must be in place during the diagnostic procedure.
4. Refer to the "Cycle Times, 24 Hr. Ice Production and Refrigerant Temperature Charts" on page 119 to determine the correct operating temperature range for your air and water temperature. Normal operating temperatures will be within 10% of the data in the charts.
5. Record the temperatures throughout the freeze and harvest cycles.

NOTE: First cycle is not used for refrigeration system diagnostics. Run a minimum of two cycles to allow the system to stabilize and start recording temperatures three minutes after the second cycle starts.

Recorded Temperature Chart

Discharge Line Temp	Suction Line Temp	Ice Fill Pattern	Refer to Diagnostics for:
Low (20°F [-7°C] or more)	Low 20°F (-7°C) or more)	Less fill on the outlet of the evaporator	Expansion Valve Flooding
Normal or High	High 10°F (-12°C) or more)	Less fill on the outlet and top 2 rows of the evaporator	Low on Refrigerant or Expansion Valve Starving
Normal	Low 5°F (-15°C) or less)	Less fill on the outlet of the evaporator	Refrigerant Overcharge

FLOODING EXPANSION VALVE SYMPTOMS

A flooding expansion valve will have discharge and suction line temperatures 20°F (-7°C) lower than normal freeze cycle temperatures. Normal suction line temperature and low discharge line temperature DO NOT verify a flooding valve. Both discharge line temperature and suction line temperature must be low to verify a flooding expansion valve. Ice fill pattern is thin on the left hand side of the evaporator.

STARVING EXPANSION VALVE/LOW REFRIGERANT CHARGE SYMPTOMS

A. Ice Fill Pattern

- Thin on top two rows of the evaporator
- Thin on entire left side of the evaporator
- Thick on the bottom of the evaporator

B. Freeze time longer than normal

- A failed TXV or low refrigerant charge will have a suction line temperature higher than normal and a discharge line temperature lower than normal.
- An failed TXV will not effect the discharge line temperature during the harvest cycle. A low freeze and discharge line temperature in the freeze cycle with a normal harvest cycle discharge line temperature indicates a failed TXV.
- Low refrigerant charge will have both the suction and discharge line temperatures lower than normal in the freeze and harvest cycles.

Diagnosis can be confirmed by installing a temporary access valve and adding 2 oz (57 g) of refrigerant: If the suction line temperature drops or the ice fill pattern on the top two rows fills in, the ice machine is low on refrigerant. Refer to charging procedures for access valve installation/removal procedure.

OVERCHARGED SYSTEM SYMPTOMS

Suction line temperature will be slightly low during freeze cycle 5°F (-15°C). Discharge line temperature is normal. Actual amperage readings will be higher than nameplate rating.

Overcharge diagnosis can be difficult. R290 ice machines ship without access valves; Look for signs that an access valve has previously been added. When an overcharge is suspected remove the refrigerant and weigh in the correct refrigerant amount.

HIGHER THAN NORMAL FREEZE CYCLE TEMPERATURES

- A dirty filter or condenser will result in higher than normal temperatures. Always clean the filter and condenser before diagnosing the refrigeration system.
- Hot water entering the ice machine will result in high suction and discharge line temperatures in the freeze cycle.
- Inefficient Compressor
Suction and discharge temperatures will be slightly high to high during the freeze cycle. Remove refrigerant and weigh in the correct refrigerant amount. If the ice machine continues to exhibit symptoms, monitor the discharge line temperature for a continued increase of temperature. When the ice machine continues to make ice slowly (or makes little to no ice and trips the internal compressor overload) the compressor will require replacement.

HARVEST VALVE

General

The harvest valve is an electrically operated valve that opens when energized, and closes when de-energized.

Normal Operation

The valve is de-energized (closed) during the freeze cycle and energized (open) during the harvest cycle. The valve is positioned between the receiver and the evaporator and performs two functions:

1. Prevents refrigerant from entering the evaporator during the freeze cycle.

The harvest valve is not used during the freeze cycle. The harvest valve is de-energized (closed) preventing refrigerant flow from the receiver into the evaporator.

2. Allows refrigerant vapor to enter the evaporator in the harvest cycle.

During the harvest cycle, the harvest valve is energized (open) allowing refrigerant gas from the discharge line of the compressor to flow into the evaporator. The heat is absorbed by the evaporator and allows release of the ice slab.

Exact temperatures vary according to ambient temperature and ice machine model. Harvest temperatures can be found in the “Cycle Times, 24 Hr. Ice Production and Refrigerant Temperature Charts” on page 119.

Harvest Valve Analysis

The valve can fail in two positions:

- Valve will not open in the harvest cycle.
- Valve remains open during the freeze cycle.

VALVE WILL NOT OPEN IN THE HARVEST CYCLE

Although the circuit board has initiated a harvest cycle, the evaporator temperature remains unchanged from the freeze cycle.

VALVE REMAINS OPEN IN THE FREEZE CYCLE:

Symptoms of a harvest valve remaining partially open during the freeze cycle can be similar to symptoms of an expansion valve, float valve or compressor problem. Symptoms are dependent on the amount of leakage in the freeze cycle.

A small amount of leakage will cause increased freeze times and an ice fill pattern that is “Thin at the Outlet”, but fills in at the end of the cycle.

As the amount of leakage increases the length of the freeze cycle increases and the amount of ice at the outlet of the evaporator decreases.

Refer to the Parts Manual for proper valve application. If replacement is necessary, use only “original” Manitowoc replacement parts.

Use the following procedure and table to help determine if a harvest valve is remaining partially open during the freeze cycle.

1. Wait eight minutes into the freeze cycle.
2. Feel the inlet of the harvest valve or attach thermocouple and insulate.

Important

Feeling the harvest valve outlet or across the harvest valve itself will not work for this comparison.

The harvest valve outlet is on the suction side (cool refrigerant). It may be cool enough to touch even if the valve is leaking.

3. Feel the compressor discharge line.

Warning

The inlet of the harvest valve and the compressor discharge line could be hot enough to burn your hand. Just touch them momentarily.

4. Compare the temperature of the inlet of the harvest valve to the temperature of the compressor discharge line and refer to table.

Findings	Comments
<p>The inlet of the harvest valve is cool enough to touch and the compressor discharge line is hot.</p> <p>Cool & Hot</p>	<p>This is normal as the discharge line should always be too hot to touch and the harvest valve inlet, although too hot to touch during harvest, should be cool enough to touch after 5 minutes into the freeze cycle.</p>
<p>The inlet of the harvest valve is hot and approaches the temperature of a hot compressor discharge line.</p> <p>Hot & Hot</p>	<p>This is an indication something is wrong, as the harvest valve inlet did not cool down during the freeze cycle. If the compressor dome is also entirely hot, the problem is not a harvest valve leaking, but rather something causing the compressor (and the entire ice machine) to get hot.</p>
<p>Both the inlet of the harvest valve and the compressor discharge line are cool enough to touch.</p> <p>Cool & Cool</p>	<p>This is an indication something is wrong, causing the compressor discharge line to be cool to the touch. This is not caused by a harvest valve leaking.</p>

Freeze Cycle Analysis Chart - All Models

This table must be used with charts, checklists and other references to eliminate refrigeration components not listed on the table and external items and problems which can cause good refrigeration components to appear defective. All installation and water related problems must be corrected before proceeding with this chart.

Discharge Temperature	Evaporator Outlet Temperature	Freeze Time	Harvest Valve Inlet Temperature	Evaporator Ice Formation	Evaporator Inlet Colder Than Outlet	Final Analysis Enter number of boxes checked in each row
Normal	Higher Than Normal	Longer Than Normal	Higher Than Normal	Thin on Inlet or Normal	No	Harvest Valve Leaking
Lower Than Normal	Lower Than Normal	Shorter Than Normal	Normal	Normal or Thick On Outlet	No	TXV Flooding or Overcharged
Normal	Higher Than Normal	Longer Than Normal	Normal	Thin On Outlet	Yes	TXV Starving Or Low On Charge
Normal	Higher Than Normal	Longer Than Normal	Normal	Normal or No Ice	Yes	Compressor

Component Check Procedures

MAIN FUSE

Function

The control board fuse stops ice machine operation if electrical components fail causing high amp draw.

Specifications

UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/
UYP0310 - 250 Volt, 10 amp.

Warning

High (line) voltage is applied to the control board at all times. Removing the control board fuse or pressing the power button will not remove the power supplied to the control board.

Check Procedure

1. If the curtain light is on with the ice damper closed, the fuse is good.

Warning

Disconnect electrical power to the entire ice machine before proceeding.

2. Remove the fuse. Check the resistance across the fuse with an ohmmeter.

Reading	Result
Open (OL)	Replace fuse
Closed (O)	Fuse is good

BIN SWITCH

UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310

Function

Bin switch operation is controlled by the movement of the ice damper. The bin switch has two main functions:

1. Terminating the harvest cycle and returning the ice machine to the freeze cycle.

This occurs when the bin switch is opened and closed again within 7 seconds of opening during the harvest cycle.

2. Automatic ice machine shut-off.

If the storage bin is full at the end of a harvest cycle, the sheet of cubes fails to clear the ice damper and holds it down. After the ice damper is held down for 7 seconds, the ice machine shuts off.

The ice machine remains off until enough ice is removed from the storage bin to allow the sheet of cubes to drop clear of the ice damper. As the ice damper swings back to the operating position, the bin switch closes and the ice machine restarts.

Important

The ice damper must be up (bin switch closed) to start ice making.

Check Procedure

1. Press the power button to OFF.
2. Watch the curtain light on the control board.
3. Move the ice damper upward, toward the evaporator. The bin switch must close. The curtain light “on” indicates the bin switch has closed properly.
4. Move the ice damper away from the evaporator. The bin switch must open. The curtain light “off” indicates the bin switch has opened properly.

Ohm Test

1. Disconnect the bin switch wires to isolate the bin switch from the control board.
2. Connect an ohmmeter to the disconnected bin switch wires.
3. Cycle the bin switch open and closed numerous times by opening and closing the water curtain.

NOTE: To prevent mis-diagnosis:

- Always use the water curtain magnet to cycle the switch (a larger or smaller magnet will affect switch operation).
- Watch for consistent readings when the bin switch is cycled open and closed (bin switch failure could be erratic).

TOUCH PAD

UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310

Function

User interface to select ice making, delay start or cleaning cycle and provides feedback on ice machine operation.

Check For Normal Operation

Action	Normal Function
Press and hold the control board test button for 3 seconds	All Touch Pad lights turn on
Press test button	All Touch Pad lights turn off
Press power button	Power light turns on
With power light energized press the delay button 4 times	Cycles through 4 hour delay, 12 hour delay, 24 hour delay and off
Press and hold the power button for 3 seconds	Power light turns off
Press and hold the clean button for 3 seconds	Clean light turns on
Press and hold the clean button for 3 seconds	Clean light turns off
If any switches do not operate correctly, disconnect main power to the ice machine to reset the control board and perform a second test. If the second test doesn't show normal function, perform the Ohm test to verify the issue is not a wiring or control board issue.	

Ohm Test


Disconnect power from ice machine.

Disconnect wire from control board and Ohm touch pad and interconnecting wire to verify correct operation.

Pressing and depressing the touch pad must open and close the circuit. A switch that functions correctly will close as the button is pressed and open as the button is released.

Do not insert electrical probe into end of connector. This will stretch the connector and cause intermittent connection issues. All readings must be taken on the flat exterior of the connector.

Selection	Wires
On/Off	#2 & #7
Delay	#3 & #7
Clean	#4 & #7

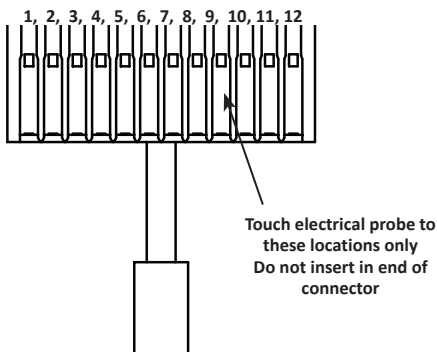

Control Board Connector

FLOAT SWITCH

UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310

Function

Open and close to indicate to the control board the level of water in the water trough.

Specifications

Normally closed, float operated magnetic reed switch.

The float switch contacts are closed in the down position. When water raises the float to the up position the magnet in the float opens the contacts.

Check Procedure

The ice machine uses two float switches.

Ice Thickness Float -Indicates the water level has been reached.

Harvest Float - Indicates a harvest cycle needs to be initiated.

Initial testing can be performed by viewing the control board light(s) while raising and lowering the float. The corresponding control board light must turn on and off when the float is raised and lowered.

Harvest Float switch:

- A. The light must be on in the up position.
- B. The light must be off in the down position.

Caution


Do not disassemble float for Descaling - Incorrect reassembly of the float will result in an ice machine that will not harvest.

Ice Thickness Float Switch:

- A. The light must be off in the down position.
- B. The light must be on in the up position.

If the control board light does not respond to the float proceed with step 1 below.

1. Disconnect power to the ice machine, pull the wire connector for the float switch through the bulkhead and disconnect.
2. Attach an ohm meter lead to each float switch wire.
3. Place the float in the down position - The float switch must be closed.
4. Place the float in the up position - The float switch must be open.

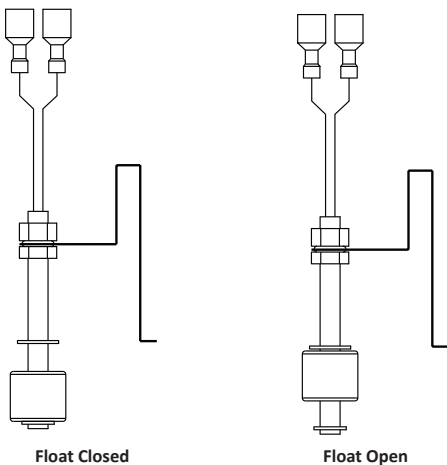

NOTE: Make adjustments with the ice machine in the off position. Making adjustments during the freeze cycle may produce an initial sheet of ice that is thicker than future cycles.

Float	Float Up	Float Down
Ice Thickness Float	OL	< 1 Ohm
Harvest Float	OL	< 1 Ohm

WATER TROUGH THERMISTOR

UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310

Function

Thermistor resistance values change with temperature. The value supplied to the control board is used to identify temperature at the thermistor location.

When the resistance value indicates a temperature of 34°F (1°C) the control board will delay the water pump for 25 seconds. When the water pump restarts the water inlet valve will energize for 7 seconds then turn off.

NOTE: If the ice machine is experiencing long freeze cycle shut down, we recommend removing the thermistor and bracket permanently.

Check procedure

THERMISTOR

1. Disconnect thermistor from control board and measure resistance.
2. Measure temperature at the thermistor.
3. Compare measured resistance/temperature readings to resistance/temperature relationship chart.
 - A. Within 10% of the published resistance value
Thermistor is good
 - B. Not within 10% of the published resistance value
- Thermistor is defective.

CONTROL BOARD OPERATION

1. Disconnect thermistor from control board - The control board thermistor LED will flash 1 second on and 1 second off.
2. The control board will default to the 3.75 minute pump delay in the freeze cycle.

THERMISTOR CHART

Important

If the ohmmeter reads "OL," check the scale setting on the meter before assuming the thermistor is bad.

Temperature of Thermistor		Resistance
°C	°F	K Ohms (x1000)
-7 - -1.0	19 - 30	47.06 - 34.36
0.0	32	32.65
0.5	33	31.82
1.0	33.8	31.03
1.1	34	30.85
1.5	34.7	30.25
2.0	35.6	29.49
2.5	36.5	28.76
3.0	37	28.05
3.5	38	27.36
4.0 - 10.5	39 - 51	26.68 - 19.43
11.0 - 15.0	52 - 59	18.97 - 15.71
15.5 - 20.0	60 - 68	15.35 - 12.49
20.5 - 25.0	69 - 77	12.21 - 10.00
25.5 - 30.0	78 - 86	9.78 - 8.05
30.5 - 35.0	87 - 95	7.88 - 6.39
36.5 - 40.0	98 - 104	6.14 - 5.32
40.5 - 46.0	105 - 115	5.22 - 4.20

NOTE: The control board will default to a 3.75 minute pump delay in the freeze cycle, whenever the thermistor is disconnected or reads outside the resistance ranges in the table.

FAN CYCLE CONTROL

UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310

Function

Cycles the fan motor on and off to maintain proper operating discharge pressure.

The fan cycle control closes on an increase, and opens on a decrease in discharge pressure.

Specifications

Model	Cut-In (Close)	Cut-Out (Open)
UPD0140 UYP0140 UDP0210 UYP0210 UDP0310 UYP0310	200 psig \pm 5	150 psig \pm 5

Check Procedure

Disconnect electrical power to the ice machine at the electrical service disconnect.

Verify fan motor windings are not open or grounded, and fan spins freely.

Connect manifold gauge to ice machine.

Hook voltmeter in parallel across the fan cycle control, leaving wires attached.

Reconnect electrical power to the ice machine and press the power button to ON.

Wait until water flows over the evaporator then refer to chart below.

System Pressure:	Reading Should Be:	Fan Should Be:
Above cut-in	0 volts	Running
Below cut-out	Line voltage	Off

HIGH PRESSURE CUTOUT (HPCO) CONTROL

UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310

Function

Stops the ice machine if subjected to excessive high-side pressure.

The HPCO control is normally closed, and opens on a rise in discharge pressure.

Specifications

Cut-out: 350 psig \pm 10

Cut-in: Automatic reset

(Must be below 250 psig to reset)

Check Procedure

1. Switch to OFF.
2. Connect manifold gauge.
3. Hook voltmeter in parallel across the HPCO, leaving wires attached.
4. Disconnect the fan motor.
5. Set to ON - No air flow through the condenser will cause the HPCO control to open because of excessive pressure. Watch the pressure gauge and record the cut-out pressure.

Warning

If discharge pressure exceeds 360 psig and the HPCO control does not open, press the power button to stop ice machine operation.

Replace the HPCO control if it:

- Will not reset (below 250 psig)
- Does not open at the specified cut-out point

COMPRESSOR ELECTRICAL DIAGNOSTICS

The compressor does not start or will trip repeatedly on overload.

Check Resistance (Ohm) Values

NOTE: Compressor windings can have very low ohm values. Use a properly calibrated meter.

Perform the resistance test after the compressor cools. The compressor dome should be cool enough to touch (below 120°F/49°C) to ensure that the overload is closed and the resistance readings will be accurate.

Single Phase Compressors

1. Disconnect power from the condensing unit and remove the wires from the compressor terminals.
2. The resistance values between C and S and between C and R, when added together should equal the resistance value between S and R.
3. If the overload is open, there will be a resistance reading between S and R, and open readings between C and S and between C and R. Allow the compressor to cool, then check the readings again.

Check Motor Windings to Ground

Check continuity between all three terminals and the compressor shell or copper refrigeration line. Scrape metal surface to get good contact. If continuity is present, the compressor windings are grounded and the compressor should be replaced.

To determine if the compressor is seized check the amp draw while the compressor is trying to start.

Compressor Drawing Locked Rotor

The two likely causes of this are:

- Defective starting component
- Mechanically seized compressor

To determine which you have:

1. Install high and low side gauge.
2. Try to start the compressor.
3. Watch the pressures closely.
 - If the pressures do not move, the compressor is seized. Replace the compressor.
 - If the pressures move, the compressor is turning slowly and is not seized. Check the capacitors and relay.

Compressor Drawing High Amps

The continuous amperage draw on start-up should not be near the maximum fuse size indicated on the serial tag.

The wiring must be correctly sized to minimize voltage drop at compressor start-up. The voltage when the compressor is trying to start must be within $\pm 10\%$ of the nameplate voltage.

Filter-Driers

Liquid Line Filter Drier

The filter-drier used on Manitowoc ice machines are manufactured to Manitowoc specifications.

The difference between a Manitowoc drier and an off-the-shelf drier is in filtration. A Manitowoc drier has dirt-retaining filtration, with fiberglass filters on both the inlet and outlet ends. This is very important because ice machines have a back-flushing action that takes place during every harvest cycle.

A Manitowoc filter-drier has a very high moisture removal capability and a good acid removal capacity.

Important

The liquid line drier is covered as a warranty part. The liquid line drier must be replaced any time the system is opened for repair.

Flammable Refrigerant Procedures

Servicing Requirements

- It is recommended that only technicians specifically trained in handling flammable refrigerants, service or dispose of equipment containing hydrocarbon refrigerants.
- Color-coded red process tubes indicate use of a flammable refrigerant - Process tubes must be replaced after brazing or other service procedures.
- An accessible fire extinguisher is required when brazing.
- A combustible gas leak detector with a minimum sensitivity of 8 grams per cubic meter is required. The meter must be on while servicing the equipment. Place the detector on the floor and set the detector to beep at approximately heart beat rate.
- Equipment using hydrocarbon refrigerants have fittings unique to flammable refrigerants.
- Work in well-ventilated, open spaces - A ventilation fan can be used to disperse any residual refrigerant. Place the fan a minimum of 10' (3m) away from the work area.
- Eliminate all ignition sources.
- The filter drier must be replaced whenever the system is opened to the atmosphere.

Important

- Remove piercing valves after charging.
- Unit is critically charged. Nitrogen must be purged through the system while brazing to prevent build up of copper oxide in the refrigeration system.
- Manifold gauge set must be removed properly to ensure that no refrigerant contamination or loss occurs. A quick disconnect is required for the high side connection.

REFRIGERANT PURGING REQUIREMENTS

NOTE: Country and Local Codes for removal and processing of this refrigerant must always take precedence over these procedures.

- Minimum of 10 feet from building, verify wind direction will not introduce refrigerant into building
- Verify refrigerant does not enter buildings through intake air vents
- Although not required hydrocarbon refrigerants can be recovered, instead of venting to the atmosphere.
- Purge system with dry nitrogen to displace any trapped propane.

DANGER

Disconnect all electric power to the system. Shorting electrical wires to refrigeration tubing may result in an explosion.

REFRIGERANT PURGING PROCEDURE

1. Disconnect all electric power to the system and lockout tag out the power source(s).

NOTE: Some systems may have more than one power supply.

2. Work in well-ventilated, open space and eliminate all ignition sources.
3. Install piercing valves on the high and low side access fittings.
4. Attach manifold gauge set to the low and high side fittings. Hoses need to be as short as practical, due to the small refrigerant charge.
5. Purge refrigerant from both low and high side.
6. Purge the system with dry nitrogen for 3 minutes.
7. Evacuate the system with a vacuum pump
8. Purge the system again with dry nitrogen
9. Open the system by cutting the tubes with a tube cutter. Do not use a torch to open the system.

BRAZING PROCEDURE

10. Always purge nitrogen whenever using a torch. The nitrogen pressure regulator must be equipped with two gauges; One gauge to measure the cylinder pressure, and one to measure the discharge (refrigeration system psig). The pressure regulator must be capable of reducing the pressure to 2 or 3 psig and steadily maintaining this pressure.

PRESSURE TESTING

11. Pressure test with dry nitrogen to detect leaks. Use nitrogen and a trace amount of refrigerant to locate the leak if a pressure test indicates a leak is present.
12. Do not over pressurize the system. Check the name plate for the maximum test pressure.

DANGER

Failure to properly purge or pressure test a system for leaks, can result in serious injury or death from explosion, fire, or contact with refrigerant or lubricant mists.

EVACUATION

13. Slowly release the nitrogen and evacuate to a minimum of 500 microns.

NOTE: Do not start the compressor while it is in a vacuum or energize the compressor with the terminal cover off. Always break a vacuum with refrigerant before energizing (starting) the compressor.

Refrigerant Charging

Due to the small refrigerant quantities, a cap tube in the .50 to .85 ID range with a shutoff valve at the access port can be used to control the flow of refrigerant. The charge accuracy must be within +/- 1% of the nameplate listed charge.

14. Invert the charging bottle, and place on a scale capable of reading grams and ounces.
15. Purge liquid refrigerant to the shutoff valve, then zero out the scale and allow the reading to settle.

NOTE: It is important that the scales and hoses are positioned so that they will not be disturbed when adding refrigerant.

Important

The charge is critical on all Manitowoc ice machines. Use a scale to ensure the proper charge is installed. A quick disconnect is required for the high side connection

16. Add refrigerant through the high side and close the valve just before the nameplate refrigerant amount is reached, then add refrigerant to reach the final charge amount. If all of the refrigerant can not be added to the high side, the remainder can be added as vapor to the low side while the compressor is running.
17. Press the power button.

NOTE: Manifold gauge set must be removed properly to ensure no refrigerant contamination or loss occurs.

18. Verify all of the vapor in the charging hoses is drawn into the refrigeration system before disconnecting the charging hoses.
 - A. Run the ice machine in freeze cycle.
 - B. Remove the high side low loss fitting.
 - C. Open the high and low side valves on the manifold gauge set. Any refrigerant in the lines will be pulled into the low side of the system.
 - D. Allow the suction pressures in the refrigeration system and the manifold gauge set to equalize while the ice machine is in the freeze cycle.
 - E. Isolate and remove the low side hose.
19. Use a pinch-off tool on the access fitting and remove temporary access valves and seal the refrigeration system.

System Contamination Cleanup

This section describes the basic requirements for restoring contaminated systems to reliable service.

DETERMINING SEVERITY OF CONTAMINATION

System contamination is generally caused by either moisture or residue from compressor burnout entering the refrigeration system.

Inspection of the refrigerant usually provides the first indication of system contamination. Obvious moisture or an acrid odor in the refrigerant indicates contamination.

If either condition is found, or if contamination is suspected use a test kit.

If a refrigerant test kit indicates harmful levels of contamination, or if a test kit is not available, inspect the compressor oil.

1. Remove the refrigerant charge from the ice machine.
2. Remove the compressor from the system.
3. Check the odor and appearance of the oil.
4. Inspect open suction and discharge lines at the compressor for burnout deposits.
5. If no signs of contamination are present, perform an acid oil test to determine the type of cleanup required.

Contamination/Cleanup Chart	
Symptoms/Findings	Required Cleanup Procedure
No symptoms or suspicion of contamination	Normal evacuation/recharging procedure
Moisture/Air Contamination symptoms Refrigeration system open to atmosphere for longer than 15 minutes Refrigeration test kit and/or acid oil test shows contamination No burnout deposits in open compressor lines	Mild contamination cleanup procedure
Mild Compressor Burnout symptoms Oil appears clean but smells acrid Refrigeration test kit or acid oil test shows harmful acid content No burnout deposits in open compressor lines	Mild contamination cleanup procedure
Severe Compressor Burnout symptoms Oil is discolored, acidic, and smells acrid Burnout deposits found in the compressor, lines, and other components	Severe contamination cleanup procedure

MILD SYSTEM CONTAMINATION CLEANUP PROCEDURE

1. Replace any failed components.
2. If the compressor is good, change the oil.
3. Replace the liquid line drier.

NOTE: If the contamination is from moisture, use heat lamps during evacuation. Position them at the compressor, condenser and evaporator prior to evacuation. Do not position heat lamps too close to plastic components, or they may melt or warp.

4. Follow the normal evacuation procedure, except replace the evacuation step with the following:
 - A. Pull vacuum to 1000 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of 5 psig.
 - B. Pull vacuum to 500 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of 5 psig.
 - C. Change the vacuum pump oil.
 - D. Pull vacuum to 500 microns. Run the vacuum pump for 1/2 hour on self-contained models, 1 hour on remotes.

NOTE: You may perform a pressure test as a preliminary leak check. You should use an electronic leak detector after system charging to be sure there are no leaks.

5. Charge the system with the proper refrigerant to the nameplate amount.
6. Operate the ice machine.

SEVERE SYSTEM CONTAMINATION CLEANUP PROCEDURE

1. Remove the refrigerant charge.
2. Remove the compressor.
3. If burnout deposits are found, replace the TXV.
4. Wipe away any burnout deposits from suction and discharge lines at compressor.
5. Sweep through the open system with dry nitrogen.
6. Install a new compressor and new start components.
7. Install suction line filter-drier in front of compressor.
8. Install a new liquid line drier.
9. Follow the normal evacuation procedure, except replace the evacuation step with the following:
 - A. Pull vacuum to 1000 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of 5 psig.
 - B. Change the vacuum pump oil.
 - C. Pull vacuum to 500 microns. Break the vacuum with dry nitrogen and sweep the system. Pressurize to a minimum of 5 psig.
 - D. Change the vacuum pump oil.
 - E. Pull vacuum to 500 microns. Run the vacuum pump for 1 additional hour.
10. Charge the system with the proper refrigerant to the nameplate charge.
11. Operate the ice machine for one hour. Then, check the pressure drop across the suction line filter-drier.
 - A. If the pressure drop is less than 2 psig, the filter-drier should be adequate for complete cleanup.
 - B. If the pressure drop exceeds 2 psig, change the suction line filter-drier and the liquid line drier. Repeat until the pressure drop is acceptable.
12. Operate the ice machine for 48 – 72 hours. Replace the suction line and liquid line drier if necessary.

Total System Refrigerant Charge

Important

This information is for reference only. Refer to the ice machine serial number tag to verify the system charge. Serial plate information overrides information listed on this page.

Model	Air-Cooled	Refrigerant Type
UDP0140 UYP0140	110 g 3.8 oz	R290
UDP0240 UYP0240	140 g 4.9 oz	R290
UDP0310 UYP0310	120 g 4.2 oz	R290

THIS PAGE INTENTIONALLY LEFT BLANK

Charts

Cycle Times, 24 Hr. Ice Production and Refrigerant Temperature Charts

These charts are used as guidelines to verify correct ice machine operation.

- Accurate collection of data is essential to obtain the correct diagnosis. Eliminate all non refrigeration problems before diagnosing the refrigeration system.
- Perform a visual inspection for clearances, drains, dirty condenser/filter and water filter replacement.
- Verify water flow is even across the entire evaporator.
- Verify ice fill pattern - Mineral build-up on the evaporator assembly will cause water tracking and an erratic ice fill pattern. Descale with Manitowoc Ice Machine cleaner/descaler to remove any mineral buildup.
- Check ice thickness bridge - Bridge should be 3 mm.
- Ice production checks that are within 10% of the chart are considered normal. This is due to variances in water and air temperature. Actual temperatures will seldom match the chart exactly.
- Refer to “Refrigeration diagnostics” for the list of data that must be collected for refrigeration diagnostics.

UDP0140/UYP0140 SELF-CONTAINED AIR-COOLED

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °F/°C	Freeze Time			Harvest Time
	Water Temperature °F/°C			
	50/10	70/21	90/32	
70/21	10.2-11.7	12.4-14.1	13.0-14.8	1.0-2.5
80/27	11.2-12.8	13.0-14.8	14.6-16.5	
90/32	11.8-13.4	14.6-16.5	17.6-19.9	
100/38	14.6-16.5	17.6-19.9	19.9-17.6	
110/43	16.5-18.7	19.9-17.6	20.3-23.0	

Times in minutes

24 Hour Ice Production

Air Temp. Entering Condenser °F/°C	Water Temperature °F/°C		
	50/10	70/21	90/32
70°F 21°C	130 lb 59 kg	110 lb 50 kg	105 lb 48 kg
80°F 27°C	120 lb 54 kg	105 lb 48 kg	95 lb 43 kg
90°F 32°C	115 lb 52 kg	95 lb 43 kg	85 lb 39 kg
100°F 38°C	95 lb 43 kg	85 lb 39 kg	80 lb 36 kg
110°F 43°C	85 lb 39 kg	80 lb 36 kg	70 lb 32 kg

Based on average ice slab weight of 1.06 – 1.19 lb (481 – 540 g).

UDP0140/UYP0140 OPERATING TEMPERATURES

Air Temp. Entering Condenser °F/°C	Freeze Cycle			Harvest Cycle		
	Discharge Line Temp °F/°C	Suction Line Temp °F/°C	Harvest Valve Inlet Temp °F/°C	Discharge Line Temp °F/°C	Suction Line Temp °F/°C	
50°F	105 135	20 0	85 60	135 105	20 50	
10°C	41-57	-7 -17	29 16	57 41	-7 10	
70°F	105 135	12 -5	95 70	133 105	22 50	
21°C	41 57	-11 -21	35 21	56 41	-6 10	
80°F	115 144	17 0	100 77	144 115	25 55	
27°C	46 62	-8 -17	38 25	62 46	-4 13	
90°F	125 155	22 0	110 85	155 125	30 60	
32°C	52 68	-6 -17	43 29	68 52	-1 16	
110°F	155-188	50 5	115 108	188 155	32 70	
43°C	68 87	10 -15	46 42	87 68	0 21	

UDP0240/UYP0240 SELF-CONTAINED AIR-COOLED

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Around Ice Machine °F/°C	Freeze Time			Harvest Time
	Water Temperature °F/°C			
	50/10	70/21	90/32	
70/21	14.1-16.1	17.0-19.3	18.6-21.1	1.0-2.5
80/27	15.2-17.4	18.0-20.5	20.5-23.3	
90/32	16.5-18.8	20.5-23.3	22.7-25.8	
100/38	19.2-21.8	21.9-24.9	23.6-26.8	
110/43	21.9-24.9	23.6-26.8	24.5-27.8	

Times in minutes

24 Hour Ice Production

Air Temp. Around Ice Machine °F/°C	Water Temperature °F/°C		
	50/10	70/21	90/32
70°F	225 lb	190 lb	175 lb
21°C	102 kg	86 kg	79 kg
80°F	210 lb	180 lb	160 lb
27°C	95 kg	82 kg	73 kg
90°F	195 lb	160 lb	145 lb
32°C	88 kg	73 kg	66 kg
100°F	170 lb	150 lb	140 lb
38°C	77 kg	68 kg	64 kg
110°F	150 lb	140 lb	135 lb
43°C	68 kg	64 kg	61 kg

Based on average ice slab weight of 2.44 - 2.75 lb (1107 – 1247 g).

UDP0240/UYP0240 OPERATING TEMPERATURES

Air Temp. Entering Condenser °F/°C	Freeze Cycle			Harvest Cycle	
	Discharge Line Temp °F/°C	Suction Line Temp °F/°C	Harvest Valve Inlet Temp °F/°C	Discharge Line Temp °F/°C	Suction Line Temp °F/°C
50°F	120 142	30 7	80 70	142 122	7 50
10°C	49 61	-1 -13	27 21	61 50	-13 10
70°F	132 155	30 10	83 70	135 105	10 45
21°C	56 68	-1 -12	28 21	57 41	-12 7
80°F	144 168	33 10	97 85	166 141	10 52
27°C	62 76	0.5 -12	36 29	74 61	-12 11
90°F	156 180	36 10	112 100	178 150	10 59
32°C	69 82	2 -12	44 38	81 66	-12 15
110°F	170 190	40 10	125 115	190 160	10 68
43°C	77 88	4 -12	52 46	88 71	-12 20

UDP0310/UYP0310 SELF-CONTAINED AIR-COOLED

NOTE: These characteristics may vary depending on operating conditions.

Cycle Times

Freeze Time + Harvest Time = Total Cycle Time

Air Temp. Entering Condenser °F/°C	Freeze Time			Harvest Time
	Water Temperature °F/°C			
	50/10	70/21	90/32	
70/21	10.0-11.5	11.8-13.4	14.1-16.1	1.0-2.5
80/27	10.4-11.9	12.3-14.0	13.5-15.4	
90/32	11.0-12.6	13.5-15.4	15.2-17.4	
100/38	12.3-14.0	15.2-17.4	17.5-19.9	
110/43	15.6-17.8	19.2-21.8	21.2-24.0	

Times in minutes

24 Hour Ice Production

Air Temp. Entering Condenser °F/°C	Water Temperature °F/°C		
	50/10	70/21	90/32
70°F	305 lb	265 lb	225 lb
21°C	138 kg	120 kg	102 kg
80°F	295 lb	255 lb	235 lb
27°C	134 kg	116 kg	107 kg
90°F	280 lb	235 lb	210 lb
32°C	127 kg	107 kg	95 kg
100°F	255 lb	210 lb	185 lb
38°C	116 kg	95 kg	84 kg
110°F	205 lb	170 lb	155 lb
43°C	93 kg	77 kg	70 kg

Based on average ice slab weight of 2.44 - 2.75 lb (1107 – 1247 g).
Regular cube derate is 7%

UDP0310/UYP0310 OPERATING TEMPERATURES

Air Temp. Entering Condenser °F/°C	Freeze Cycle			Harvest Cycle		
	Discharge Line Temp °F/°C	Suction Line Temp °F/°C	Harvest Valve Inlet Temp °F/°C	Discharge Line Temp °F/°C	Suction Line Temp °F/°C	
50°F	140 170	25 0	80 68	175 130	35 60	
10°C	60 77	-4 -18	27 20	79 54	2 16	
70°F	140 170	20 0	90 75	170 125	35 62	
21°C	60 77	-7 -18	32 24	77 52	2 17	
80°F	138 188	38 0	95 88	188 135	35 65	
27°C	59 87	3 -18	35 31	87 57	2 18	
90°F	150- 205	48 0	105 95	205 150	35 68	
32°C	66 96	9 -18	41 35	96 66	2 20	
110°F	180 240	70 5	125 118	240 180	40 80	
43°C	82 116	21 -15	52 48	116 82	4 27	

THIS PAGE INTENTIONALLY LEFT BLANK

Diagrams

Wiring Diagrams

The following pages contain electrical wiring diagrams. Be sure you are referring to the correct diagram for the ice machine you are servicing.

Warning

Always disconnect power before working on electrical circuitry.

Wiring Diagram Legend

The following symbols are used on all of the wiring diagrams:

- * Internal Compressor Overload
(Some models have external compressor overloads)
- ** Fan Motor Run Capacitor
(Some models do not incorporate fan motor run capacitor)
- () Wire Number Designation
(The number is marked at each end of the wire)
- >>— Multi-pin Connection
(Electrical Box Side) —>>—
(Compressor Compartment Side)

UDP0140/UYP0140, URP0240/UYP0240 - 1Ph Air-cooled


Number	Component
3	Bin Switch
5	Compressor
7	Compressor Overload
12	Compressor Start Capacitor
13	Compressor Start Relay
14	Condenser Fan Motor
17	Contactator Coil
18	Contactator Contacts
19	Control Board
25	Fan Cycle Control
26	Float Switch - Harvest
27	Float Switch-Water Level
28	Fuse
31	High Pressure Cutout
40	On/Off/Clean Switch
41	See Control Board Schematic For Detail
42	Solenoid Valve
49	Thermistor - J4
55	Water Dump Valve
56	Water Inlet Valve
58	Water Pump
Wire Colors	
BLK	Black
BLU	Blue
BRN	Brown
PNK	Pink
PRPL	Purple
RED	Red
WHT	White
YEL	Yellow
Refer to control board schematic for control board detail	

UDP0310/UYP0310 - 1PH Air-cooled

Number	Component
3	Bin Switch
5	Compressor
7	Compressor Overload
9	Compressor PTCR
11	Compressor Run capacitor
12	Compressor Start Capacitor
14	Condenser Fan Motor
17	Contacto Coil
18	Contacto Contacts
19	Control Board
25	Fan Cycle Control
26	Float Switch - Harvest
27	Float Switch - Water Level
28	Fuse
31	High Pressure Cutout
40	On/Off/Clean Switch
41	See Control Board Schematic For Detail
42	Solenoid Valve
49	Thermistor - J4
55	Water Dump Valve
56	Water Inlet Valve
58	Water Pump
Wire Colors	
BLK	Black
BLU	Blue
BRN	Brown
PNK	Pink
PRPL	Purple
RED	Red
WHT	White
YEL	Yellow
Refer to control board schematic for control board detail	

ELECTRONIC CONTROL BOARDS

ELECTRONIC CONTROL BOARD UDP0140/UYP0140, UDP0240/UYP0240, UDP0310/UYP0310

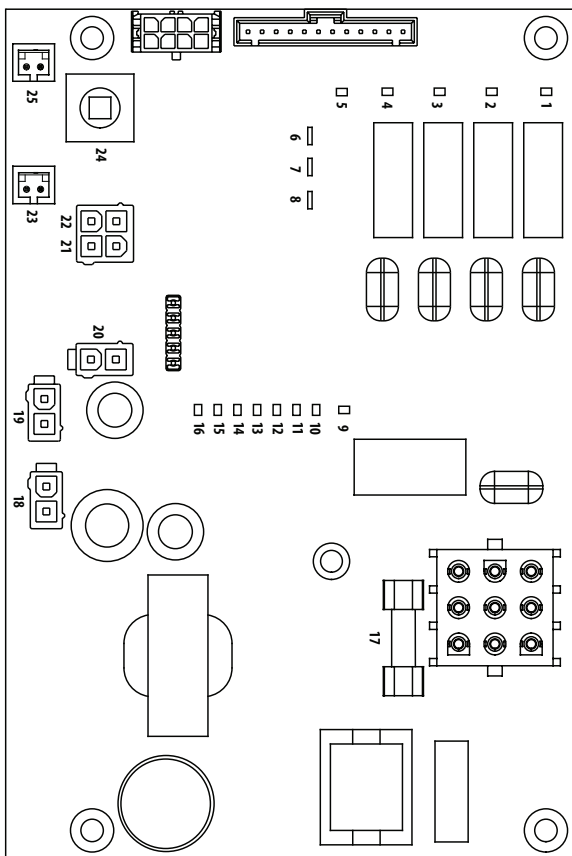


**Electronic Control Board UDP0140/UYP0140, UDP0240/
UYP0240, UDP0310/UYP0310**


Number	Component
1	LED Water Pump Relay
2	LED Compressor Relay
3	LED Water Dump Valve Relay
4	LED Harvest Solenoid Valve
5	LED Clean
6	LED Thermistor
7	LED Thermistor
8	LED Thermistor
9	LED Water Fill Valve
10	LED Harvest Float
11	LED Water Level Float
12	LED Bin Switch
13	LED Safety Limit 2
14	LED Safety Limit 1
15	LED Harvest
16	LED Test Mode
17	Fuse
18	Motor Connector 12V - J8
19	EC Fan Motor Connector 12V - J9
20	Bin Switch Connector - J5
21	Float Switch Water Level
22	Float Switch Harvest
23	Thermistor 2 - J10
24	Test Switch
25	Thermistor 1 - J4

Tubing Schematics

TUBING SCHEMATIC UDP0140/UYP0140

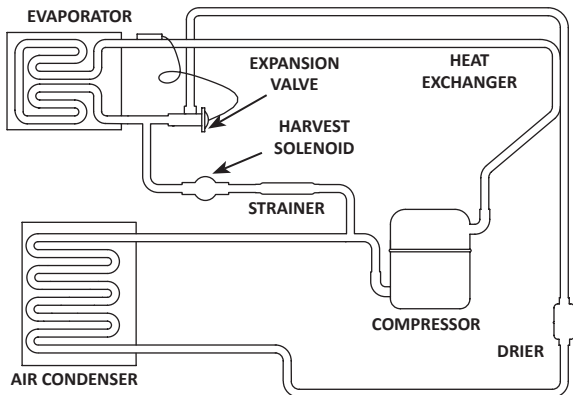

TUBING SCHEMATIC - UDP0240/UYP0240, UDP0310/ UYP0310

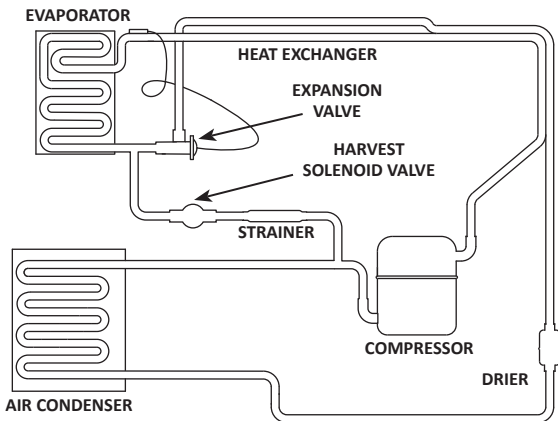



MANITOWOC ICE
2110 SOUTH 26TH STREET
MANITOWOC, WI 54220

800-545-5720
WWW.MANITOWOCICE.COM