

# CDX-C5000X/C5005/C6800X

## SERVICE MANUAL

Ver 1.1 2000.08

US Model  
Canadian Model

CDX-C5000X/C5005

E Model

CDX-C6800X

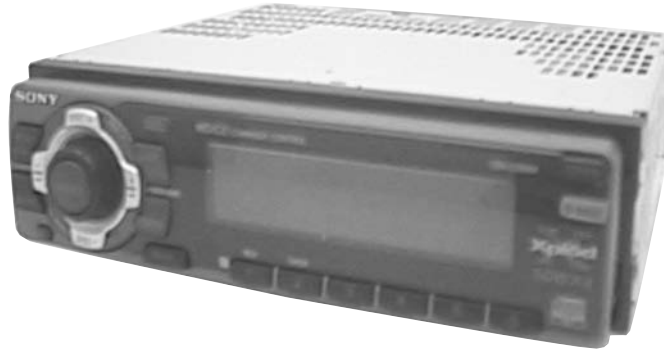


Photo: CDX-C5000X

- The tuner and CD sections have no adjustments.

### SPECIFICATIONS

#### AUDIO POWER SPECIFICATIONS (US Model)

**POWER OUTPUT AND TOTAL HARMONIC DISTORTION**  
19 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 1% total harmonic distortion.

#### Other Specifications

##### CD player section

System	Compact disc digital audio system
Signal-to-noise ratio	90 dB
Frequency response	10 – 20,000 Hz
Wow and flutter	Below measurable limit
Laser Diode Properties (CDX-C5000X/C5005)	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 $\mu$ W*

\* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

##### Tuner section

###### FM

Tuning range	CDX-C5000X/C5005: 87.5 – 107.9 MHz CDX-C6800X: FM tuning interval: 50 kHz/200 kHz switchable 87.5 – 108 MHz (at 50 kHz step) 87.5 – 107.9 MHz (at 200 kHz step)
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	66 dB (stereo), 72 dB (mono)

Model Name Using Similar Mechanism	NEW
CD Drive Mechanism Type	MG-383Z-121//K
Optical Pick-up Name	KSS-720A

Harmonic distortion at 1 kHz	0.6% (stereo), 0.3% (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz

###### AM

Tuning range	CDX-C5000X/C5005: 530 – 1,710 kHz CDX-C6800X: AM tuning interval: 9 kHz/10 kHz switchable 531 – 1,602 kHz (at 9 kHz step) 530 – 1,710 kHz (at 10 kHz step)
--------------	---

##### Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	50 W $\times$ 4 (at 4 ohms)

– Continued on next page –

## FM/AM COMPACT DISC PLAYER



# SONY®

**General**

Outputs	Audio outputs Power antenna relay control lead Power amplifier control lead Telephone ATT control lead
Tone controls	Bass ±9 dB at 100 Hz Treble ±9 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 × 50 × 183 mm (7 1/8 × 2 × 7 1/4 in.) (w/h/d)
Mounting dimensions	Approx. 182 × 53 × 162 mm (7 1/4 × 2 1/8 × 6 1/2 in.) (w/h/d)
Mass	Approx. 1.2 kg (2 lb. 10 oz.)
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1)

*Design and specifications are subject to change without notice.*


**SERVICE NOTES**

**CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

If the optical pick-up block is defective, please replace the whole optical pick-up block.

Never turn the semi-fixed resistor located at the side of optical pick-up block.

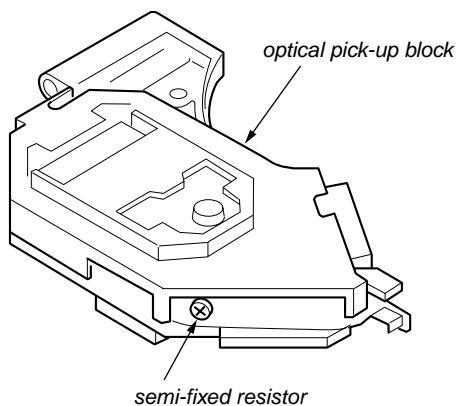

**NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT**

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

**NOTES ON LASER DIODE EMISSION CHECK**

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

**Notes on Chip Component Replacement**

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

**TABLE OF CONTENTS**

**1. GENERAL**

Location of controls .....	3
Getting Started .....	3
Setting the clock .....	3
CD Player CD/MD Unit (optional) .....	4
Radio .....	5
Other Functions .....	6
TV/Video (optional) .....	7
Connections .....	8

**2. DISASSEMBLY**

2-1. Sub Panel (CD) Assy .....	10
2-2. CD Mechanism Block .....	10
2-3. Main Board .....	11
2-4. Heat Sink .....	11
2-5. Chassis (T) Sub Assy .....	12
2-6. Lever Section .....	12
2-7. Servo Board .....	13
2-8. Shaft Roller Assy .....	13
2-9. Floating Block Assy .....	14
2-10. Optical Pick-up Block .....	14

**3. DIAGRAMS**

3-1. IC Pin Descriptions .....	15
3-2. Block Diagram –CD Section– .....	21
3-3. Block Diagram –Tuner Section– .....	22
3-4. Block Diagram –Display Section– .....	23
3-5. Circuit Boards Location .....	23
3-6. Printed Wiring Boards –CD Mechanism Section– .....	24
3-7. Schematic Diagram –CD Mechanism Section (1/2)– .....	26
3-8. Schematic Diagram –CD Mechanism Section (2/2)– .....	27
3-9. Schematic Diagram –Main Section (1/2)– .....	28
3-10. Schematic Diagram –Main Section (2/2)– .....	29
3-11. Printed Wiring Board –Main Section– .....	30
3-12. Printed Wiring Board –Relay Section– .....	31
3-13. Schematic Diagram –Relay Section– .....	32
3-14. Schematic Diagram –Display Section– .....	33
3-15. Printed Wiring Board –Display Section– .....	34
3-16. IC Block Diagrams .....	35

**4. EXPLODED VIEWS**

4-1. Chassis Section .....	38
4-2. Front Panel Section .....	39
4-3. CD Mechanism Section (1) .....	40
4-4. CD Mechanism Section (2) .....	41
4-5. CD Mechanism Section (3) .....	42

**5. ELECTRICAL PARTS LIST** ..... 43

**SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


**ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!**

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

# SECTION 1 GENERAL

This section is extracted from  
CDX-C5000X/C5005's instruction manual.

## Location of controls

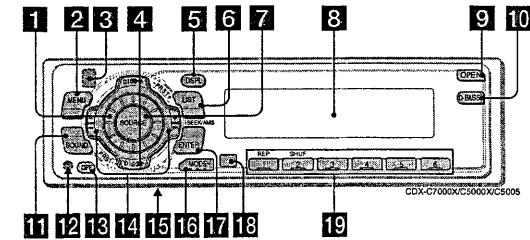

Refer to the pages listed for details.

- 1 Volume control dial
- 2 MENU button 8, 10, 12, 13, 14, 15, 16, 17, 21, 22, 24
- 3  $\Delta$  (eject) button (located on the front side of the unit behind the front panel) 9
- 4 DISC/PRST +/- (cursor up/down) buttons 8, 10, 12, 13, 14, 15, 16, 17, 21, 22, 24  
During CD/MD playback:  
Disc change 11, 13  
During radio reception:  
Preset stations select 16, 18  
During TV reception:  
Band select 22
- 5 DSPL (display mode change) button 9, 10, 12, 17
- 6 LIST button 12, 17  
List-up 13, 18, 23
- 7 SOURCE (TUNER/CD/MD/TV) button 8, 9, 10, 13, 15, 16, 22, 24
- 8 Display window
- 9 OPEN button 7, 9, 25
- 10 D-BASS button 21
- 11 SOUND button 20
- 12 Reset button (located on the front side of the unit behind the front panel) 7
- 13 OFF button\* 7, 8, 9
- 14 SEEK/AMS +/- (cursor left/right) buttons 8, 10, 12, 14, 16, 17, 20, 21, 24  
Automatic Music Sensor 10, 14  
Manual Search 10  
Seek 15, 16, 22
- 15 Frequency select switch (located on the bottom of the unit)\*\*  
The AM (FM) tuning interval is factory-set to the 10 k (200 k) position. Make sure that the 9 k (50 k) position is selected.
- 16 MODE button  
During CD or MD playback:  
CD/MD unit select 9, 13  
During radio reception:  
BAND select 15, 16  
During TV reception:  
Unit select 22
- 17 ENTER button 8, 10, 12, 13, 14, 15, 16, 17, 18, 21, 22, 24
- 18 Receptor for the card remote commander
- 19 Number buttons  
During radio reception:  
Preset number select 15, 16  
During CD/MD playback:  
REP 11  
SHUF 11  
During TV reception:  
Preset number select 22


\* Warning when installing in a car without ACC (accessory) position on the ignition key switch  
Be sure to press **OFF** on the unit for two seconds to turn off the clock display after turning off the engine.  
When you press **OFF** only momentarily, the clock display does not turn off and this causes battery wear.

\*\* CDX-C5005 only

## Location of controls

### Card remote commander RM-X91\*

\* Supplied only for the CDX-C7000X.

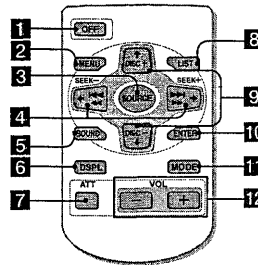


The corresponding buttons of the card remote commander control the same functions as those on this unit.

- 1 OFF button
- 2 MENU button
- 3 SOURCE button
- 4 SEEK/AMS buttons
- 5 SOUND button
- 6 DSPL button
- 7 ATT button
- 8 LIST button
- 9 DISC/PRST buttons
- 10 ENTER button
- 11 MODE button
- 12 VOL buttons

### Replacing the lithium battery

When the battery becomes weak, the range of the card remote commander becomes shorter. Replace the battery with a new CR2025 lithium battery.

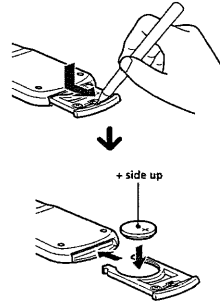

### Notes on lithium battery


- Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

**WARNING**  
Battery may explode if mistreated. Do not recharge, disassemble, or dispose of it fire.

## Getting Started

### Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit.  
Remove the front panel and press the reset button with a pointed object, such as a ball-point pen.




Note  
Pressing the reset button will erase the clock setting and some memorized functions such as the station memo.

### Detaching the front panel

You can detach the front panel of this unit to protect the unit from being stolen.


- 1 Press **OFF**.
- 2 Press **OPEN**, then slide the front panel to the right side, and pull out the left side of the front panel.

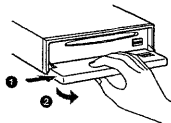

Notes  
• Do not put anything on the inner surface of the front panel.  
• Be sure not to drop the panel when detaching it from the unit.  
• If you detach the panel while the unit is still turned on, the power will turn off automatically to prevent the speakers from being damaged.  
• When carrying the front panel with you, use the supplied front panel case.

### Attaching the front panel

Place the hole  $\text{\textcircled{A}}$  in the front panel onto the spindle  $\text{\textcircled{B}}$  on the unit as illustrated, then push the left side in.

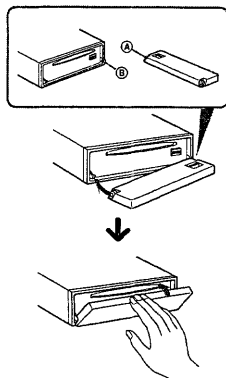

Notes  
• Be careful not to attach the front panel upside down.  
• Do not press the front panel too hard against the unit when attaching it.  
• Do not press too hard or put excessive pressure on the display window of the front panel.  
• Do not expose the front panel to direct sunlight or heat sources such as hot air ducts, and do not leave it in a humid place. Never leave it on the dashboard of a car parked in direct sunlight or where there may be a considerable rise in temperature.

### Caution alarm

If you turn the ignition key switch to the OFF position without removing the front panel, the caution alarm will beep for a few seconds. If you connect an optional power amplifier, the beep sound will be deactivated.

### Turning the unit on/off

#### Turning on the unit

Press **SOURCE** or insert a CD in the unit. For details on operation, refer to page 9 (CD/MD) and page 15 (radio).


#### Turning off the unit

Press **OFF** to stop CD/MD playback or FM/AM reception (the key illumination and display remain on).  
Press **OFF** for two seconds to completely turn the unit off.

Note  
If your car has no ACC position on the ignition key switch, be sure to turn the unit off by pressing **OFF** for two seconds to avoid car battery wear.

### How to use the menu

This unit is operated by selecting items from a menu.  
To select, first enter the menu mode and choose up/down ((+)/(-) of **DISC/PRST**), or choose left/right ((-)/(+)) of **SEEK/AMS**.


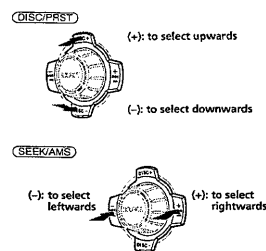


### Setting the clock

The clock uses a 12-hour digital indication.



Example: To set the clock to 10:08

- 1 Press **MENU**, then press either side of **DISC/PRST** repeatedly until "CLOCK" appears.




The hour indication flashes.

- 2 Press either side of **DISC/PRST** to set the hour.




The minute indication flashes.

- 3 Press the (+) side of **SEEK/AMS**.



- 4 Press either side of **DISC/PRST** to set the minute.



The clock starts.

After the clock setting is completed, the display returns to normal play mode.


Note  
In the initial setting, the clock indication appears while the unit is turned off.  
When the D.INFO mode is set to ON, the time is always displayed (page 21).

## CD Player CD/MD Unit (optional)

In addition to playing a CD with this unit alone, you can also control external CD/MD units. If you connect an optional CD unit with the CD TEXT function, the CD TEXT information will appear in the display when you play a CD TEXT disc.


### Listening to a CD (with this unit only)

- 1 Press **OPEN** and insert the CD.

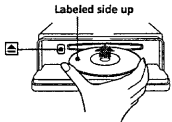

- 2 Close the front panel. Playback starts automatically.

If a CD is already inserted, press **SOURCE** repeatedly until "CD" appears to start playback.



### When the last track on the CD is over

The track number indication returns to "1," and playback restarts from the first track of the CD.

To	Press
Stop playback	<b>OFF</b>
Eject the CD	<b>OPEN</b> then <b>▲</b>


### Playing a CD or MD (with an optional CD/MD unit)

- 1 Press **SOURCE** repeatedly to select "CD" or "MD."
- 2 Press **MODE** until the desired unit appears. CD/MD playback starts.

All the discs in the current CD/MD unit is played from the top.

### Changing the display item

Each time you press **DISPL** during MD, CD, or CD TEXT disc playback, the item changes as follows:

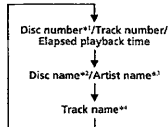

- <sup>1)</sup> While an optional CD/MD unit is connected.
- <sup>2)</sup> If you have not labeled the CD or CD TEXT disc ("Labeling a CD" on page 12), or if there is no disc name prerecorded on the MD, "DISC" and "NO NAME" appear in the display.
- <sup>3)</sup> If you play a CD TEXT disc, the artist name appears in the display after the disc name. (Only for CD TEXT discs with the artist name.)
- <sup>4)</sup> If the track name of a CD TEXT disc or MD is not prerecorded, "TRACK" and "NO NAME" appear in the display.

After you select the desired item, the display will automatically change to the Motion Display mode after a few seconds. In the Motion Display mode, all the items are scrolled in the display one by one in order.

**Note**  
If you use personalized labels, they will always take priority over the original CD TEXT information when such information is displayed.

**Tip**  
The Motion Display mode can be turned off. (See "Changing the sound and display settings" on page 26.)

### Automatically scrolling a disc name — Auto Scroll

If the disc name, artist name, or track name on an MD or a CD TEXT disc exceeds eight characters and the Auto Scroll function is on, information automatically scrolls across the display as follows:

- The disc name appears when the disc has changed (if the disc name is selected as the display item).
- The track name appears when the track has changed (if the track name is selected as the display item).
- The disc or track name appears depending on the setting when you press **SOURCE** to select an MD or CD TEXT disc.

If you press **DISPL** to change the display item, the disc or track name of the MD or CD TEXT disc is scrolled automatically whether you set the function on or off.


- 1 During playback, press **MENU**.
- 2 Press either side of **DISC/PRST** repeatedly until "A.SCRLL-OFF" appears.
- 3 Press the (+) side of **SEEK/AMS** to select "A.SCRLL-ON."
- 4 Press **ENTER**.

To cancel Auto Scroll, select "A.SCRLL-OFF" in step 3.

**Note**  
For some CD TEXT discs with very many characters, the following cases may happen:  
— Some of the characters are not displayed.  
— Auto Scroll does not work.

### Locating a specific track — Automatic Music Sensor (AMS)

During playback, press either side of **SEEK/AMS** momentarily for each track you want to skip.



### Locating a specific point in a track — Manual Search

During playback, press and hold either side of **SEEK/AMS**. Release when you have found the desired point.



**Note**  
If "LL LL" or "TT TT" appears in the display, you have reached the beginning or the end of the disc and you cannot go any further.

### Locating a disc — Disc Selection

When an optional CD/MD unit is connected, press either side of **DISC/PRST** to select the desired disc. The desired disc in the current optional CD/MD unit begins playback.


### Playing tracks repeatedly

#### — Repeat Play

The CD in the main unit will automatically repeat itself when it reaches the end. As repeat play, you can select:

- REP-1 – to repeat a track.
- REP-2 – to repeat a disc in the optional CD/MD unit.

During playback, press **REP** repeatedly until the desired setting appears in the display.



\* "REP-2" is only available when you connect one or more optional CD units, or when you connect two or more optional MD units.



Repeat Play starts.


To return to normal play mode, select "REP-OFF."

### Playing tracks in random order — Shuffle Play


You can select:

- SHUF-1 – to play the tracks on the current disc in random order.
- SHUF-2 – to play the tracks in the current optional CD/MD unit in random order.
- SHUF-ALL – to play all the tracks in all the optional CD/MD units in random order.

During playback, press **SHUF** repeatedly until the desired setting appears in the display.



\* "SHUF-2" and "SHUF-ALL" are only available when you connect one or more optional CD units, or when you connect two or more optional MD units.



Shuffle Play starts.

To return to normal play mode, select "SHUF-OFF."

### Labeling a CD — Disc Memo (For a CD unit with the custom file function)


You can label each disc with a personalized name. You can enter up to eight characters for a disc. If you label a CD, you can locate the disc by name (page 13) and select the specific tracks for playback (page 14).

- 1 Start playing the disc you want to label.

- 2 Press **MENU**, then press either side of **DISC/PRST** repeatedly until "NAME EDIT" appears.

- 3 Press **ENTER**.


Name edit mode



- 4 Enter the characters.

Press the (+) side of **DISC/PRST** repeatedly to select the desired characters.

(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → \* → / → \ → > → < → - → \_)



If you press the (-) side of **DISC/PRST** repeatedly, the characters will appear in reverse order. If you want to put a blank space between characters, select "." (under-bar).

- 5 Press the (+) side of **SEEK/AMS** after locating the desired character. The next character flashes.



If you press the (-) side of **SEEK/AMS**, the previous character flashes.


- 6 Repeat steps 4 and 5 to enter the entire name.

- 5 To return to normal CD play mode, press **ENTER**.


**Tips**  
• To erase or correct a name, enter "." (under-bar) for each character.  
• There is another way to start labeling a CD. Press **TEXT** for two seconds instead of steps 2 and 3. You can also complete the operation by pressing **TEXT** for two seconds instead of step 5.

### Displaying the disc memo

Press **DISPL** during CD or CD TEXT disc playback.



Each time you press **DISPL** during CD or CD TEXT disc playback, the item changes as follows:

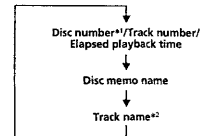

- <sup>1)</sup> While an optional CD unit is connected.
- <sup>2)</sup> If you connect an optional CD unit with the CD TEXT function, the CD TEXT information will appear in the display when you play a CD TEXT disc.

### Erasing the disc memo

- 1 Press **(SOURCE)** repeatedly to select "CD."
- 2 Press **(MODE)** repeatedly to select the CD unit.
- 3 Press **(MENU)**, then press either side of **(DISCPRST)** repeatedly until "NAME DEL" appears.
- 4 Press **(ENTER)**.
- 5 Press either side of **(DISCPRST)** repeatedly to select the disc name you want to erase.
- 6 Press **(ENTER)** for two seconds. The name is erased. Repeat steps 5 and 6 if you want to erase other names.
- 7 Press **(MENU)** twice. The unit returns to normal CD play mode.

#### Note

When a personalized label is erased, the original CD TEXT information will appear in the display.

### Locating a disc by name

— List-up (For a CD unit with the custom file function or an MD unit)

You can use this function for discs that have been assigned a custom name. For more information on disc memo names, refer to "Labeling a CD" (page 12).

- 1 Press **(LIST)**. The name assigned to the current disc appears in the display.



When you assign a disc memo name to a CD TEXT disc, it takes priority over the original CD TEXT information.

- 2 Press either side of **(DISCPRST)** repeatedly until you find the desired disc.
- 3 Press **(ENTER)** to play the disc.

#### Notes


- After a disc name has been displayed for five seconds, the display returns to normal play mode.
- The track names are not displayed during MD or CD TEXT disc playback.
- If there are no discs in the magazine, "NO DISC" appears in the display.
- If a disc has not been assigned a custom file, "\*\*\*\*\*" appears in the display.
- Some letters cannot be displayed during MD or CD TEXT disc playback.
- If an optional TV system is connected, the disc memo name appears in the display of the TV system but not in the unit's display.

### Selecting specific tracks for playback

— Bank  
(For a CD unit with the custom file function)  
If you label the disc, you can set the unit to skip or play the tracks of your choice.

- 1 Start playing the disc you want to label.
- 2 Press **(MENU)**, then press either side of **(DISCPRST)** repeatedly until "BANK SEL" appears.

- 3 Press **(ENTER)**.



- 4 Label the tracks.
  - 1 Press either side of **(SEEKAMS)** repeatedly to select the track you want to label.
  - 2 Press **(ENTER)** repeatedly to select "PLAY."

- 5 Repeat step 4 to set "PLAY" or "SKIP" for all the tracks.

- 6 Press **(MENU)** twice. The unit returns to normal CD play mode.



#### Notes

- You can set "PLAY" and "SKIP" for up to 24 tracks.
- You cannot set "SKIP" for all the tracks on a CD.

### Playing specific tracks only

You can select:  
• "BANK-ON" — to play the tracks with the "PLAY" setting.  
• "BANK-INV" (inverse) — to play the tracks with the "SKIP" setting.

- 1 During playback, press **(MENU)**, then press either side of **(DISCPRST)** repeatedly until "BANK-ON," "BANK-INV," or "BANK-OFF" appears.



- 3 Press **(ENTER)**. Playback starts from the track following the current one.

To return to normal play mode, select "BANK-OFF" in step 2.

## Radio

### Memorizing stations automatically


— Best Tuning Memory (BTM)

The unit selects the stations with the strongest signals and memorizes them in the order of their frequencies. You can store up to 6 stations on each band (FM1, FM2, FM3, AM1, and AM2).

#### Caution


When tuning in stations while driving, use Best Tuning Memory to prevent accidents.

- 1 Press **(SOURCE)** repeatedly to select the tuner. Each time you press **(SOURCE)**, the source changes as follows:



\* If the corresponding optional equipment is not connected, these items will not appear.

- 2 Press **(MODE)** repeatedly to select the band. Each time you press **(MODE)**, the band changes as follows:



- 3 Press **(MENU)**, then press either side of **(DISCPRST)** repeatedly until "BTM" appears.

- 4 Press **(ENTER)**. The unit stores stations in the order of their frequencies on the number buttons. A beep sounds when the setting is stored.

#### Notes

- The unit does not store stations with weak signals. If only a few stations can be received, some number buttons will retain their former setting.
- When a number is indicated in the display, the unit starts storing stations from the one currently displayed.
- If a CD is not in the unit, only the tuner band appears even if you press **(SOURCE)**.

### Memorizing only the desired stations

You can preset up to 18 FM stations (6 each for FM1, FM2, and FM3), up to 12 AM stations (6 each for AM1 and AM2) in the order of your choice.

- 1 Press **(SOURCE)** repeatedly to select the tuner.

- 2 Press **(MODE)** repeatedly to select the band.

- 3 Press either side of **(SEEKAMS)** to tune in the station that you want to store on the number button.

- 4 Press the desired number button (1 to 6) for two seconds until "MEM" appears. The number button indication appears in the display.

#### Note

If you try to store another station on the same number button, the previously stored station will be erased.

### Receiving the memorized stations

- 1 Press **(SOURCE)** repeatedly to select the tuner.

- 2 Press **(MODE)** repeatedly to select the band.

- 3 Press the number button (1 to 6) on which the desired station is stored.

Tip  
Press either side of **(DISCPRST)** to receive the stations in the order they are stored in the memory (Preset Search Function).

#### If you cannot tune in a preset station

Press either side of **(SEEKAMS)** to search for the station (automatic tuning). Scanning stops when the unit receives a station. Press either side of **(SEEKAMS)** repeatedly until the desired station is received.

#### Note

If the automatic tuning stops too frequently, press **(MENU)**, then press either side of **(DISCPRST)** repeatedly until "LOCAL" (local seek mode) is displayed. Then press the (+) side of **(SEEKAMS)** to select "LOCAL-ON." Press **(ENTER)**. Only the stations with relatively strong signals will be tuned in.

#### Tips

- When you select the "LOCAL-ON" setting, "LSEEK" appears while the unit is searching for a station.
- If you know the frequency of the station you want to listen to, press and hold either side of **(SEEKAMS)** until the desired frequency appears (manual tuning).

### If FM stereo reception is poor

— Monaural Mode

- 1 During radio reception, press **(MENU)**, then press either side of **(DISCPRST)** repeatedly until "MONO-OFF" appears.

- 2 Press the (+) side of **(SEEKAMS)** until "MONO-ON" appears. The sound improves, but becomes monaural ("ST" disappears).

- 3 Press **(ENTER)**.

To return to normal mode, select "MONO-OFF" in step 2.

### Automatical reception frequency adjustment

— IF AUTO function

If interference occurs, the "IF AUTO" function of this unit will automatically avoid noise and narrow the reception frequency. In such cases, some FM stereo broadcasts may become monaural. If you would like to hear such broadcasts in stereo, manually switch to the "WIDE" setting.

- 1 During radio reception, press **(MENU)**, then press either side of **(DISCPRST)** repeatedly until "IF AUTO" appears.

- 2 Press the (+) side of **(SEEKAMS)** until "WIDE" appears.

- 3 Press **(ENTER)**.

#### Note

When you widen the frequency signal reception setting ("WIDE" mode), some interference may occur.

## Storing the station names

### — Station Memo


You can assign a name to each radio station and store it in memory. The name of the station currently tuned in appears in the display. You can assign a name of up to eight characters for a station.

### Storing the station names

1 Tune in a station whose name you want to store.


2 Press **(MENU)**, then press either side of **(DISC/PRST)** repeatedly until "NAME EDIT" appears.

3 Press **(ENTER)**.



4 Enter the characters.


Press the (+) side of **(DISC/PRST)** repeatedly to select the desired characters.  
(A → B → C → ... → Z → 0 → 1 → 2 → ... → 9 → → → \* → / → \ → > → < → . → , → )



If you press the (-) side of **(DISC/PRST)** repeatedly, the characters appear in the reverse order.

If you want to put a blank space between characters, select "-" (under-bar).

Press the (+) side of **(SEEK/AMS)** after locating the desired character. The next character flashes.



If you press the (-) side of **(SEEK/AMS)**, the previous character flashes.

Repeat steps 4 and 5 to enter the entire name.


5 To return to the normal radio reception, press **(ENTER)**.

### Tips

- To erase or correct a name, enter "-" (under-bar) for each character.
- There is another way to start storing station names. Press **(LIST)** for two seconds instead of steps 2 and 3. You can also complete the operation by pressing **(LIST)** for two seconds instead of step 5.

### Displaying the station name

Press **(OSPL)** during radio reception.



Each time you press **(OSPL)**, the item changes as follows:

Station name\* ↔ Frequency

\* If the station name of a station is not stored, "NO NAME" appears in the display for one second.

### Erasing the station name

1 Tune in a station whose name you want to erase.

2 Press **(MENU)**, then press either side of **(DISC/PRST)** repeatedly until "NAME DEL" appears.

3 Press **(ENTER)**.

4 Press **(ENTER)** for two seconds. The name is erased. Repeat steps 1 through 4 if you want to erase other names.


5 Press **(MENU)** twice. The unit returns to the normal radio reception mode.

### Note

When you erase all of the station names, "NO NAME" appears in step 4.

## Locating a station by name — List-up

1 Press **(LIST)** momentarily. The name assigned to the station currently tuned appears in the display.



2 Press either side of **(DISC/PRST)** repeatedly until you find the desired station. When no name is assigned to the selected station, the frequency appears in the display.

3 Press **(ENTER)** to tune in the desired station.

### Notes



- Once the station name or frequency has been displayed for five seconds, the display goes back to its normal mode.
- When you connect a TV tuner, the list-up indication will not appear in the display of the unit.

## Other Functions

You can also control the unit with a rotary commander.

## Labeling the rotary commander

Depending on how you mount the rotary commander, attach the appropriate label as shown in the illustration below.




17

18

## Using the rotary commander

The rotary commander works by pressing buttons and/or rotating controls. You can also control an optional CD/MD unit with the rotary commander.

### By pressing buttons (the SOURCE and MODE buttons)

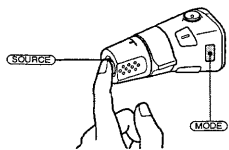

Each time you press **(SOURCE)**, the source changes as follows:  
Tuner → CD → MD\* → TV\*


\* If the corresponding optional equipment is not connected, these items will not appear.

Pressing **(MODE)** changes the operation in the following ways:

- Tuner: FM1 → FM2 → FM3 → AM1 → AM2
- CD unit\*: CD1 → CD2 → ...
- MD unit\*: MD1 → MD2 → ...
- TV/Video\*: TV1 → TV2 → AUX

\* If the corresponding optional equipment is not connected, these items will not appear.


### By rotating the control (the SEEK/AMS control)

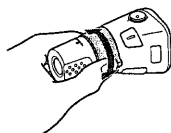

Rotate the control momentarily and release it to:

- Locate a specific track on a disc. Rotate and hold the control until you locate the specific point in a track, then release it to start playback.
- Tune in stations automatically. Rotate and hold the control to find a specific station.

### By pushing in and rotating the control (the PRESET/DISC control)

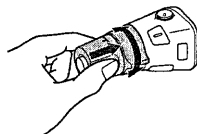


Push in and rotate the control to:

- Receive the stations memorized on the number buttons.
- Change the disc.

19


### Other operations

Rotate the VOL control to adjust the volume.



Press **(ATT)** to attenuate the sound.

Press **(OFF)** to turn off the unit.

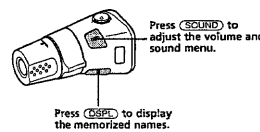

Press **(SOUND)** to adjust the volume and sound menu.


Press **(OSPL)** to display the memorized names.

### Tip


If your car has no ACC (accessory) position on the ignition key switch, be sure to press **(OFF)** for two seconds to turn off the clock indication after turning off the engine.

### Changing the operative direction

The operative direction of controls is factory-set as shown below.



If you need to mount the rotary commander on the right hand side of the steering column, you can reverse the operative direction.

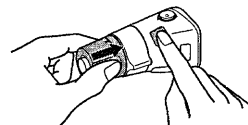

Press **(SOUND)** for two seconds while pushing the VOL control.

Tip  
You can also change the operative direction of these controls with the unit (see "Changing the sound and display settings" on page 21).

## Adjusting the sound characteristics

You can adjust the bass, treble, balance, and fader. You can store the bass and treble levels independently for each source.

1 Select the item you want to adjust by pressing **(SOUND)** repeatedly. Each time you press **(SOUND)**, the item changes as follows:  
BAS (bass) → TRE (treble) → BAL (left-right) → FAD (front-rear)

2 Adjust the selected item by pressing either side of **(SEEK/AMS)**. When adjusting with the rotary commander, press **(SOUND)** and rotate the VOL control.

Note  
Adjust within three seconds after selecting the item.

## Attenuating the sound

Press **(ATT)** on the rotary commander or card remote commander. "ATT-ON" flashes momentarily.

To restore the previous volume level, press **(ATT)** again.

Tip  
When the interface cable of a car telephone is connected to the ATT lead, the unit decreases the volume automatically when a telephone call comes in (Telephone ATT function).

## Changing the sound and display settings

The following items can be set:

### SET (setting)

- **CLOCK** (page 8)
- **BEEP** — to turn the beeps on or off.
- **RM** (Rotary Commander) — to change the operative direction of the controls of the rotary commander.
  - Select "NORM" to use the rotary commander as the factory-set position.
  - Select "REV" when you mount the rotary commander on the right side of the steering column.

### DIS (display)

- **D.INFO** (Dual Information) — to display the clock and the play mode at the same time (ON).
- **AMBER/GREEN**\*1 — to change the illumination color to amber or green.
- **M.DSPL** (Motion Display) — to turn the motion display on or off.
- **A.SCR.L** (Auto Scroll) (page 10)

### PFM

- **HPF** (High pass filter for the pre-output)\*2 — to select the roll off frequency of the pre-output.
- **SUB L.PF** (Low pass filter for the subwoofer output)\*1 — to select the roll off frequency of the subwoofer output.

- \*1 CDX-C5005 only
- \*2 CDX-C7000X only

### Note

If you connect an optional power amplifier and do not use the built-in amplifier, the beep sound will be disabled.

- 1 Press **(MENU)**.

- 2 Press either side of **(DISC/PST)** repeatedly until the desired item appears.

Each time you press the (-) side of **(DISC/PST)**, the item changes as follows:  
**CLOCK** → **BEEP** → **RM** → **D.INFO** → **AMBER/GREEN**\*1 → **M.DSPL** → **A.SCR.L**\*2

- \*1 CDX-C5005 only
- \*2 When no CD or MD is playing, this item will not appear.

### Note

The displayed item will differ depending on the source.

### Tip

You can easily switch among categories ("SET", "DIS", "PFM" play mode), and "EDT" (edit mode) by pressing either side of **(DISC/PST)** for two seconds.


- 3 Press the (+) side of **(SEEK/AMS)** to select the desired setting (Example: ON or OFF) or press either side of **(SEEK/AMS)** repeatedly to select the frequency (Example: off, 80 Hz, 120 Hz).

- 4 Press **(ENTER)**. After the mode setting is completed, the display returns to normal play mode.

## Boosting the bass sound

### — D-bass

You can enjoy a clear and powerful bass sound. The D-bass function boosts the low and high frequency signal with a sharper curve than conventional bass boost. You can hear the bass line more clearly even while the vocal volume remains the same. You can emphasize and adjust the bass sound easily with the D-BASS button.



### Adjusting the bass curve

Press **(D-BASS)** repeatedly until the desired bass level (1, 2, or 3) appears in the display.

To cancel, select "D.BASS-OFF."

### Note

If the bass sound becomes distorted, select a less effective setting of "D.BASS" or adjust the volume.

21


## Storing the TV channel names

Follow the steps in "Storing the station names" (page 17).

### Displaying the TV or radio station names

Press **(LIST)** during TV or radio reception.

Example: When receiving the FM1 band

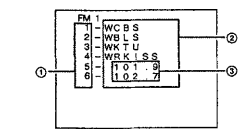

- ① Preset numbers
- ② Stored station names
- ③ Frequencies\*

\* If the name of a station is not stored, the frequency of that station will be displayed instead.

### Notes

- It may take some time before all indications appear in the display.
- The TV channel does not appear during list display.
- The contents of the preset memory cannot be listed when the unit is in simultaneous play mode (page 23).


### Turning off the display

During radio reception, press **(LIST)** again. During TV reception, the list display on the TV monitor will automatically turn off after a few seconds.

## Displaying the information stored on discs

Press **(LIST)** during CD/MD playback.

Example: When CD unit 1 is selected.

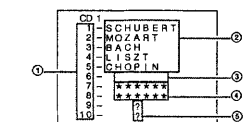

- ① Disc numbers
- ② Titles stored as custom files
- ③ No disc is loaded\*1
- ④ No stored titles\*1
- ⑤ TOC information has not been identified yet\*1

- \*1 A blank space displayed next to a disc number represents empty slots in the disc magazine.
- \*2 If a title is not registered in the custom file, "\*\*\*\*\*" is displayed.
- \*3 If the disc information has not yet been read by the unit, "7" is displayed.

### Notes

- It may take some time before all indications appear in the display.
- The TV channel does not appear during list display.
- The contents of the preset memory cannot be listed when the unit is in the simultaneous play mode (page 23).

### Turning off the display

Press **(LIST)** again.

## Watching the TV or video while listening to a CD or MD — Simultaneous Play

The simultaneous play function does not work while you are listening to the radio.

Continue to next page →

23

## TV/Video (optional)

You can connect an optional TV tuner and TV monitor to this unit.

### Watching the TV

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Press either side of **(DISC/PST)** repeatedly to select the desired TV band.

### Watching a video

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Press **(MODE)** repeatedly to select "AUX." Play the video.

### Notes

- The indication automatically switches to "VIDEO 1" soon after "AUX" is displayed.
- "VIDEO 2" appears if the VIDEO 2 terminal of the TV monitor is selected.

22

## Memorizing TV channels automatically

The unit selects the TV channels with the strongest signals and memorizes them in the order of their frequency.

### Caution

When tuning in a station while driving, use Best Tuning Memory to prevent accidents.

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Press **(MENU)**, then press either side of **(DISC/PST)** until "AUTO MEM" appears.
- 3 Press **(ENTER)**.

The unit stores TV channels in the order of their frequencies on the number buttons. A beep sounds when the setting is stored.

### Notes

- The unit does not store TV channels with weak signals. If only a few TV channels can be received, some number buttons will remain empty.
- When a preset number is indicated in the display, the unit starts storing TV channels from the one currently displayed.

## Memorizing only the desired TV channels



You can store up to 12 channels (6 each for TV1 and TV2) on the number buttons in the order of your choice.

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Press either side of **(SEEK/AMS)** to tune in the TV channel you want to store on each number button.
- 3 Press and hold the desired number button (① to ⑥) until you hear a beep sound. The number button indication and "MEM" appear in the display.



### Note

If you try to store another channel on the same number button, the previously stored channel will be erased.


- 1 Press **(MENU)**, then press either side of **(DISC/PST)** repeatedly until "SML" appears.



- 4 Press **(SOURCE)** repeatedly to select CD or MD.



- 6 Press **(SOURCE)** repeatedly to select a TV or video.



- 7 Press **(ENTER)**. Simultaneous Play starts.

If you are already watching the TV or video and want to listen to a CD or MD as well, follow the same steps.

### Returning to normal mode

To cancel the CD or MD, select "--" in step 3.

To cancel the TV or video, select "--" in step 5.

### Note

If you press **(EJECT)** on a CD/MD unit while the unit is in simultaneous play mode, Simultaneous Play is canceled.

24

# Connections

## Cautions

- This unit is designed for negative earth 12 V DC operation only.
- Be careful not to pinch any wires between the screw and the body of the car, or this unit, or between any moving parts such as the seat railing, etc.
- Connect the yellow and red power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- Run all ground wires to a common earth surface.
- Connect the yellow cord to a free car circuit rated higher than the unit's fuse rating. If you connect this unit in series with other stereo components, the car circuit they are connected to must be rated higher than the sum of the individual component's fuse rating. If there are no car circuits rated as high as the unit's fuse rating, connect the unit directly to the battery. If no car circuits are available for connecting this unit, connect the unit to a car circuit rated higher than the unit's fuse rating in such a way that if the unit blows its fuse, no other circuits will be cut off.
- The use of optical instruments with this product will increase eye hazard.


## Warning when installing in a car without ACC (accessory) position on the ignition key switch

Be sure to press **OFF** on the unit for two seconds to turn off the clock display after turning off the engine.

When you press **OFF** only momentarily, the clock display does not turn off and this causes battery wear.


## Reset button

When the installation and connections are completed, be sure to press the reset button with a ball-point pen, etc.



## Frequency select switch (CDX-C5005 only)

The AM (FM) tuning interval is factory-set to the 10 K (200 K) position. Make sure that the switch on the bottom of the unit is set to the 9 K (50 K) position before making connections.



**Note**  
When you change the position of the switch to the 9 K (50 K) position, be sure to press the reset buttons after the connections are completed.

# Connexions

## Précautions

- Cet appareil est conçu pour fonctionner sur tension continue de 12 V avec masse négative.
- Veillez à ne coincer aucun fil entre la vis et la carrosserie ou cet appareil ou aucun élément mobile comme les glissières du siège, etc.
- Brancher les fils d'entrée d'alimentation jaune et rouge seulement après avoir terminé tous les autres branchements.
- Veiller à ne pas raccorder le fil rouge d'entrée d'alimentation à la borne positive de 12 V qui est alimentée quand la clé de contact est sur la position accessoires.
- Rassembler tous les fils de terre en un point de masse commun.
- Brancher le câble jaune à un circuit libre de la voiture dont la capacité nominale est supérieure à la capacité du fusible de l'appareil. Si vous branchez cet appareil en série avec d'autres composants stéréo, le circuit de la voiture auxquels ils sont raccordés doit afficher une capacité nominale supérieure à la somme des capacités individuelles de chaque composant. S'il n'y a pas de circuits de voiture affichant une capacité égale à la capacité du fusible de l'appareil, brancher l'appareil directement à la batterie. Si aucun circuit de voiture n'est disponible pour connecter cet appareil, brancher l'appareil à un circuit de voiture supérieur à la capacité du fusible de l'appareil de telle sorte que si l'appareil grille son fusible, aucun autre circuit ne soit coupé.

## Avertissement en cas d'installation dans une voiture dont le contact ne comporte pas de position ACC (accessoires)

Appuyez sur la touche **OFF** de l'appareil pendant deux secondes pour désactiver l'affichage de l'horloge après avoir coupé le moteur.

Lorsque vous appuyez brièvement sur **OFF**, l'affichage de l'horloge ne s'éteint pas et cela provoque une usure de la batterie.

## Touche de réinitialisation

Quand l'installation et les connexions sont terminées, appuyer sur la touche de réinitialisation avec un stylo bille ou un objet pointu.




## Sélecteur de fréquence (CDX-C5005 seulement)

L'intervalle de syntonisation AM (FM) est réglé par défaut sur la position 10 k (200 k). Assurez-vous que le sélecteur situé sur le dessous de l'appareil est réglé sur 9 K (50 K) avant d'établir les connexions.

**Remarque**  
Lorsque vous amenez le sélecteur sur la position 9 K (50 K), n'oubliez pas d'appuyer sur les touches de réinitialisation après avoir terminé les connexions.


## Connection diagram

## Schémas de connexion

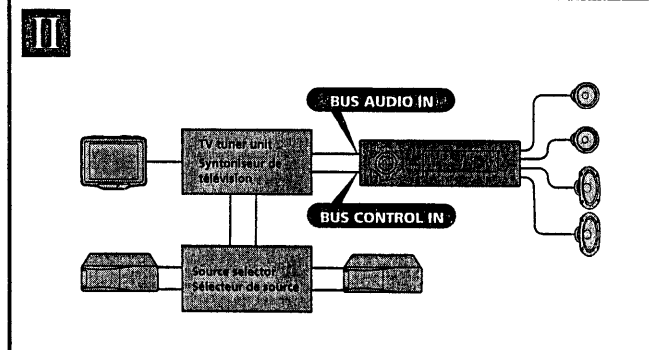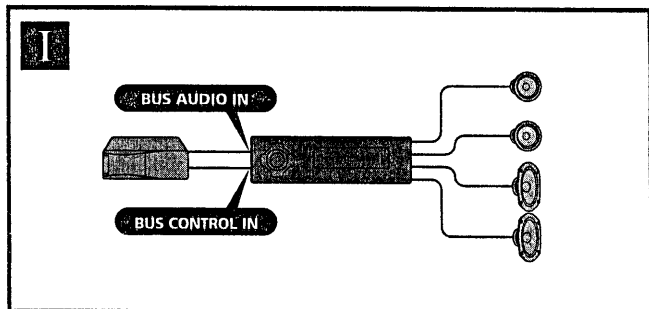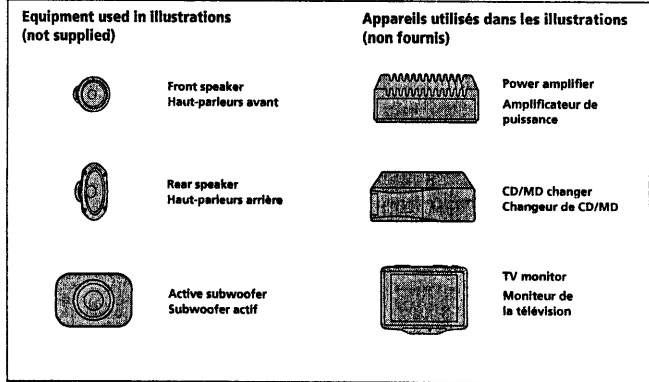

**Note**  
For connecting two or more CD/MD changers, the source selector XA-C30 (optional) is necessary.

**Remarque**  
Dans le cas du raccordement de deux changeurs de CD/MD ou plus, le sélecteur de source XA-C30 (option) est indispensable.

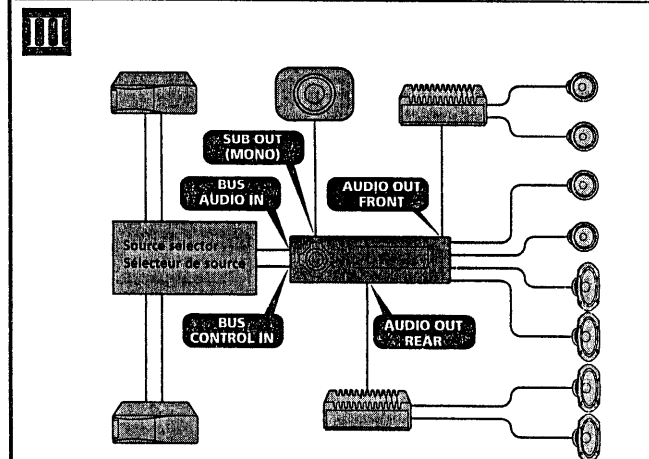


**Notes**

- For connecting two or more CD/MD changers, the source selector XA-C30 (optional) is necessary.
- Be sure to connect the earth cord before connecting the amplifier.
- If you connect an optional power amplifier and do not use the built-in amplifier, the beep sound will be deactivated.

**Remarques**

- Dans le cas du raccordement de deux changeurs de CD/MD ou plus, le sélecteur de source XA-C30 (option) est indispensable.
- Raccordez d'abord le fil de masse avant de connecter l'amplificateur.
- Si vous raccordez un amplificateur de puissance et que vous n'utilisez pas l'amplificateur intégré, le bip sonore est désactivé.


**Connection example**  
**Exemple de connexion**

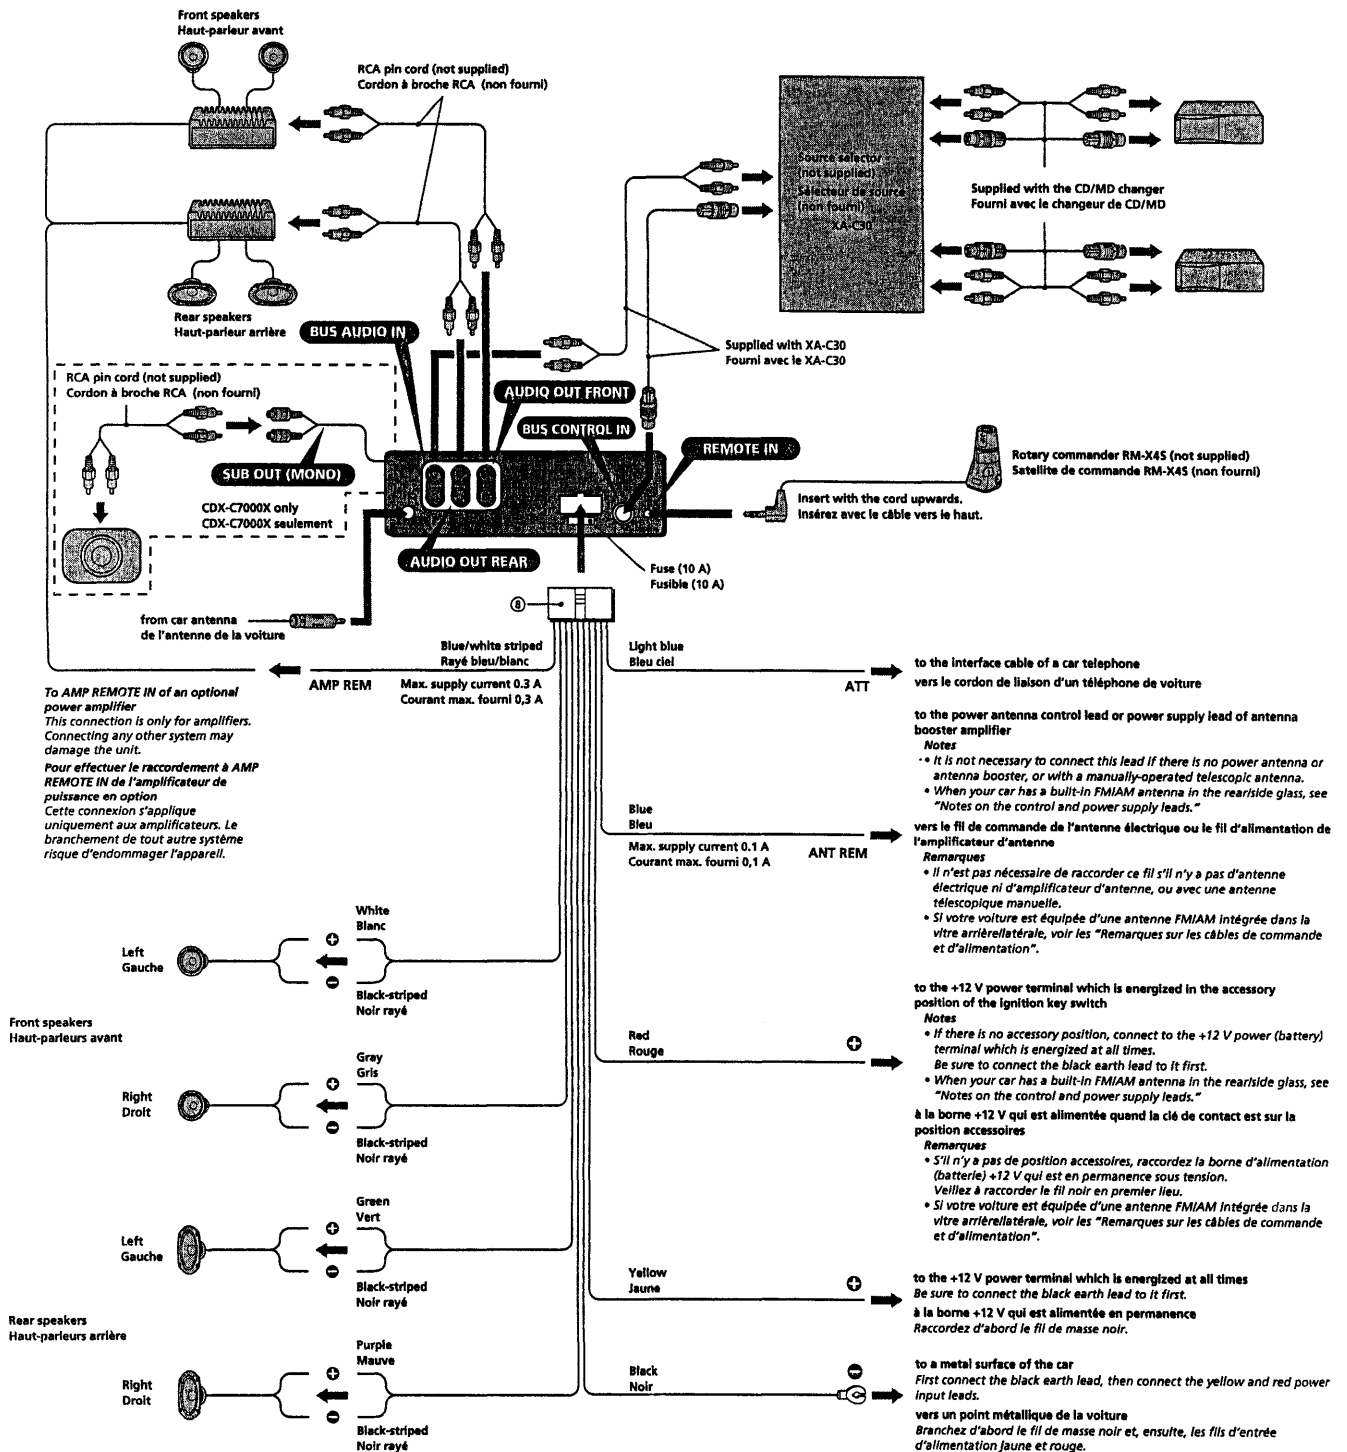


## SECTION 2 DISASSEMBLY

**Note :** Follow the disassembly procedure in the numerical order given.


### 2-1. SUB PANEL (CD) ASSY

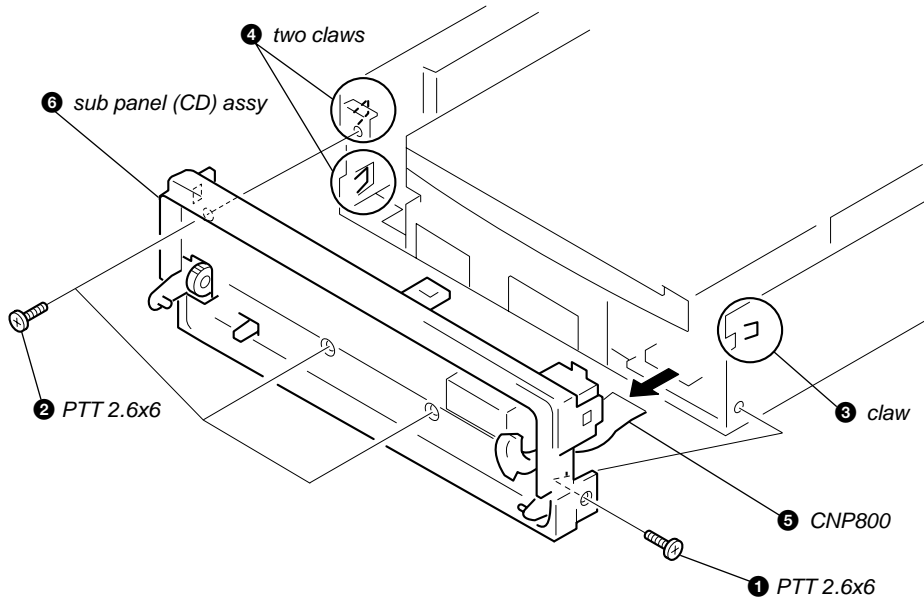


### 2-2. CD MECHANISM BLOCK

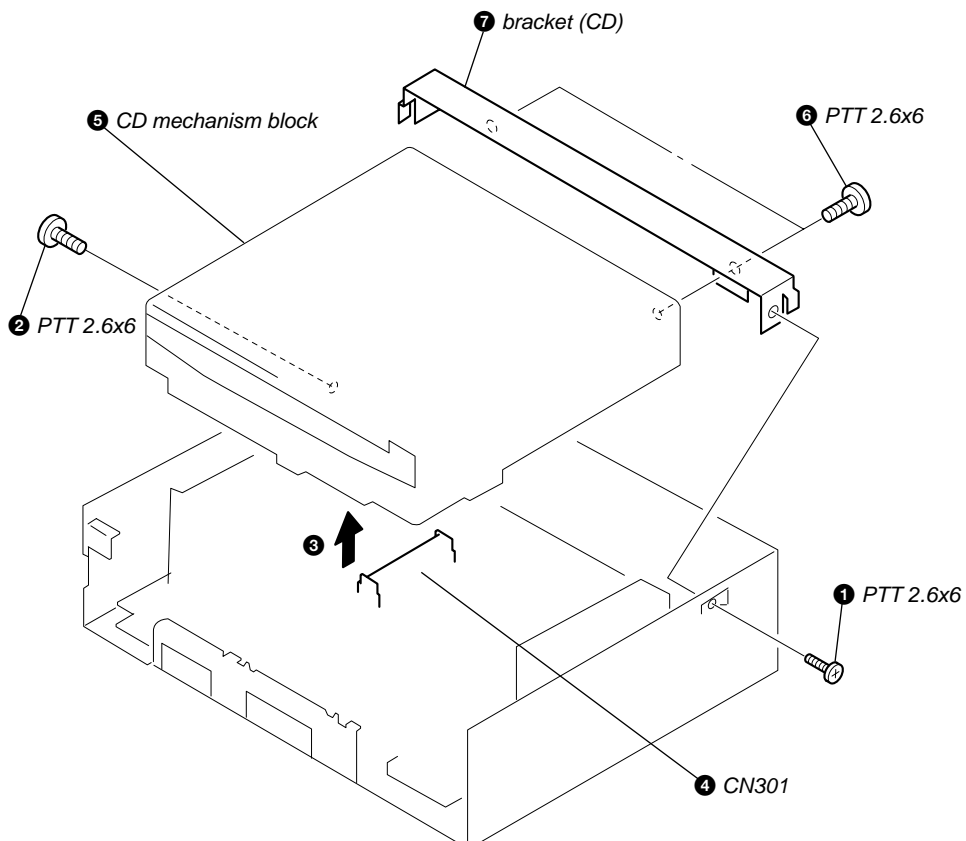


2-3. MAIN BOARD

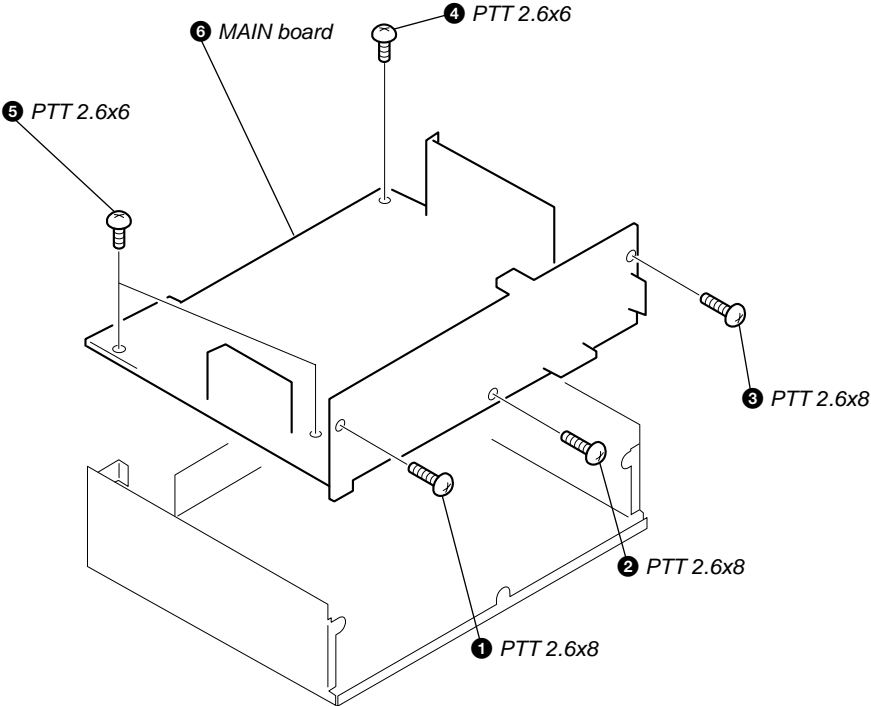


2-4. HEAT SINK

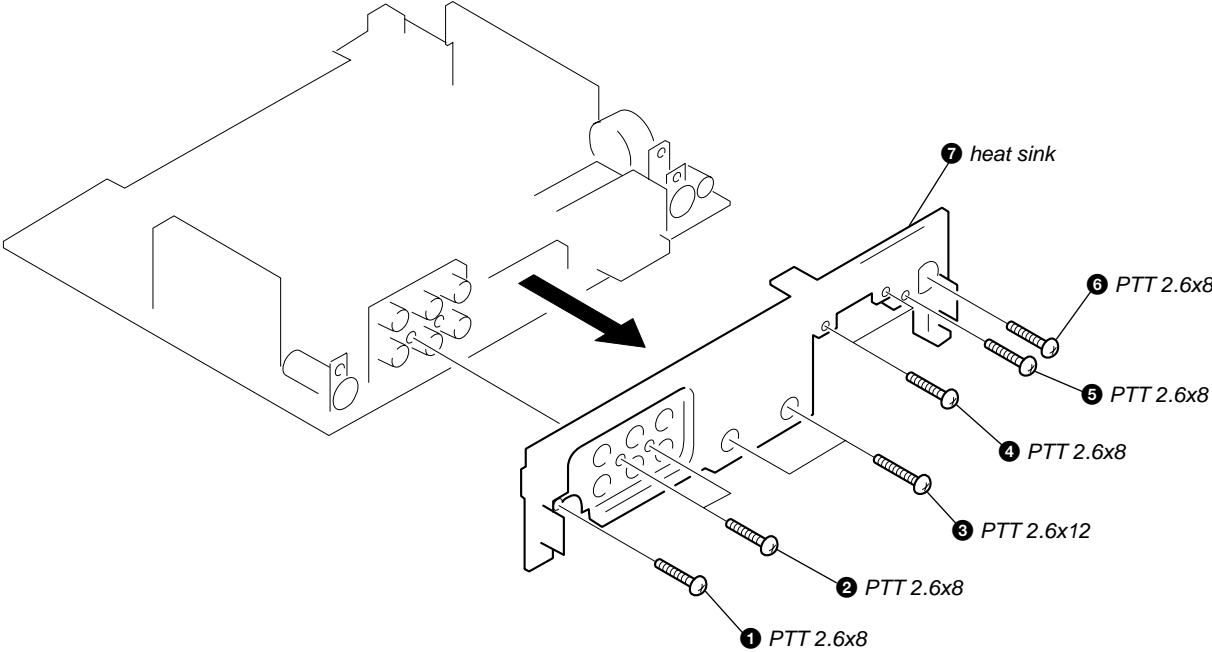


## 2-5. CHASSIS (T) SUB ASSY

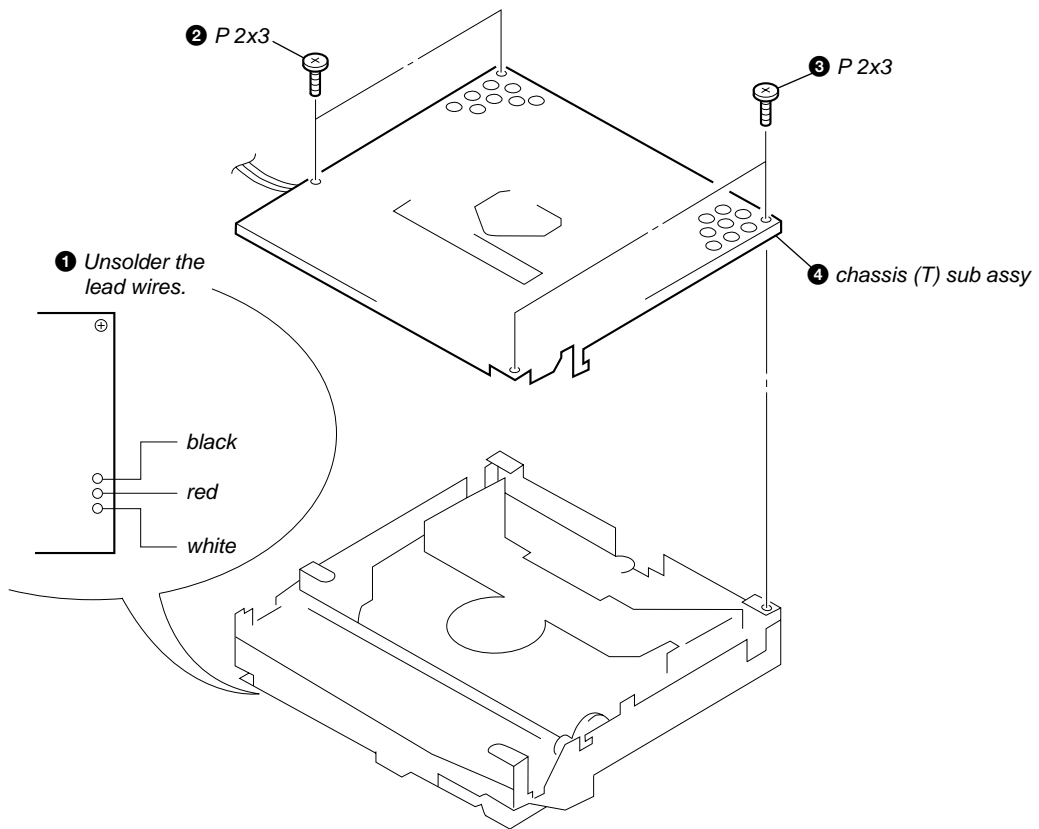

## 2-6. LEVER SECTION

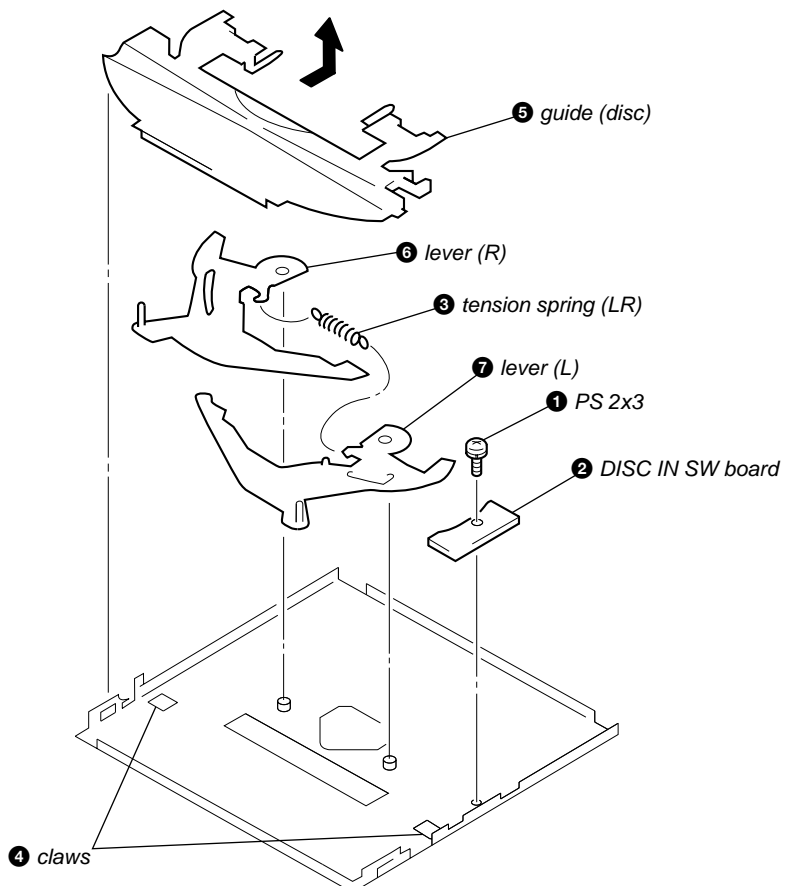


### 2-7. SERVO BOARD

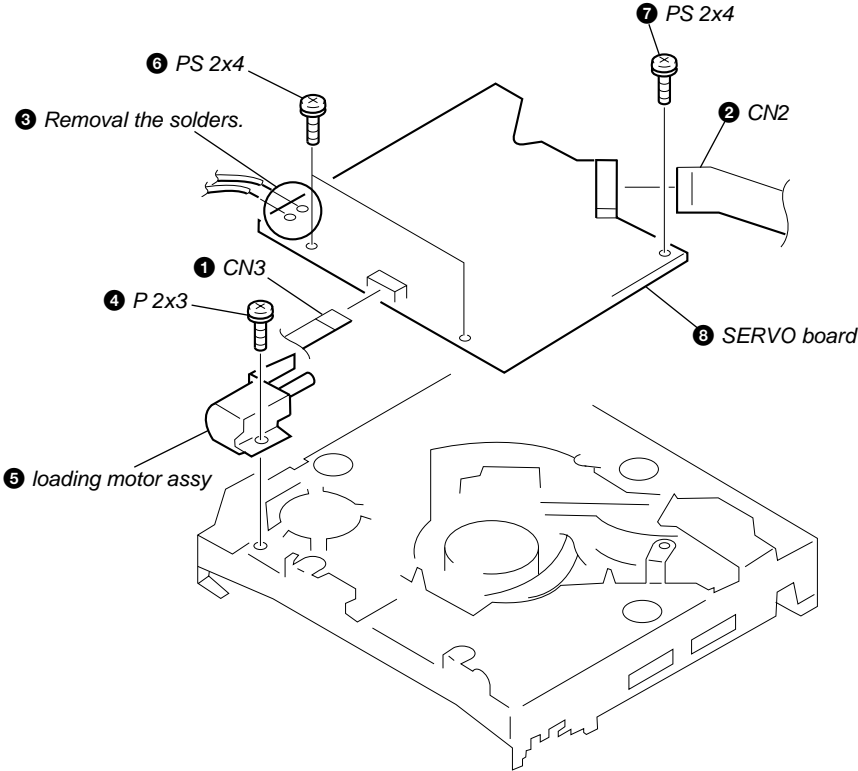


### 2-8. SHAFT ROLLER ASSY


- When installing, take note of the positions arm (roller) and washers. (Fig. 1)

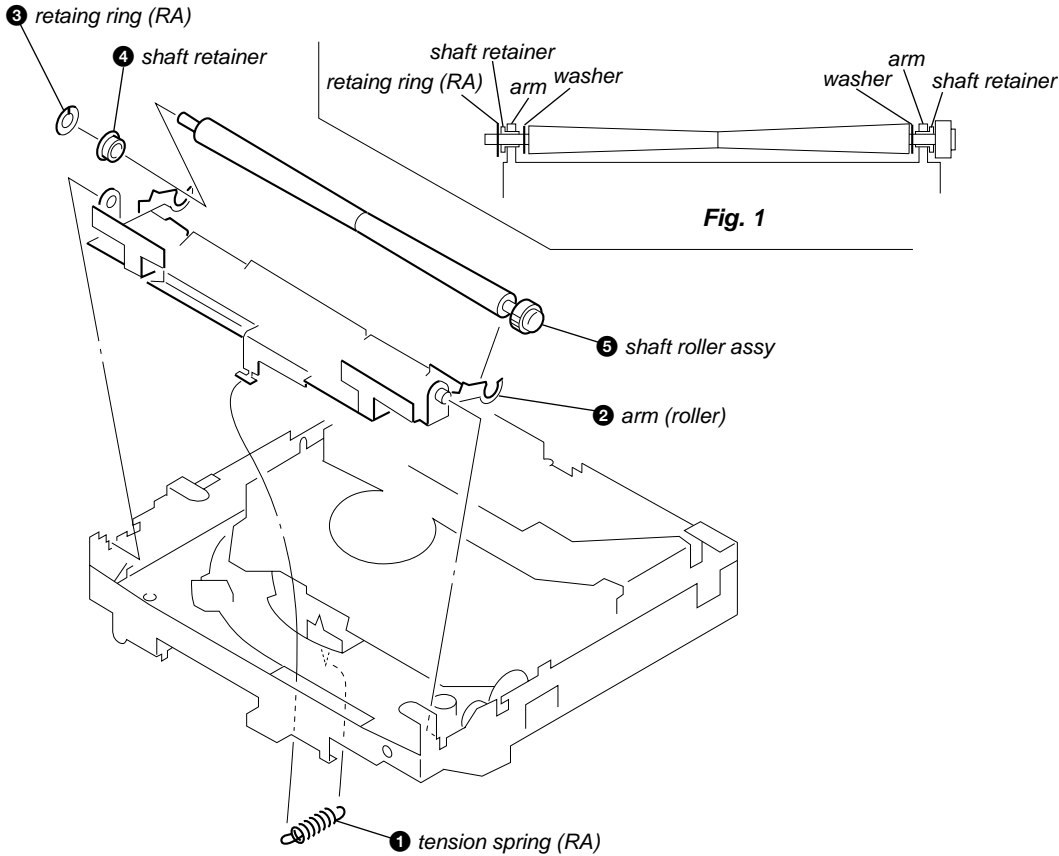

## 2-9. FLOATING BLOCK ASSY

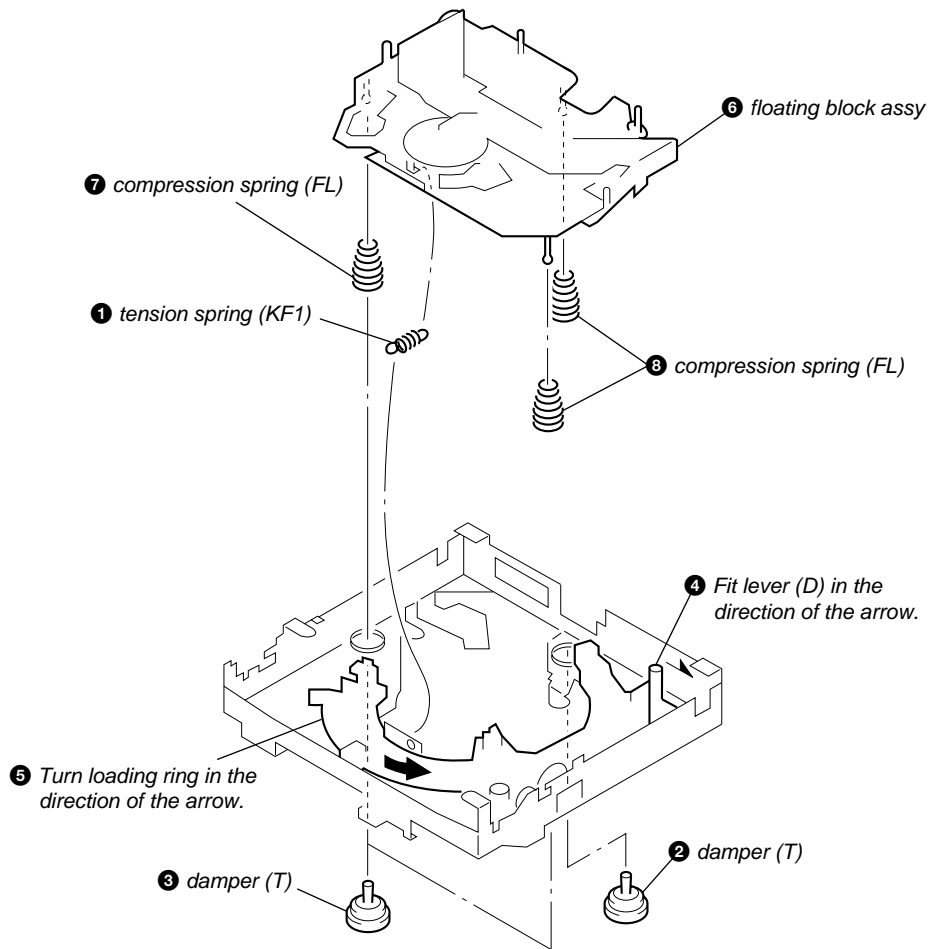

## 2-10. OPTICAL PICK-UP BLOCK

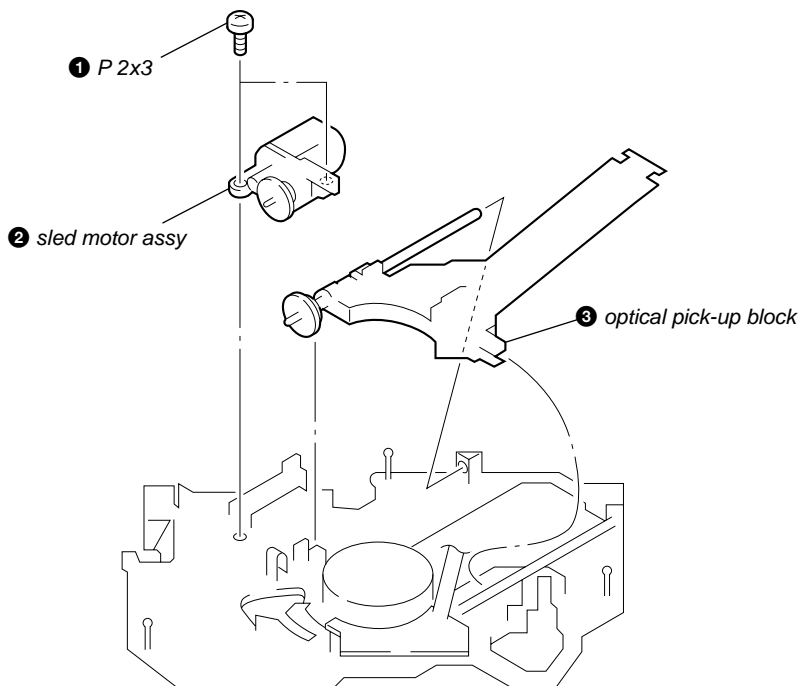

## SECTION 3 DIAGRAMS

### 3-1. IC PIN DESCRIPTIONS

#### • IC501 CXD2598Q (DIGITAL SERVO, DIGITAL SIGNAL PROCESSOR) (SERVO BOARD)

Pin No.	Pin Name	I/O	Pin Description
1	DVDD	—	Digital power supply pin
2	DVSS	—	Digital ground
3	SOUT	O	Servo brock serial data output (Not used.)
4	SOCK	O	Servo brock serial data read clock output (Not used.)
5	XOLT	O	Servo brock serial data latch output (Not used.)
6	SQSO	O	Sub Q 80 bit, PCM peak and level data output. CD TEXT data output
7	SQCK	I	Clock input from SQSO read output.
8	SCSY	I	Fixed at “L”.
9	SBSO	O	Serial output of sub-P to W. (Not used.)
10	EXCK	I	Clock input from SBSO read output. (Fixed at “L”)
11	XRST	I	System reset (“L”: Reset)
12	STSM	I	System mute input (Fixed at “L”)
13	DATA	I	Serial data input from CPU.
14	XLAT	I	Latch input from CPU. Latch serial data at the falling edge.
15	CLOK	I	Serial data transfer clock input from CPU.
16	SENS	O	SENS output for CPU.
17	SCLK	I	Clock input from SENS serial data read.
18	ATSK	I/O	Input/output for anti-shock.
19	WFCK	O	WFCK (Write Flame Clock) output (Not used.)
20	XUGF	O	XUGF output (Not used.)
21	XPCK	O	XPCK output (Not used.)
22	GFS	O	GFS output
23	C2PO	O	C2PO output (Not used.)
24	SCOR	O	“H” output at either detection, sub code sync S0 or S1.
25	C4M	O	4.2336 MHz output (Not used.)
26	WDCK	O	Word clock input $f=2Fs$ (Not used.)
27	COUT	I/O	Track number count signal input/output (Not used.)
28	MIRR	I/O	Mirror signal input/output (Not used.)
29	DVSS	—	Digital ground
30	DVDD	—	Digital power supply pin
31	DFCT	I/O	Diffect signal input/output (Not used.)
32	FOK	I/O	Focus OK signal output
33	PWM1	I	External control input of spindle motor.
34	LOCK	I/O	Lock signal input/output
35	MDP	O	Servo control output of spindle motor.
36	SSTP	I	Disc most inner track detection signal input
37	FSTIO	I/O	2/3 frequency division output of pins ⑥ and ⑦. (Not used.)
38	SFDR	O	Sled drive output
39	SRDR	O	Sled drive output
40	TFDR	O	Tracking drive output
41	TRDR	O	Tracking drive output
42	FFDR	O	Focus drive output
43	FRDR	O	Focus drive output
44	DVDD	—	Digital power supply pin
45	DVSS	—	Digital ground
46	TEST	I	Test pin (Fixed at “L”).
47	TES1	I	Test pin (Fixed at “L”).
48	XTSL	I	X’tal select input (“L”: 16.9344 MHz, “H”: 33.8688 MHz)
49	VC	I	Center voltage input
50	FE	I	Focus error signal input
51	SE	I	Sled error signal input

Pin No.	Pin Name	I/O	Pin Description
52	TE	I	Tracking error signal input
53	CE	I	Center servo analog input
54	RFDC	I	RF signal input
55	ADIO	O	Test pin (Not used.)
56	AVSSO	—	Analog ground
57	IGEN	I	Constant current input from OP amplifier.
58	AVDDO	—	Analog ground
59	ASYO	O	EFM full-swing output (“L”: VSS, “H”: VDD)
60	ASYI	I	Asymmetry compare voltage input
61	RFAC	I	EFM signal input
62	AVSS3	—	Analog ground
63	CLTV	I	VCO control voltage input from master.
64	FILO	O	Filter output for master PLL (slave=digital PLL)
65	FILI	I	Filter input from master PLL.
66	PCO	O	Charge pump output for master PLL.
67	AVDD3	—	Analog power supply pin
68	BIAS	I	Asymmetry circuit constant current input
69	VCTL	I	VCO2 control input from wideband EFM PLL. (Not used.)
70	V16M	O	VCO2 oscillator output for wideband EFM PLL. (Not used.)
71	VPCO	O	Charge pump output for wideband EFM PLL. (Not used.)
72	DVSS	—	Digital ground
73	MD2	I	Digital out ON/OFF control input (“L”: OFF, “H”: ON)
74	DOUT	O	Digital out output
75	ASYE	I	Asymmetry circuit ON/OFF input (“L”: OFF, “H”: ON)
76	DVDD	—	Digital power supply pin
77	LRCK	O	D/A interface LR clock output (f=Fs)
78	LRCKI	I	D/A interface LR clock input
79	PCMD	O	D/A interface serial data output (2’s COMP, MSB fast)
80	PCMD	I	D/A interface serial data input (2’s COMP, MSB fast)
81	BCK	O	D/A interface bit clock output
82	BCKI	I	D/A interface bit clock input
83	EMPH	O	Emphasis ON/OFF signal output
84	EMPHI	I	Emphasis ON/OFF signal input (“H”: ON, “L”: OFF)
85	XVDD	—	Power supply for master clock.
86	XTAI	I	X’tal oscillator input from master clock (16.9344 MHz).
87	XTAO	O	X’tal oscillator output for master clock (16.9344 MHz).
88	XVSS	—	Ground pin for master clock.
89	AVDD1	—	Analog power supply pin
90	AOUT1	O	Lch analog output
91	AIN1	I	Lch OPAMP input
92	LOUT1	O	Lch LINE output
93	AVSS1	—	Analog ground
94	AVSS2	—	Analog ground
95	LOUT2	O	Rch LINE output
96	AIN2	I	Rch OPAMP input
97	AOUT2	O	Rch analog output
98	AVDD2	—	Analog power supply pin
99	RMUT	O	Rch “0” detect Flug (Not used.)
100	LMUT	O	Lch “0” detect Flug (Not used.)

• IC5 CXP84640-072Q (CD SYSTEM CONTROL) (SERVO BOARD)

Pin No.	Pin Name	I/O	Pin Description
1	ITRPT	—	Not used in this set.
2, 3	—	—	Not used in this set.
4, 5	NCO	—	Not used in this set.
6	OPEN	I	Front panel open detection input
7	CLOSE	O	Front panel close control output
8	LINKOFF	I	Bus interface link input
9	NCO	—	Not used in this set.
10	$\overline{D SW}$	I	Down switch input (SW4)
11	SSTP	I	Limit switch input (SW3)
12, 13	NCO	—	Not used in this set.
14, 15	—	—	Not used in this set.
16	EMPH O	O	De-emphasis ON/OFF control output
17	CDMON	O	CD mechanism deck power control output
18	CD ON	O	CD power control output
19	A MUT	O	System attenuate control output
20	$\overline{LD ON}$	O	Laser power ON/OFF control output
21	$\overline{CD RST}$	O	CD system reset output
22	HOLD	O	Hold switch output
23	AGC CONT	O	AGC control output
24	—	—	Not used in this set.
25	PH3	I	Not used in this set.
26	$\overline{TSTIN0}$	I	Not used in this set.
27	$\overline{TSTIN1}$	I	Not used in this set.
28	$\overline{TST.CLV}$	I	Not used in this set.
29	NCO	—	Not used in this set.
30	$\overline{RESET}$	I	System reset input (“L”=Reset)
31	X IN	I	X’tal oscillator input from system clock. (10 MHz)
32	$\overline{X OUT}$	O	X’tal oscillator output for system clock. (10 MHz)
33	GND	—	Analog ground
34	$\overline{XT OUT}$	O	Not used in this set.
35	XT IN	I	Not used in this set.
36	AVSS	—	A/D converter ground
37	AVREF	I	A/D converter reference voltage input
38	TEP L	I	Not used in this set.
39	TEP H	I	Not used in this set.
40	SLED-	I	Sled drive input
41	PH2	I	Not used in this set.
42	SEK/SMET	I	Fixed at “H” in this set.
43	GFS/MNT2 SEL	I	Fixed at “H” in this set.
44	SC-JIG ON/OFF	I	Fixed at “H” in this set.
45	SCLK	O	CD-TEXT data read clock output
46	LOCK	I/O	Lock signal input/output
47	—	—	Not used in this set.
48	SCK2	O	Sub Q read clock output
49	SI2	I	Sub Q 80 bit, PCM peak and level data 16 bit input.
50	—	—	Not used in this set.
51	BUS CLK	I/O	Bus system serial clock input/output
52	BUS SI	I	Bus system serial interface input
53	BUS SO	O	Bus system serial interface output
54	F OK	I	Focus OK signal input
55	GFS	I	GFS signal detection input
56	TEST MODE	I	Fixed at “H” in this set.


Pin No.	Pin Name	I/O	Pin Description
57	SENS	I	SENS signal input
58	—	—	Not used in this set.
59	—	—	Not used in this set.
60	BU.IN	I	Back-up power detection input
61	$\overline{\text{BUSON}}$	I	Bus on control input
62	$\overline{\text{IN SW}}$	I	Disc in switch input (SW1)
63	$\overline{\text{SELF SW}}$	I	Self switch input (SW2)
64	SCOR	O	Sub-code sync output
65	CD-CKO	O	CD signal process serial clock input
66	LM LOD	O	Loading motor control output
67	CD DATA	O	CD signal process serial data output
68	CD-XLAT	O	CD signal process serial data latch output
69	LM-EJ	O	Loading motor control output
70	DRV-OE	O	Focus/tracking coil/sled motor control output
71	MD2	O	Digital out ON/OFF control output (“L”: OFF, “H”: ON)
72	VDD	—	Power supply pin
73	NIH	I	Fixed at “H” in this set.
74	V/Z	I	Fixed at “H” in this set.
75	PH1	I	Not used in this set.
76	—	—	Not used in this set.
77	DOUT-SEL	I	Fixed at “H” in this set.
78 – 80	—	—	Not used in this set.

• IC801 MN101C49KTB (SYSTEM CONTROL) (MAIN BOARD)

Pin No.	Pin Name	I/O	Pin Description
1	VREF-	—	Ground for A/D converter power supply
2	S METER	I	S meter voltage detect signal input
3	FM AGC	I	FM auto gain control signal input
4	KEY IN1	I	KEY signal input
5	KEY IN0	I	KEY signal input
6	DSTSEL	I	C5000X/C5005: Not used. C6800X: Frequency select signal input
7	RC IN0	I	Rotary commander signal input
8	FUNC SEL	I	Model function selection pin
9	NIL	—	Ground
10	VREF+	—	A/D converter power supply
11	VDD	—	Power supply (+5 V) input pin
12	OSC OUT	O	High speed clock signal output (18.432 MHz)
13	OSC IN	I	High speed clock signal input (18.432 MHz)
14	VSS	—	Ground for power supply
15	XI	I	Low speed clock signal input (32 kHz)
16	XO	O	Low speed clock signal output (32 kHz)
17	MMOD	—	Not used. (Fixed at “L”.) Memory mode select signal input
18	RC IN1	I	Rotary commander shift key signal input
19	$\overline{\text{SYSRST}}$	O	System reset signal output
20	$\overline{\text{BUS ON}}$	O	Bus on control signal output
21	LCD DATA	O	LCD serial data signal output
22	LCD CE	O	LCD chip enable signal output
23	LCD CLK	O	LCD serial clock signal output
24	ILL ON	O	Illumination power supply control signal output
25	DOOR IND	O	Control signal output for power on sub panel when open to front panel
26	KEY ACK	I	Key active interrupt detect signal input
27	$\overline{\text{NOSE}}$	I	Front panel attachment detection input
28	BU IN	I	Back up power supply select signal input
29	SIRCS	I	Remote control signal input
30, 31	NC	—	Not used. (Fixed at “L”.)
32	RAM	—	Not used.
33	$\overline{\text{RESET}}$	I	Reset signal input
34	NC	—	Not used.
35	BEEP	O	Beep signal input
36	NC (FUNC SEL)	I	Model function selection pin
37	NC (FUNC SEL)	I	Model function selection pin
38 – 40	NC	—	Not used.
41	UNI CLI	I	Bus system serial clock signal input
42	UNI SO	O	Bus system serial interface signal output
43	UNI SI	I	Bus system serial interface signal input
44	UNI CLO	O	Bus system serial clock signal output
45	SDA	I/O	I2C bus serial data signal input/output
46	NC	—	Not used.
47	SCL	O	I2C bus serial clock signal output
48, 49	NC	—	Not used.
50	LOCK	I	Check when remove to lock of MDNO CLV SERVO
51 – 63	NC	—	Not used.
64	$\overline{\text{ACC IN}}$	I	Accessory power supply voltage detection input
65	TEL MUT	I	Telephone attenuate detect signal input
66	$\overline{\text{TEST IN}}$	I	Test mode setting detect first stage signal input
67	ANT CUT	—	Not used.
68	NC	—	Not used.

Pin No.	Pin Name	I/O	Pin Description
69	AMP ON	O	Power supply on/off control signal output
70	MUT	O	System attenuate control signal output
71	AMP MUT	O	Power amp attenuate control signal output
72	VOL MUT	O	Mute control signal output for electrical volume
73	TU ON	O	Tuner attenuate signal output
74	EEP SDA	I/O	Tuner EEPROM serial data signal input/output
75	EEP SCL	O	Runer EEPROM serial clock signal output
76	IF BW	I	Not used.
77	NC	—	Not used. Tuner switch VCO level shift signal input
78	NC	—	Not used.
79	REIN1	I	Rotary encoder signal input
80	REIN0	I	Rotary encoder signal input
81	$\overline{AD\ ON}$	O	Power control output for A/D conversion
82 – 92	NC	—	Not used.
93	OPEN	I	Front panel open/close condition signal input
94 – 98	NC	—	Not used.
99	PW ON	O	System power supply control signal output
100	NC	—	Not used.


3-2. BLOCK DIAGRAM — CD SECTION —

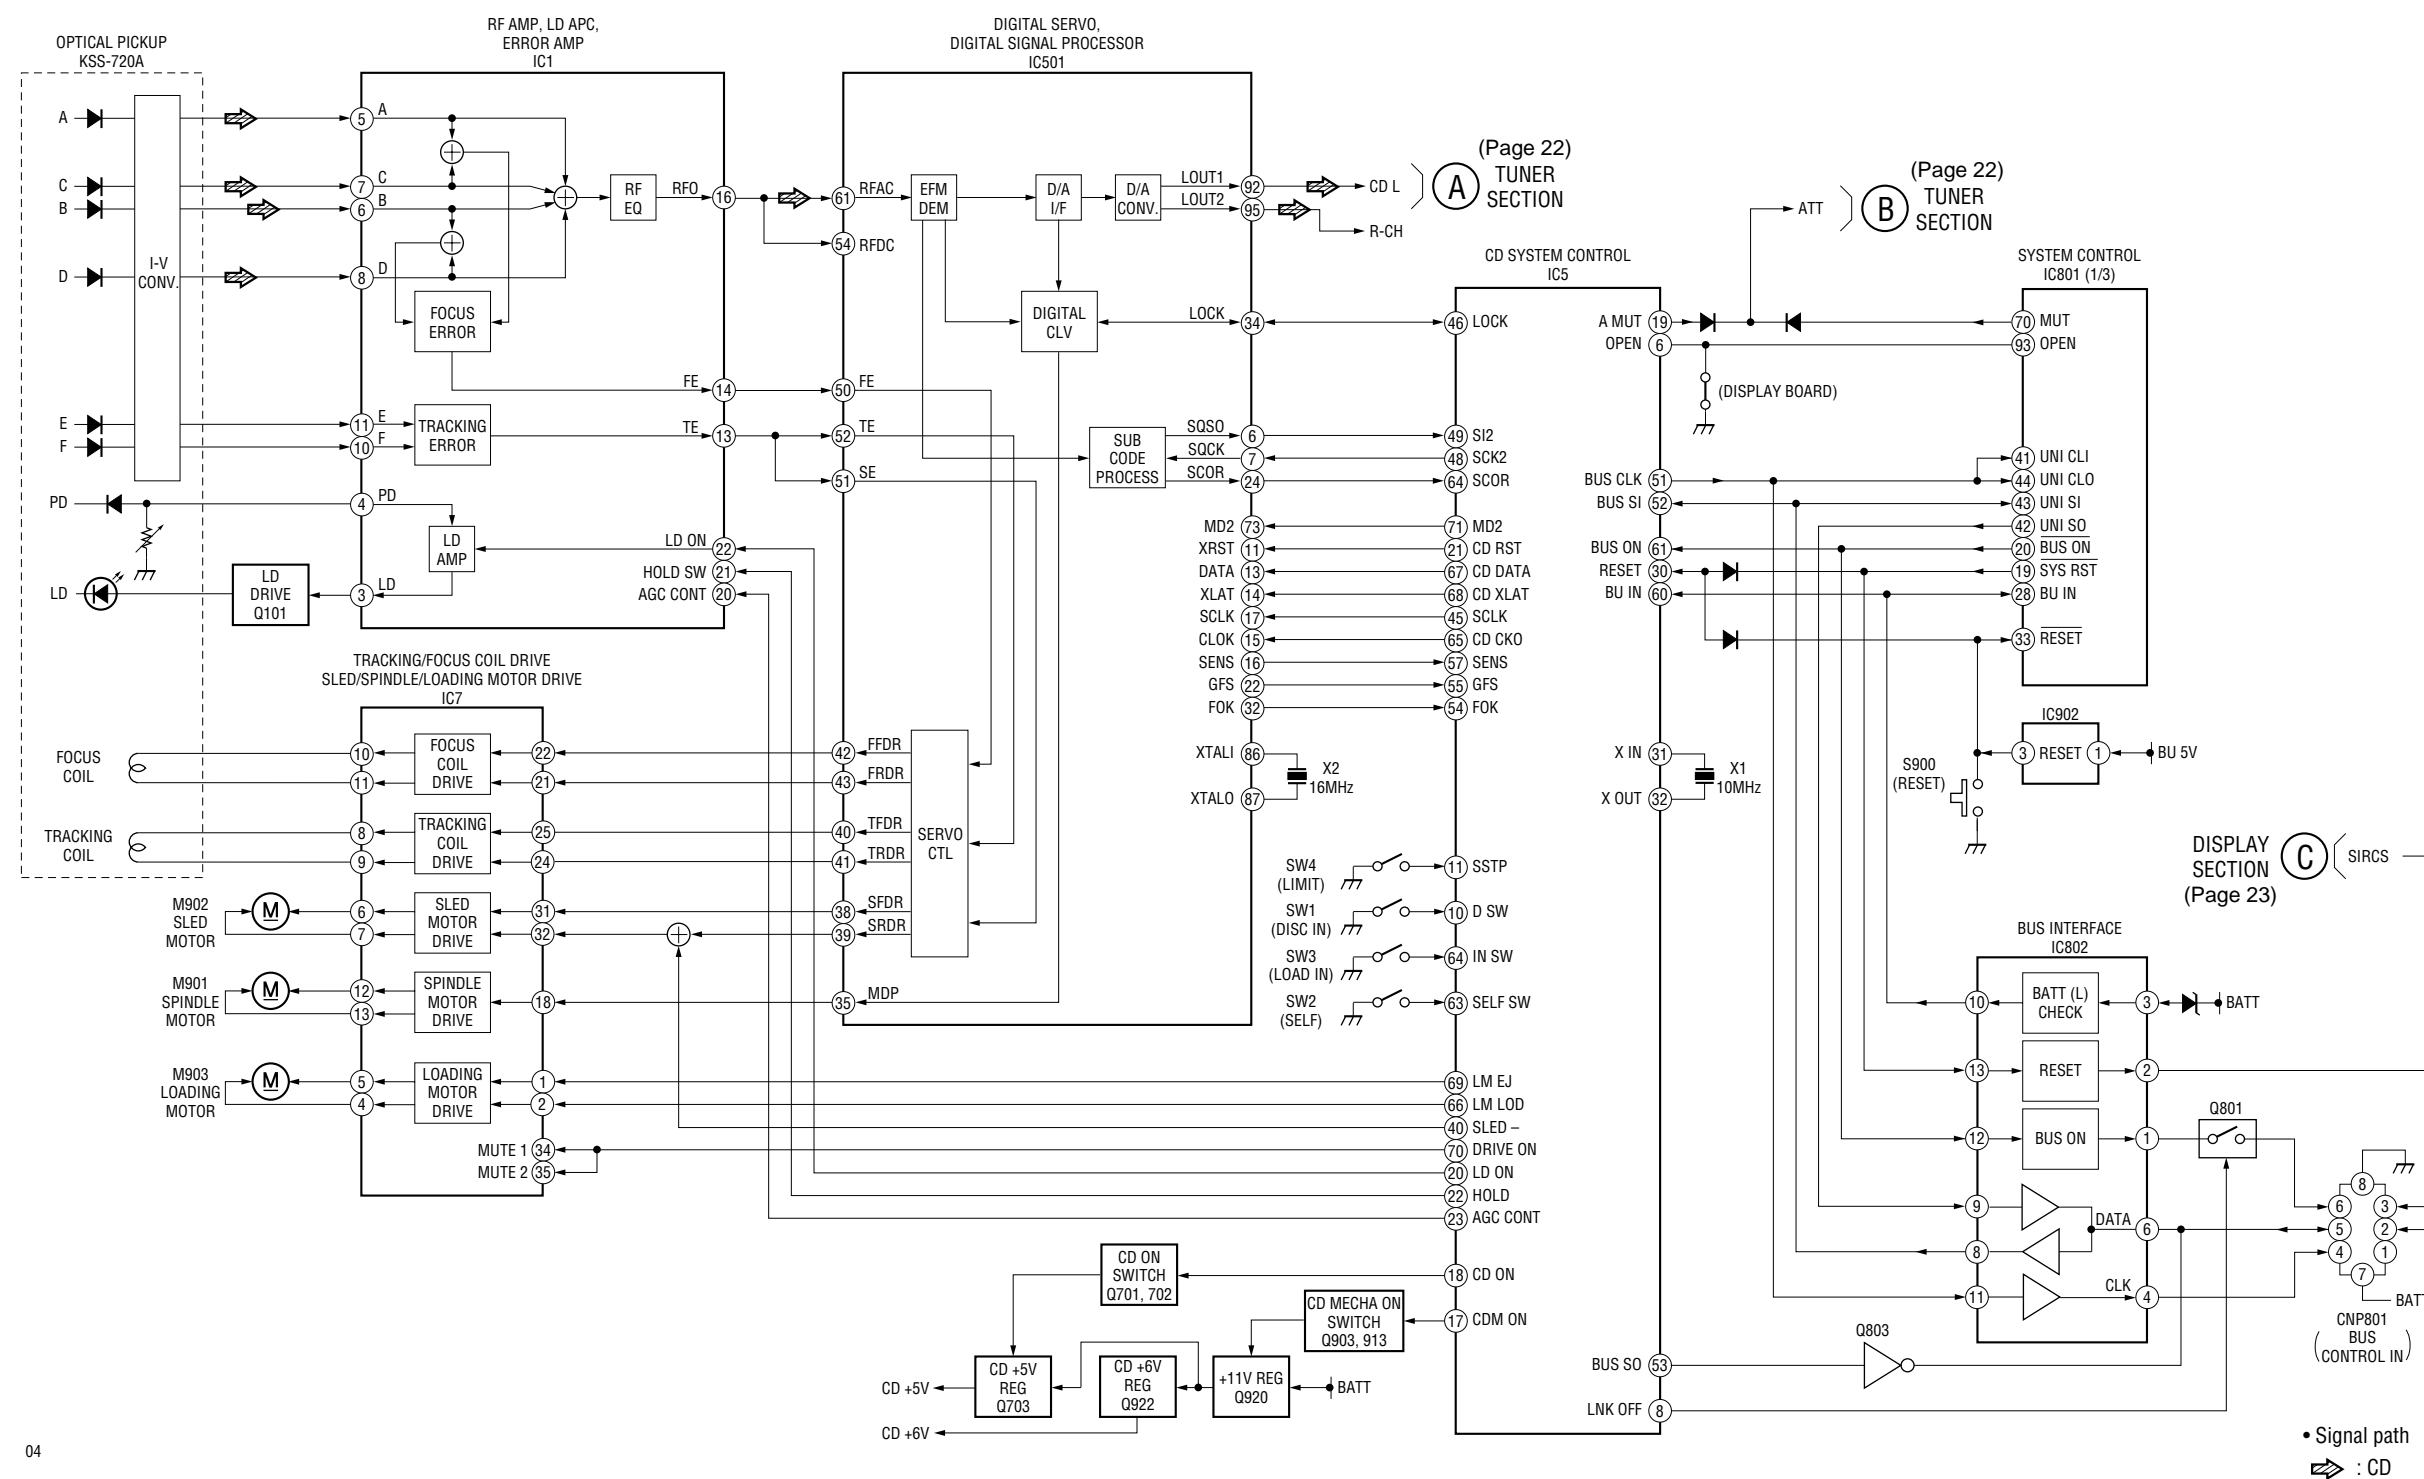

04


• Signal path  
 : CD

3-3. BLOCK DIAGRAM — TUNER SECTION —

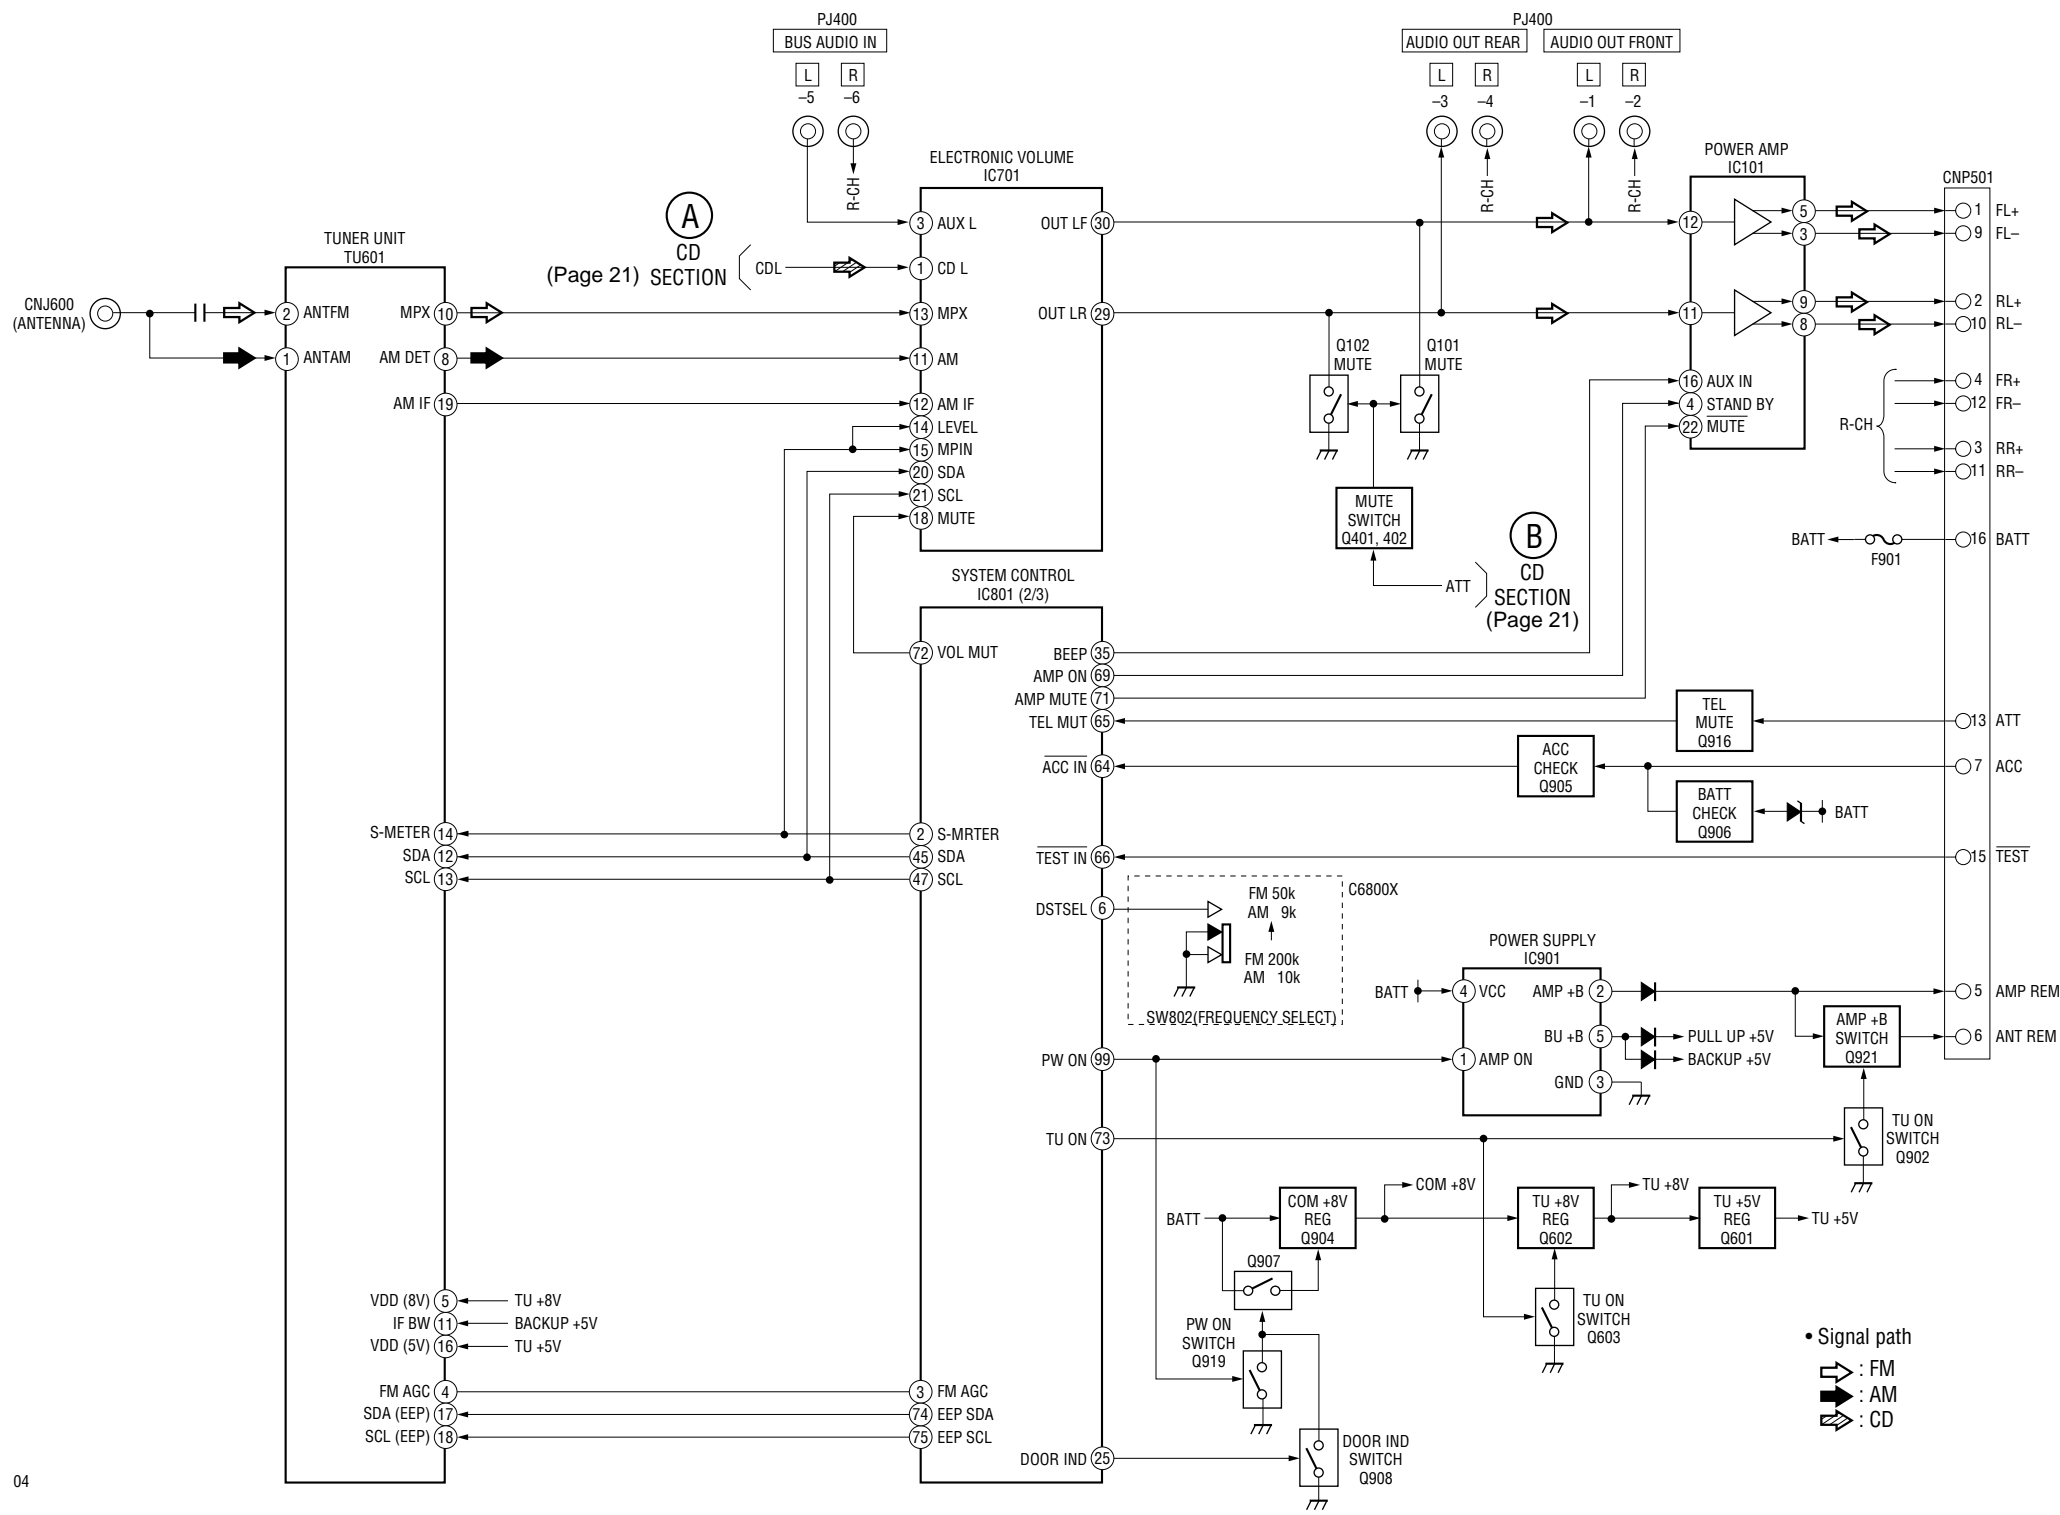


04

3-4. BLOCK DIAGRAM — DISPLAY SECTION —

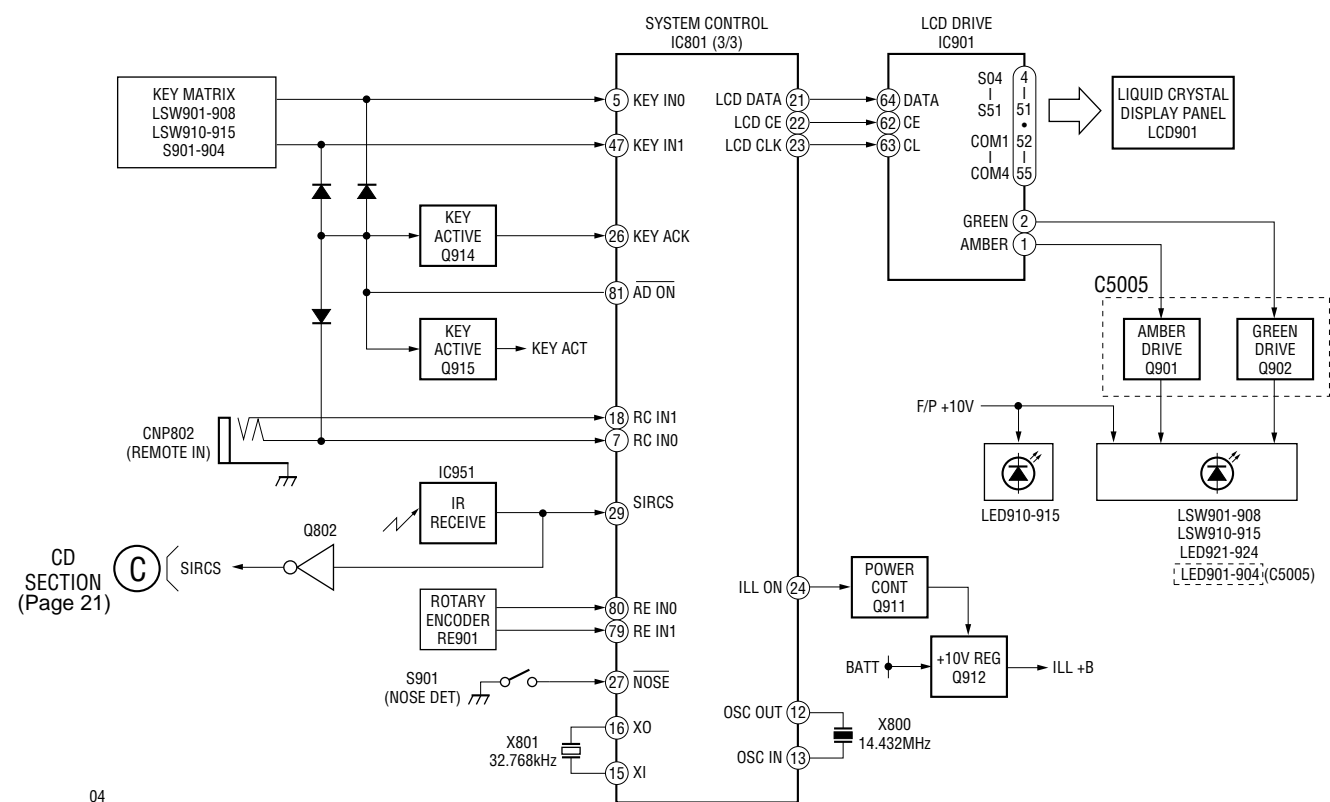

3-5. CIRCUIT BOARDS LOCATION

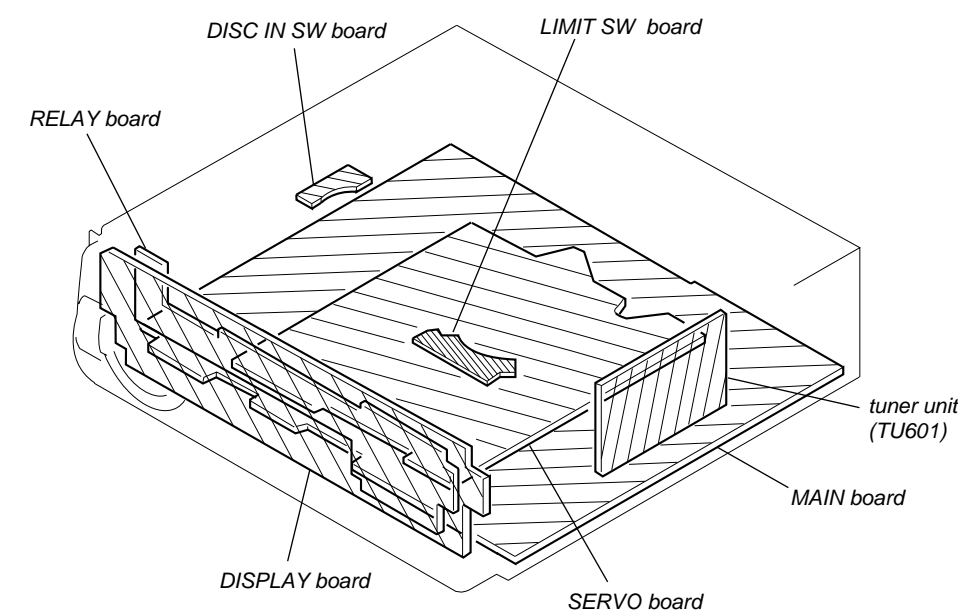

3-6. PRINTED WIRING BOARDS — CD MECHANISM SECTION —

【 SERVO BOARD 】 (SIDE B)

**THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.**  
 (In addition to this, the necessary note is printed in each block.)

**for schematic diagram:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\text{pF}$   
 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $1/4\text{W}$  or less unless otherwise specified.
- % : indicates tolerance.
- $\Delta$  : internal component.
- $\square$  : panel designation.

**Note:**  
 The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
 Replace only with part number specified.


**Note:**  
 Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
 Ne les remplacer que par une pièce portant le numéro spécifié.

- $\square$  : B+ Line.
- Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BATT cords.
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.  
 $\Rightarrow$  : FM  
 $\Rightarrow$  : AM  
 $\Rightarrow$  : CD

**for printed wiring boards:**


- $\circ$  : parts extracted from the component side.
- $\text{---}$  : parts extracted from the conductor side.
- $\circ$  : Through hole.
- $\text{---}$  : Pattern from the side which enables seeing. (The other layer's patterns are not indicated.)

**Caution:**  
 Pattern face side: Parts on the pattern face side seen from the (Side B) pattern face are indicated.  
 Parts face side: Parts on the parts face side seen from the (Side A) parts face are indicated.

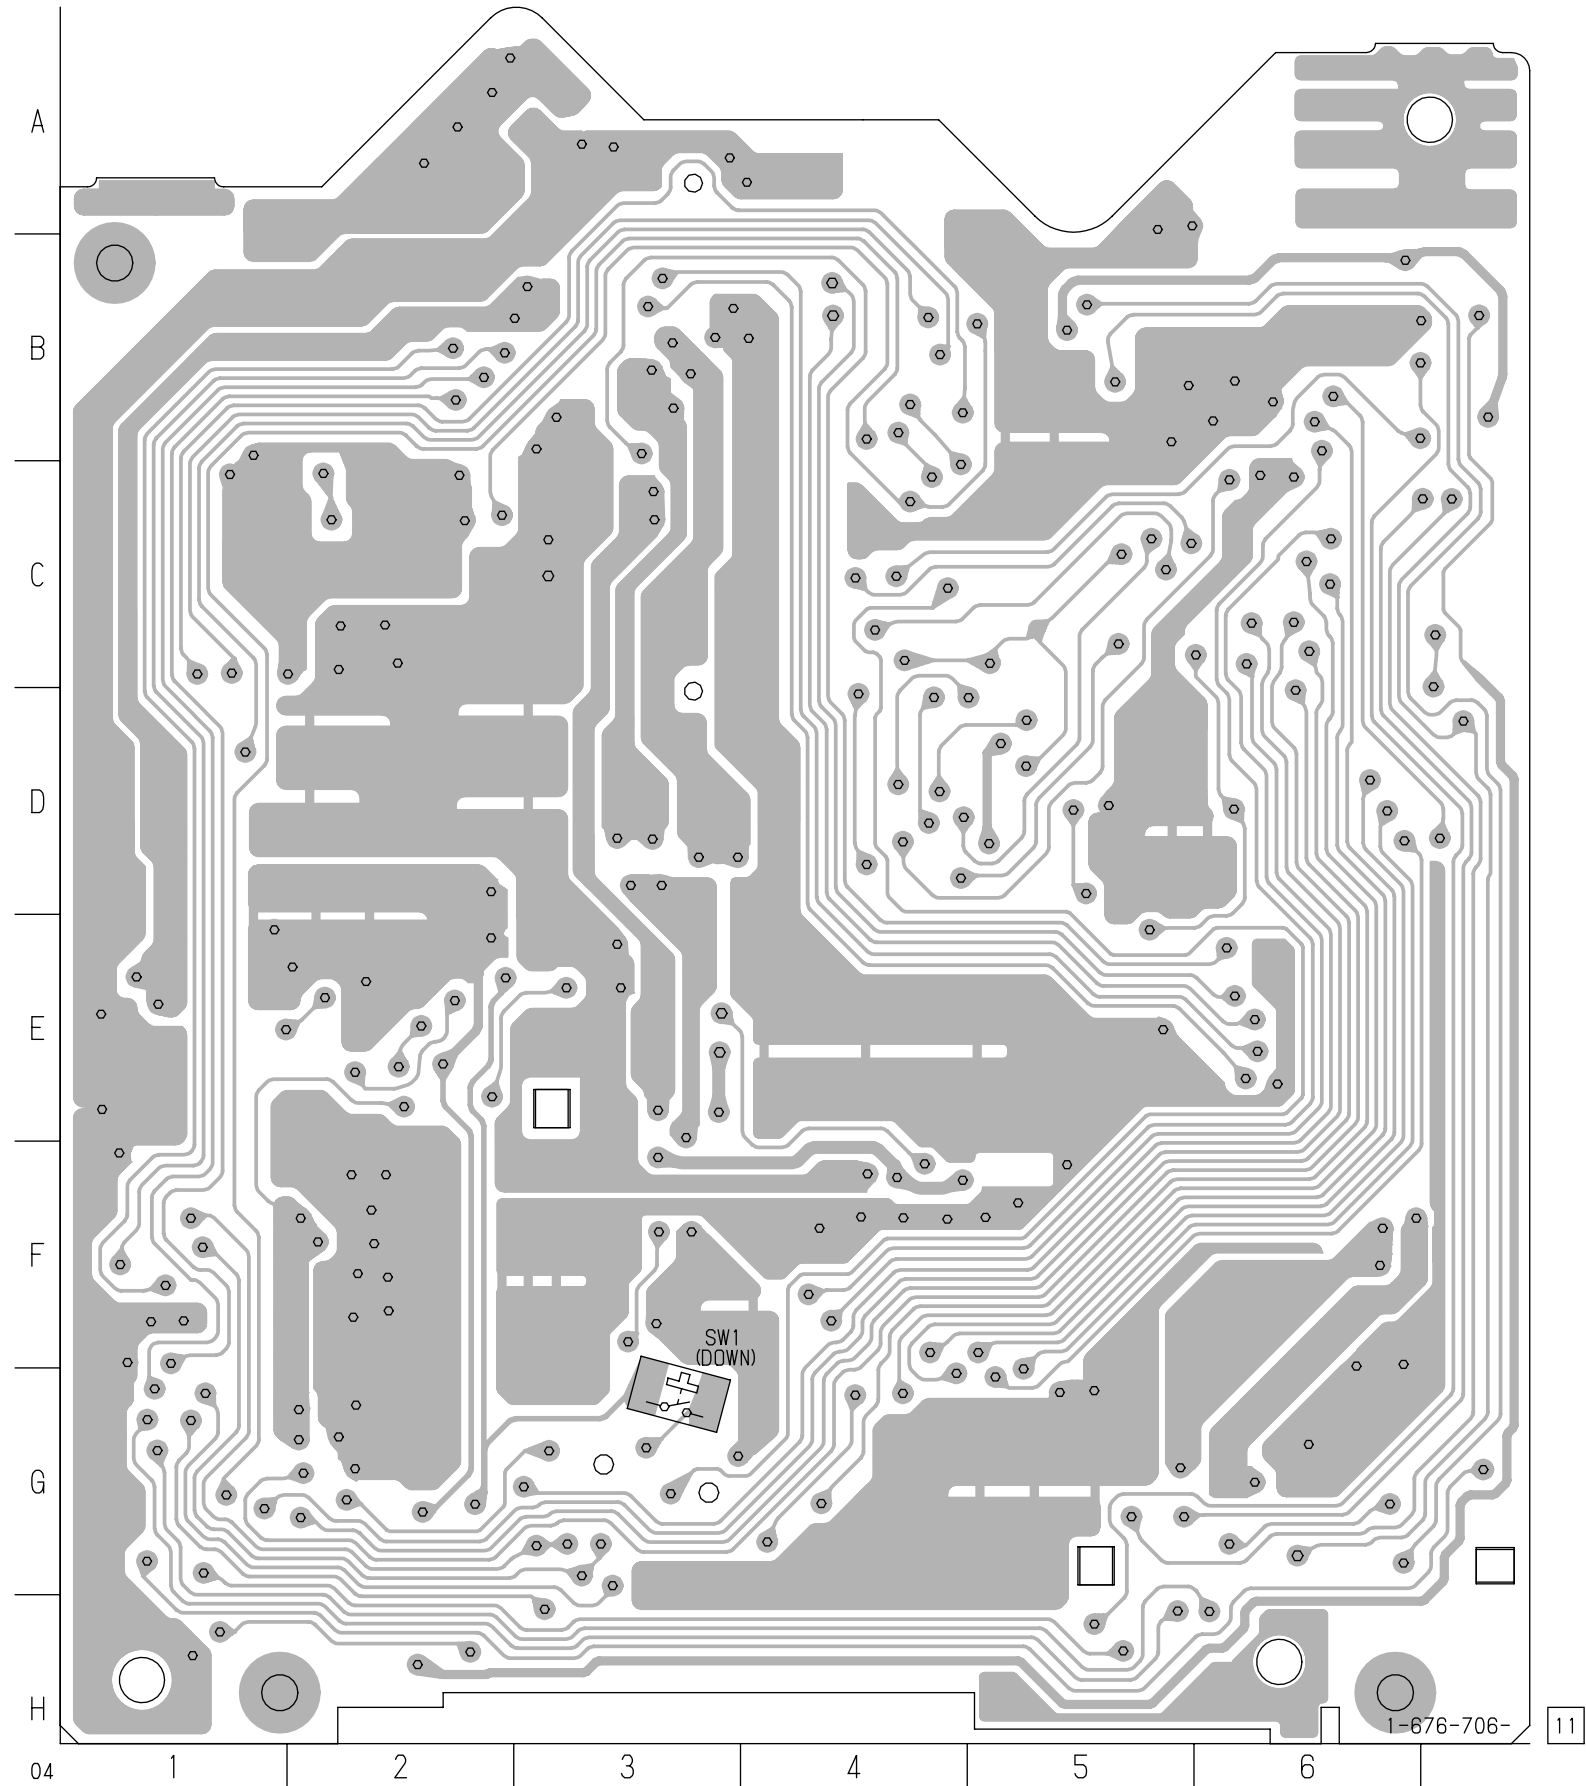




3-7. SCHEMATIC DIAGRAM — CD MECHANISM SECTION (1/2) — • Refer to page 35 for IC Block Diagrams.

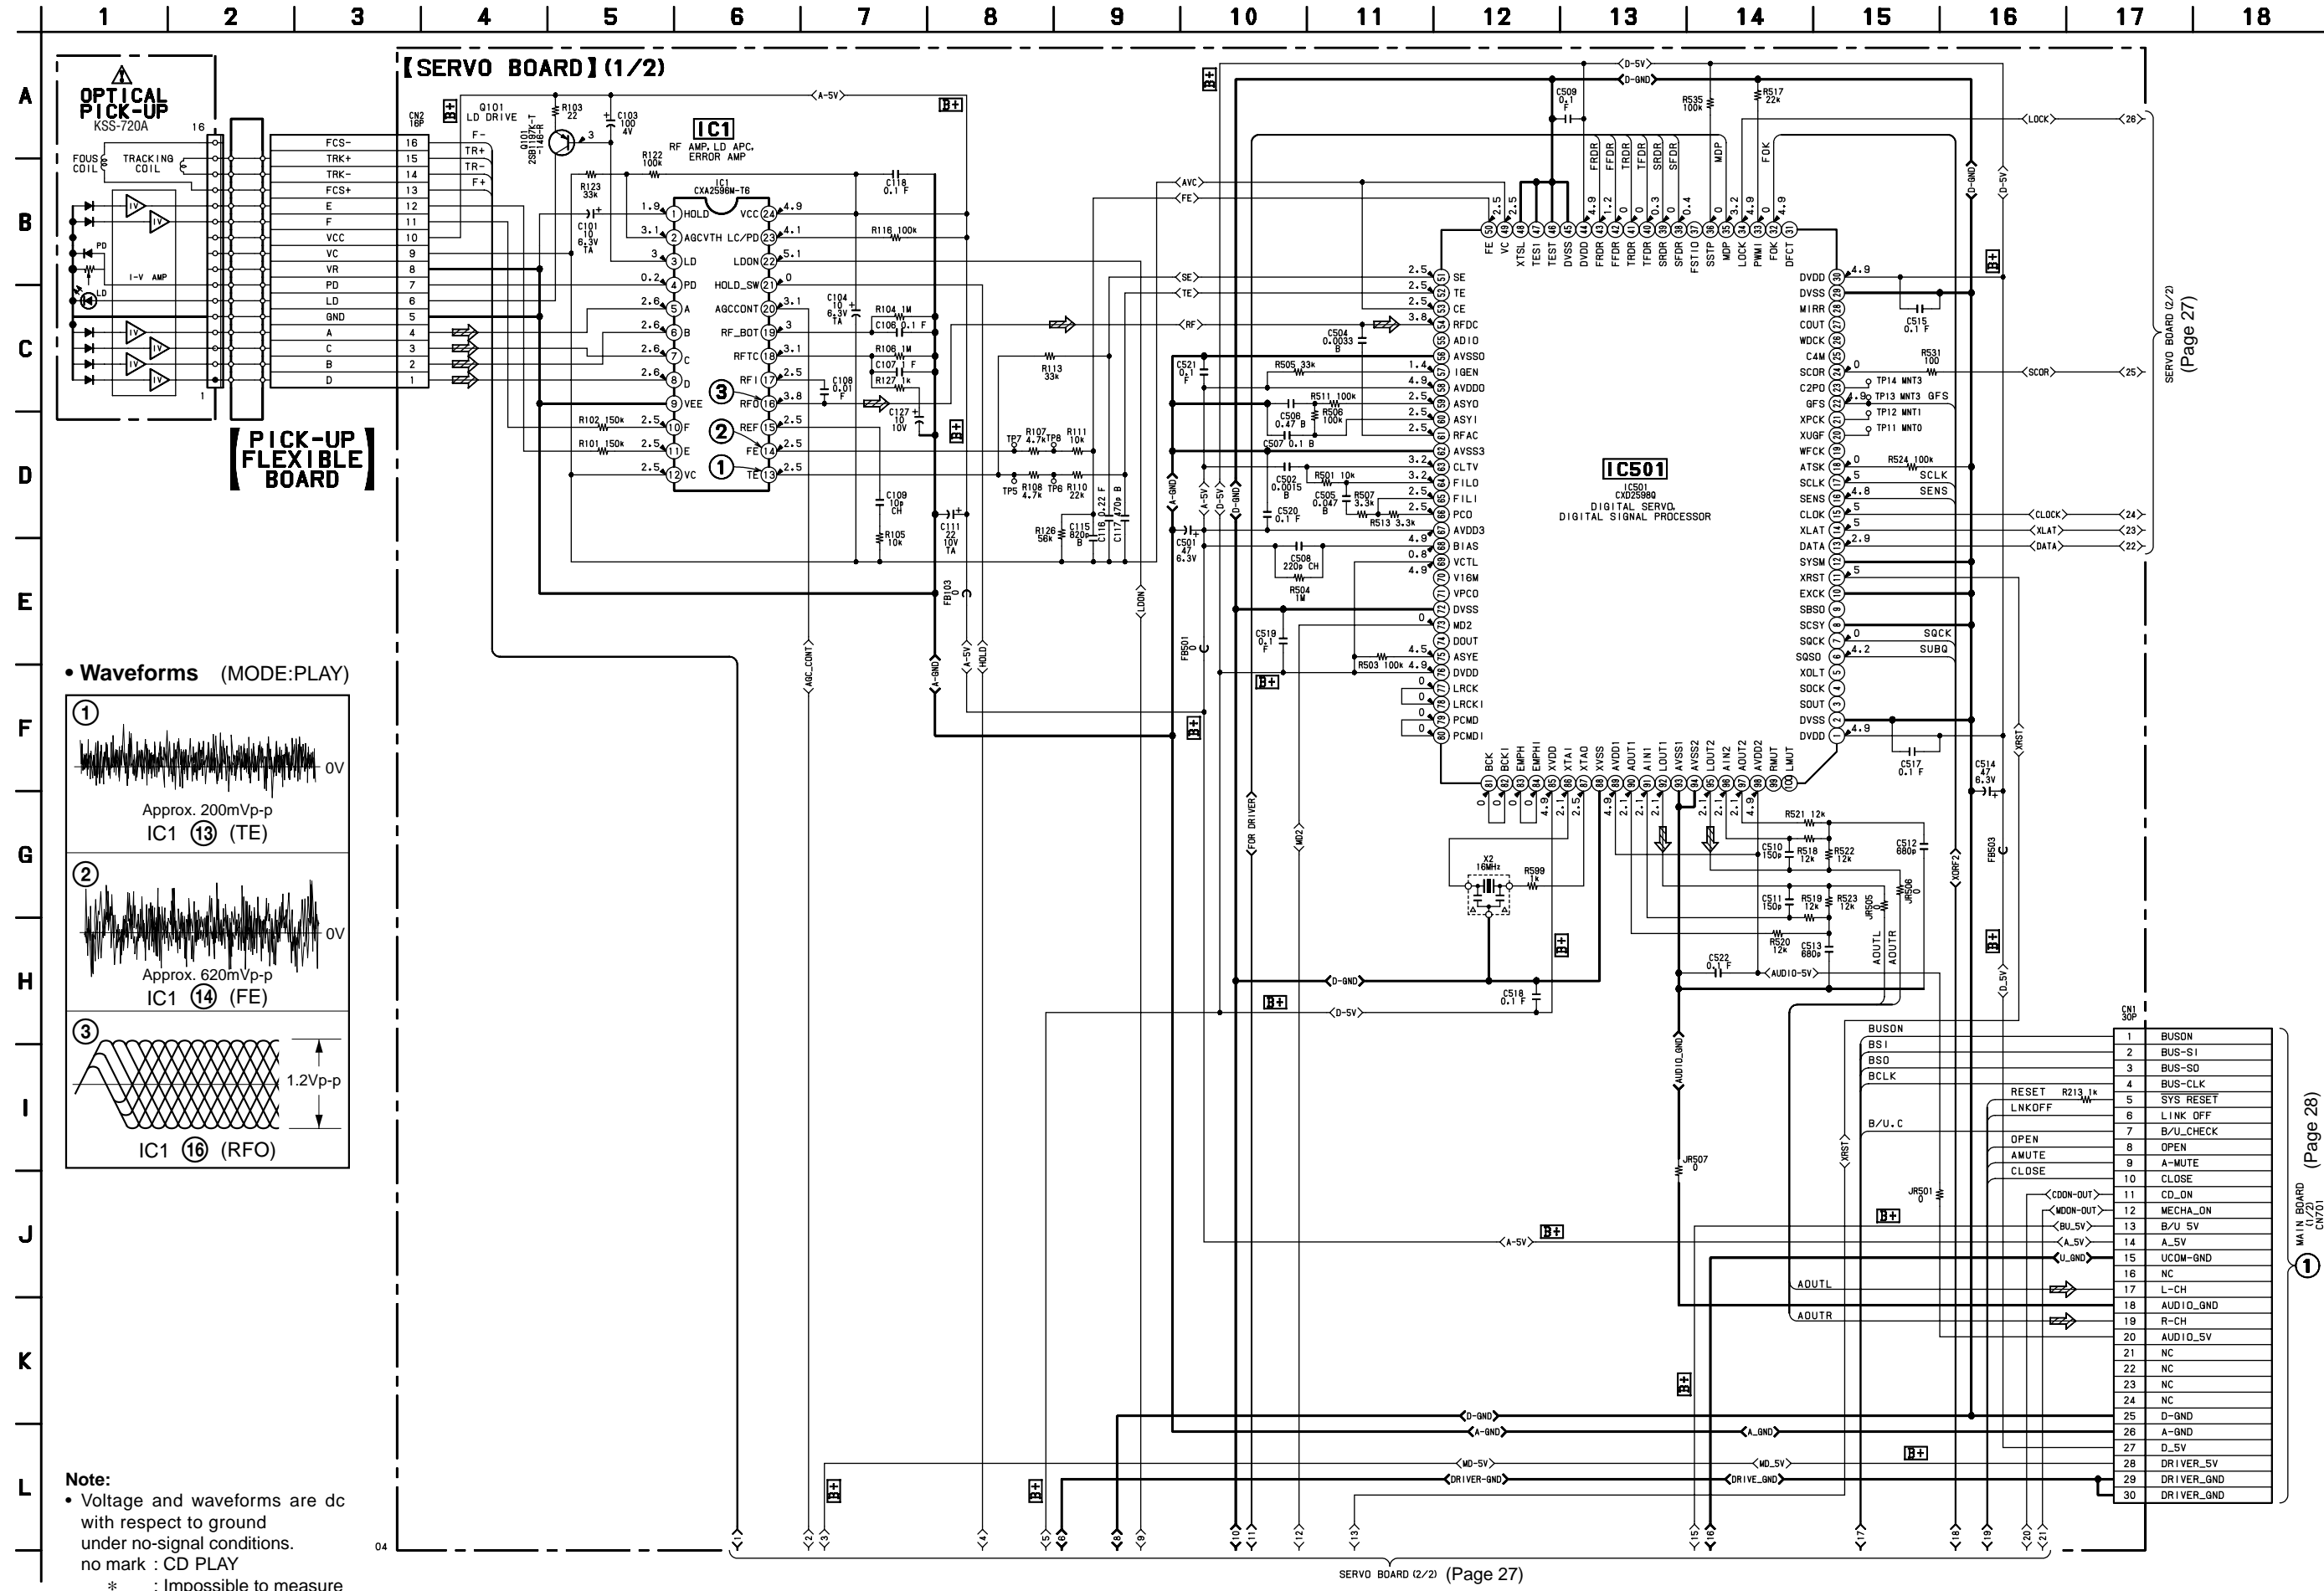


3-8. SCHEMATIC DIAGRAM — CD MECHANISM SECTION (2/2) — • Refer to page 36 for IC Block Diagrams.

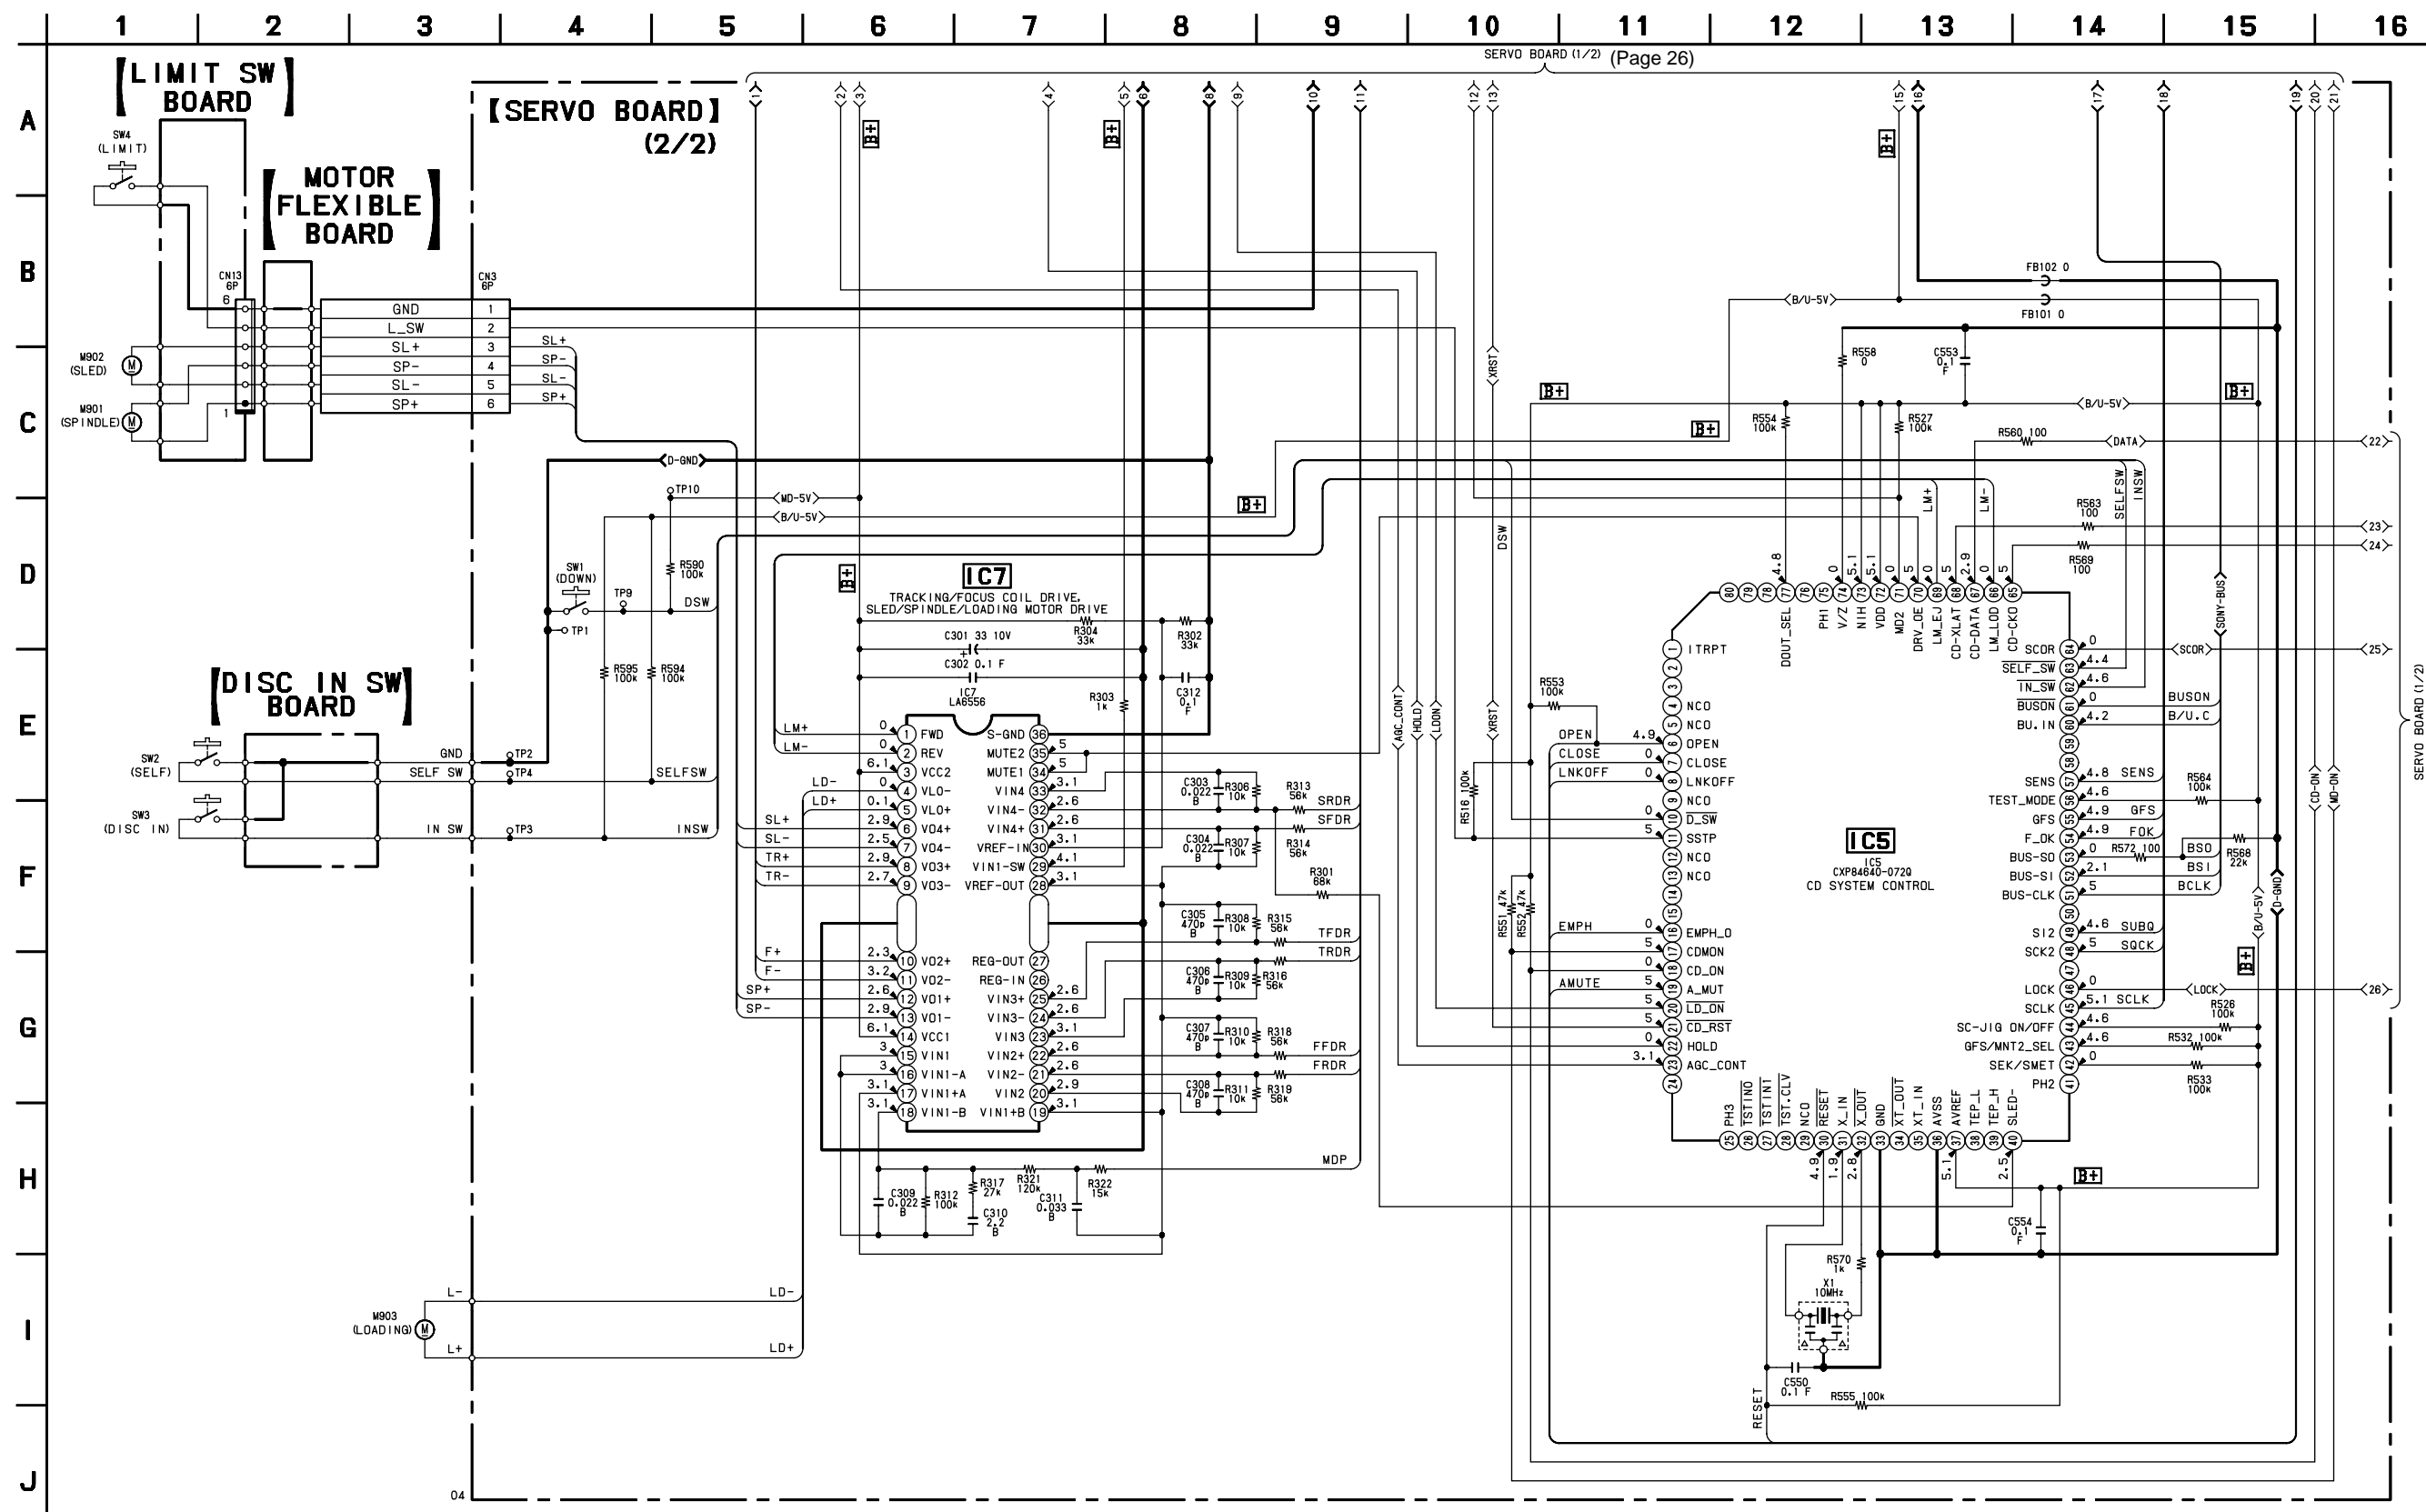


**Note:**  
 • Voltage and waveforms are dc with respect to ground under no-signal conditions.  
 no mark : CD PLAY  
 \* : Impossible to measure

3-9. SCHEMATIC DIAGRAM — MAIN SECTION (1/2) — • Refer to page 36 for IC Block Diagrams.

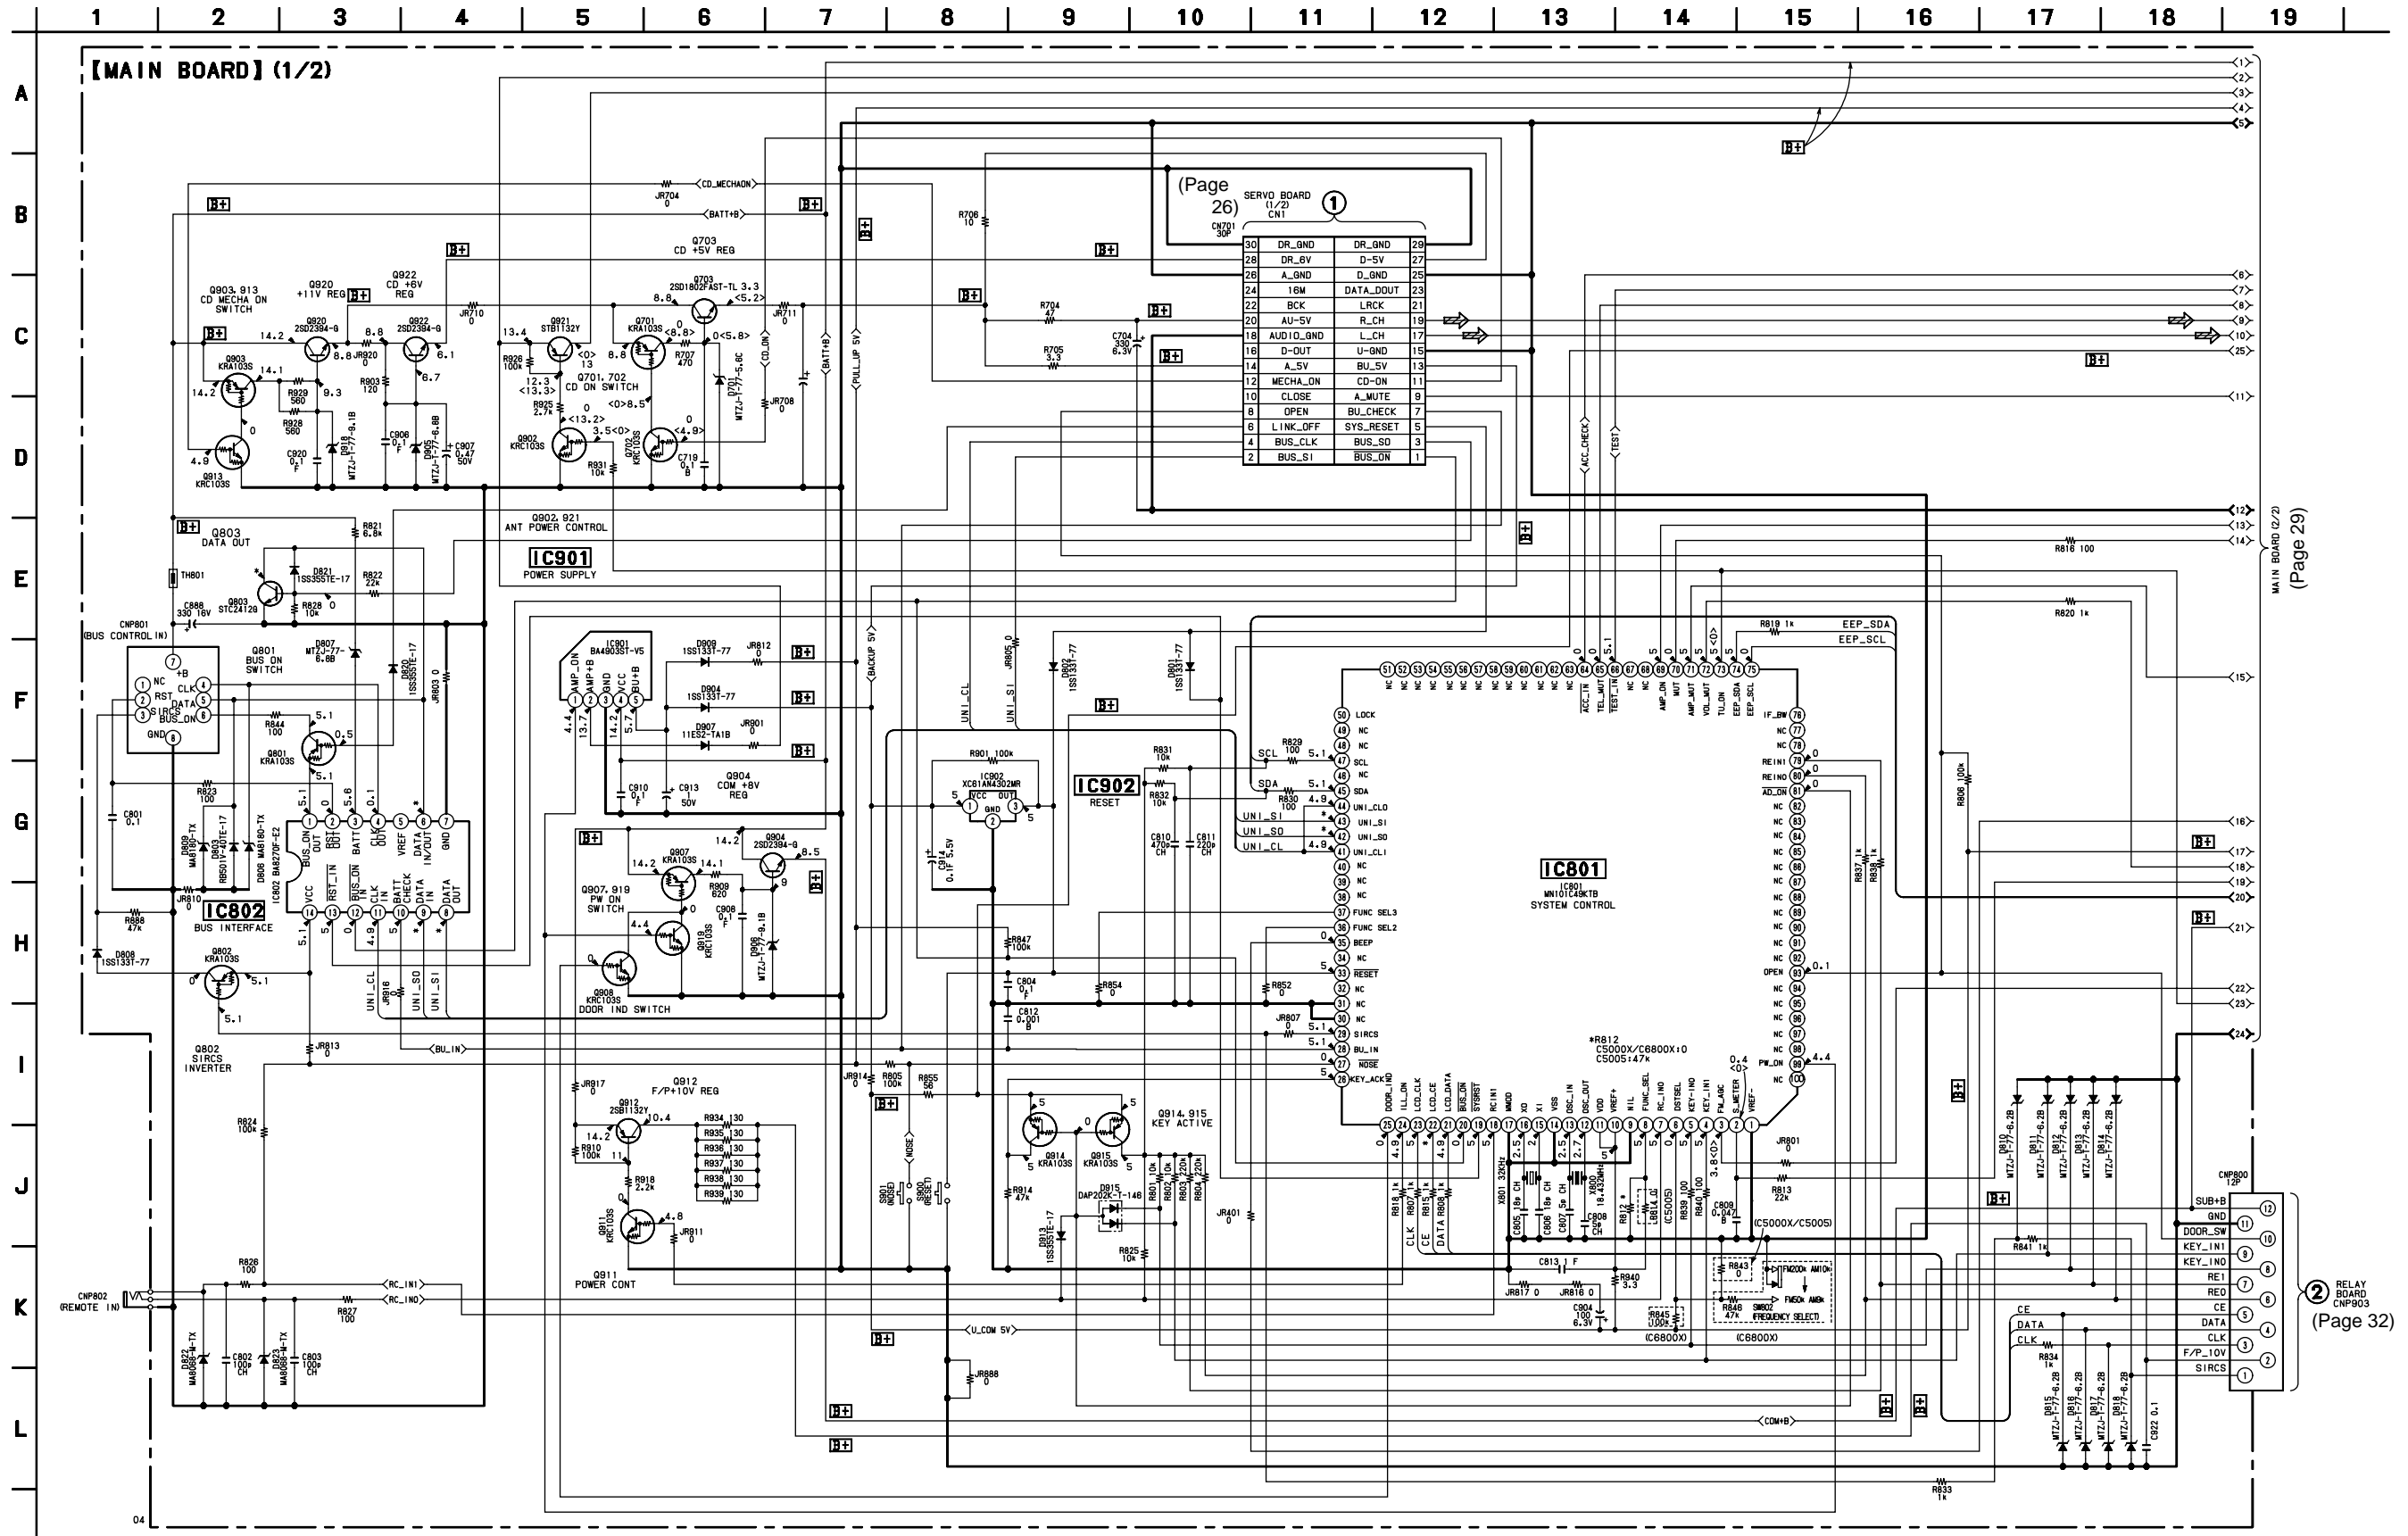

**Note:**  
 • Voltage is dc with respect to ground under no-signal (detuned) condition.  
 no mark : FM  
 ( ) : AM  
 < > : CD PLAY


3-10. SCHEMATIC DIAGRAM — MAIN SECTION (2/2) — • Refer to page 35 for IC Block Diagrams.

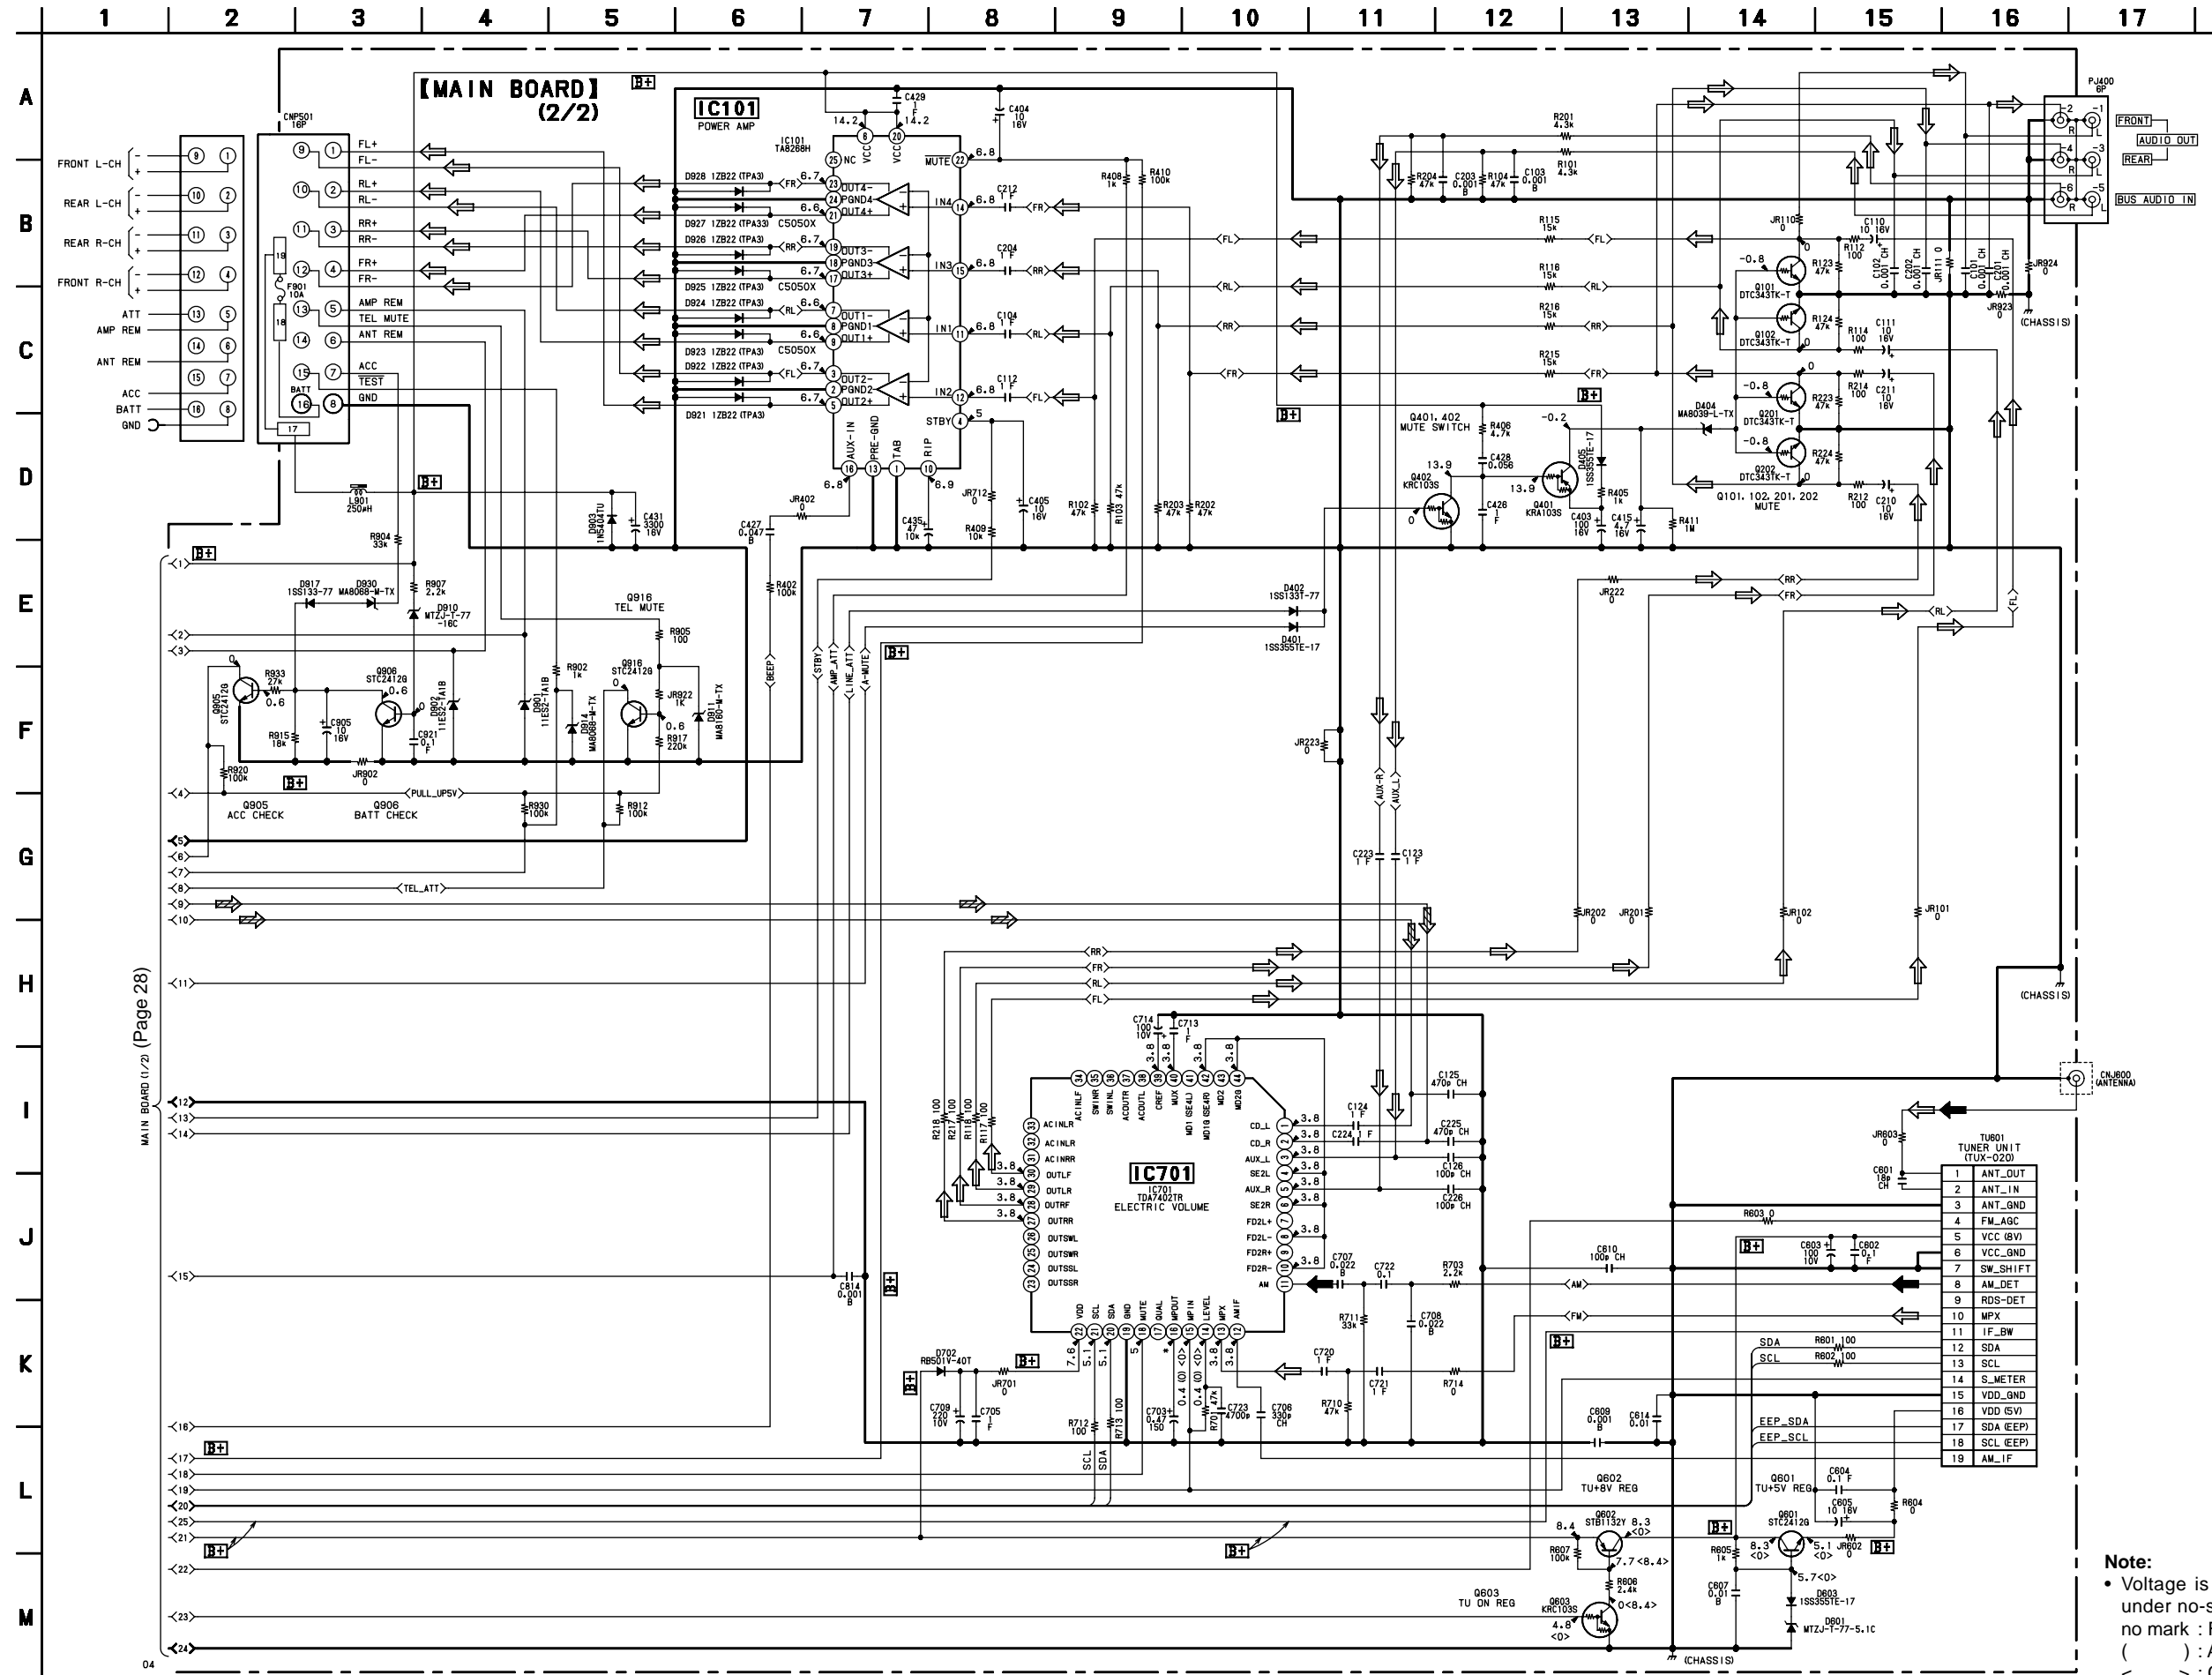


**Note:**

- Voltage is dc with respect to ground under no-signal (detuned) condition.
- no mark : FM
- ( ) : AM
- < > : CD PLAY

3-11. PRINTED WIRING BOARD — MAIN SECTION —

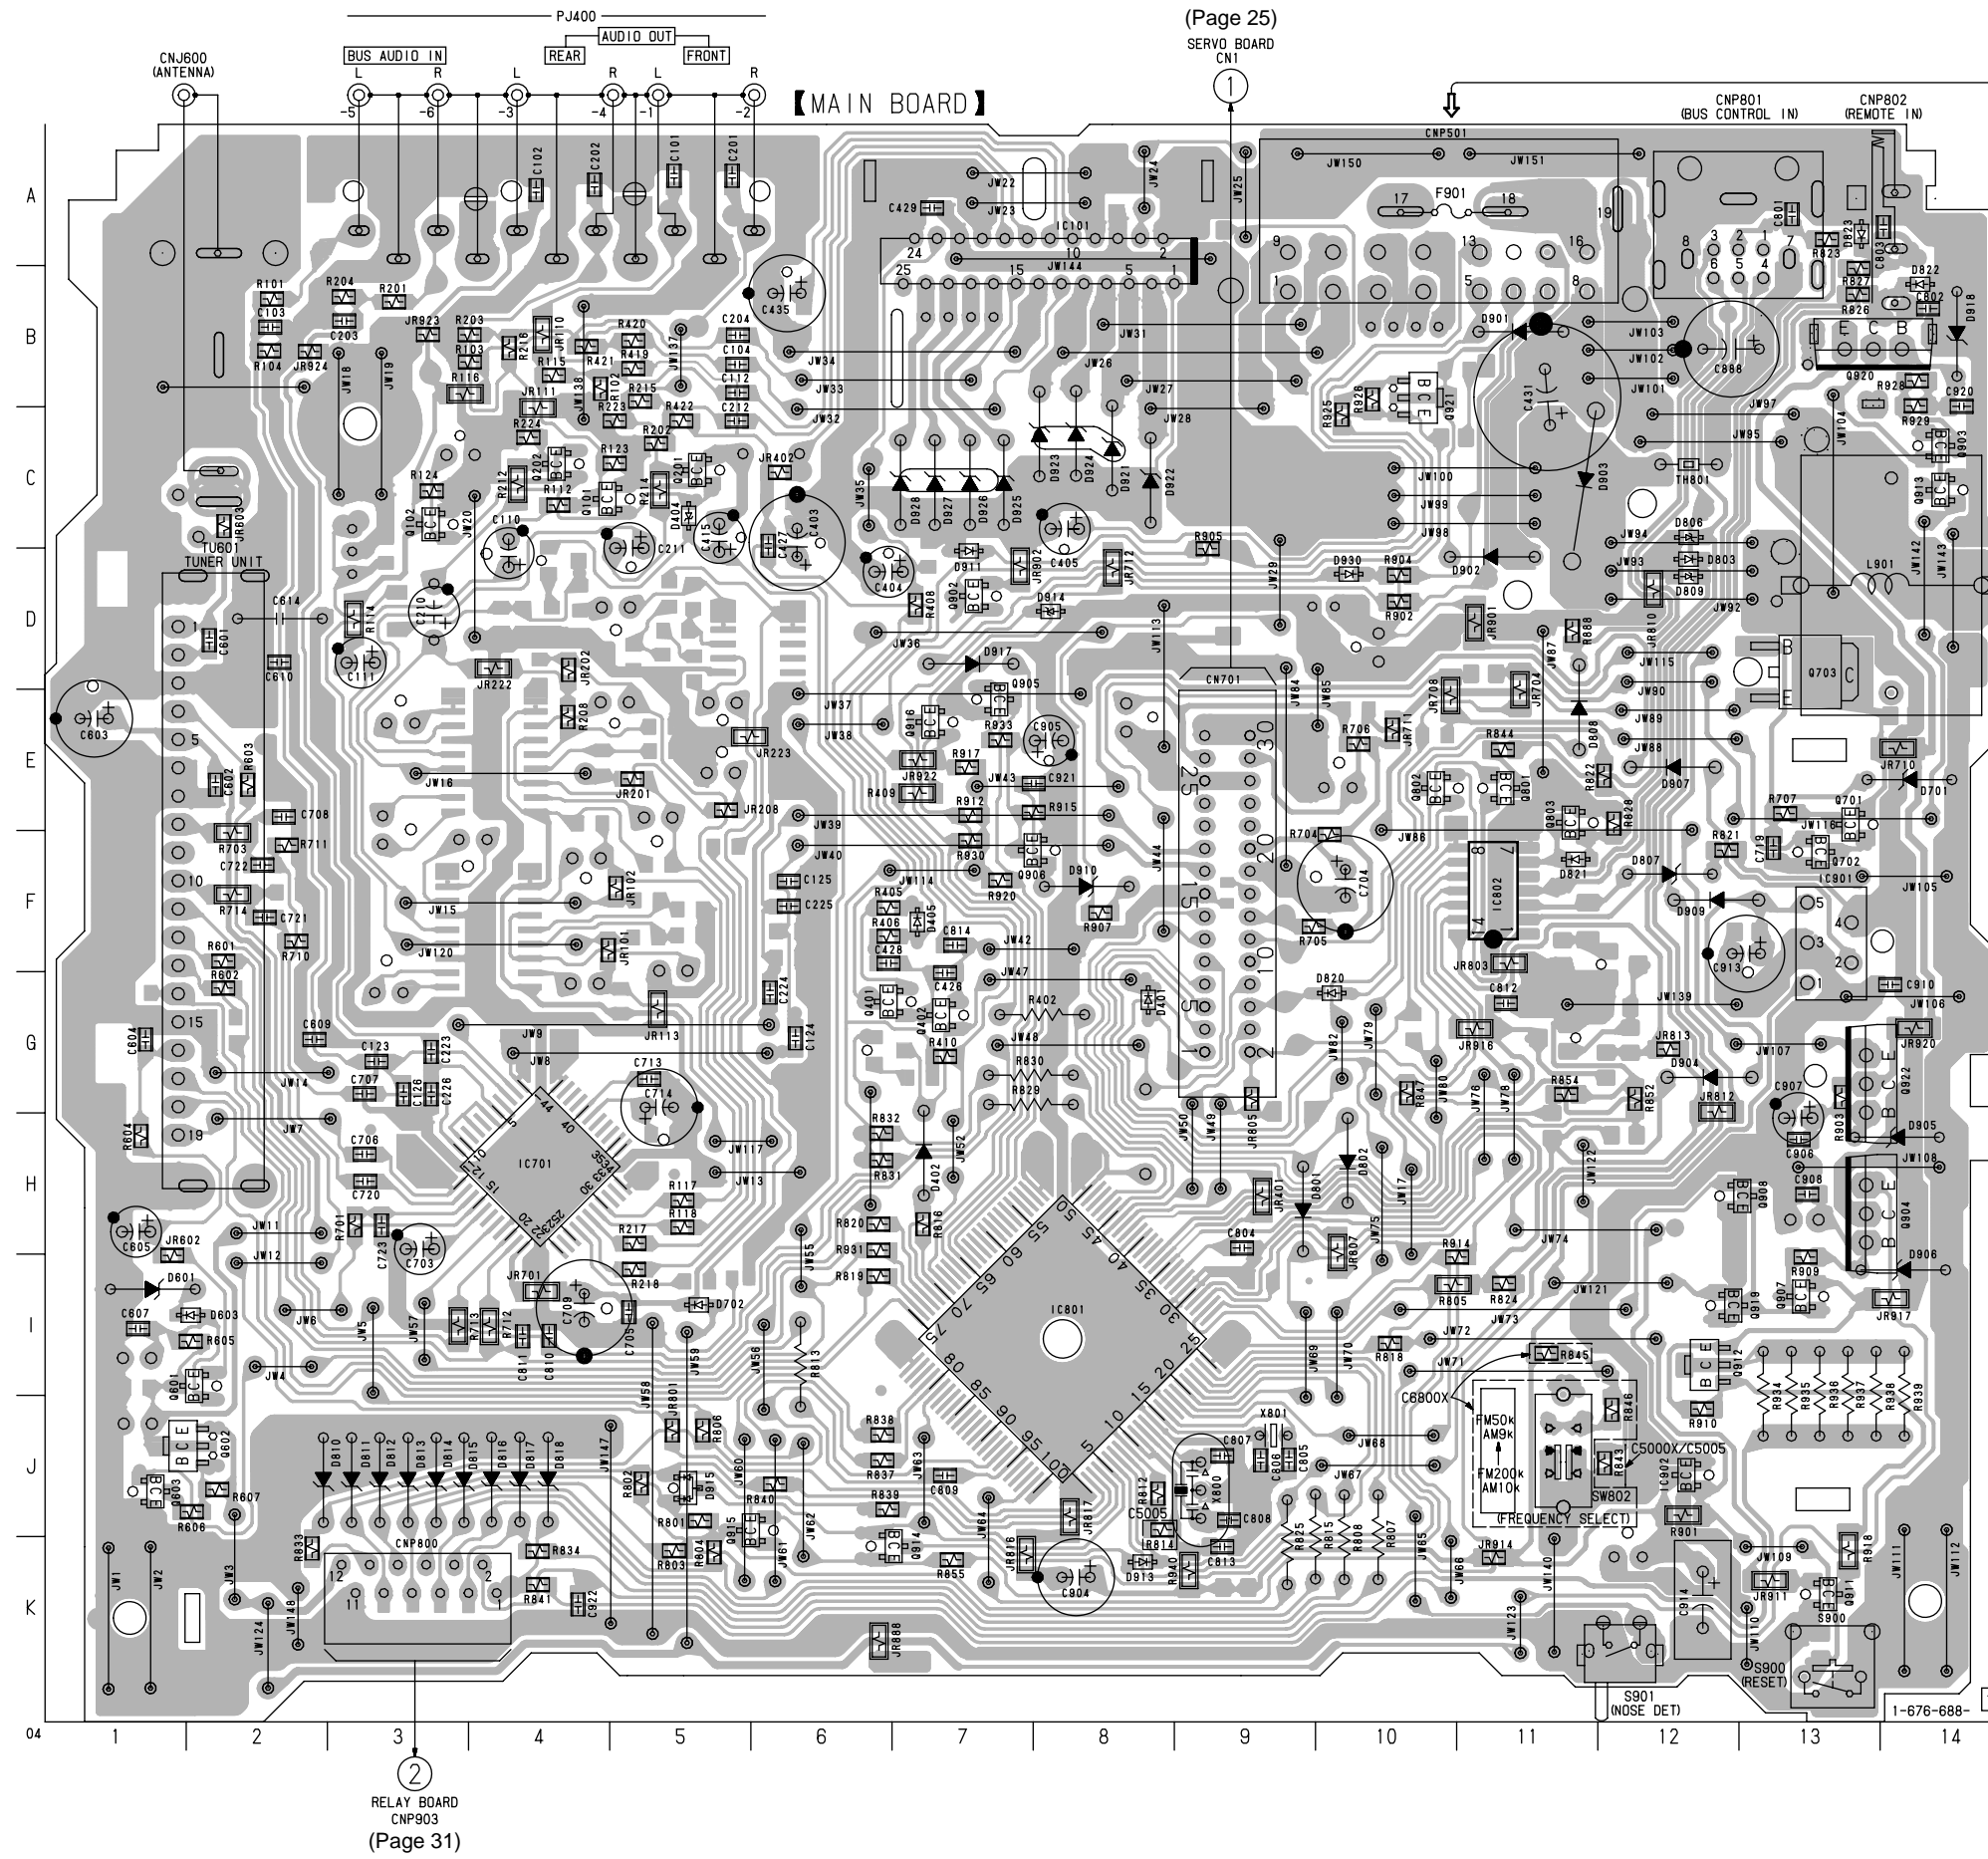

(Page 25)

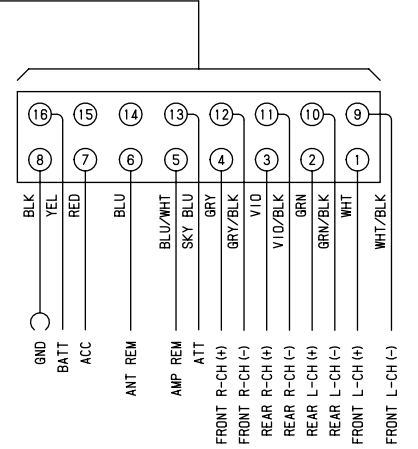


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D401	G-8	D924	C-8
D402	H-7	D925	C-7
D404	C-5	D926	C-7
D405	F-7	D927	C-7
D601	I-1	D928	C-7
D603	I-2	D930	D-10
D701	E-14		
D702	I-5	IC101	B-8
D801	H-9	IC701	H-4
D802	H-10	IC801	I-8
D803	D-12	IC802	F-11
D806	D-12	IC901	F-13
D807	F-12	IC902	J-12
D808	E-11		
D809	D-12	Q101	C-5
D810	J-3	Q102	C-3
D811	J-3	Q201	C-5
D812	J-3	Q202	C-4
D813	J-3	Q401	G-6
D814	J-3	Q402	G-7
D815	J-3	Q601	I-1
D816	J-4	Q602	J-2
D817	J-4	Q603	J-1
D818	J-4	Q701	E-13
D820	G-10	Q702	F-13
D821	F-11	Q703	D-13
D822	B-14	Q801	E-11
D823	B-13	Q802	E-10
D901	B-11	Q803	F-11
D902	D-11	Q902	D-7
D903	C-11	Q903	C-14
D904	G-12	Q904	H-14
D905	H-14	Q905	E-7
D906	I-14	Q906	F-8
D907	E-12	Q907	I-13
D909	F-12	Q908	H-12
D910	F-8	Q911	K-13
D911	D-7	Q912	I-12
D913	K-8	Q913	C-14
D914	D-8	Q914	K-7
D915	J-5	Q915	J-5
D917	D-7	Q916	E-7
D918	B-14	Q919	I-12
D921	C-8	Q920	B-13
D922	C-8	Q921	C-10
D923	C-8	Q922	G-14

3-12. PRINTED WIRING BOARD — RELAY SECTION —


【RELAY BOARD】(SIDE A)

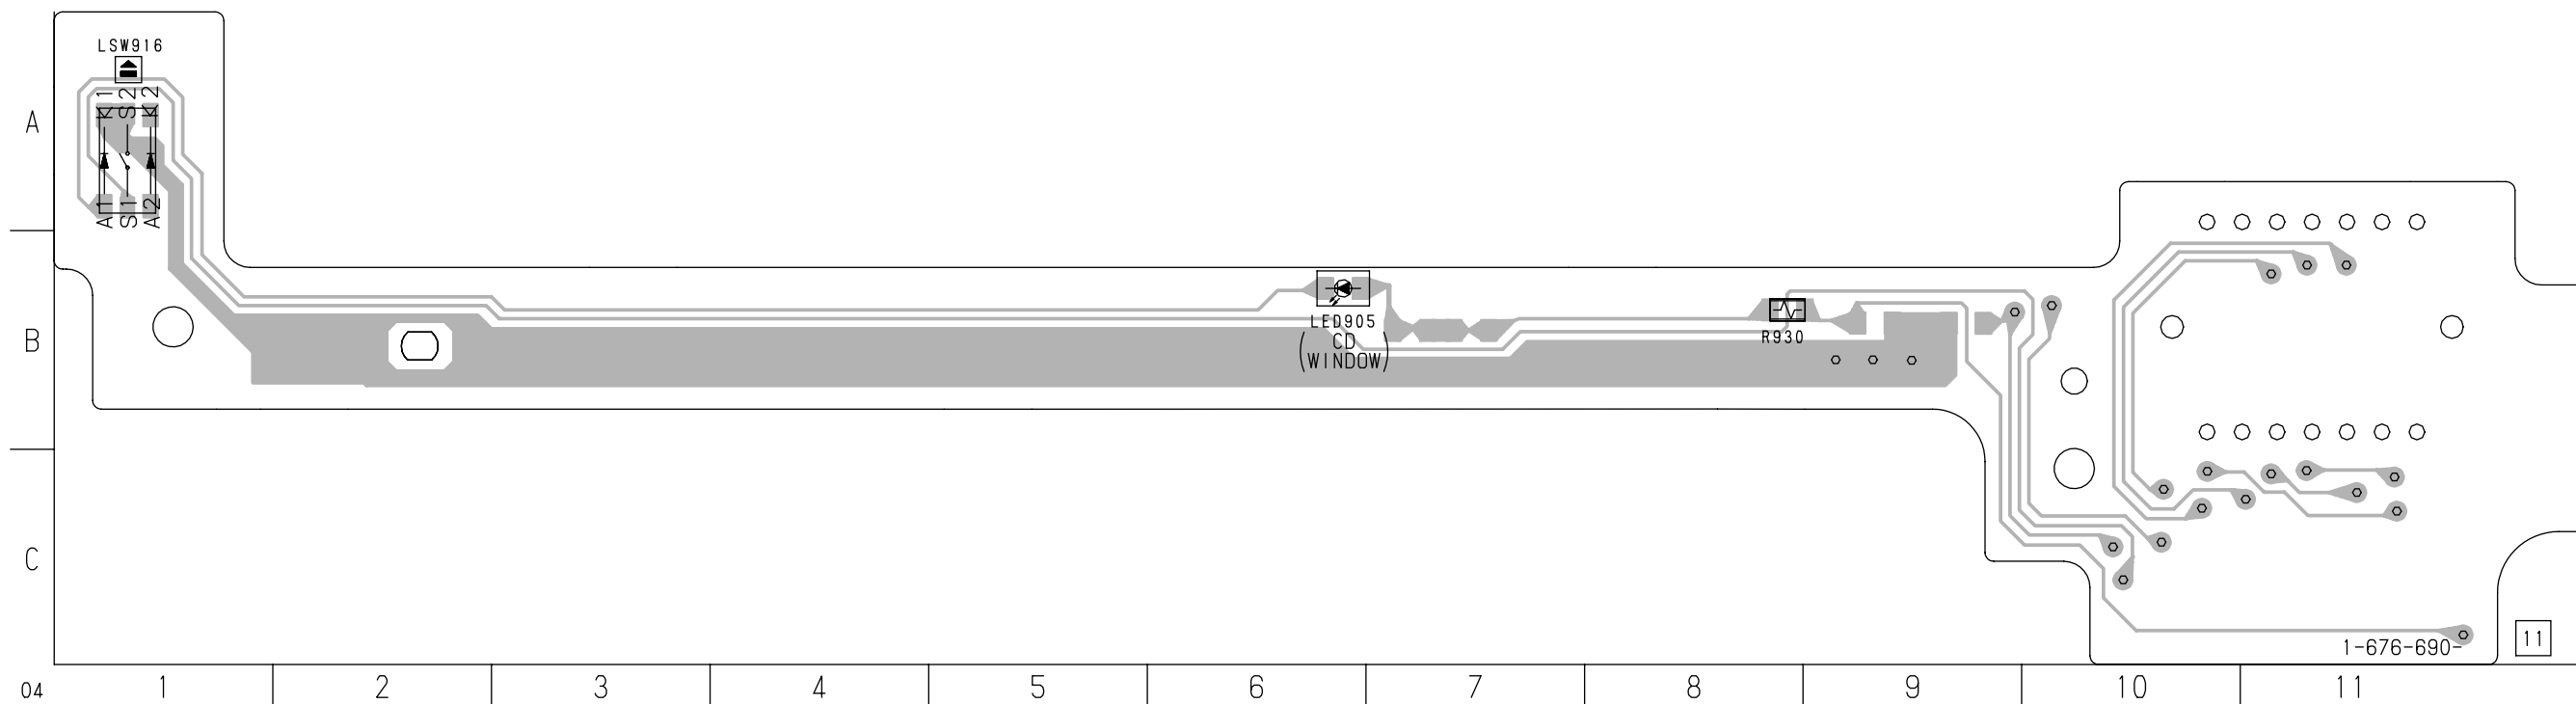

MAIN BOARD  
CNP800 (Page 30)


②

【RELAY BOARD】(SIDE B)

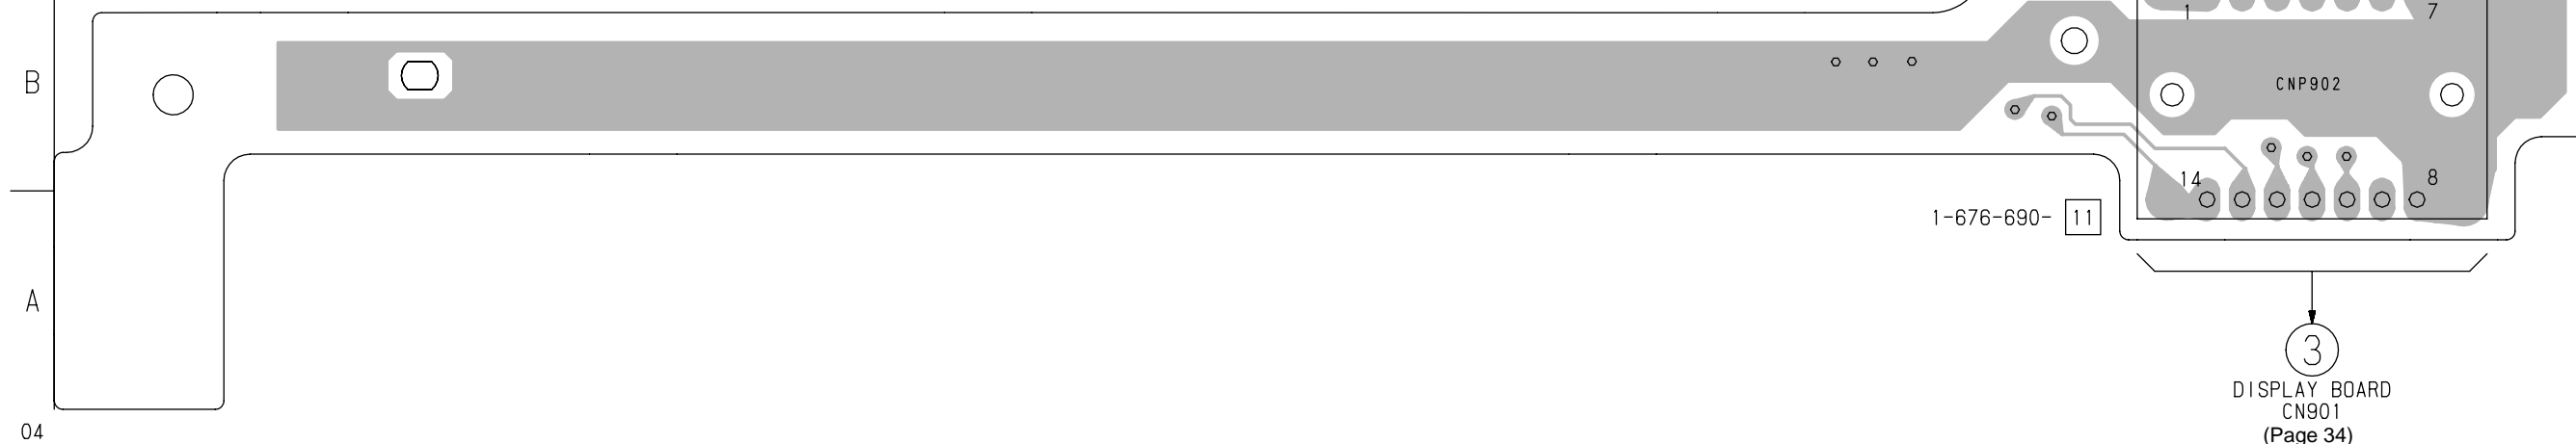


③  
DISPLAY BOARD  
CN901  
(Page 34)

3-13. SCHEMATIC DIAGRAM — RELAY SECTION —

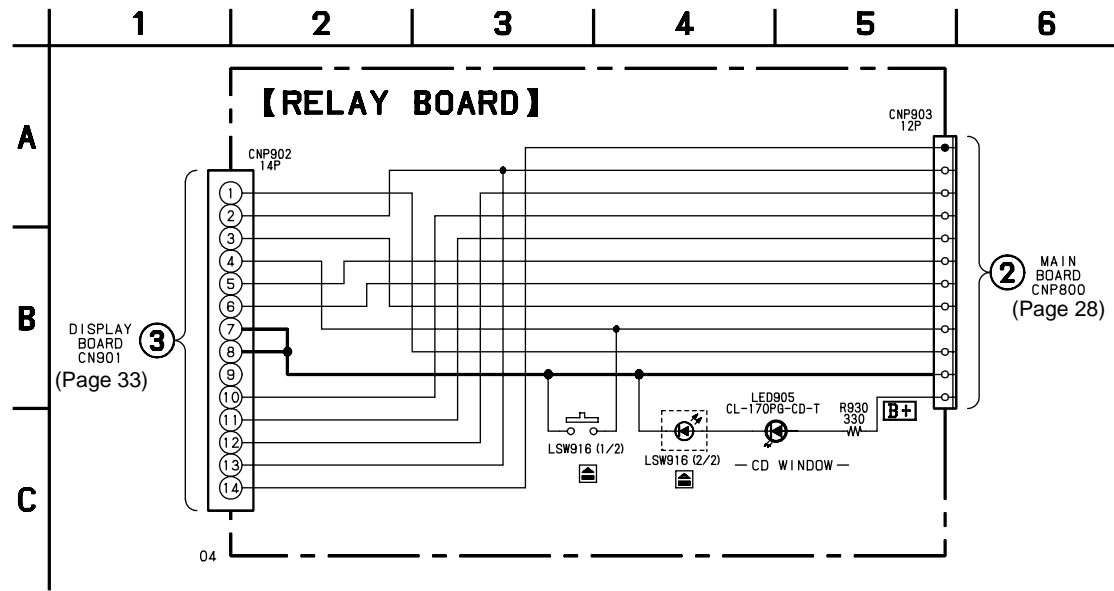



3-14. SCHEMATIC DIAGRAM — DISPLAY SECTION —

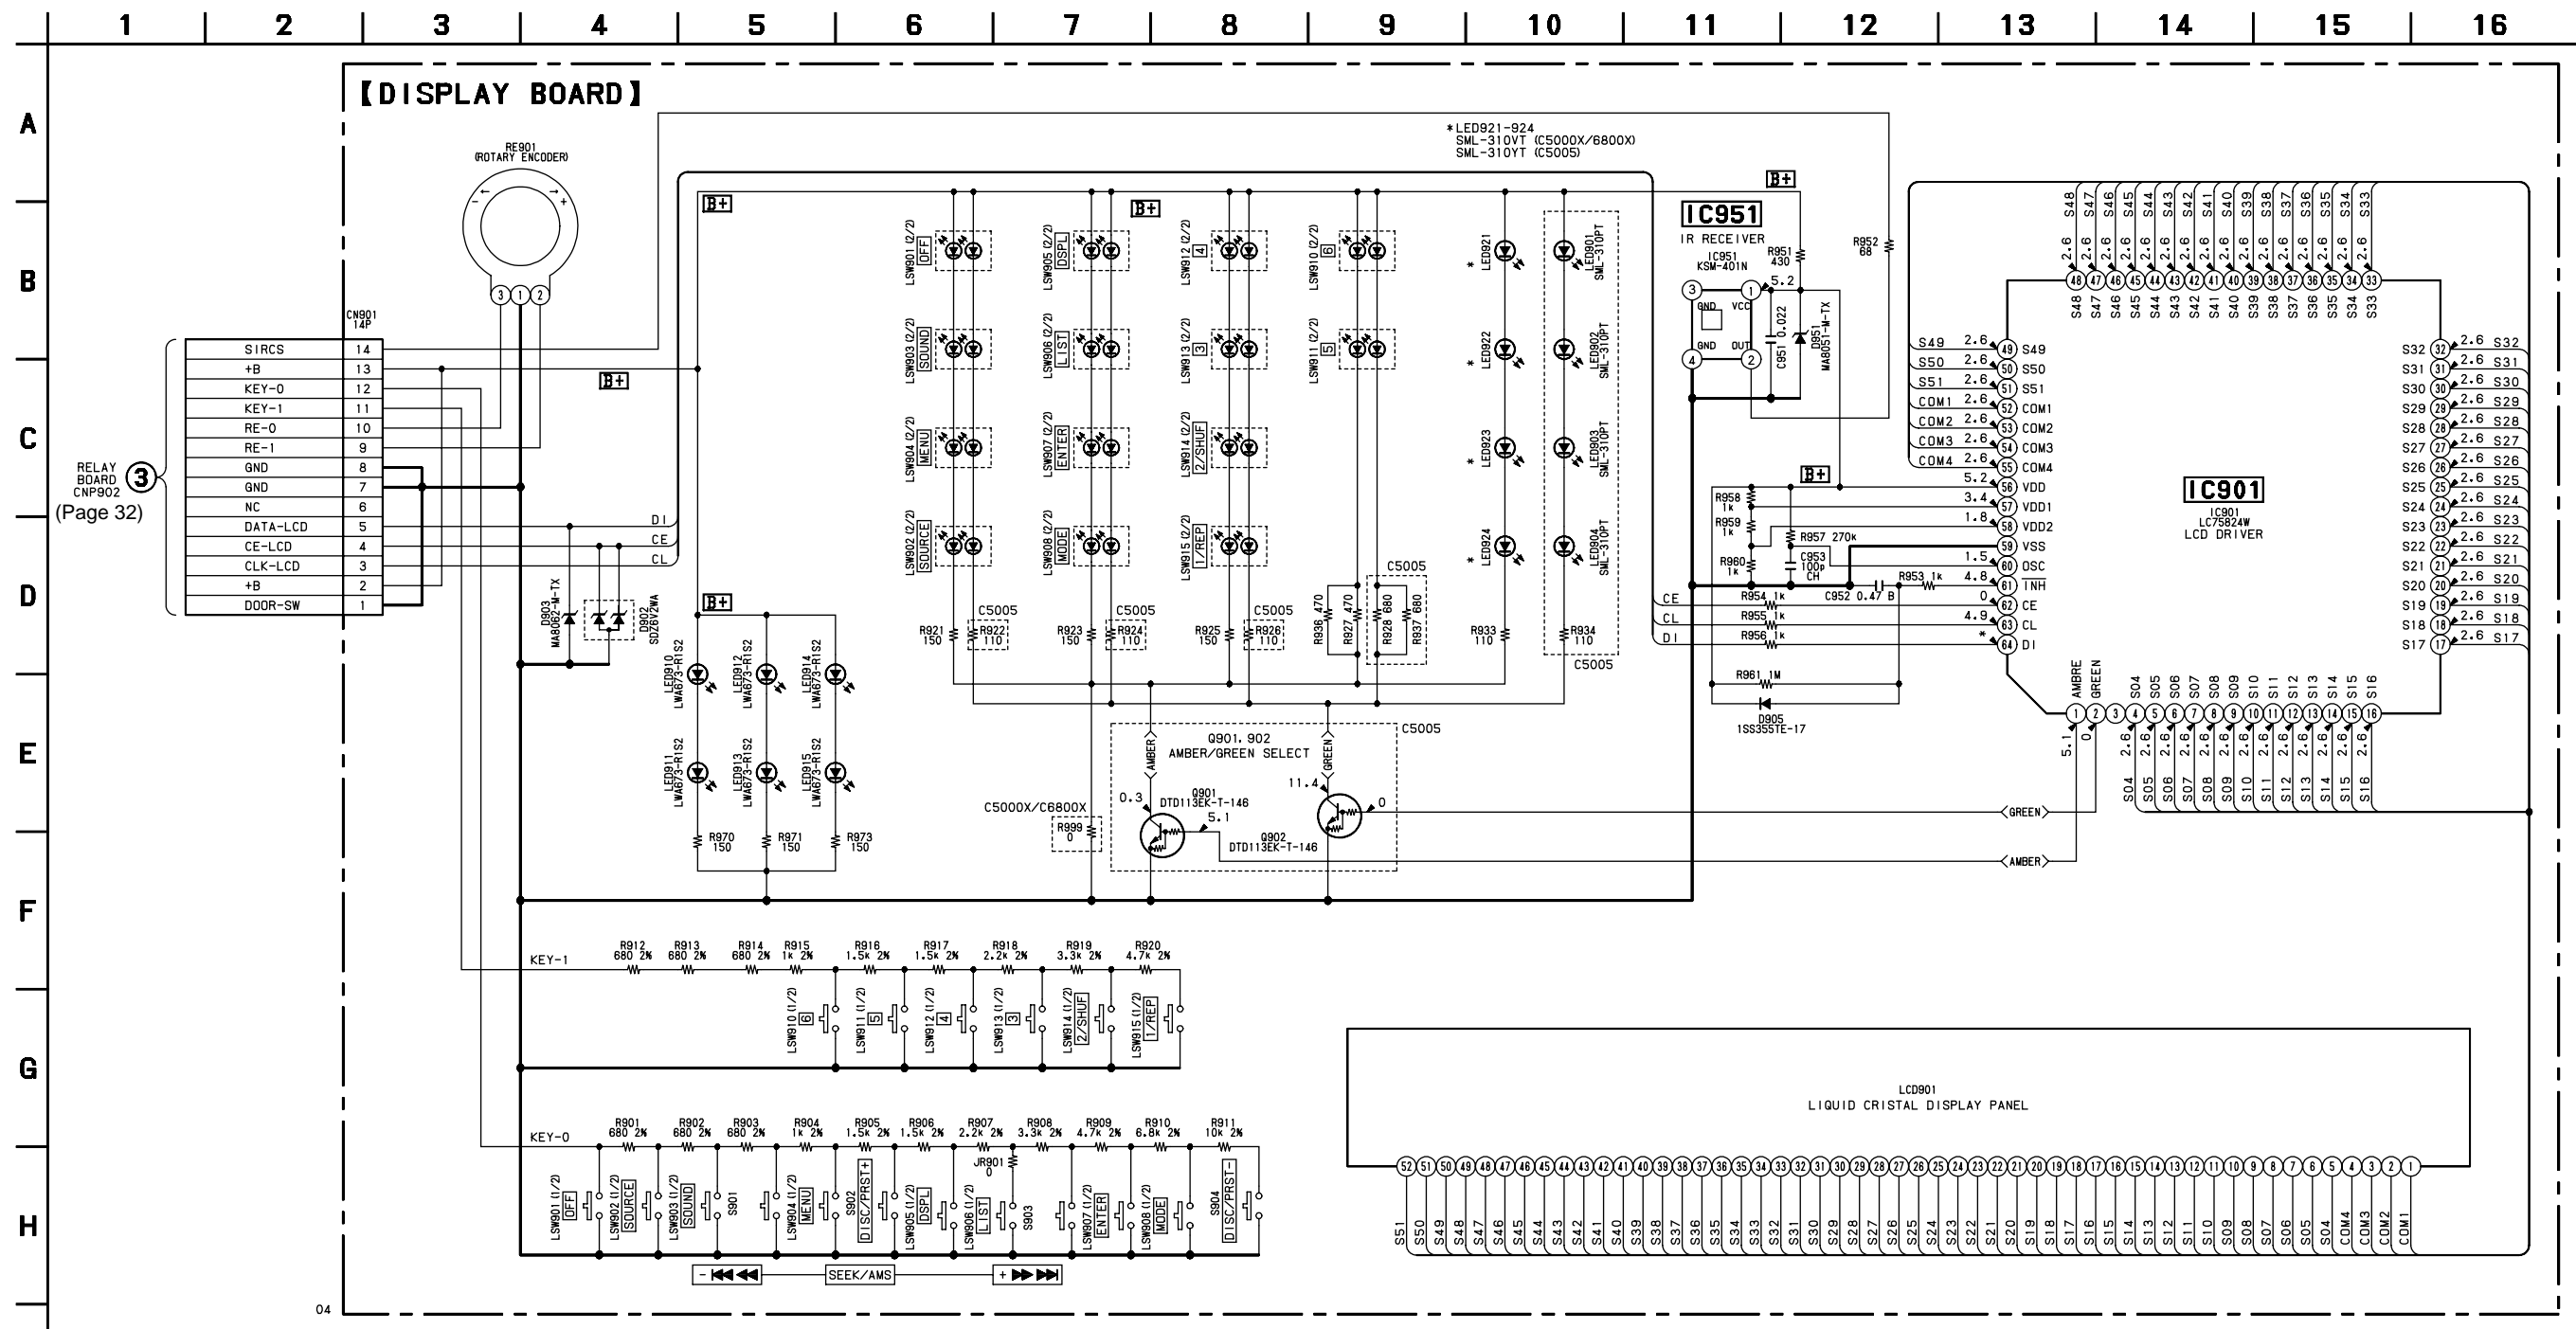

**Note:**  
 • Voltage is dc with respect to ground under no-signal (detuned) condition.  
 no mark : FM

3-15. PRINTED WIRING BOARD — DISPLAY SECTION —

【DISPLAY BOARD】(SIDE A)

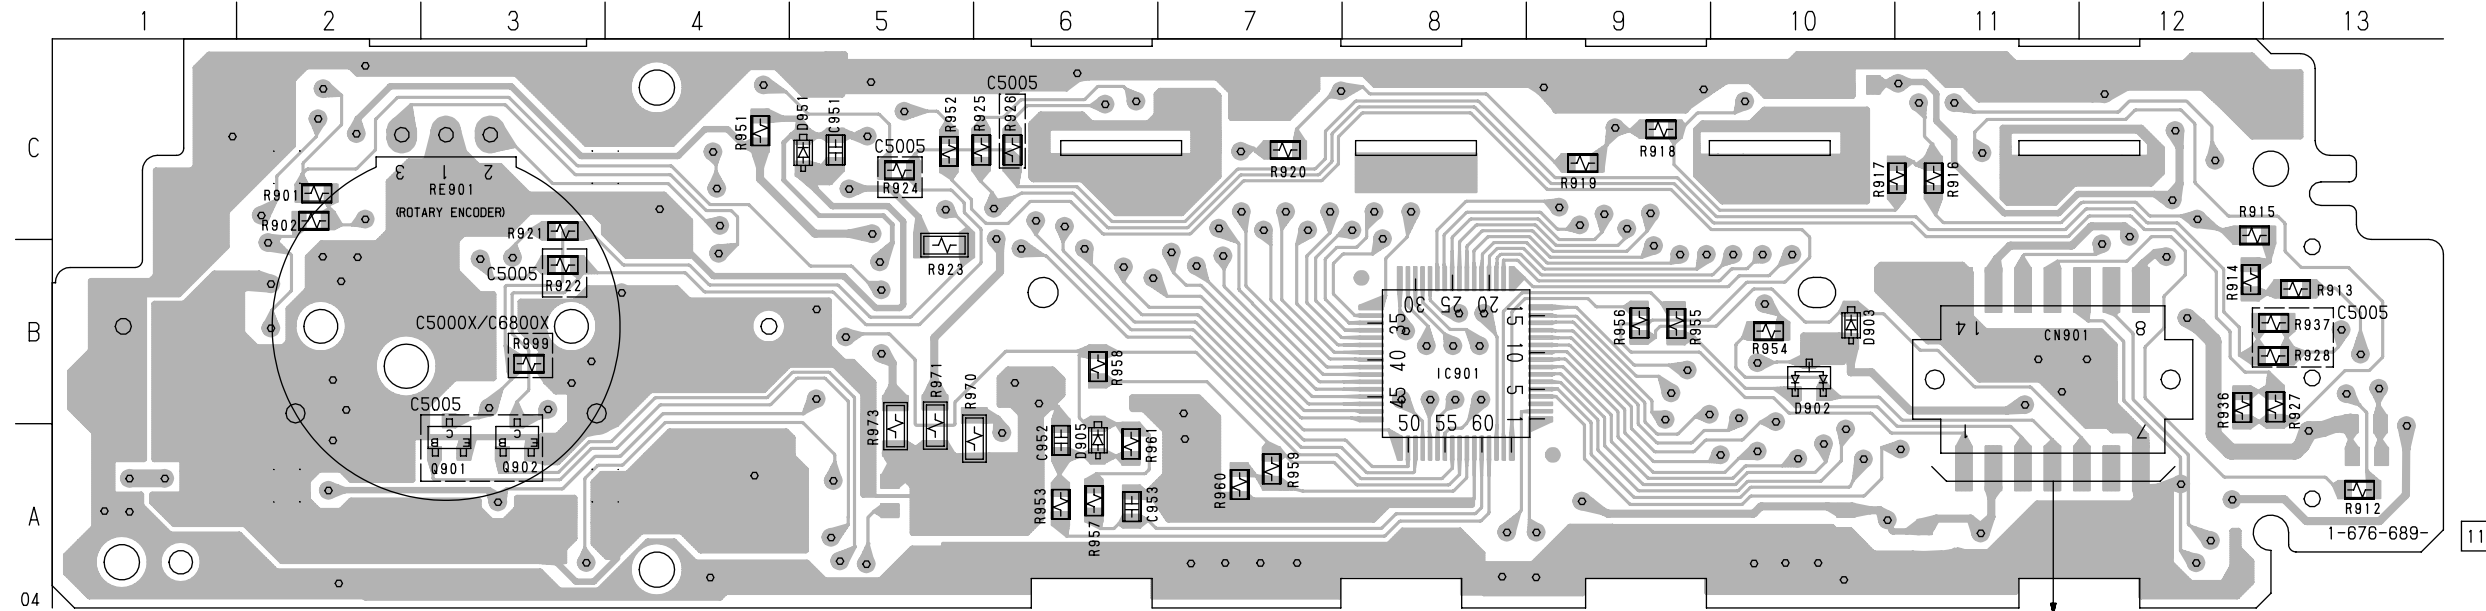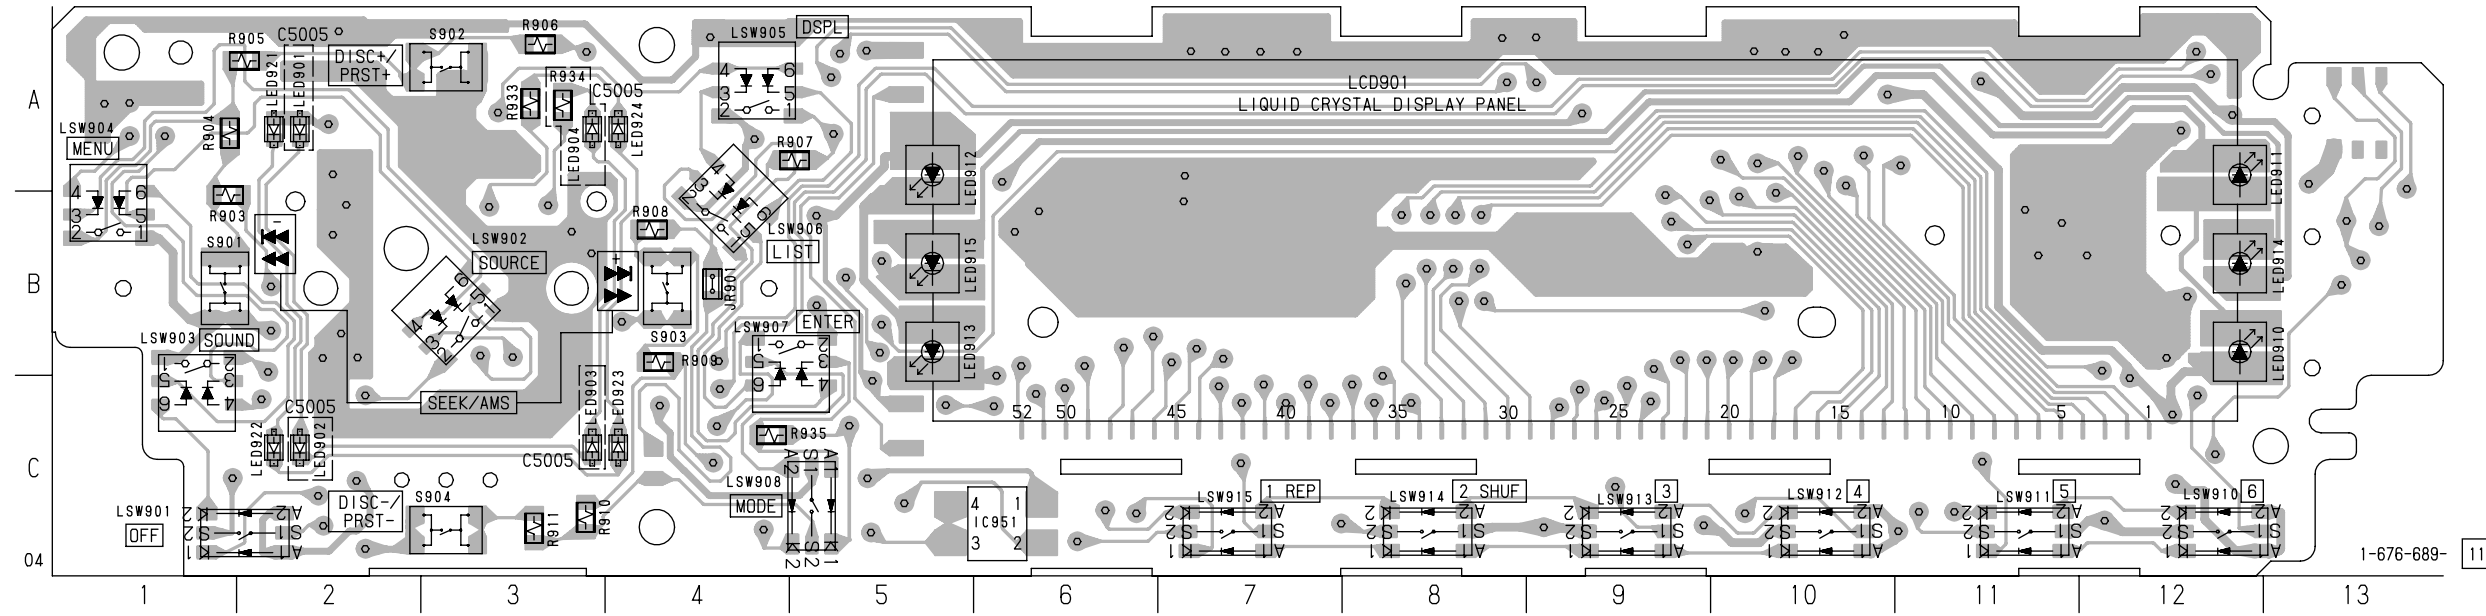

【DISPLAY BOARD】(SIDE B)


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
(D902)	B-10	LED911	A-13
(D903)	B-10	LED912	A-5
(D905)	A-6	LED913	B-5
(D951)	C-5	LED914	B-13
		LED915	B-5
(IC901)	B-8	LED921	A-2
IC951	C-6	LED922	C-2
		LED923	C-4
<LED901>	A-2	LED924	A-4
<LED902>	C-2		
<LED903>	C-3	[Q901]	A-3
<LED904>	A-3	[Q902]	A-3
LED910	B-13		


( ) : SIDE B  
 < > : CDX-C5005 only  
 [ ] : SIDE B, CDX-C5005 only

### 3-16. IC BLOCK DIAGRAMS


**IC1 CXA2596M-T6**

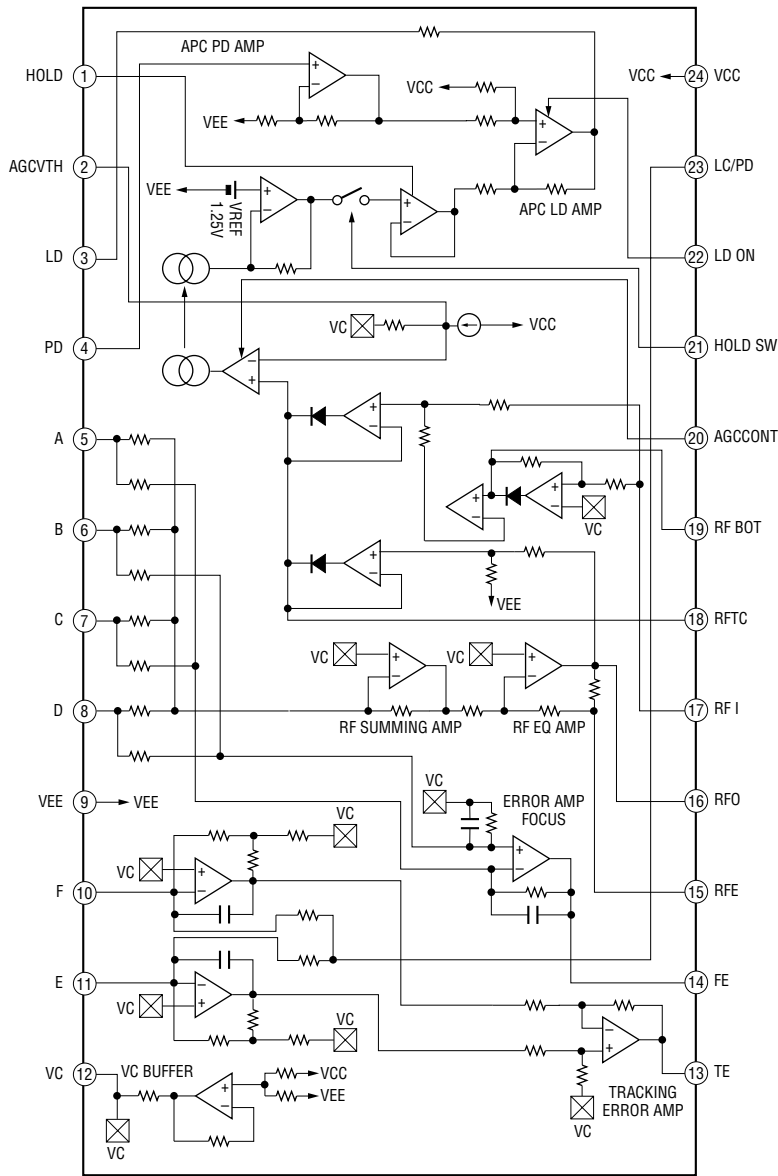


**IC802 BA8270F-E2**

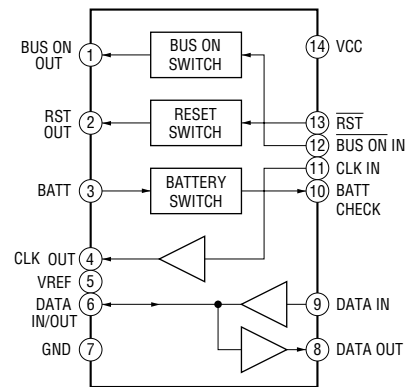


**IC901 BA4903ST-V5**

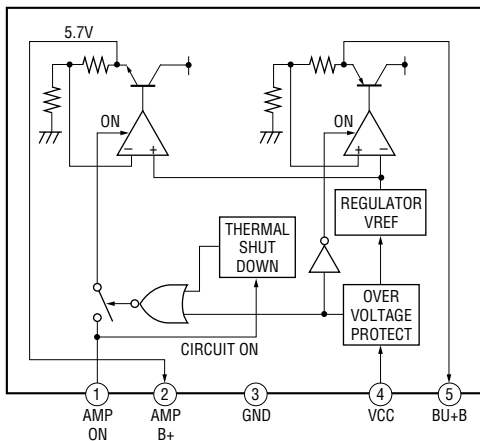

# IC7 LA6556

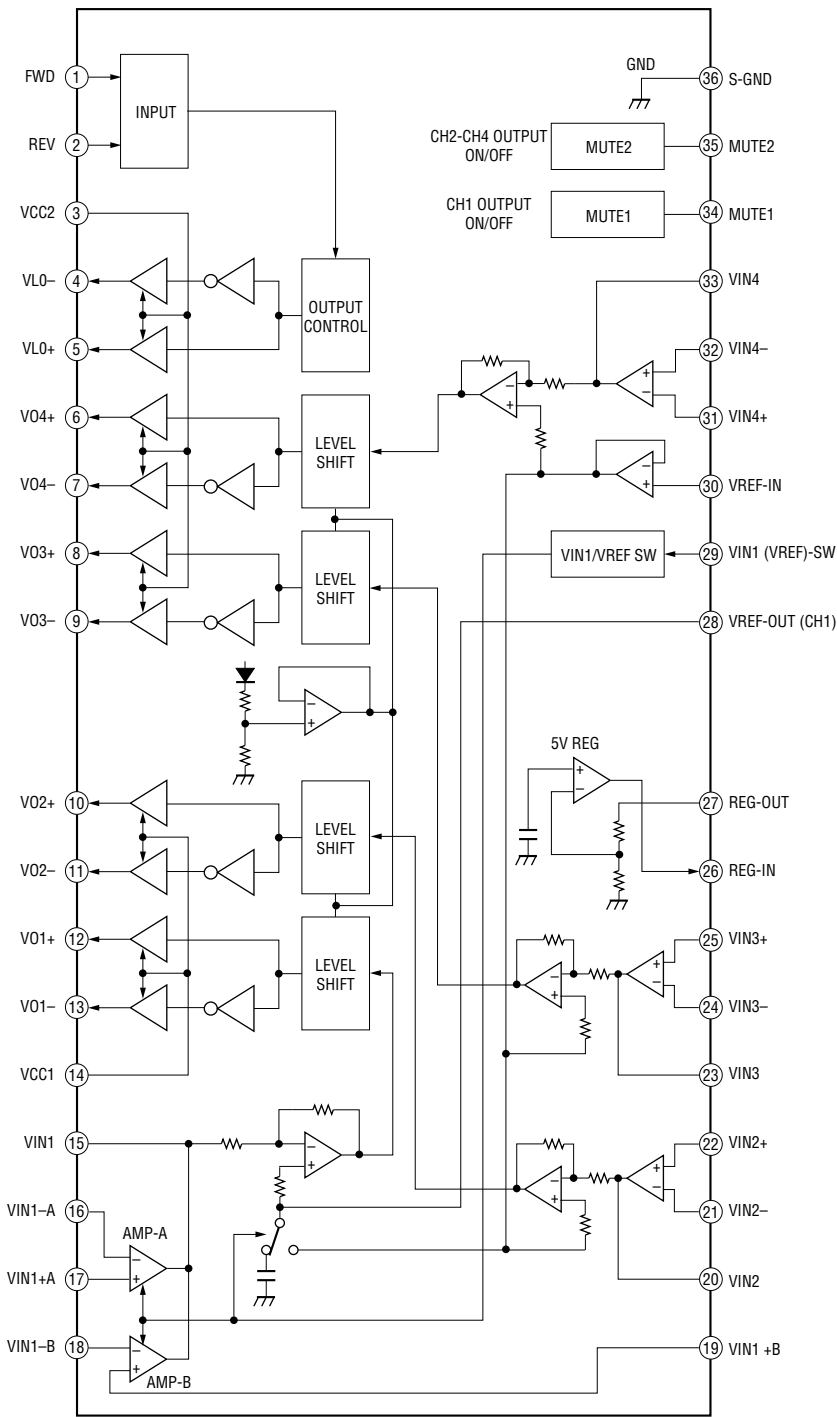


# IC701 TDA7402TR

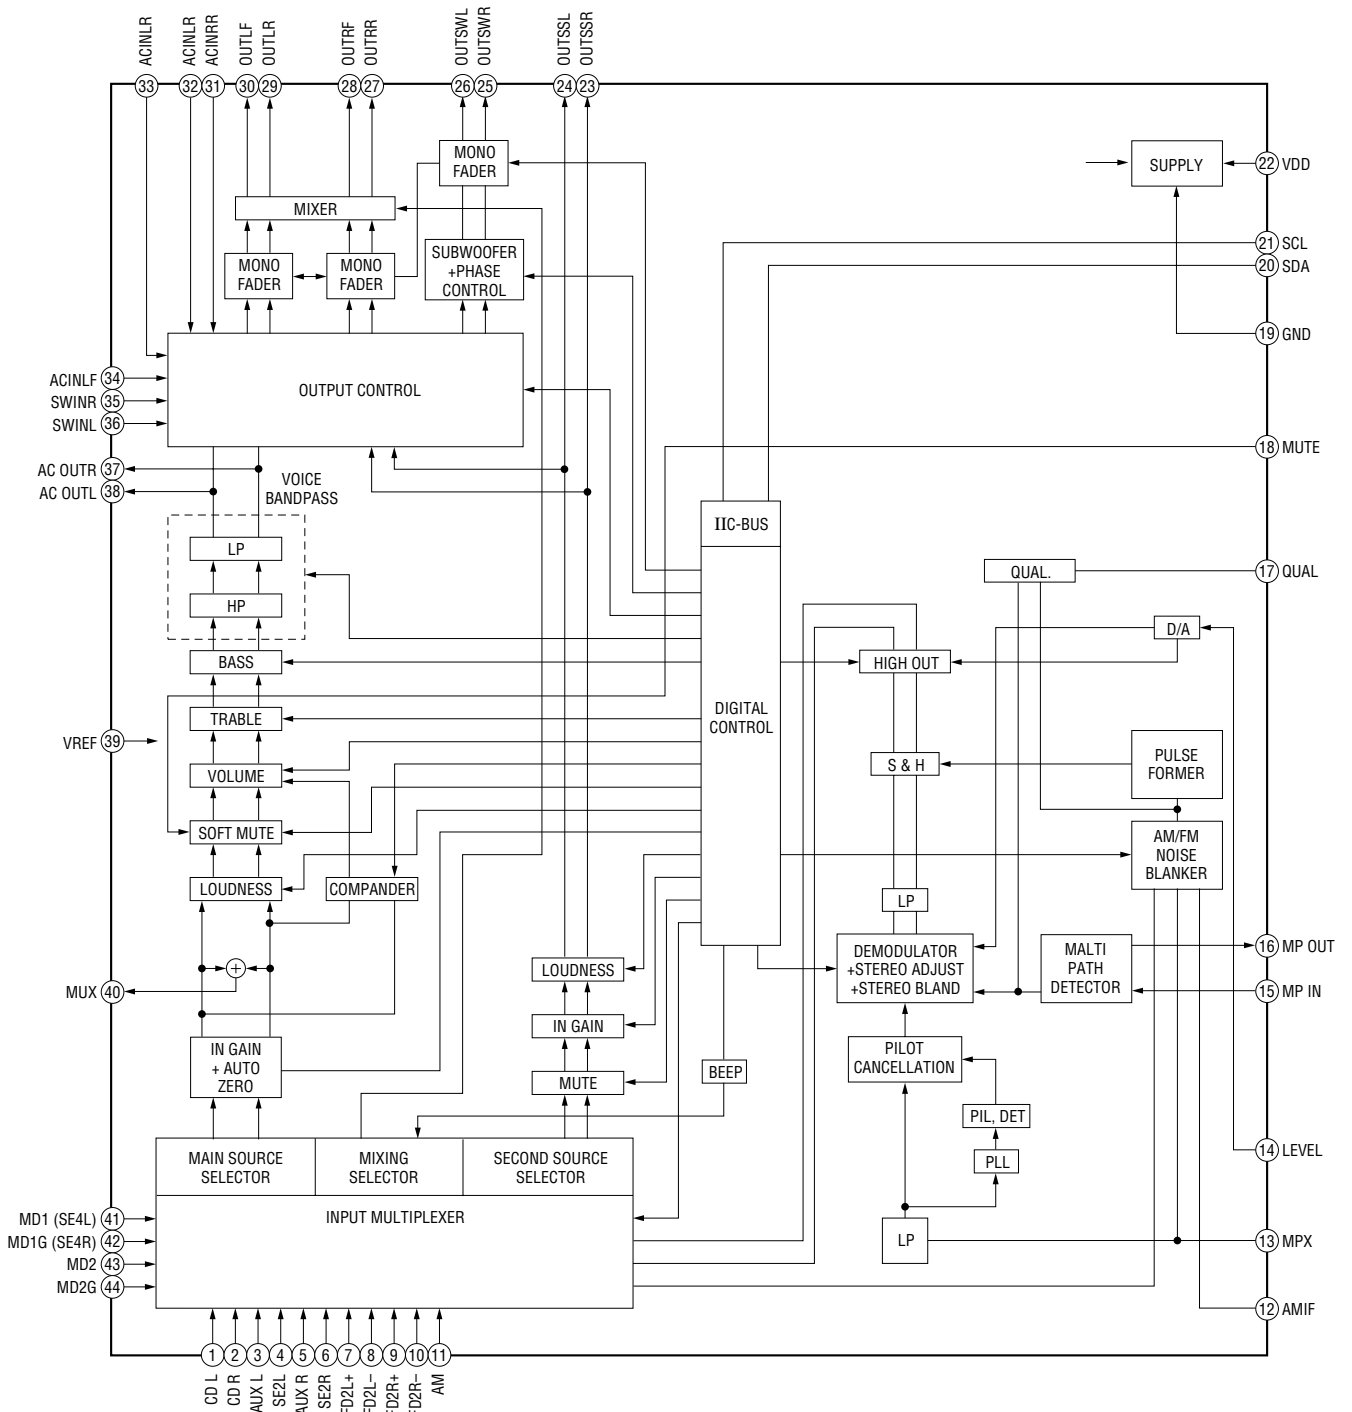




## 4-2. FRONT PANEL SECTION

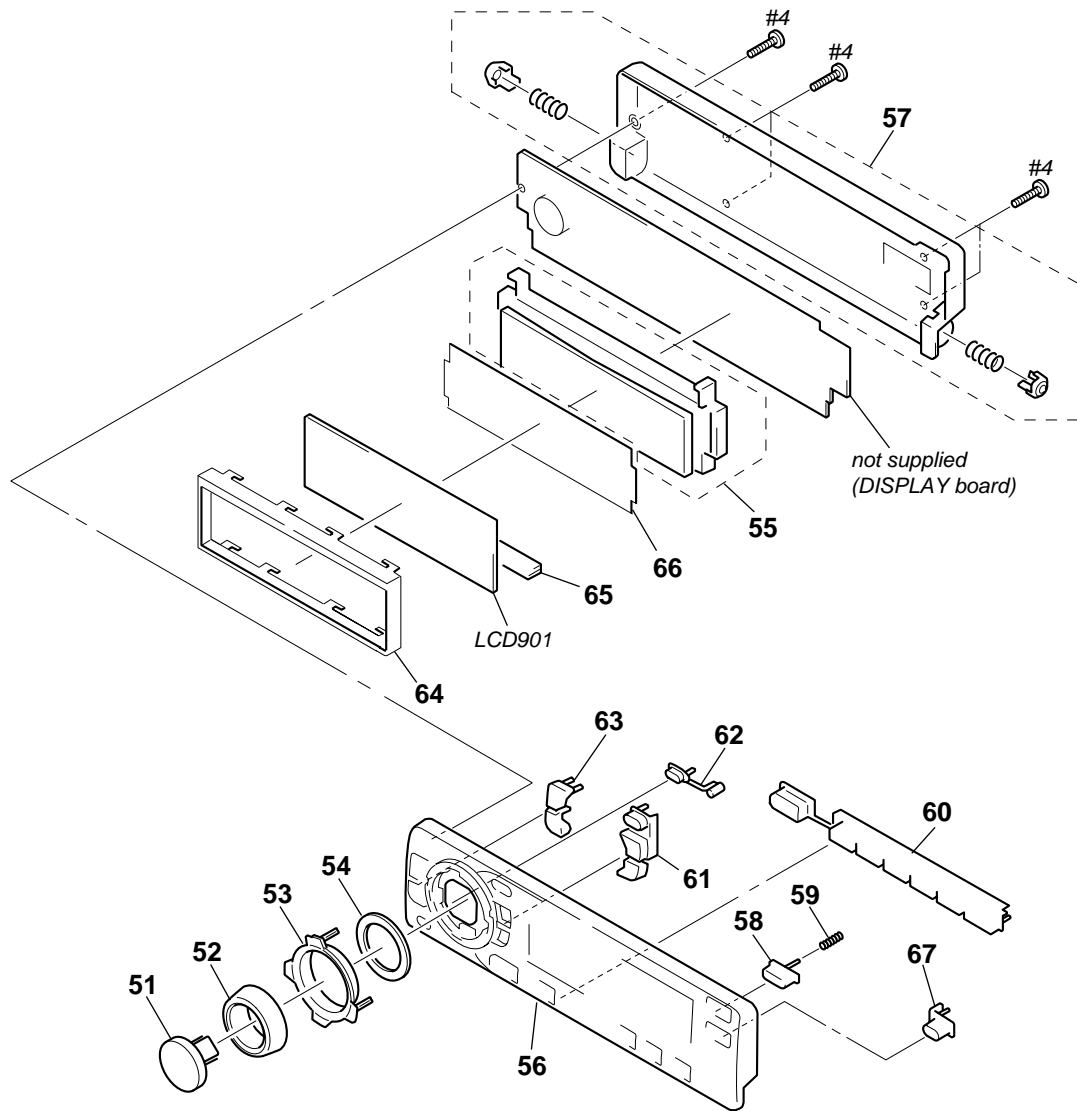


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-041-028-01	BUTTON (SOURCE)		60	3-041-036-01	BUTTON (1-6/M)	
52	3-041-029-01	KNOB (VOL) (C5000X/C5005)		61	3-041-033-01	BUTTON (LIST/ENTER)	
52	3-041-029-11	KNOB (VOL) (C6800X)		62	3-041-035-01	BUTTON (OFF)	
53	3-041-030-01	BUTTON (CROSS)		63	3-041-034-01	BUTTON (MENU/SOUND)	
54	3-042-967-01	CUSHION (CROSS)		* 64	3-041-175-01	PLATE (LCD), GROUND	
* 55	X-3378-426-1	HOLDER (LCD) ASSY		65	1-694-660-11	CONDUCTIVE BOARD, CONNECTION	
56	X-3378-394-1	PANEL (S) ASSY, FRONT (C5005)		* 66	3-041-372-01	SHEET (REFLECTOR)	
56	X-3378-605-1	PANEL (S) ASSY, FRONT (C5000X)		67	3-041-038-01	BUTTON (D)	
56	X-3378-606-1	PANEL (S) ASSY, FRONT (C6800X)		LCD901	1-803-907-11	DISPLAY PANEL, LIQUID CRYSTAL (C5005)	
57	X-3378-391-1	PANEL ASSY, FRONT BACK		LCD901	1-803-907-31	DISPLAY PANEL, LIQUID CRYSTAL (C5000X/C6800X)	
58	3-041-037-01	BUTTON (OPEN)					
59	3-032-321-01	SPRING (OPEN)					

**4-3. CD MECHANISM SECTION (1)**  
**(MG-383Z-121//K)**

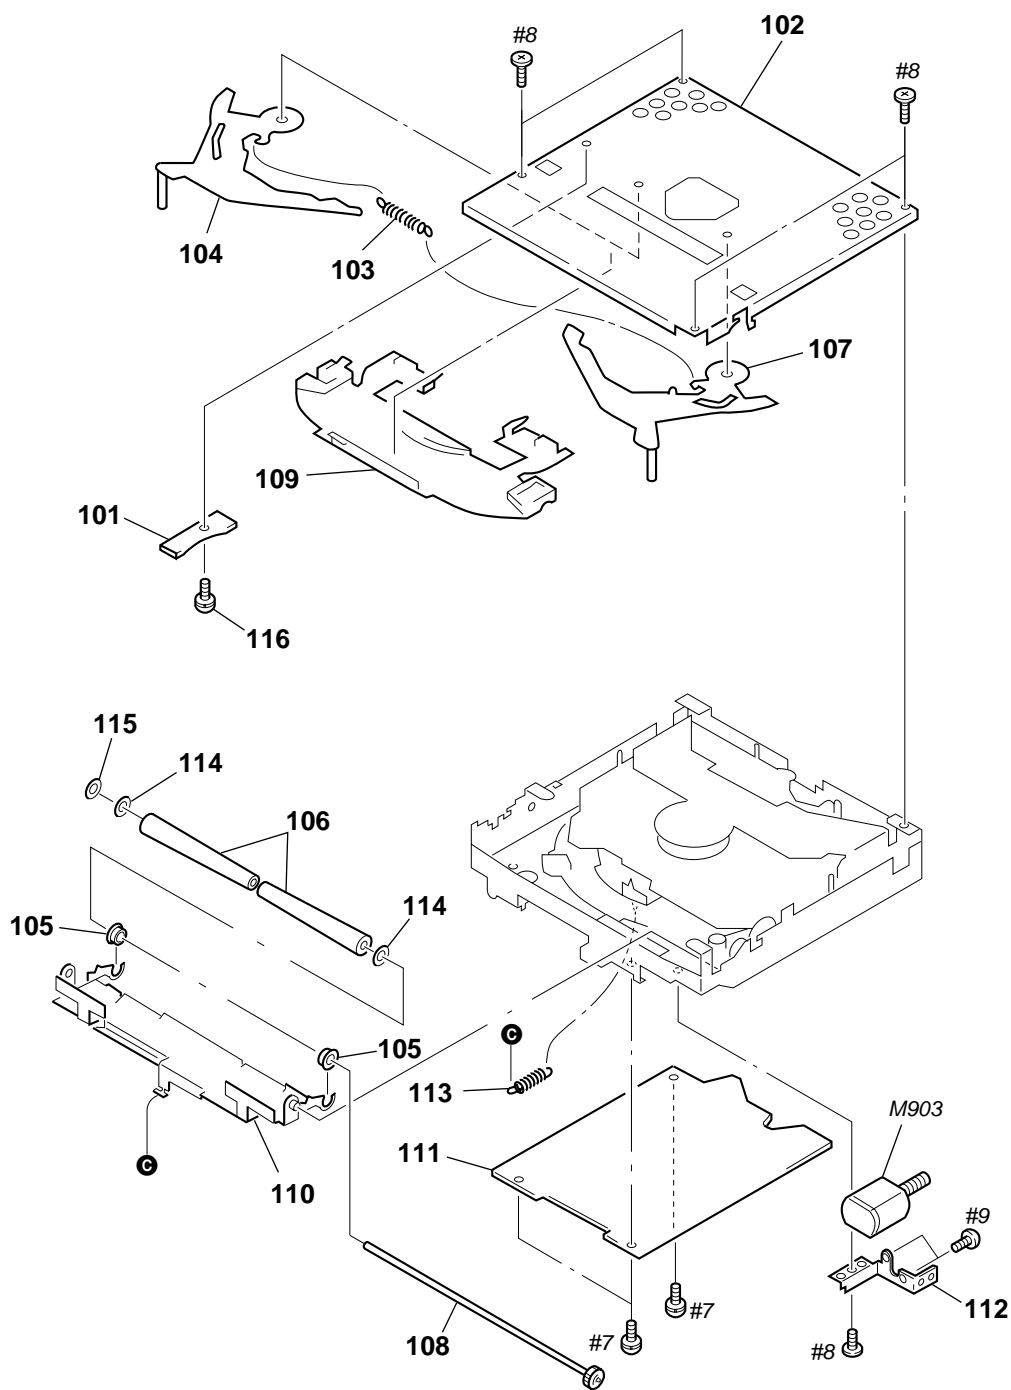


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 101	1-676-709-11	DISC IN SW BOARD		110	3-040-040-01	ARM (ROLLER)	
102	3-040-039-01	CHASSIS (T)		* 111	A-3294-809-A	SERVO BOARD, COMPLETE	
103	3-040-038-01	SPRING (LR), TENSION		* 112	3-040-048-01	BRACKET (MOTOR)	
104	3-040-050-01	LEVER (L)		113	3-040-034-01	SPRING (RA), TENSION	
105	3-040-022-01	RETAINER (RA), SHAFT		114	3-040-042-01	WASHER	
106	3-040-044-01	ROLLER (S)		115	3-043-880-01	RING (RA), RETAINING	
107	3-040-067-01	LEVER (R)		116	3-338-737-01	SCREW (2X3), PS	
108	A-3301-980-A	SHAFT ROLLER ASSY		M903	A-3301-978-A	MOTOR SUB ASSY, LO (LOADING)	
109	3-040-037-01	GUIDE (DISC)					

**4-4. CD MECHANISM SECTION (2)**  
**(MG-383Z-121//K)**

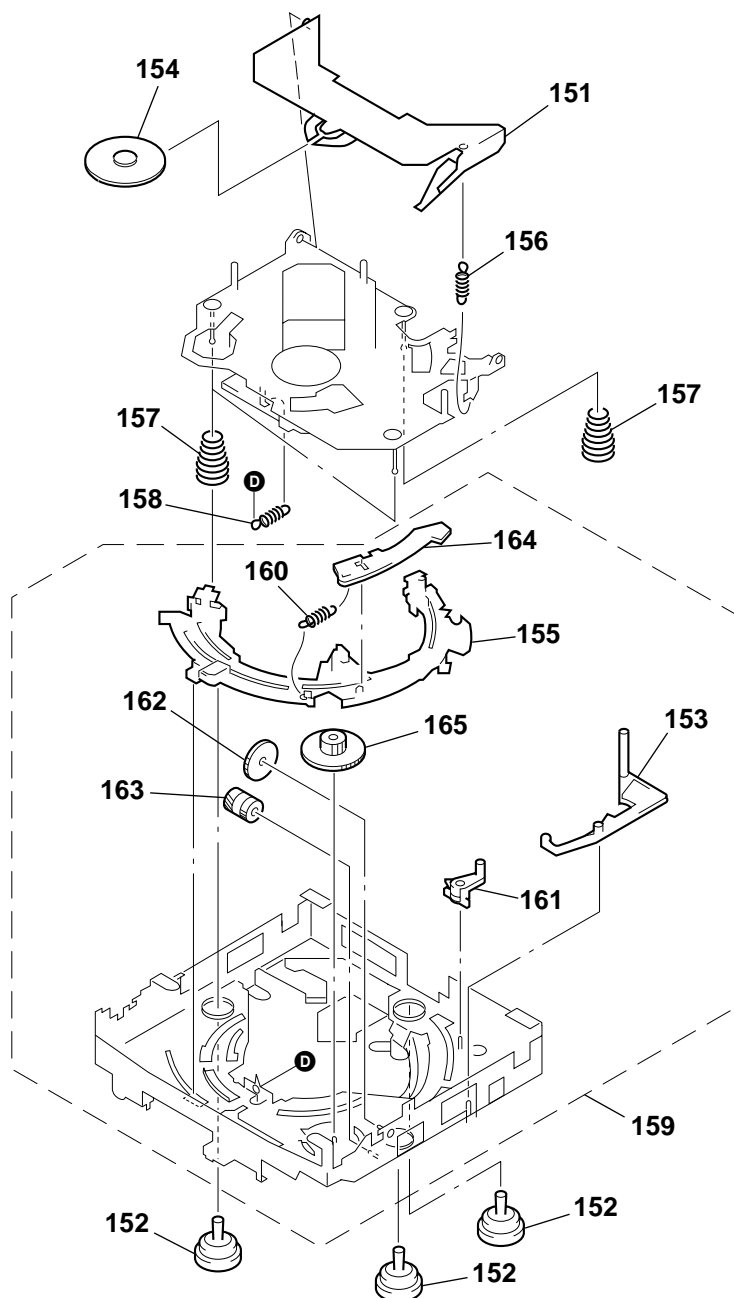

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	3-040-025-01	ARM, CHUCKING		159	A-3307-422-A	CHASSIS (M) COMPLETE ASSY	
152	3-040-031-01	DAMPER (T)		160	3-040-059-01	SPRING (TR), TENSION	
153	3-040-056-01	LEVER (D)		161	3-040-057-01	LEVER (LOCK)	
154	3-040-024-01	RETAINER (DISC)		162	3-040-058-01	GEAR (MDL)	
155	3-040-053-01	RING, LOADING		163	3-040-052-01	WHEEL (U), WORM	
156	3-040-026-01	SPRING (CH), TENSION		164	3-040-051-01	LEVER (TR)	
157	3-040-032-01	SPRING (FL), COMPRESSION		165	3-040-054-01	WHEEL (LW), WORM	
158	3-040-033-01	SPRING (KF1), TENSION					

**4-5. CD MECHANISM SECTION (3)**  
**(MG-383Z-121//K)**

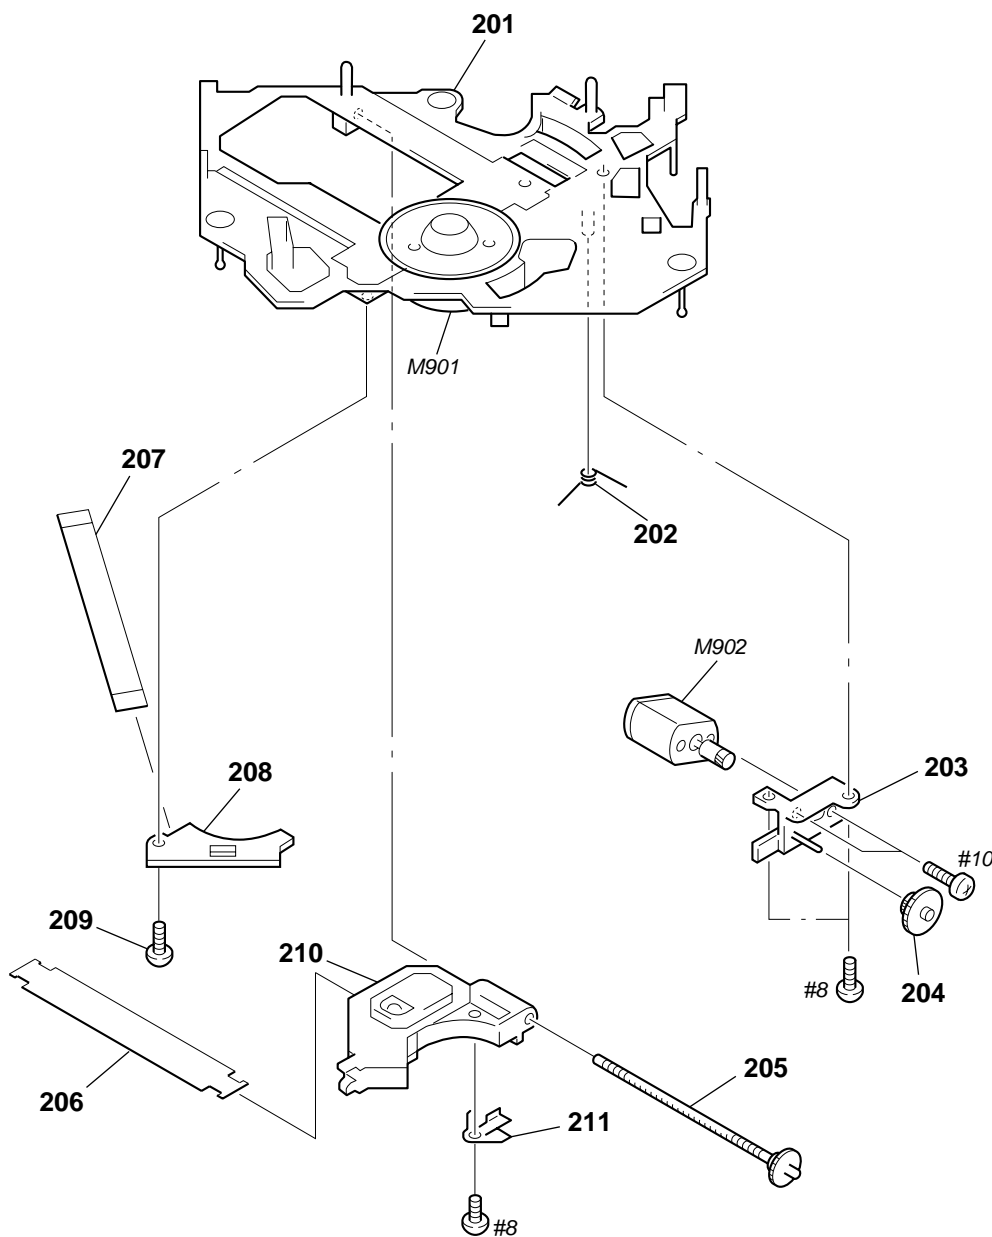

<p>The components identified by mark <math>\triangle</math> or dotted line with mark <math>\triangle</math> are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque <math>\triangle</math> sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	--

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 201	X-3378-480-1	CHASSIS (OP) ASSY (INCLUDING M901)		207	1-677-182-11	MOTOR FLEXIBLE BOARD	
202	3-040-029-01	SPRING (SL), TORSION		* 208	1-676-708-11	LIMIT SW BOARD	
203	3-040-045-01	BASE (DRIVING)		209	3-909-607-01	SCREW	
204	3-040-194-01	GEAR (SL MIDWAY)		$\triangle$ 210	8-820-103-03	PICK-UP, OPTICAL KSS-720A/K1RP	
205	A-3301-983-A	SHAFT (FEED) ASSY		211	3-040-030-01	SPRING (FEED), PLATE	
206	1-676-707-11	PICK-UP FLEXIBLE BOARD		M902	A-3301-985-A	MOTOR ASSY, SLED (SLED)	

## SECTION 5 ELECTRICAL PARTS LIST

DISC IN SW

DISPLAY

**NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable

- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case, u :  $\mu$ , for example:  
uA.. :  $\mu$ A.. uPA.. :  $\mu$ PA..  
uPB.. :  $\mu$ PB.. uPC.. :  $\mu$ PC.. uPD.. :  $\mu$ PD..
- CAPACITORS  
uF :  $\mu$ F
- COILS  
uH :  $\mu$ H

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	1-676-709-11	DISC IN SW BOARD *****		LED904	8-719-078-21	LED SML-310PT (C5005)	
		< SWITCH >		LED910	8-719-078-19	LED LWA673-R1S2	
SW2	1-529-566-21	SWITCH, PUSH (1 KEY) (SELF)		LED911	8-719-078-19	LED LWA673-R1S2	
SW3	1-529-566-21	SWITCH, PUSH (1 KEY) (DISC IN)		LED912	8-719-078-19	LED LWA673-R1S2	
*****				LED913	8-719-078-19	LED LWA673-R1S2	
		DISPLAY BOARD *****		LED914	8-719-078-19	LED LWA673-R1S2	
	1-694-660-11	CONDUCTIVE BOARD, CONNECTION		LED915	8-719-078-19	LED LWA673-R1S2	
*	3-041-175-01	PLATE (LCD), GROUND		LED921	8-719-078-22	LED SML-310YT (C5005)	
*	3-041-372-01	SHEET (REFLECTOR)		LED921	8-719-078-83	LED SML-310VT (C5000X/C6800X)	
		< CAPACITOR >		LED922	8-719-078-22	LED SML-310YT (C5005)	
C951	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V		LED922	8-719-078-83	LED SML-310VT (C5000X/C6800X)	
C952	1-107-823-11	CERAMIC CHIP 0.47uF 10% 16V		LED923	8-719-078-22	LED SML-310YT (C5005)	
C953	1-163-251-11	CERAMIC CHIP 100PF 5% 50V		LED923	8-719-078-83	LED SML-310VT (C5000X/C6800X)	
		< CONNECTOR >		LED924	8-719-078-22	LED SML-310YT (C5005)	
CN901	1-794-065-11	PLUG, CONNECTOR 14P		LED924	8-719-078-83	LED SML-310VT (C5000X/C6800X)	
		< DIODE >				< SWITCH >	
D902	8-719-068-68	DIODE SDZ6V2WA		LSW901	1-771-610-11	SWITCH, TACTILE (WITH LED) (OFF) (C5005)	
D903	8-719-422-64	DIODE MA8062-M-TX		LSW901	1-771-883-21	SWITCH, TACTILE (WITH LED) (OFF) (C5000X/C6800X)	
D905	8-719-988-61	DIODE 1SS355TE-17		LSW902	1-762-620-21	SWITCH, KEY BOARD (WITH LED) (SOURCE) (C5005)	
D951	8-719-420-90	DIODE MA8051-M-TX		LSW902	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (SOURCE) (C5000X/C6800X)	
		< IC >		LSW903	1-762-620-21	SWITCH, KEY BOARD (WITH LED) (SOUND) (C5005)	
IC901	8-759-365-90	IC LC75824W		LSW903	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (SOUND) (C5000X/C6800X)	
IC951	8-749-017-35	IC KSM-401N		LSW904	1-762-620-21	SWITCH, KEY BOARD (WITH LED) (MENU) (C5005)	
		< JUMPER RESISTOR >		LSW904	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (MENU) (C5000X/C6800X)	
JR901	1-216-295-00	SHORT 0		LSW905	1-762-620-21	SWITCH, KEY BOARD (WITH LED) (DSPL) (C5005)	
		< LIQUID CRYSTAL DISPLAY >		LSW905	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (DSPL) (C5000X/C6800X)	
LCD901	1-803-907-11	DISPLAY PANEL, LIQUID CRYSTAL (C5005)		LSW906	1-762-620-21	SWITCH, KEY BOARD (WITH LED) (LIST) (C5005)	
LCD901	1-803-907-31	DISPLAY PANEL, LIQUID CRYSTAL (C5000X/C6800X)		LSW906	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (LIST) (C5000X/C6800X)	
		< DIODE >		LSW907	1-762-620-21	SWITCH, KEY BOARD (WITH LED) (ENTER) (C5005)	
LED901	8-719-078-21	LED SML-310PT (C5005)		LSW907	1-771-476-11	SWITCH, KEY BOARD (WITH LED) (ENTER) (C5000X/C6800X)	
LED902	8-719-078-21	LED SML-310PT (C5005)		LSW908	1-771-610-11	SWITCH, TACTILE (WITH LED) (MODE) (C5005)	
LED903	8-719-078-21	LED SML-310PT (C5005)					

**DISPLAY**

**LIMIT SW**

Ref. No.	Part No.	Description	Remark
LSW908	1-771-883-21	SWITCH, TACTILE (WITH LED) (MODE) (C5000X/C6800X)	
LSW910	1-771-610-11	SWITCH, TACTILE (WITH LED) (6) (C5005)	
LSW910	1-771-883-21	SWITCH, TACTILE (WITH LED) (6) (C5000X/C6800X)	
LSW911	1-771-610-11	SWITCH, TACTILE (WITH LED) (5) (C5005)	
LSW911	1-771-883-21	SWITCH, TACTILE (WITH LED) (5) (C5000X/C6800X)	
LSW912	1-771-610-11	SWITCH, TACTILE (WITH LED) (4) (C5005)	
LSW912	1-771-883-21	SWITCH, TACTILE (WITH LED) (4) (C5000X/C6800X)	
LSW913	1-771-610-11	SWITCH, TACTILE (WITH LED) (3) (C5005)	
LSW913	1-771-883-21	SWITCH, TACTILE (WITH LED) (3) (C5000X/C6800X)	
LSW914	1-771-610-11	SWITCH, TACTILE (WITH LED) (2 SHUF) (C5005)	
LSW914	1-771-883-21	SWITCH, TACTILE (WITH LED) (2 SHUF) (C5000X/C6800X)	
LSW915	1-771-610-11	SWITCH, TACTILE (WITH LED) (1 REP) (C5005)	
LSW915	1-771-883-21	SWITCH, TACTILE (WITH LED) (1 REP) (C5000X/C6800X)	
< TRANSISTOR >			
Q901	8-729-904-66	TRANSISTOR DTD113EK-T-146 (C5005)	
Q902	8-729-904-66	TRANSISTOR DTD113EK-T-146 (C5005)	
< RESISTOR >			
R901	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R902	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R903	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R904	1-216-651-11	METAL CHIP 1K 0.5% 1/10W	
R905	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R906	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R907	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W	
R908	1-216-663-11	METAL CHIP 3.3K 0.5% 1/10W	
R909	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
R910	1-216-671-11	METAL CHIP 6.8K 0.5% 1/10W	
R911	1-208-806-11	RES-CHIP 10K 2% 1/10W	
R912	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R913	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R914	1-216-647-11	METAL CHIP 680 0.5% 1/10W	
R915	1-216-651-11	METAL CHIP 1K 0.5% 1/10W	
R916	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R917	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R918	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W	
R919	1-216-663-11	METAL CHIP 3.3K 0.5% 1/10W	
R920	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W	
R921	1-216-029-00	METAL CHIP 150 5% 1/10W	
R922	1-216-026-11	RES-CHIP 110 5% 1/10W (C5005)	
R923	1-216-178-00	RES-CHIP 150 5% 1/8W	
R924	1-216-026-11	RES-CHIP 110 5% 1/10W (C5005)	
R925	1-216-029-00	METAL CHIP 150 5% 1/10W	

Ref. No.	Part No.	Description	Remark
R926	1-216-026-11	RES-CHIP 110 5% 1/10W (C5005)	
R927	1-216-041-00	METAL CHIP 470 5% 1/10W	
R928	1-216-045-00	METAL CHIP 680 5% 1/10W (C5005)	
R933	1-216-026-11	RES-CHIP 110 5% 1/10W	
R934	1-216-026-11	RES-CHIP 110 5% 1/10W (C5005)	
R936	1-216-041-00	METAL CHIP 470 5% 1/10W	
R937	1-216-045-00	METAL CHIP 680 5% 1/10W (C5005)	
R951	1-216-040-00	RES-CHIP 430 5% 1/10W	
R952	1-216-021-00	METAL CHIP 68 5% 1/10W	
R953	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R954	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R955	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R956	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R957	1-216-107-00	METAL CHIP 270K 5% 1/10W	
R958	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R959	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R960	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R961	1-216-121-11	RES-CHIP 1M 5% 1/10W	
R970	1-216-178-00	RES-CHIP 150 5% 1/8W	
R971	1-216-178-00	RES-CHIP 150 5% 1/8W	
R973	1-216-178-00	RES-CHIP 150 5% 1/8W	
R999	1-216-295-00	SHORT 0 (C5000X/C6800X)	
< ROTARY ENCODER >			
RE901	1-475-014-11	ENCODER, ROTARY	
< SWITCH >			
S901	1-771-884-21	SWITCH, TACTILE (WITH LED) (SEEK/AMS - ◀◀◀ ◀◀)	
S902	1-771-884-21	SWITCH, TACTILE (WITH LED) (DISC/PRST +)	
S903	1-771-884-21	SWITCH, TACTILE (WITH LED) (SEEK/AMS + ▶▶▶ ▶▶)	
S904	1-771-884-21	SWITCH, TACTILE (WITH LED) (DISC/PRST -)	
*****			
*	1-676-708-11	LIMIT SW BOARD *****	
< CONNECTOR >			
CN13	1-770-347-21	CONNECTOR, FPC 6P	
< SWITCH >			
SW4	1-529-565-11	SWITCH, PUSH (1 KEY) (LIMIT)	
*****			

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-3294-805-A	MAIN BOARD, COMPLETE (C5005)		C614	1-162-306-11	CERAMIC CHIP 0.01uF	30% 16V
*	A-3294-874-A	MAIN BOARD, COMPLETE (C6800X)		C703	1-124-253-11	ELECT 0.47uF	20% 50V
*	A-3294-877-A	MAIN BOARD, COMPLETE (C5000X)		C704	1-128-057-11	ELECT 330uF	20% 6.3V
		*****		C705	1-164-346-11	CERAMIC CHIP 1uF	16V
				C706	1-163-263-11	CERAMIC CHIP 330PF	5% 50V
*	3-019-565-01	BRACKET (IC)		C707	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
*	3-041-157-01	HEAT SINK (6P)		C708	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
*	3-041-174-01	HEAT SINK (REG)		C709	1-126-176-11	ELECT 220uF	20% 10V
*	3-041-261-01	BRACKET (TR)		C713	1-164-346-11	CERAMIC CHIP 1uF	16V
	7-685-793-09	SCREW +PTT 2.6X8 (S)		C714	1-124-584-00	ELECT 100uF	20% 10V
	7-685-795-09	SCREW +PTT 2.6X12 (S)		C719	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
		< CAPACITOR >		C720	1-164-346-11	CERAMIC CHIP 1uF	16V
C101	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	C721	1-164-346-11	CERAMIC CHIP 1uF	16V
C102	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	C722	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C103	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	C723	1-163-017-00	CERAMIC CHIP 0.0047uF	10% 50V
C104	1-164-346-11	CERAMIC CHIP 1uF	16V	C801	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C110	1-124-233-11	ELECT 10uF	20% 16V	C802	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C111	1-124-233-11	ELECT 10uF	20% 16V	C803	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C112	1-164-346-11	CERAMIC CHIP 1uF	16V	C804	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C123	1-164-346-11	CERAMIC CHIP 1uF	16V	C805	1-163-233-11	CERAMIC CHIP 18PF	5% 50V
C124	1-164-346-11	CERAMIC CHIP 1uF	16V	C806	1-163-233-11	CERAMIC CHIP 18PF	5% 50V
C125	1-163-133-00	CERAMIC CHIP 470PF	5% 50V	C807	1-163-222-11	CERAMIC CHIP 5PF	0.25PF 50V
C126	1-163-251-11	CERAMIC CHIP 100PF	5% 50V	C808	1-163-222-11	CERAMIC CHIP 5PF	0.25PF 50V
C201	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	C809	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C202	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	C810	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C203	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	C811	1-163-259-11	CERAMIC CHIP 220PF	5% 50V
C204	1-164-346-11	CERAMIC CHIP 1uF	16V	C812	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C210	1-124-233-11	ELECT 10uF	20% 16V	C813	1-164-346-11	CERAMIC CHIP 1uF	16V
C211	1-124-233-11	ELECT 10uF	20% 16V	C814	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C212	1-164-346-11	CERAMIC CHIP 1uF	16V	C888	1-124-119-11	ELECT 330uF	20% 16V
C223	1-164-346-11	CERAMIC CHIP 1uF	16V	C904	1-124-584-00	ELECT 100uF	20% 10V
C224	1-164-346-11	CERAMIC CHIP 1uF	16V	C905	1-124-233-11	ELECT 10uF	20% 16V
C225	1-163-133-00	CERAMIC CHIP 470PF	5% 50V	C906	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C226	1-163-251-11	CERAMIC CHIP 100PF	5% 50V	C907	1-124-465-00	ELECT 0.47uF	20% 50V
C403	1-119-774-11	ELECT 100uF	20% 16V	C908	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C404	1-124-233-11	ELECT 10uF	20% 16V	C910	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C405	1-124-233-11	ELECT 10uF	20% 16V	C913	1-126-960-11	ELECT 1uF	20% 50V
C415	1-124-259-11	ELECT 4.7uF	20% 16V	C914	1-128-647-11	DOUBLE LAYERS 0.1F	5.5V
C426	1-164-346-11	CERAMIC CHIP 1uF	16V	C920	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C427	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V	C921	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C428	1-164-343-11	CERAMIC CHIP 0.056uF	10% 25V	C922	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C429	1-164-346-11	CERAMIC CHIP 1uF	16V			< CONNECTOR >	
C431	1-135-473-11	ELECT 3300uF	20% 16V	CN701	1-764-617-12	PIN, CONNECTOR (PC BOARD) 30P	
C435	1-126-786-11	ELECT 47uF	20% 16V	CNP501	1-774-701-11	PIN, CONNECTOR 16P	
C601	1-163-233-11	CERAMIC CHIP 18PF	5% 50V	CNP800	1-770-520-31	CONNECTOR, FFC/FPC 12P	
C602	1-163-038-00	CERAMIC CHIP 0.1uF	25V	CNP801	1-580-907-21	PLUG, CONNECTOR (BUS CONTROL IN)	
C603	1-124-443-00	ELECT 100uF	20% 10V			< JACK >	
C604	1-163-038-00	CERAMIC CHIP 0.1uF	25V	CNJ600	1-793-598-11	JACK (ANTENNA)	
C605	1-124-233-11	ELECT 10uF	20% 16V	CNP802	1-764-270-21	JACK (REMOTE IN)	
C607	1-163-021-11	CERAMIC CHIP 0.01uF	10% 50V				
C609	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V				
C610	1-163-251-11	CERAMIC CHIP 100PF	5% 50V				

**MAIN**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		< DIODE >		D930	8-719-977-12	DIODE MA8068-M-TX	
						< IC >	
D401	8-719-988-61	DIODE 1SS355TE-17		IC101	8-759-663-88	IC TA8268H	
D402	8-719-991-33	DIODE 1SS133T-77		IC701	8-759-653-27	IC TDA7402TR	
D404	8-719-422-16	DIODE MA8039-L-TX		IC801	8-759-664-64	IC MN101C49KTB	
D405	8-719-988-61	DIODE 1SS355TE-17		IC802	8-759-449-89	IC BA8270F-E2	
D601	8-719-921-44	DIODE MTZJ-T-77-5.1C		IC901	8-759-572-12	IC BA4903ST-V5	
D603	8-719-988-61	DIODE 1SS355TE-17		IC902	8-759-574-61	IC XC61AN4302MR	
D701	8-719-109-98	DIODE MTZJ-T-77-5.6C				< JUMPER RESISTOR >	
D702	8-719-058-24	DIODE RB501V-40TE-17		JR101	1-216-295-00	SHORT	0
D801	8-719-991-33	DIODE 1SS133T-77		JR102	1-216-295-00	SHORT	0
D802	8-719-991-33	DIODE 1SS133T-77		JR110	1-216-296-00	SHORT	0
				JR111	1-216-296-00	SHORT	0
D803	8-719-058-24	DIODE RB501V-40TE-17		JR201	1-216-295-00	SHORT	0
D806	8-719-017-94	DIODE MA8180-TX					
D807	8-719-109-97	DIODE MTZJ-T-77-6.8B		JR202	1-216-295-00	SHORT	0
D808	8-719-991-33	DIODE 1SS133T-77		JR222	1-216-296-00	SHORT	0
D809	8-719-017-94	DIODE MA8180-TX		JR223	1-216-296-00	SHORT	0
				JR401	1-216-296-00	SHORT	0
D810	8-719-109-93	DIODE MTZJ-T-77-6.2B		JR402	1-216-295-00	SHORT	0
D811	8-719-109-93	DIODE MTZJ-T-77-6.2B					
D812	8-719-109-93	DIODE MTZJ-T-77-6.2B		JR602	1-216-295-00	SHORT	0
D813	8-719-109-93	DIODE MTZJ-T-77-6.2B		JR603	1-216-295-00	SHORT	0
D814	8-719-109-93	DIODE MTZJ-T-77-6.2B		JR701	1-216-296-00	SHORT	0
				JR704	1-216-296-00	SHORT	0
D815	8-719-109-93	DIODE MTZJ-T-77-6.2B		JR708	1-216-296-00	SHORT	0
D816	8-719-109-93	DIODE MTZJ-T-77-6.2B					
D817	8-719-109-93	DIODE MTZJ-T-77-6.2B		JR710	1-216-296-00	SHORT	0
D818	8-719-109-93	DIODE MTZJ-T-77-6.2B		JR711	1-216-295-00	SHORT	0
D820	8-719-988-61	DIODE 1SS355TE-17		JR712	1-216-296-00	SHORT	0
				JR801	1-216-295-00	SHORT	0
D821	8-719-988-61	DIODE 1SS355TE-17		JR803	1-216-296-00	SHORT	0
D822	8-719-977-12	DIODE MA8068-M-TX					
D823	8-719-977-12	DIODE MA8068-M-TX		JR805	1-216-295-00	SHORT	0
D901	8-719-200-82	DIODE 11ES2-TA1B		JR807	1-216-296-00	SHORT	0
D902	8-719-200-82	DIODE 11ES2-TA1B		JR810	1-216-296-00	SHORT	0
				JR812	1-216-296-00	SHORT	0
D903	8-719-049-38	DIODE 1N5404TU		JR813	1-216-295-00	SHORT	0
D904	8-719-991-33	DIODE 1SS133T-77					
D905	8-719-109-97	DIODE MTZJ-T-77-6.8B		JR816	1-216-296-00	SHORT	0
D906	8-719-929-15	DIODE MTZJ-T-77-9.1B		JR817	1-216-296-00	SHORT	0
D907	8-719-200-82	DIODE 11ES2-TA1B		JR888	1-216-296-00	SHORT	0
				JR901	1-216-296-00	SHORT	0
D909	8-719-991-33	DIODE 1SS133T-77		JR902	1-216-296-00	SHORT	0
D910	8-719-923-93	DIODE MTZJ-T-77-16C					
D911	8-719-022-90	DIODE MA8160-M-TX		JR911	1-216-296-00	SHORT	0
D913	8-719-988-61	DIODE 1SS355TE-17		JR914	1-216-295-00	SHORT	0
D914	8-719-977-12	DIODE MA8068-M-TX		JR916	1-216-296-00	SHORT	0
				JR917	1-216-296-00	SHORT	0
D915	8-719-914-44	DIODE DAP202K-T-146		JR920	1-216-296-00	SHORT	0
D917	8-719-991-33	DIODE 1SS133T-77					
D918	8-719-929-15	DIODE MTZJ-T-77-9.1B		JR922	1-216-198-00	RES-CHIP	1K 5% 1/8W
D921	8-719-079-42	DIODE 1ZB22(TPA3)		JR923	1-216-295-00	SHORT	0
D922	8-719-079-42	DIODE 1ZB22(TPA3)		JR924	1-216-295-00	SHORT	0
						< COIL >	
D923	8-719-079-42	DIODE 1ZB22(TPA3)		L901	1-419-476-31	COIL, CHOKE	250uH
D924	8-719-079-42	DIODE 1ZB22(TPA3)					
D925	8-719-079-42	DIODE 1ZB22(TPA3)					
D926	8-719-079-42	DIODE 1ZB22(TPA3)					
D927	8-719-079-42	DIODE 1ZB22(TPA3)					
D928	8-719-079-42	DIODE 1ZB22(TPA3)					

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		< JACK >		R202	1-216-089-11	RES-CHIP	47K 5% 1/10W
PJ400	1-794-068-11	JACK, PIN 6P (AUDIO OUT FRONT, AUDIO OUT REAR,BUS AUDIO IN)		R203	1-216-089-11	RES-CHIP	47K 5% 1/10W
		< TRANSISTOR >		R204	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q101	8-729-920-31	TRANSISTOR DTC343TK-T-146		R212	1-216-174-00	RES-CHIP	100 5% 1/8W
Q102	8-729-920-31	TRANSISTOR DTC343TK-T-146		R214	1-216-174-00	RES-CHIP	100 5% 1/8W
Q201	8-729-920-31	TRANSISTOR DTC343TK-T-146		R215	1-216-077-00	METAL CHIP	15K 5% 1/10W
Q202	8-729-920-31	TRANSISTOR DTC343TK-T-146		R216	1-216-077-00	METAL CHIP	15K 5% 1/10W
Q401	8-729-038-55	TRANSISTOR KRA103S		R217	1-216-025-11	RES-CHIP	100 5% 1/10W
Q402	8-729-038-68	TRANSISTOR KRC103S		R218	1-216-025-11	RES-CHIP	100 5% 1/10W
Q601	8-729-049-40	TRANSISTOR STB1132Y		R223	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q602	8-729-049-43	TRANSISTOR STB1132Y		R224	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q603	8-729-038-68	TRANSISTOR KRC103S		R402	1-247-879-11	CARBON	100K 5% 1/4W
Q701	8-729-038-55	TRANSISTOR KRA103S		R405	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q702	8-729-038-68	TRANSISTOR KRC103S		R406	1-216-065-11	RES-CHIP	4.7K 5% 1/10W
Q703	8-729-015-11	TRANSISTOR 2SD1802FAST-TL		R408	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q801	8-729-038-55	TRANSISTOR KRA103S		R409	1-216-222-00	RES-CHIP	10K 5% 1/8W
Q802	8-729-038-55	TRANSISTOR KRA103S		R410	1-216-097-11	RES-CHIP	100K 5% 1/10W
Q803	8-729-049-40	TRANSISTOR STC2412G		R411	1-216-121-00	METAL CHIP	1M 5% 1/10W
Q902	8-729-038-68	TRANSISTOR KRC103S		R601	1-216-025-11	RES-CHIP	100 5% 1/10W
Q903	8-729-038-55	TRANSISTOR KRA103S		R602	1-216-025-11	RES-CHIP	100 5% 1/10W
Q904	8-729-019-00	TRANSISTOR 2SD2394-G		R603	1-216-295-00	SHORT	0
Q905	8-729-049-40	TRANSISTOR STC2412G		R604	1-216-295-00	SHORT	0
Q906	8-729-049-40	TRANSISTOR STC2412G		R605	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q907	8-729-038-55	TRANSISTOR KRA103S		R606	1-216-058-00	RES-CHIP	2.4K 5% 1/10W
Q908	8-729-038-68	TRANSISTOR KRC103S		R607	1-216-097-11	RES-CHIP	100K 5% 1/10W
Q911	8-729-038-68	TRANSISTOR KRC103S		R701	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q912	8-729-049-43	TRANSISTOR STB1132Y		R703	1-216-206-00	RES-CHIP	2.2K 5% 1/8W
Q913	8-729-038-68	TRANSISTOR KRC103S		R704	1-216-017-11	RES-CHIP	47 5% 1/10W
Q914	8-729-038-55	TRANSISTOR KRA103S		R705	1-216-304-11	METAL CHIP	3.3 5% 1/10W
Q915	8-729-038-55	TRANSISTOR KRA103S		R706	1-216-001-00	METAL CHIP	10 5% 1/10W
Q916	8-729-049-40	TRANSISTOR STC2412G		R707	1-216-041-00	METAL CHIP	470 5% 1/10W
Q919	8-729-038-68	TRANSISTOR KRC103S		R710	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q920	8-729-019-00	TRANSISTOR 2SD2394-G		R711	1-216-085-00	METAL CHIP	33K 5% 1/10W
Q921	8-729-049-43	TRANSISTOR STB1132Y		R712	1-216-174-00	RES-CHIP	100 5% 1/8W
Q922	8-729-019-00	TRANSISTOR 2SD2394-G		R713	1-216-174-00	RES-CHIP	100 5% 1/8W
		< RESISTOR >		R714	1-216-296-00	SHORT	0
R101	1-216-064-00	METAL CHIP	4.3K 5% 1/10W	R801	1-208-806-11	RES-CHIP	10K 2% 1/10W
R102	1-216-089-11	RES-CHIP	47K 5% 1/10W	R802	1-208-806-11	RES-CHIP	10K 2% 1/10W
R103	1-216-089-11	RES-CHIP	47K 5% 1/10W	R803	1-216-105-11	RES-CHIP	220K 5% 1/10W
R104	1-216-089-11	RES-CHIP	47K 5% 1/10W	R804	1-216-105-11	RES-CHIP	220K 5% 1/10W
R112	1-216-025-11	RES-CHIP	100 5% 1/10W	R805	1-216-246-00	RES-CHIP	100K 5% 1/8W
R114	1-216-174-00	RES-CHIP	100 5% 1/8W	R806	1-216-097-11	RES-CHIP	100K 5% 1/10W
R115	1-216-077-00	METAL CHIP	15K 5% 1/10W	R807	1-249-417-11	CARBON	1K 5% 1/4W
R116	1-216-226-00	RES-CHIP	15K 5% 1/8W	R808	1-249-417-11	CARBON	1K 5% 1/4W
R117	1-216-025-11	RES-CHIP	100 5% 1/10W	R812	1-216-089-11	RES-CHIP	47K 5% 1/10W
R118	1-216-025-11	RES-CHIP	100 5% 1/10W				(C5005)
R123	1-216-089-11	RES-CHIP	47K 5% 1/10W	R812	1-216-295-00	SHORT	0 (C5000X/C6800X)
R124	1-216-089-11	RES-CHIP	47K 5% 1/10W	R813	1-247-863-11	CARBON	22K 5% 1/4W
R201	1-216-064-00	METAL CHIP	4.3K 5% 1/10W	R814	1-216-097-11	RES-CHIP	100K 5% 1/10W
							(C5005)
				R815	1-249-417-11	CARBON	1K 5% 1/4W
				R816	1-216-025-11	RES-CHIP	100 5% 1/10W
				R818	1-216-049-11	RES-CHIP	1K 5% 1/10W

**MAIN**

**RELAY**

**SERVO**

Ref. No.	Part No.	Description		Remark
R819	1-216-049-11	RES-CHIP	1K	5% 1/10W
R820	1-216-049-11	RES-CHIP	1K	5% 1/10W
R821	1-216-069-11	METAL CHIP	6.8K	5% 1/10W
R822	1-216-081-00	METAL CHIP	22K	5% 1/10W
R823	1-216-025-11	RES-CHIP	100	5% 1/10W
R824	1-216-097-11	RES-CHIP	100K	5% 1/10W
R825	1-249-429-11	CARBON	10K	5% 1/4W
R826	1-216-025-11	RES-CHIP	100	5% 1/10W
R827	1-216-025-11	RES-CHIP	100	5% 1/10W
R828	1-216-073-00	METAL CHIP	10K	5% 1/10W
R829	1-247-807-11	CARBON	100	5% 1/4W
R830	1-247-807-11	CARBON	100	5% 1/4W
R831	1-216-073-00	METAL CHIP	10K	5% 1/10W
R832	1-216-073-00	METAL CHIP	10K	5% 1/10W
R833	1-216-049-11	RES-CHIP	1K	5% 1/10W
R834	1-216-049-11	RES-CHIP	1K	5% 1/10W
R837	1-216-049-11	RES-CHIP	1K	5% 1/10W
R838	1-216-049-11	RES-CHIP	1K	5% 1/10W
R839	1-216-025-11	RES-CHIP	100	5% 1/10W
R840	1-216-025-11	RES-CHIP	100	5% 1/10W
R841	1-216-049-11	RES-CHIP	1K	5% 1/10W
R843	1-216-295-00	SHORT	0	(C5000X/C5005)
R844	1-216-025-11	RES-CHIP	100	5% 1/10W
R845	1-216-097-11	RES-CHIP	100K	5% 1/10W (C6800X)
R846	1-216-089-11	RES-CHIP	47K	5% 1/10W (C6800X)
R847	1-216-097-11	RES-CHIP	100K	5% 1/10W
R852	1-216-295-00	SHORT	0	
R854	1-216-295-00	SHORT	0	
R855	1-216-019-00	RES-CHIP	56	5% 1/10W
R888	1-216-089-11	RES-CHIP	47K	5% 1/10W
R901	1-216-246-00	RES-CHIP	100K	5% 1/8W
R902	1-216-049-11	RES-CHIP	1K	5% 1/10W
R903	1-216-027-00	METAL CHIP	120	5% 1/10W
R904	1-216-085-00	METAL CHIP	33K	5% 1/10W
R905	1-216-025-11	RES-CHIP	100	5% 1/10W
R907	1-216-057-00	METAL CHIP	2.2K	5% 1/10W
R909	1-216-044-00	METAL CHIP	620	5% 1/10W
R910	1-216-097-11	RES-CHIP	100K	5% 1/10W
R912	1-216-097-11	RES-CHIP	100K	5% 1/10W
R914	1-216-089-11	RES-CHIP	47K	5% 1/10W
R915	1-216-079-00	METAL CHIP	18K	5% 1/10W
R917	1-216-105-11	RES-CHIP	220K	5% 1/10W
R918	1-216-206-00	RES-CHIP	2.2K	5% 1/8W
R920	1-216-097-11	RES-CHIP	100K	5% 1/10W
R925	1-216-059-00	METAL CHIP	2.7K	5% 1/10W
R926	1-216-097-11	RES-CHIP	100K	5% 1/10W
R928	1-216-043-11	RES-CHIP	560	5% 1/10W
R929	1-216-043-11	RES-CHIP	560	5% 1/10W
R930	1-216-097-11	RES-CHIP	100K	5% 1/10W
R931	1-216-073-00	METAL CHIP	10K	5% 1/10W
R933	1-216-083-00	METAL CHIP	27K	5% 1/10W

Ref. No.	Part No.	Description		Remark
R934	1-247-810-11	CARBON	130	5% 1/4W
R935	1-247-810-11	CARBON	130	5% 1/4W
R936	1-247-810-11	CARBON	130	5% 1/4W
R937	1-247-810-11	CARBON	130	5% 1/4W
R938	1-247-810-11	CARBON	130	5% 1/4W
R939	1-247-810-11	CARBON	130	5% 1/4W
R940	1-216-138-00	RES-CHIP	3.3	5% 1/8W
< SWITCH >				
S900	1-762-638-11	SWITCH, TACTILE (RESET)		
S901	1-771-540-11	SWITCH, PUSH (1 KEY) (NOSE DET)		
SW802	1-571-478-11	SWITCH, SLIDE (FREQUENCY SELECT)		(C6800X)
< THERMISTOR (POSITIVE) >				
TH801	1-801-792-21	THERMISTOR, POSITIVE		
< TUNER >				
TU601	A-3220-738-A	TUNER UNIT (TUX-020)		
< VIBRATOR >				
X800	1-781-822-11	VIBRATOR, CERAMIC (18.432MHz)		
X801	1-567-098-41	VIBRATOR, CRYSTAL (32kHz)		
*****				
*	1-676-690-11	RELAY BOARD		*****
< CONNECTOR >				
CNP902	1-794-064-11	SOCKET, CONNECTOR 14P		
CNP903	1-792-173-11	CABLE, FLAT (FFC) 12P		
< DIODE >				
LED905	8-719-033-14	LED CL-170PG-CD-T (CD WINDOW)		
< SWITCH >				
LSW916	1-771-609-11	SWITCH, TACTILE (WITH LED) (▲)		
< RESISTOR >				
R930	1-216-037-00	METAL CHIP	330	5% 1/10W
*****				
*	A-3294-809-A	SERVO BOARD, COMPLETE		*****
< CAPACITOR >				
C101	1-135-259-11	TANTAL. CHIP	10uF	20% 6.3V
C103	1-104-609-11	ELECT CHIP	100uF	20% 4V
C104	1-135-259-11	TANTAL. CHIP	10uF	20% 6.3V
C106	1-164-360-11	CERAMIC CHIP	0.1uF	16V
C107	1-115-156-11	CERAMIC CHIP	1uF	10V
C108	1-162-974-11	CERAMIC CHIP	0.01uF	50V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C109	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V	FB503	1-500-445-21	FERRITE BEAD INDUCTOR	
C111	1-104-852-11	TANTAL. CHIP	22uF 20% 10V			< IC >	
C115	1-164-733-11	CERAMIC CHIP	820PF 10% 50V	IC1	8-752-095-36	IC CXA2596M-T6	
C116	1-165-128-11	CERAMIC CHIP	0.22uF 16V	IC5	8-752-914-87	IC CXP84640-072Q	
C117	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	IC7	8-759-653-67	IC LA6556	
C118	1-164-360-11	CERAMIC CHIP	0.1uF 16V	IC501	8-752-392-04	IC CXD2598Q	
C127	1-104-851-11	TANTAL. CHIP	10uF 20% 10V			< JUMPER RESISTOR >	
C301	1-126-393-11	ELECT CHIP	33uF 20% 10V	JR501	1-216-295-00	SHORT 0	
C302	1-164-360-11	CERAMIC CHIP	0.1uF 16V	JR505	1-216-864-11	METAL CHIP 0 5% 1/16W	
C303	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V	JR506	1-216-864-11	METAL CHIP 0 5% 1/16W	
C304	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V	JR507	1-216-295-00	SHORT 0	
C305	1-162-962-11	CERAMIC CHIP	470PF 10% 50V			< TRANSISTOR >	
C306	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	Q101	8-729-904-87	TRANSISTOR 2SB1197K-T-146-R	
C307	1-162-962-11	CERAMIC CHIP	470PF 10% 50V			< RESISTOR >	
C308	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	R101	1-216-847-11	METAL CHIP 150K 5% 1/16W	
C309	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V	R102	1-216-847-11	METAL CHIP 150K 5% 1/16W	
C310	1-125-838-11	CERAMIC CHIP	2.2uF 10% 6.3V	R103	1-216-158-00	RES-CHIP 22 5% 1/8W	
C311	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V	R104	1-216-857-11	METAL CHIP 1M 5% 1/16W	
C312	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R105	1-216-833-11	RES-CHIP 10K 5% 1/16W	
C501	1-126-391-11	ELECT CHIP	47uF 20% 6.3V	R106	1-216-857-11	METAL CHIP 1M 5% 1/16W	
C502	1-162-965-11	CERAMIC CHIP	0.0015uF 10% 50V	R107	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
C504	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V	R108	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
C505	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	R110	1-216-837-11	METAL CHIP 22K 5% 1/16W	
C506	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V	R111	1-216-833-11	RES-CHIP 10K 5% 1/16W	
C507	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	R113	1-216-839-11	METAL CHIP 33K 5% 1/16W	
C508	1-164-230-11	CERAMIC CHIP	220PF 5% 50V	R116	1-216-845-11	METAL CHIP 100K 5% 1/16W	
C509	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R122	1-216-845-11	METAL CHIP 100K 5% 1/16W	
C510	1-164-217-11	CERAMIC CHIP	150PF 5% 50V	R123	1-216-839-11	METAL CHIP 33K 5% 1/16W	
C511	1-164-217-11	CERAMIC CHIP	150PF 5% 50V	R126	1-216-842-11	METAL CHIP 56K 5% 1/16W	
C512	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	R127	1-216-821-11	METAL CHIP 1K 5% 1/16W	
C513	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	R213	1-216-821-11	METAL CHIP 1K 5% 1/16W	
C514	1-126-391-11	ELECT CHIP	47uF 20% 6.3V	R301	1-216-843-11	METAL CHIP 68K 5% 1/16W	
C515	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R302	1-216-839-11	METAL CHIP 33K 5% 1/16W	
C517	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R303	1-216-821-11	METAL CHIP 1K 5% 1/16W	
C518	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R304	1-216-839-11	METAL CHIP 33K 5% 1/16W	
C519	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R306	1-216-833-11	RES-CHIP 10K 5% 1/16W	
C520	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R307	1-216-833-11	RES-CHIP 10K 5% 1/16W	
C521	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R308	1-216-833-11	RES-CHIP 10K 5% 1/16W	
C522	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R309	1-216-833-11	RES-CHIP 10K 5% 1/16W	
C550	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R310	1-216-833-11	RES-CHIP 10K 5% 1/16W	
C553	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R311	1-216-833-11	RES-CHIP 10K 5% 1/16W	
C554	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R312	1-216-845-11	METAL CHIP 100K 5% 1/16W	
		< CONNECTOR >		R313	1-216-842-11	METAL CHIP 56K 5% 1/16W	
CN1	1-764-616-12	HOUSING, CONNECTOR (PC BOARD) 30P		R314	1-216-842-11	METAL CHIP 56K 5% 1/16W	
CN2	1-794-153-21	CONNECTOR, FPC (ZIF)16P		R315	1-216-842-11	METAL CHIP 56K 5% 1/16W	
CN3	1-770-347-21	CONNECTOR, FPC 6P		R316	1-216-842-11	METAL CHIP 56K 5% 1/16W	
		< FERRITE BEAD >		R317	1-216-838-11	METAL CHIP 27K 5% 1/16W	
FB101	1-216-295-00	SHORT	0	R318	1-216-842-11	METAL CHIP 56K 5% 1/16W	
FB102	1-216-295-00	SHORT	0	R319	1-216-842-11	METAL CHIP 56K 5% 1/16W	
FB103	1-216-295-00	SHORT	0				
FB501	1-216-295-00	SHORT	0				

# SERVO

Ref. No.	Part No.	Description	Remark
R321	1-216-846-11	METAL CHIP	120K 5% 1/16W
R322	1-216-835-11	METAL CHIP	15K 5% 1/16W
R501	1-216-833-11	RES-CHIP	10K 5% 1/16W
R503	1-216-845-11	METAL CHIP	100K 5% 1/16W
R504	1-216-857-11	METAL CHIP	1M 5% 1/16W
R505	1-216-839-11	METAL CHIP	33K 5% 1/16W
R506	1-216-845-11	METAL CHIP	100K 5% 1/16W
R507	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R511	1-216-845-11	METAL CHIP	100K 5% 1/16W
R513	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R516	1-216-845-11	METAL CHIP	100K 5% 1/16W
R517	1-216-837-11	METAL CHIP	22K 5% 1/16W
R518	1-216-834-11	METAL CHIP	12K 5% 1/16W
R519	1-216-834-11	METAL CHIP	12K 5% 1/16W
R520	1-216-834-11	METAL CHIP	12K 5% 1/16W
R521	1-216-834-11	METAL CHIP	12K 5% 1/16W
R522	1-216-834-11	METAL CHIP	12K 5% 1/16W
R523	1-216-834-11	METAL CHIP	12K 5% 1/16W
R524	1-216-845-11	METAL CHIP	100K 5% 1/16W
R526	1-216-845-11	METAL CHIP	100K 5% 1/16W
R527	1-216-845-11	METAL CHIP	100K 5% 1/16W
R531	1-216-809-11	METAL CHIP	100 5% 1/16W
R532	1-216-845-11	METAL CHIP	100K 5% 1/16W
R533	1-216-845-11	METAL CHIP	100K 5% 1/16W
R535	1-216-845-11	METAL CHIP	100K 5% 1/16W
R551	1-216-841-11	METAL CHIP	47K 5% 1/16W
R552	1-216-841-11	METAL CHIP	47K 5% 1/16W
R553	1-216-845-11	METAL CHIP	100K 5% 1/16W
R554	1-216-845-11	METAL CHIP	100K 5% 1/16W
R555	1-216-845-11	METAL CHIP	100K 5% 1/16W
R558	1-216-864-11	METAL CHIP	0 5% 1/16W
R560	1-216-809-11	METAL CHIP	100 5% 1/16W
R563	1-216-809-11	METAL CHIP	100 5% 1/16W
R564	1-216-845-11	METAL CHIP	100K 5% 1/16W
R568	1-216-837-11	METAL CHIP	22K 5% 1/16W
R569	1-216-809-11	METAL CHIP	100 5% 1/16W
R570	1-216-821-11	METAL CHIP	1K 5% 1/16W
R572	1-216-809-11	METAL CHIP	100 5% 1/16W
R590	1-216-845-11	METAL CHIP	100K 5% 1/16W
R594	1-216-845-11	METAL CHIP	100K 5% 1/16W
R595	1-216-845-11	METAL CHIP	100K 5% 1/16W
R599	1-216-821-11	METAL CHIP	1K 5% 1/16W
< SWITCH >			
SW1	1-762-944-12	SWITCH, DETECTION (SMALL TYPE) (DOWN)	
< VIBRATOR >			
X1	1-781-758-21	VIBRATOR, CERAMIC (CHIP TYPE) (10MHz)	
X2	1-781-759-21	VIBRATOR, CERAMIC (CHIP TYPE) (16MHz)	

Ref. No.	Part No.	Description	Remark
MISCELLANEOUS *****			
9	1-792-194-21	CORD (WITH CONNECTOR) (POWER)	
* 201	X-3378-480-1	CHASSIS (OP) ASSY (INCLUDING M901)	
206	1-676-707-11	PICK-UP FLEXIBLE BOARD	
207	1-677-182-11	MOTOR FLEXIBLE BOARD	
△210	8-820-103-03	PICK-UP, OPTICAL KSS-720A/K1RP	
F901	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
M902	A-3301-985-A	MOTOR ASSY, SLED (SLED)	
M903	A-3301-978-A	MOTOR SUB ASSY, LO (LOADING)	
*****			
ACCESSORIES & PACKING MATERIALS *****			
3-043-278-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH) (C5000X/C5005)		
3-043-279-11	MANUAL, INSTRUCTION (ENGLISH) (C5000X/C5005)		
3-043-279-21	MANUAL, INSTRUCTION (FRENCH) (CND)		
3-044-888-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH, TRADITIONAL CHINESE) (C6800X)		
3-044-889-11	MANUAL, INSTRUCTION (ENGLISH, SPANISH, TRADITIONAL CHINESE) (C6800X)		
X-3378-390-1	CASE ASSY (for FRONT PANEL)		
*****			
***** HARDWARE LIST *****			
#1	7-685-793-09	SCREW +PTT 2.6X8 (S)	
#2	7-685-792-09	SCREW +PTT 2.6X6 (S)	
#3	7-685-795-09	SCREW +PTT 2.6X12 (S)	
#4	7-685-106-19	SCREW +P 2X10 TYPE 2 NON-SLIT	
#5	7-621-772-20	SCREW +B 2X5	
#6	7-627-552-87	SCREW, PRECISION +P 1.7X2.2	
#7	7-628-253-00	SCREW +PS 2X4	
#8	7-627-553-37	SCREW, PRECISION +P 2X3 TYPE 3	
#9	7-627-553-17	SCREW, PRECISION +P 2X2 TYPE 3	
#10	7-627-850-28	SCREW, PRECISION +P 1.4X3	
*****			

\*\*\*\*\*

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Ref. No.	Part No.	Description	Remark
PARTS FOR INSTALLATION AND CONNECTIONS			
*****			
251	3-014-370-21	FRAME, FITTING	
252	3-916-012-01	BRACKET (ND), FITTING ASSIST	
			(C5000X/C5005)
253	7-682-160-01	SCREW +P 4X6 (C5000X/C5005)	
254	X-3368-725-1	SCREW ASSY, FITTING (C5000X/C5005)	
255	3-041-027-01	COLLAR	
256	X-3366-405-1	SCREW ASSY (EXP), FITTING (C6800X)	
257	3-030-929-02	SPRING, FITTING	
258	3-934-325-01	SCREW (+K 5X8 TP)	
259	1-792-194-21	CORD (WITH CONNECTOR) (POWER)	

