

April 2012

No. OCH421

REVISED EDITION-B

TECHNICAL & SERVICE MANUAL

CITY MULTI Series Ceiling Cassettes R410A / R22

Indoor unit

[Model names]

[Service Ref.]

PLFY-P12NBMU-E

PLFY-P12NBMU-E

PLFY-P12NBMU-ER1

PLFY-P12NBMU-ER2

PLFY-P15NBMU-E

PLFY-P15NBMU-E

PLFY-P15NBMU-ER1

PLFY-P15NBMU-ER2

PLFY-P18NBMU-E

PLFY-P18NBMU-E

PLFY-P18NBMU-ER1

PLFY-P18NBMU-ER2

PLFY-P24NBMU-E

PLFY-P24NBMU-E

PLFY-P24NBMU-ER1

PLFY-P24NBMU-ER2

PLFY-P30NBMU-E

PLFY-P30NBMU-E

PLFY-P30NBMU-ER1

PLFY-P30NBMU-ER2

PLFY-P36NBMU-E

PLFY-P36NBMU-E

PLFY-P36NBMU-ER1

PLFY-P36NBMU-ER2


Revision:

- PLFY-P12/15/18/24/30/36 NBMU-ER2 have been added in REVISED EDITION-B.
- Some descriptions have been modified.

- Please void OCH421 REVISED EDITION-A.

Note:

- This manual does not cover outdoor units. When servicing them, please refer to the outdoor unit's service manual.
- RoHS compliant products have <G> mark on the spec name plate.

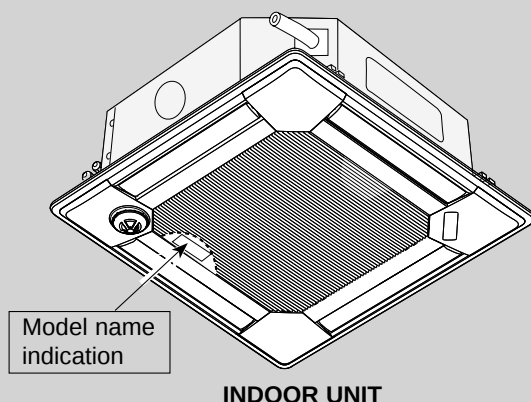

CONTENTS

1. TECHNICAL CHANGES.....	2
2. FEATURES.....	3
3. PART NAMES AND FUNCTIONS.....	4
4. SPECIFICATIONS.....	6
5. 4-WAY AIR FLOW SYSTEM.....	10
6. OUTLINES AND DIMENSIONS.....	13
7. WIRING DIAGRAM.....	14
8. REFRIGERANT SYSTEM DIAGRAM.....	16
9. MICROPROCESSOR CONTROL.....	17
10. TROUBLESHOOTING.....	24
11. DISASSEMBLY PROCEDURE.....	33

PARTS CATALOG (OCB421)



CITY MULTI

Use the specified refrigerant only

Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

1


TECHNICAL CHANGES

PLFY-P12NBMU-ER1	➔	PLFY-P12NBMU-ER2
PLFY-P15NBMU-ER1	➔	PLFY-P15NBMU-ER2
PLFY-P18NBMU-ER1	➔	PLFY-P18NBMU-ER2
PKFY-P24NBMU-ER1	➔	PLFY-P24NBMU-ER2
PKFY-P30NBMU-ER1	➔	PLFY-P30NBMU-ER2
PKFY-P36NBMU-ER1	➔	PLFY-P36NBMU-ER2

INDOOR CONTROLLER BOARD (I.B.) has been changed (S/W version up).

PLFY-P12NBMU-E	➔	PLFY-P12NBMU-ER1
PLFY-P15NBMU-E	➔	PLFY-P15NBMU-ER1
PLFY-P18NBMU-E	➔	PLFY-P18NBMU-ER1
PKFY-P24NBMU-E	➔	PLFY-P24NBMU-ER1
PKFY-P30NBMU-E	➔	PLFY-P30NBMU-ER1
PKFY-P36NBMU-E	➔	PLFY-P36NBMU-ER1

INDOOR CONTROLLER BOARD (I.B.) has been changed.

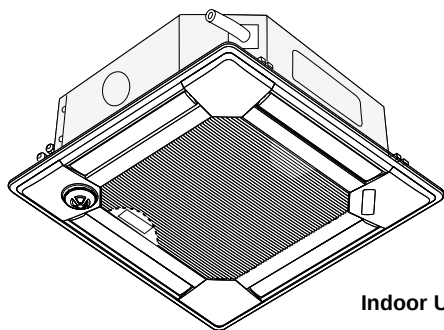

Indoor Unit

Models

PLFY-P12NBMU-E
 PLFY-P15NBMU-E
 PLFY-P18NBMU-E
 PLFY-P24NBMU-E
 PLFY-P30NBMU-E
 PLFY-P36NBMU-E

Cooling capacity / Heating capacity

12,000 / 13,500 Btu/h
 15,000 / 17,000 Btu/h
 18,000 / 20,000 Btu/h
 24,000 / 27,000 Btu/h
 30,000 / 34,000 Btu/h
 36,000 / 40,000 Btu/h

1. WIDE AIRFLOW

The new wide shape vane capable of wide angle air supply provides comfort even at the corners of a room regardless of cooling and heating operation. A reduction in the air speed by 20% compared to the conventional product eliminates uncomfortable draft sensation for friendly air conditioning.

**2. WAVE AIRFLOW SYSTEM (HEATING MODE)**

The wave airflow system has 4 vanes where each vane runs independently. Repeating of horizontal and down blows with a time lag allows the conditioned warm air to be distributed even to room corners thus preventing uneven room temperature distribution.

Operation image of "Wave Airflow"


**3. AUTOMATIC AIR SPEED ADJUSTMENT MODE**

The automatic air speed adjustment mode is provided in addition to the 4 air speed stages of "High/Medium 1/Medium 2/ Low." Air speed can be changed freely in accordance with a difference between the set temperature and the room temperature. The automatic air speed adjustment mode presents quick cooling of a room with the high mode, such as at the starting up of cooling operation, for example. After the room temperature is stabilized, the low mode will be applied by automatic switching to keep your comfort.

**4. i-see Sensor (OPTIONAL CORNER PANEL)**

The i see sensor is a radiation temperature sensor originated from Mitsubishi's new technology. In order to create a really comfortable space in shops and offices, it is essential to control the temperature near the floor where occupants/visitors gather. The i see sensor measures the infrared rays generated from the surrounding wall and floor surface at an angle of 360° and the infrared ray energy is computed to convert it into the value of temperature. In addition, the floor temperature at distant spots (radiation temperature) is also measured to supply the optimum airflow to realize comfort which was never experienced in the past.

- Indoor unit

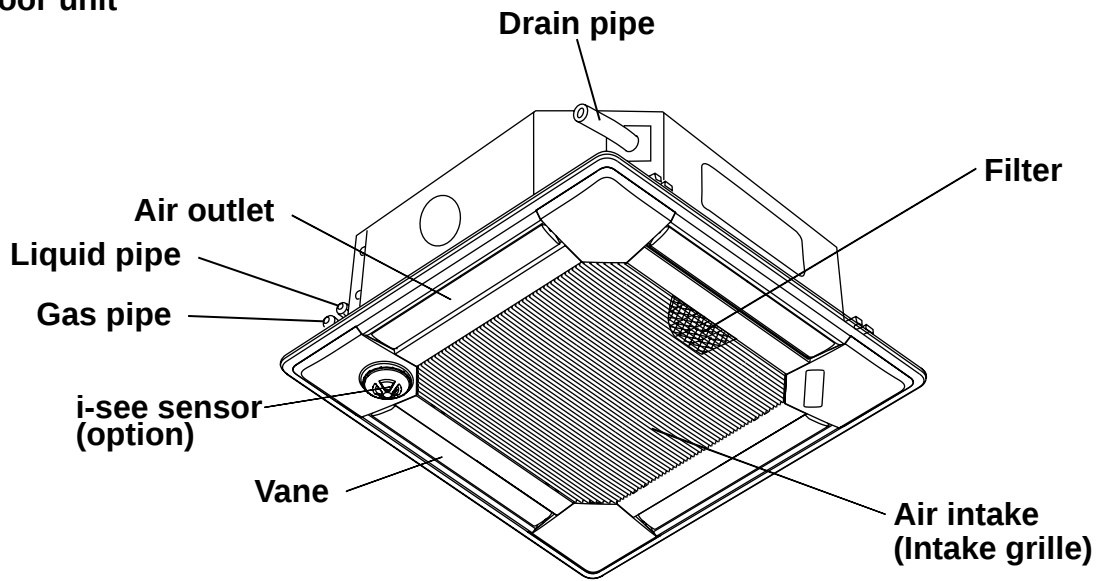


- Wired remote controller

Note:


The phrase "Wired remote controller" in this manual refers only to the PAR-21MAA.

If you need any information for the other remote controller, please refer to either the installation manual or initial setting manual which are included in remote controller's box.

Operation Section

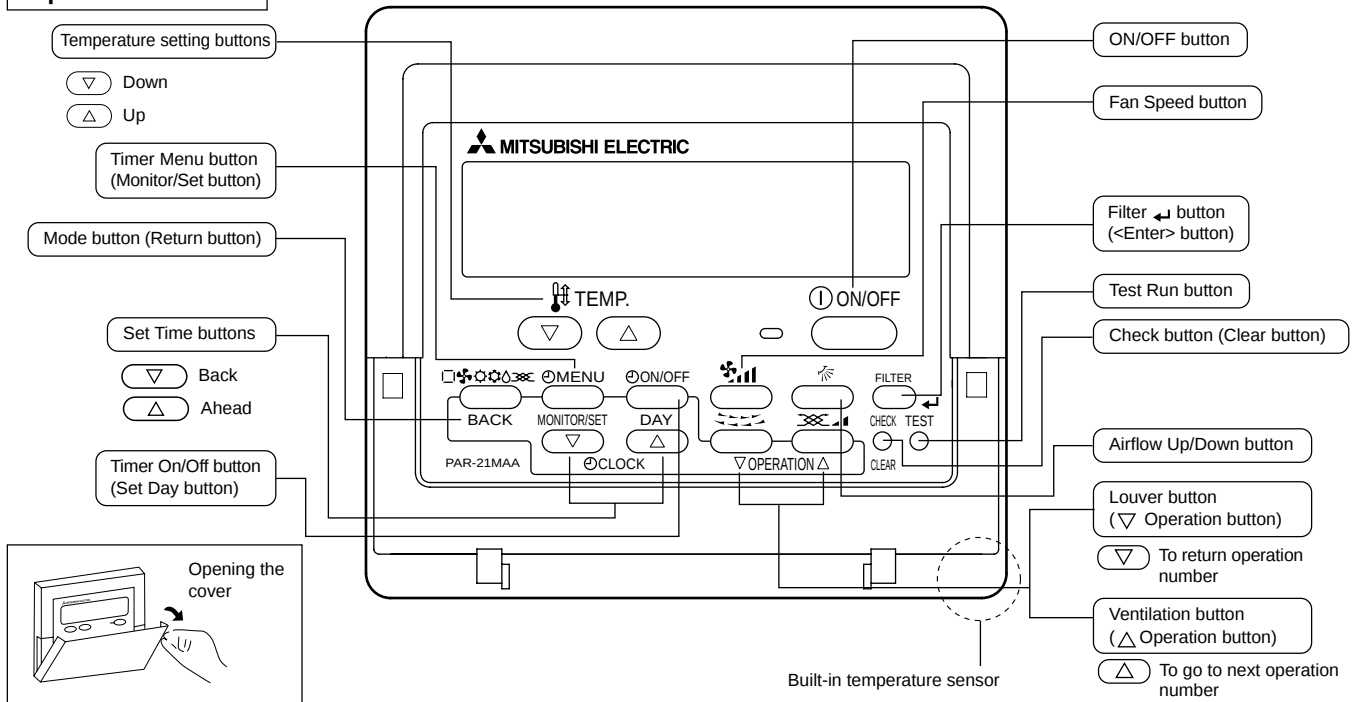

• Wired remote controller

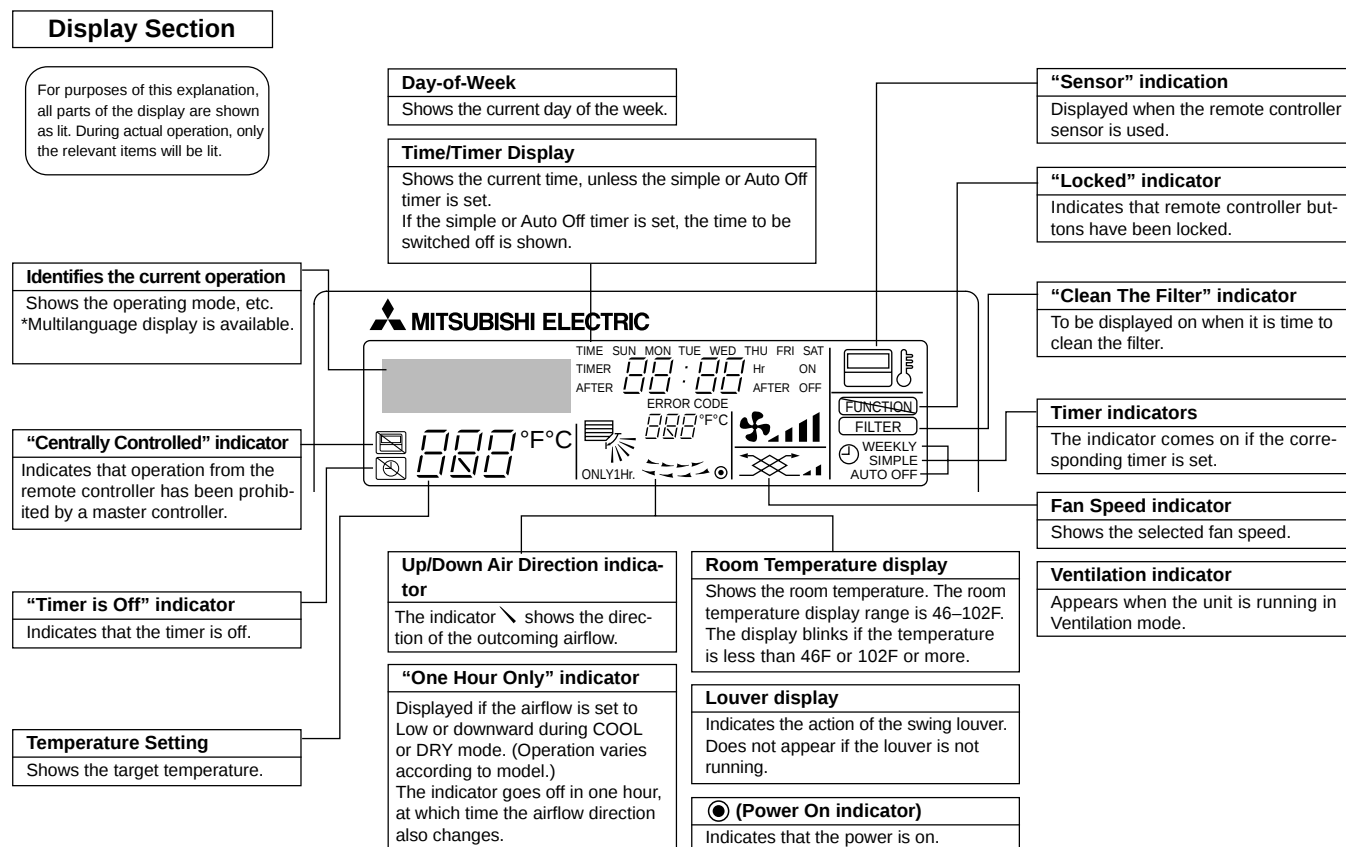

4-1. SPECIFICATIONS


Model			PLFY-P12NBMU-E PLFY-P12NBMU-ER1 PLFY-P12NBMU-ER2		PLFY-P15NBMU-E PLFY-P15NBMU-ER1 PLFY-P15NBMU-ER2		PLFY-P18NBMU-E PLFY-P18NBMU-ER1 PLFY-P18NBMU-ER2			
Power source			1-phase 208-230V 60Hz							
Cooling capacity (Nominal)		*1	BTU/h	12,000		15,000		18,000		
		*1	kW	3.5		4.4		5.3		
		Power input		kW	0.03		0.04		0.05	
		Current input		A	0.22		0.29		0.36	
Heating capacity (Nominal)		*2	Btu/h	13,500		17,000		20,000		
		*2	kcal/h	4.0		5.0		5.9		
		Power input		kW	0.02		0.03		0.04	
		Current input		A	0.14		0.22		0.29	
External finish			Galvanized steel sheet							
External dimension H × W × D		in.		10-3/16 × 33-3/32 × 33-3/32		10-3/16 × 33-3/32 × 33-3/32		10-3/16 × 33-3/32 × 33-3/32		
		mm		258 × 840 × 840		258 × 840 × 840		258 × 840 × 840		
Net weight		lbs (kg)		49 (22)		49 (22)		51 (23)		
Decoration panel	Model		PLP-40BAU		PLP-40BAU		PLP-40BAU			
	External finish		MUNSELL (6.4Y 8.9/0.4)							
	Dimension H × W × D	in.	1-3/8 × 37-13/32 × 37-13/32		1-3/8 × 37-13/32 × 37-13/32		1-3/8 × 37-13/32 × 37-13/32			
		mm	35 × 950 × 950		35 × 950 × 950		35 × 950 × 950			
	Net weight		lbs (kg)		13 (6)		13 (6)			
Heat exchanger			Cross fin							
FAN	Type x Quantity		Turbo fan × 1		Turbo fan × 1		Turbo fan × 1			
	External static press.	in.WG	0.000 (208V)		0.000 (208V)		0.000 (208V)			
		Pa	0		0		0			
		in.WG	0.000 (230V)		0.000 (230V)		0.000 (230V)			
		Pa	0		0		0			
	Motor type		DC motor							
	Motor output		kW	0.050		0.050		0.050		
	Driving mechanism		Direct-drive							
	Airflow rate (Low-Mid2- Mid1-High)	cfm	388 - 424 - 459 - 494		424 - 459 - 494 - 565		494 - 530 - 565 - 636			
		m³/min	11.0 - 12.0 - 13.0 - 14.0		12.0 - 13.0 - 14.0 - 16.0		14.0 - 15.0 - 16.0 - 18.0			
		L / s	183 - 200 - 217 - 233		200 - 217 - 233 - 267		233 - 250 - 267 - 300			
Noise level (Low-Mid2-Mid1-High) (measured in anechoic room)		dB <A>	27 - 28 - 29 - 31 (208-230V)		27 - 28 - 30 - 31 (208-230V)		28 - 29 - 30- 32 (208-230V)			
		dB <A>	—		—		—			
		dB <A>	—		—		—			
Insulation material			PS							
Air filter			PP honeycomb (long life filter, anti-bacterial type)							
Protection device			Fuse							
Refrigerant control device			LEV							
Connectable outdoor unit			R410A, R22 CITY MULTI							
Diameter of refrigerant pipe (O.D.)	Liquid (R410A) (R22)	in. (mm)	1/4 (6.35) Flare		1/4 (6.35) Flare		1/4 (6.35) Flare			
			1/4 (6.35) Flare		1/4 (6.35) Flare		3/8 (9.52) Flare			
	Gas (R410A) (R22)	in. (mm)	1/2 (12.7) Flare		1/2 (12.7) Flare		1/2 (12.7) Flare			
			1/2 (12.7) Flare		1/2 (12.7) Flare		5/8 (15.88) Flare			
Field drain pipe size		in. (mm)	O.D. 1-1/4 (32)		O.D. 1-1/4 (32)		O.D. 1-1/4 (32)			
Standard attachment	Document Accessory		Installation Manual, Instruction Book							
Optional parts	Air outlet shutter plate		PAC-SH51SP-E		PAC-SH51SP-E		PAC-SH51SP-E			
	High efficiency filterelement		PAC-SH59KF-E		PAC-SH59KF-E		PAC-SH59KF-E			
	Multi-function casement		PAC-SH53TM-E		PAC-SH53TM-E		PAC-SH53TM-E			
Remark										
	Installation		Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual.							
Note:			*1 Nominal cooling conditions		*2 Nominal heating conditions		Unit converter			
			Indoor : 80degF D.B. / 67degF W.B. (26.7degC D.B. / 19.4degC W.B.)		70degF D.B. (21.1degC D.B.)		kcal/h = kW × 860 BTU/h = kW × 3,412 cfm = m³/min × 35.31 lbs = kg/0.4536			
			Outdoor : 95degF D.B. (35degC D.B.)		47degF D.B. / 43degF W.B. (8.3degC D.B. / 6.1degC W.B.)		*Above specification data is subject to rounding variation.			
			Pipe length : 25 ft. (7.6 m)		25 ft. (7.6 m)					
			Level difference : 0 ft. (0 m)		0 ft. (0 m)					
*Due to continuing improvement, above specification may be subject to change without notice.										



Model				PLFY-P24NBMU-E PLFY-P24NBMU-ER1 PLFY-P24NBMU-ER2		PLFY-P30NBMU-E PLFY-P30NBMU-ER1 PLFY-P30NBMU-ER2		PLFY-P36NBMU-E PLFY-P36NBMU-ER1 PLFY-P36NBMU-ER2		
Power source				1-phase 208-230V 60Hz						
Cooling capacity (Nominal)		*1	BTU/h	24,000		30,000		36,000		
		*1	kW	7.0		8.8		10.5		
		Power input	kW	0.06		0.07		0.16		
		Current input	A	0.43		0.51		1.07		
Heating capacity (Nominal)		*2	Btu/h	27,000		34,000		40,000		
		*2	kcal/h	7.9		10.0		11.7		
		Power input	kW	0.05		0.06		0.15		
		Current input	A	0.36		0.43		1.00		
External finish				Galvanized steel sheet						
External dimension H × W × D			in.	10-3/16 × 33-3/32 × 33-3/32		10-3/16 × 33-3/32 × 33-3/32		11-3/4 × 33-3/32 × 33-3/32		
			mm	258 × 840 × 840		258 × 840 × 840		298 × 840 × 840		
Net weight			lbs (kg)	51 (23)		51 (23)		60 (27)		
Decoration panel	Model			PLP-40BAU		PLP-40BAU		PLP-40BAU		
	External finish			MUNSELL (6.4Y 8.9/0.4)						
	Dimension H × W × D	in.	1-3/8 × 37-13/32 × 37-13/32		1-3/8 × 37-13/32 × 37-13/32		1-3/8 × 37-13/32 × 37-13/32			
		mm	35 × 950 × 950		35 × 950 × 950		35 × 950 × 950			
	Net weight	lbs (kg)			13 (6)		13 (6)		13 (6)	
Heat exchanger				Cross fin						
FAN	Type × Quantity			Turbo fan × 1		Turbo fan × 1		Turbo fan × 1		
	External static press.	in.WG	0.000 (208V)		0.000 (208V)		0.000 (208V)			
		Pa	0		0		0			
		in.WG	0.000 (230V)		0.000 (230V)		0.000 (230V)			
		Pa	0		0		0			
	Motor type			DC motor						
	Motor output	kW			0.050		0.050		0.120	
	Driving mechanism			Direct-drive						
	Airflow rate (Low-Mid2- Mid1-High)	cfm	530 - 565 - 636 - 706		565 - 636 - 706 - 777		777 - 883 - 989 - 1,059			
		m³/min	15.0 - 16.0 - 18.0 -20.0		16.0 - 18.0 - 20.0 - 22.0		22.0 - 25.0 - 28.0 - 30.0			
L/s		250 - 267 - 300 - 333		267 - 300 - 333 - 367		367 - 417 - 467 - 500				
Noise level (Low-Mid2-Mid1-High) (measured in anechoic room)		dB <A>	28 - 30 - 32 - 34 (208-230V)		30 - 32 - 35 - 37 (208-230V)		35 - 38 - 41 - 43 (208-230V)			
		dB <A>	—		—		—			
		dB <A>	—		—		—			
Insulation material				PS						
Air filter				PP honeycomb (long life filter, anti-bacterial type)						
Protection device				Fuse						
Refrigerant control device				LEV						
Connectable outdoor unit				R410A, R22 CITY MULTI						
Diameter of refrigerant pipe (O.D.)	Liquid (R410A) (R22)	in. (mm)	3/8 (9.52) Flare 3/8 (9.52) Flare		3/8 (9.52) Flare 3/8 (9.52) Flare		3/8 (9.52) Flare 3/8 (9.52) Flare			
	Gas (R410A) (R22)		5/8 (15.88) Flare 5/8 (15.88) Flare		5/8 (15.88) Flare 5/8 (15.88) Flare		5/8 (15.88) Flare 3/4 (19.05) Flare			
Field drain pipe size		in. (mm)	O.D. 1-1/4 (32)		O.D. 1-1/4 (32)		O.D. 1-1/4 (32)			
Standard attachment	Document Accessory			Installation Manual, Instruction Book						
Optional parts	Air outlet shutter plate			PAC-SH51SP-E		PAC-SH51SP-E		PAC-SH51SP-E		
	High efficiency filterelement			PAC-SH59KF-E		PAC-SH59KF-E		PAC-SH59KF-E		
	Multi-function casement			PAC-SH53TM-E		PAC-SH53TM-E		PAC-SH53TM-E		
Remark										
	Installation			Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual.						
Note:				*1 Nominal cooling conditions				*2 Nominal heating conditions		Unit converter
				Indoor : 80degF D.B. / 67degF W.B. (26.7degC D.B. / 19.4degC W.B.)				70degF D.B. (21.1degC D.B.)		kcal/h = kW × 860 BTU/h = kW × 3,412 cfm = m³/min × 35.31 lbs = kg/0.4536
				Outdoor : 95degF D.B. (35degC D.B.)				47degF D.B. / 43degF W.B. (8.3degC D.B. / 6.1degC W.B.)		
				Pipe length : 25 ft. (7.6 m)				25 ft. (7.6 m)		
				Level difference : 0 ft. (0 m)				0 ft. (0 m)		
*Due to continuing improvement, above specification may be subject to change without notice.										*Above specification data is subject to rounding variation.

4-2. SOUND LEVEL

PLFY-P-NBMU-E

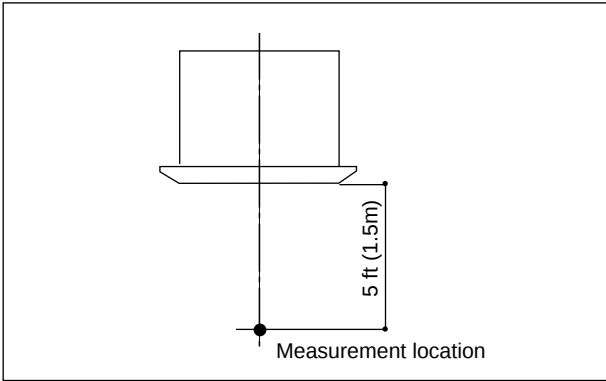


Sound level at anechoic room : Low-Mid2-Mid1-High


	Sound level dB (A)
PLFY-P12NBMU-E PLFY-P12NBMU-ER1 PLFY-P12NBMU-ER2	27-28-29-31
PLFY-P15NBMU-E PLFY-P15NBMU-ER1 PLFY-P15NBMU-ER2	27-28-30-31
PLFY-P18NBMU-E PLFY-P18NBMU-ER1 PLFY-P18NBMU-ER2	28-29-30-32
PLFY-P24NBMU-E PLFY-P24NBMU-ER1 PLFY-P24NBMU-ER2	28-30-32-34
PLFY-P30NBMU-E PLFY-P30NBMU-ER1 PLFY-P30NBMU-ER2	30-32-35-37
PLFY-P36NBMU-E PLFY-P36NBMU-ER1 PLFY-P36NBMU-ER2	35-38-41-43

4-3. NC CURVES


PLFY-P12NBMU-E
PLFY-P12NBMU-ER1
PLFY-P12NBMU-ER2
External static pressure : 0Pa
Power source : 208,230V, 60Hz

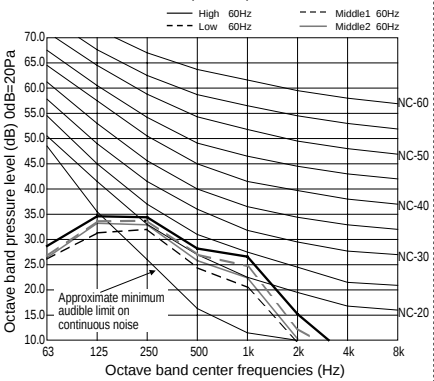


PLFY-P15NBMU-E
PLFY-P15NBMU-ER1
PLFY-P15NBMU-ER2
External static pressure : 0Pa
Power source : 208,230V, 60Hz

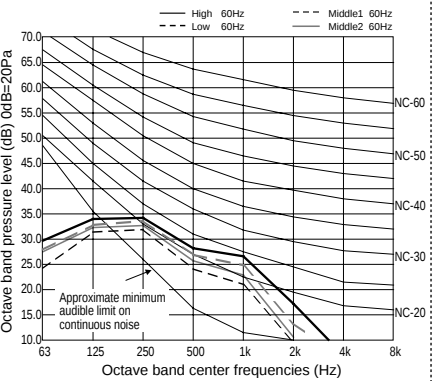


PLFY-P18NBMU-E
PLFY-P18NBMU-ER1
PLFY-P18NBMU-ER2
External static pressure : 0Pa
Power source : 208,230V, 60Hz

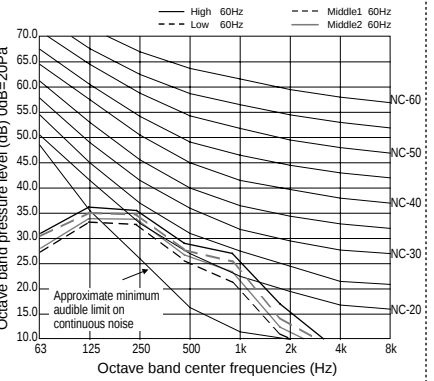


PLFY-P24NBMU-E
PLFY-P24NBMU-ER1
PLFY-P24NBMU-ER2
External static pressure : 0Pa
Power source : 208,230V, 60Hz

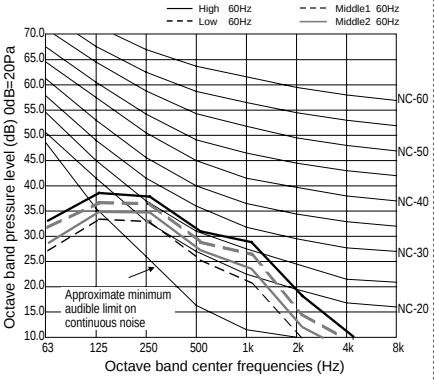

PLFY-P30NBMU-E
PLFY-P30NBMU-ER1
PLFY-P30NBMU-ER2
External static pressure : 0Pa
Power source : 208,230V, 60Hz

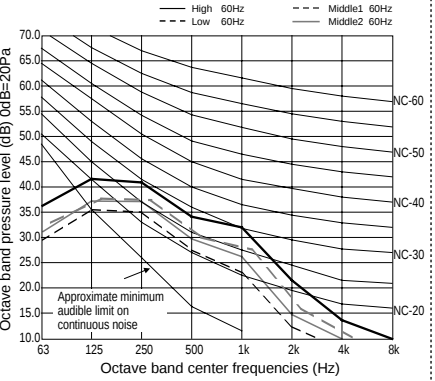

PLFY-P36NBMU-E
PLFY-P36NBMU-ER1
PLFY-P36NBMU-ER2
External static pressure : 0Pa
Power source : 208,230V, 60Hz

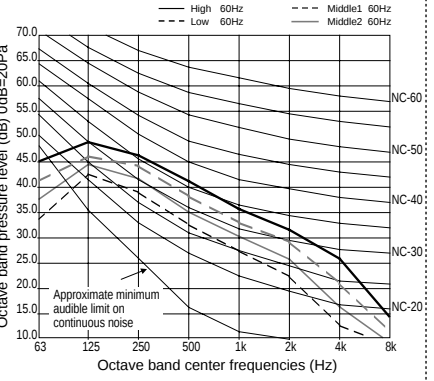

4-4. ELECTRICAL PARTS SPECIFICATIONS



Service Ref. Parts name	Symbol	PLFY-P12NBMU-E	PLFY-P15NBMU-E	PLFY-P18NBMU-E	PLFY-P24NBMU-E	PLFY-P30NBMU-E	PLFY-P36NBMU-E
		PLFY-P12NBMU-ER1	PLFY-P15NBMU-ER1	PLFY-P18NBMU-ER1	PLFY-P24NBMU-ER1	PLFY-P30NBMU-ER1	PLFY-P36NBMU-ER1
		PLFY-P12NBMU-ER2	PLFY-P15NBMU-ER2	PLFY-P18NBMU-ER2	PLFY-P24NBMU-ER2	PLFY-P30NBMU-ER2	PLFY-P36NBMU-ER2
Room temperature thermistor	TH21	Resistance 30°F/15.8kΩ, 50°F/9.6kΩ, 70°F/6.0kΩ, 80°F/4.8kΩ, 90°F/3.9kΩ, 100°F/3.2kΩ					
Liquid pipe thermistor	TH22	Resistance 30°F/15.8kΩ, 50°F/9.6kΩ, 70°F/6.0kΩ, 80°F/4.8kΩ, 90°F/3.9kΩ, 100°F/3.2kΩ					
Gas pipe thermistor	TH23	Resistance 30°F/15.8kΩ, 50°F/9.6kΩ, 70°F/6.0kΩ, 80°F/4.8kΩ, 90°F/3.9kΩ, 100°F/3.2kΩ					
Fuse (Indoor controller board)	FUSE	250V 6.3A					
Fan motor	MF	8-pole OUTPUT 50W					8-pole OUTPUT, 120W
Vane motor	MV	MSBPC20M04 DC12V 300Ω/phase					
Drain pump	DP	PLD-12230ME-1 INPUT 12/10.8W 24 ℓ /Hr					
Drain float swich	FS	Open/short detection					
Linear expansion valve	LEV	DC12V Stepping motor drive port dimension ϕ3.2 (0~2000pulse) EDM-40YGME				DC12V Stepping motor drive port dimension ϕ5.2 (0~2000pulse) EDM-80YGME	
Power supply terminal block	TB2	(L1, L2, GR) 330V 30A					
Transmission terminal block	TB5	(M1, M2, S) 250V 20A					
MA remote controller terminal block	TB15	(1, 2) 250V 10A					

5-1. PLACEMENT OF THE AIR OUTLETS

- For this grille, the blowout direction comes in 11 patterns.

Also, by setting the remote controller to the appropriate settings, you can adjust the air flow and speed. Select the settings from Table1 according to the location in which you want to install the unit.


- Decide on the pattern of the airflow direction.
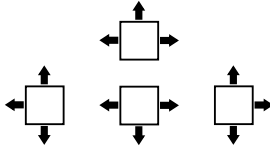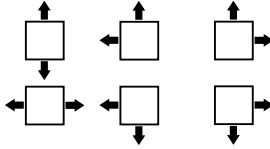
<Table 1>	4-direction	3-direction	2-direction
Blowout direction pattern	Pattern 1 Initial setting 	Pattern 4 One air outlet fully closed 	Pattern 6 2 air outlet fully closed 

Note: For 3 and 2-direction settings, please use the air outlet shutter plate (option).

- According to the number of air outlets and height of the ceiling to install the unit, be sure to set up the switches (SWA, SWB) on the address board to the appropriate setting.

- Correspondence of ceiling heights to numbers of air outlets

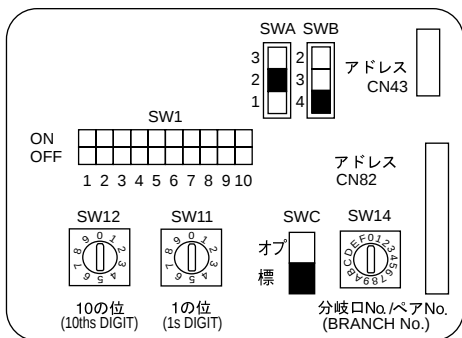

PLFY-P12-P15-P18-P24-P30NBMU-E
 PLFY-P12-P15-P18-P24-P30NBMU-ER1
 PLFY-P12-P15-P18-P24-P30NBMU-ER2

SWA		①	②	③
SWB		Silent	Standard	High ceiling
④	4 direction	2.5m, 8.2ft	2.7m, 8.9ft	3.5m, 11.5ft
③	3 direction	2.7m, 8.9ft	3.0m, 9.8ft	3.5m, 11.5ft
②	2 direction	3.0m, 9.8ft	3.3m, 10.8ft	3.5m, 11.5ft

PLFY-P36NBMU-E
 PLFY-P36NBMU-ER1
 PLFY-P36NBMU-ER2

SWA		①	②	③
SWB		Silent	Standard	High ceiling
④	4 direction	2.7m, 8.9ft	3.2m, 10.5ft	4.5m, 14.8ft
③	3 direction	3.0m, 9.8ft	3.6m, 11.8ft	4.5m, 14.8ft
②	2 direction	3.3m, 10.8ft	4.0m, 13.1ft	4.5m, 14.8ft

5-2. BRANCH DUCT HOLE AND FRESH AIR INTAKE HOLE

At the time of installation, use the duct holes (cut out) located at the positions shown in following diagram, as and when required.

- A fresh air intake hole for the optional multi function casement can also be made.

Note:


The figures marked with * in the drawing below represent the dimensions of the main unit excluding those of the optional multi function casement.

When installing the optional multi function casement, add 5-5/16" (135 mm) to the dimensions marked on the figure.

When installing the branch ducts, be sure to insulate adequately.


Otherwise, condensation and dripping may occur.

Unit : inch(mm)

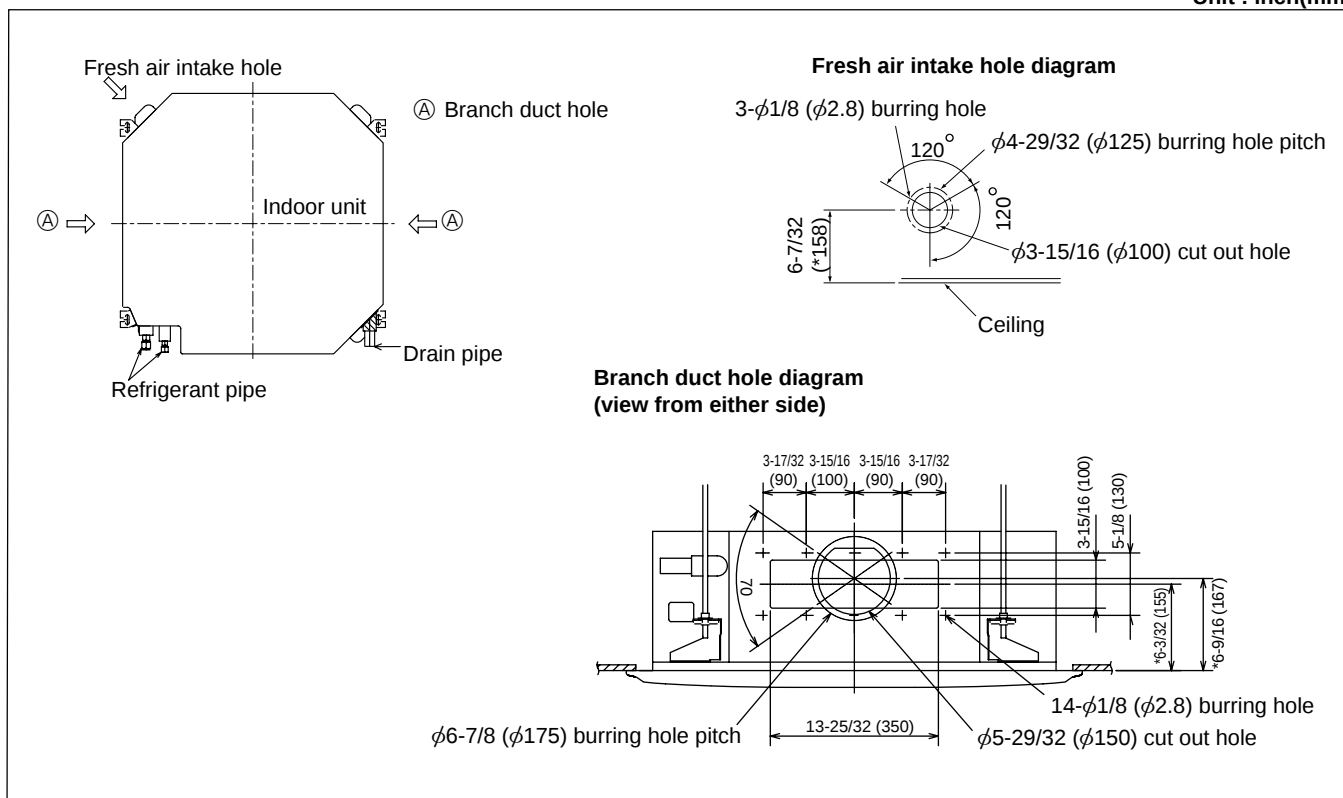

5-3. OPERATION IN CONJUNCTION WITH DUCT FAN (Booster fan)

- Whenever the indoor unit is operating, the duct fan also operates.
 - (1) Connect the optional multiple remote controller adapter (PAC-SA88HA-E) to the connector CN51 on the indoor controller board.
 - (2) Drive the relay after connecting the 12V DC relay between the Yellow and Orange connector lines.
- MB: Electromagnetic switch power relay for duct fan.
 X: Auxiliary relay (For DC 12V, coil rating: 1.0W or smaller)


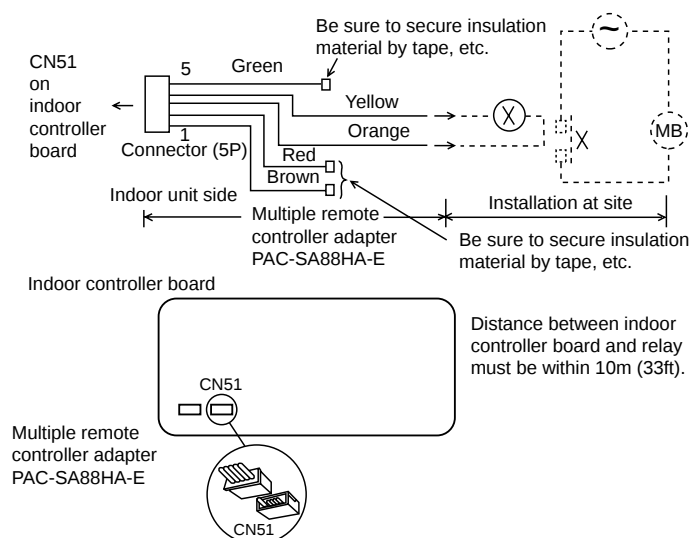


5-4. FRESH AIR INTAKE AMOUNT & STATIC PRESSURE CHARACTERISTICS


1 PLFY-P12 · P18 · P24 · P30NBMU-E, PLFY-P12 · P18 · P24 · P30NBMU-ER1 PLFY-P12 · P18 · P24 · P30NBMU-ER2

Multifunction casement + High efficiency filter


Multifunction casement + Standard filter

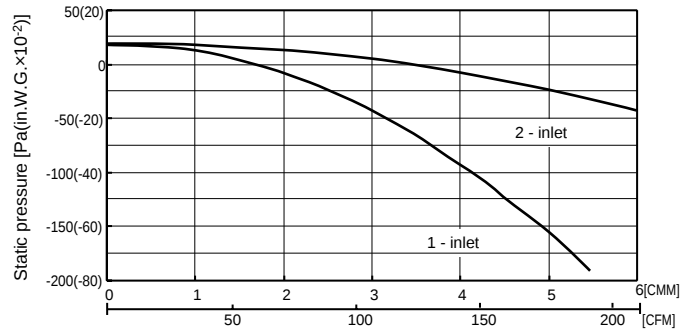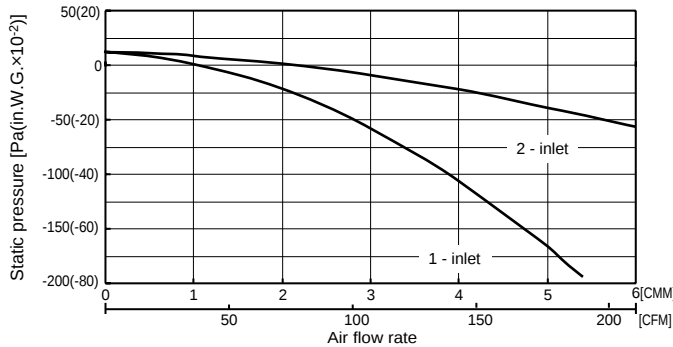

Taking air into the unit

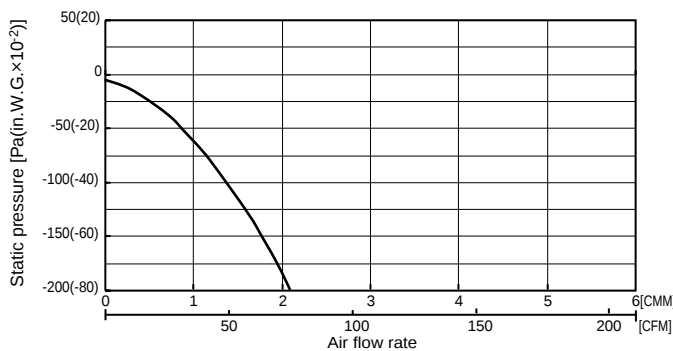

How to read curves


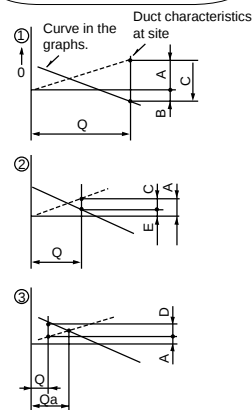


- Q...Designed amount of fresh air intake <CMM (CFM)>
- A...Static pressure loss of fresh air intake duct system with air flow amount Q <Pa (in.W.G.×10⁻²)>
- B...Forced static pressure at air conditioner inlet with air flow amount Q <Pa (in.W.G.×10⁻²)>
- C...Static pressure of booster fan with air flow amount Q <Pa (in.W.G.×10⁻²)>
- D...Static pressure loss increase amount of fresh air intake duct system for air flow amount Q <Pa (in.W.G.×10⁻²)>
- E...Static pressure of indoor unit with air flow amount Q <Pa (in.W.G.×10⁻²)>
- Qa...Estimated amount of fresh air intake without D <CMM (CFM)>


2 PLFY-P36NBMU-E, PLFY-P36NBMU-ER1, PLFY-P36NBMU-ER2

Multifunction casement + Standard filter

Multifunction casement + High efficiency filter

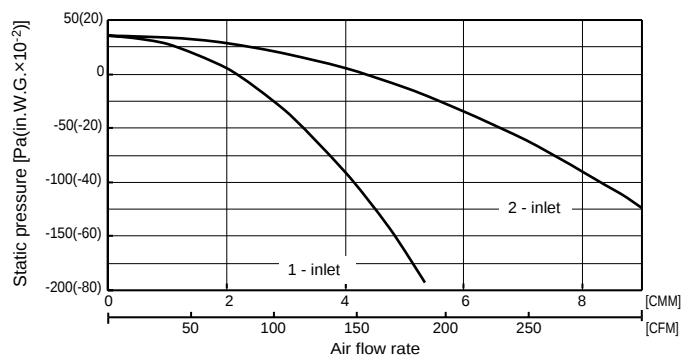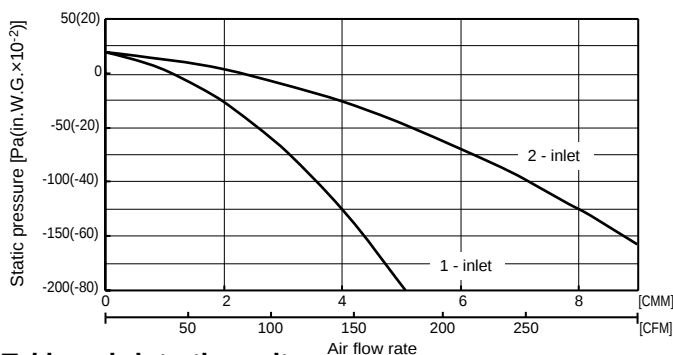


Taking air into the unit

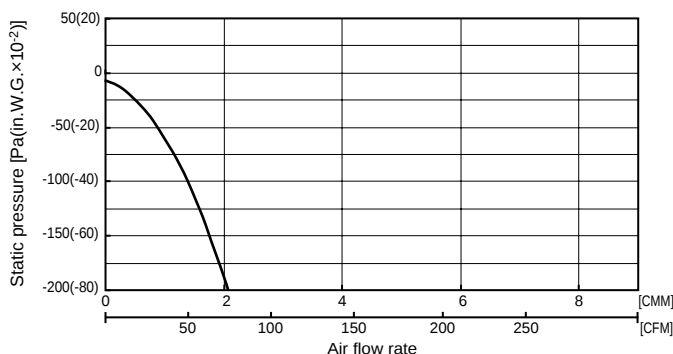


PLFY-P12/15/18/24/30/36NBMU-E
PLFY-P12/15/18/24/30/36NBMU-ER1
PLFY-P12/15/18/24/30/36NBMU-ER2


Unit : inch (mm)

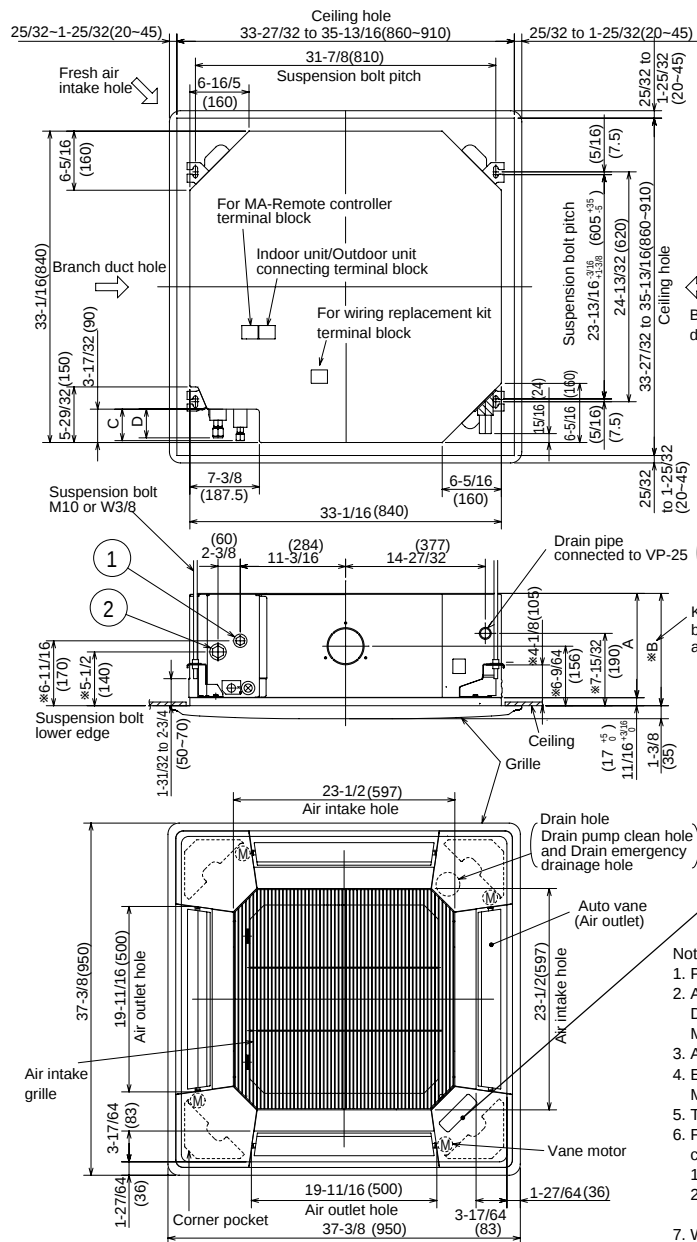

Detail connecting of branch duct (Both aspects)

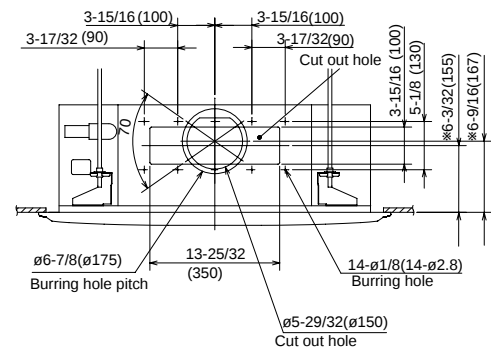


Detail drawing of fresh air intake hole

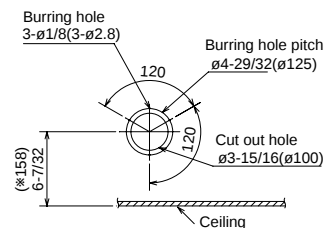

In case of standard grille




In case of wireless remote controller

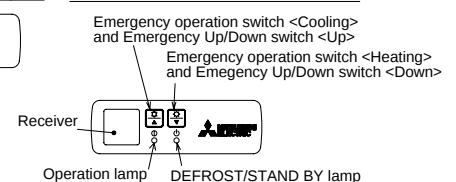


Note:

- Please choose the Grille from a standard grille.
- As for drain pipe, please use VP-25 (O.D. ϕ 1-1/4(ϕ 32) PVC TUBE.)
Drain pump is included.
Max. lifting height is 70-7/18 (850mm) from the ceiling.
- As for suspension bolt, please use M10 or W3/8. (Procured at local site)
- Electrical box may be removed for the service purpose.
Make sure to slack the electrical wire little bit for control/power wires connection.
- The height of the indoor unit is able to be adjusted with the grille attached.
- For the installation of the optional high efficiency filter or optional multi-functional casement.
1) Add 5-5/16" (135mm) to the dimensions *marked on the figure.
2) The optional high efficiency filter becomes optional multi-functional casement and concomitant use.
- When installing the branch ducts, be sure to insulate adequately.
Otherwise condensation and dripping may occur.
(It becomes the cause of dew drops/water dew.)
- As for necessary installation/service space, please refer to the left figure.

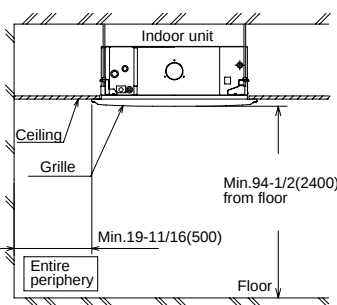

Service ref.	①	②	A	B	C	D
PLFY-P12NBMU-E PLFY-P12NBMU-ER1 PLFY-P12NBMU-ER2 PLFY-P15NBMU-E PLFY-P15NBMU-ER1 PLFY-P15NBMU-ER2 PLFY-P18NBMU-ER1 PLFY-P18NBMU-ER2	Refrigerant pipe ... ϕ 6.35 Flared connection ...1/4F	Refrigerant pipe ... ϕ 12.7 Flared connection ...1/2F				
PLFY-P18NBMU-E	Refrigerant pipe ϕ 6.35 / ϕ 9.52 Flared connection 1/4F / 3/8F (compatible)	Refrigerant pipe ϕ 12.7 / ϕ 15.88 Flared connection 1/2F / 5/8F (compatible)	9-1/2 (241)	10-3/16 (258)	3-5/32 (80)	2-29/32 (74)
PLFY-P24NBMU-E PLFY-P24NBMU-ER1 PLFY-P24NBMU-ER2 PLFY-P30NBMU-E PLFY-P30NBMU-ER1 PLFY-P30NBMU-ER2 PLFY-P36NBMU-E	Refrigerant pipe ... ϕ 9.52 Flared connection ...3/8F	Refrigerant pipe ... ϕ 15.88 Flared connection ...5/8F				
PLFY-P36NBMU-ER1 PLFY-P36NBMU-ER2	Refrigerant pipe ... ϕ 15.88 Flared connection ...5/8F	Refrigerant pipe ϕ 15.88 / ϕ 19.05 Flared connection 5/8F / 3/4F (compatible)	11-1/16 (281)	11-3/4 (298)	3-11/32 (85)	3-1/32 (77)

PLFY-P12/15/18/24/30/36NBMU-E
PLFY-P12/15/18/24/30/36NBMU-ER1

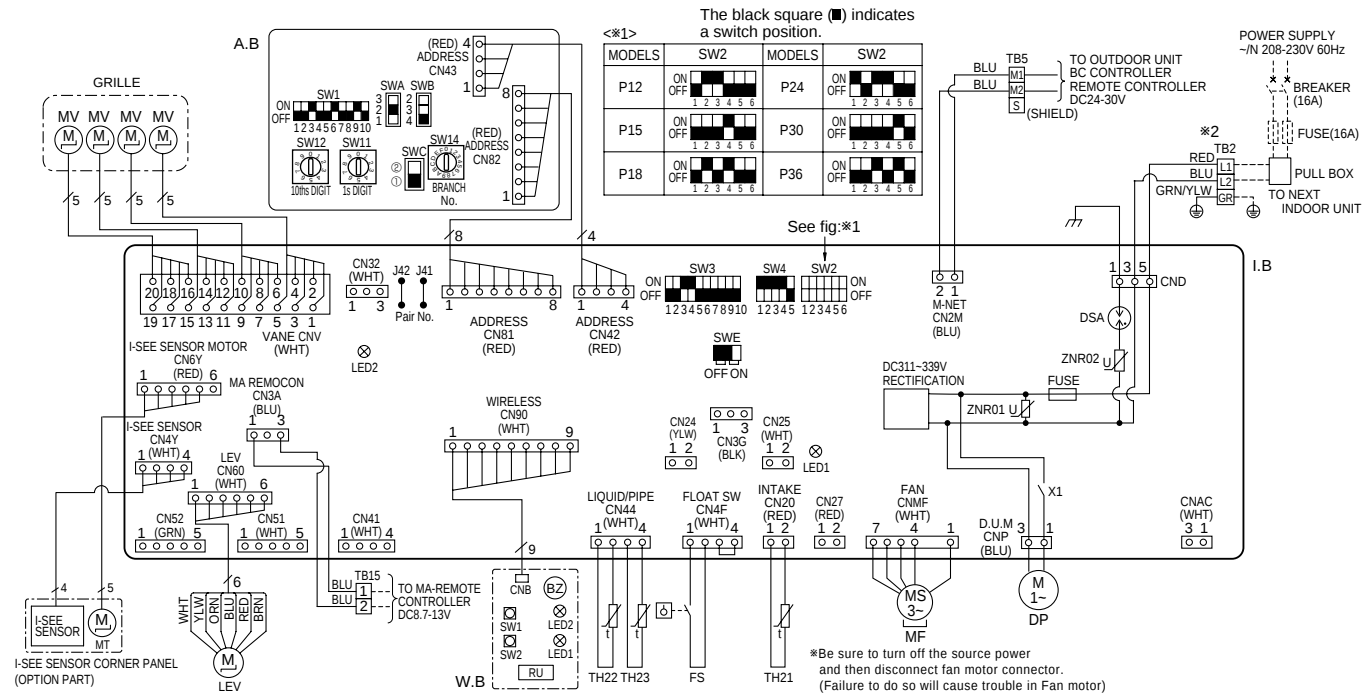

NOTES:

1. At servicing for outdoor unit, always follow the wiring diagram of outdoor unit.
 2. In case of using MA-Remote controller, please connect to TB15. (Remote controller wire is non-polar.)
 3. In case of using M-NET, please connect to TB5. (Transmission line is non-polar.)
 4. Symbol [S] of TB5 is the shield wire connection.
 5. Symbols used in wiring diagram above are, : terminal block, : connector.
 6. The setting of the SW2 dip switches differs in the capacity. For the detail, refer to fig.<#1>.
- *2. Use copper supply wires.


[LEGEND]

SYMBOL		NAME		SYMBOL		NAME		SYMBOL		NAME	
I. B	INDOOR CONTROLLER BOARD			DP	DRAIN-UP MACHINE			A. B	ADDRESS BOARD		
	CN27	CONNECTOR	DAMPER	FS	DRAIN FLOAT SWITCH				SWA	SWITCH	CEILING HEIGHT SELECTOR
			REMOTE SWITCH	LEV	LINEAR EXPANSION VALVE				SWB		DISCHARGE OUTLET NUMBER
			CENTRALLY CONTROL	MF	FAN MOTOR						SELECTOR
			REMOTE INDICATION	MV	VANE MOTOR				SWC		OPTION SELECTOR
	DSA	SURGE ABSORBER		TB2	TERMINAL	POWER SUPPLY			SW1	MODE SELECTION	
	FUSE	FUSE (T6.3A/250V)		TB5	BLOCK	TRANSMISSION			SW11	ADDRESS SETTING 1s DIGIT	
	LED1	POWER SUPPLY (I. B)		TB15		MA-REMOTE CONTROLLER			SW12	ADDRESS SETTING 10ths DIGIT	
	LED2	POWER SUPPLY (I. B)		TH21	THERMISTOR	ROOM TEMP. DETECTION (0°C/15kΩ, 25°C/5.4kΩ)			SW14	BRANCH NO.	
	SW2	SWITCH	CAPACITY CODE	TH22		PIPE TEMP. DETECTION / LIQUID (0°C/15kΩ, 25°C/5.4kΩ)			OPTION PART		
	SW3		MODE SELECTION			TH23	PIPE TEMP. DETECTION / GAS (0°C/15kΩ, 25°C/5.4kΩ)		W. B	PCB FOR WIRELESS REMOTE CONTROLLER	
	SW4		MODEL SELECTION		BZ		BUZZER				
	SWE		DRAIN-UP MACHINE (TEST MODE)		LED1		LED (OPERATION INDICATION: GREEN)				
	X1	AUX. RELAY	DRAIN WATER LIFTING-UP MACH.				LED2			LED (PREPARATION FOR HEATING: ORANGE)	
	ZNR01.02	VARISTOR					RU		RECEIVING UNIT		
						SW1	EMERGENCY OPERATION (HEAT/DOWN)				
						SW2	EMERGENCY OPERATION (COOL/UP)				

LED on indoor board for service

Mark	Meaning	Function
LED1	Main power supply	Main Power supply (Indoor unit:208-230V) power on → lamp is lit.
LED2	Power supply for MA-Remote controller	Power supply for MA-Remote controller on → lamp is lit.

--

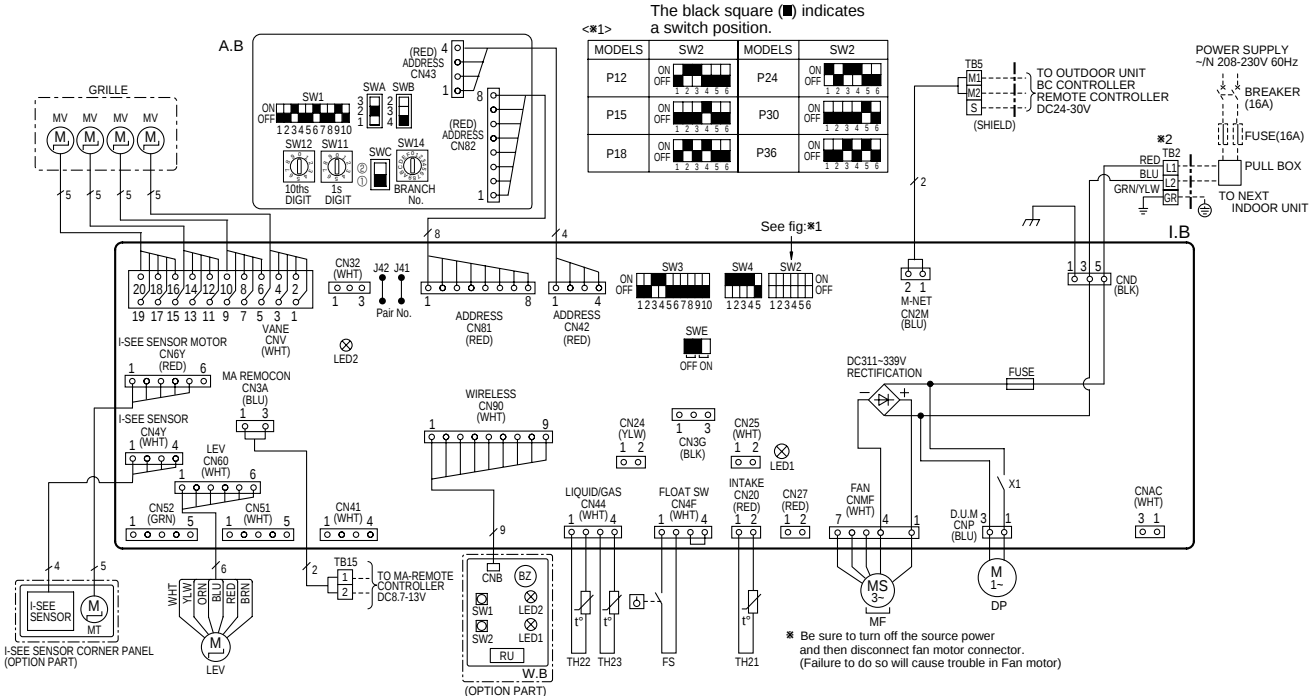

NOTES:

1. At servicing for outdoor unit, always follow the wiring diagram of outdoor unit.
 2. In case of using MA-Remote controller, please connect to TB15. (Remote controller wire is non-polar.)
 3. In case of using M-NET, please connect to TB5. (Transmission line is non-polar.)
 4. Symbol [S] of TB5 is the shield wire connection.
 5. Symbols used in wiring diagram above are, : terminal block, : connector.
 6. The setting of the SW2 dip switches differs in the capacity. For the detail, refer to fig<❖1>.
- ❖2. Use copper supply wires.

[LEGEND]

SYMBOL		NAME		SYMBOL		NAME		SYMBOL		NAME	
I. B		INDOOR CONTROLLER BOARD		A. B		ADDRESS BOARD					
CN24	CONNECTOR	EXTERNAL HEATER	DP	DRAIN PUMP	SWA	SWITCH	CEILING HEIGHT SELECTOR				
CN27		DAMPER	LEV	DRAIN FLOAT SWITCH	SWB		DISCHARGE OUTLET NUMBER SELECTOR				
CN32		REMOTE SWITCH	MF	LINEAR EXPANSION VALVE	SWC		OPTION SELECTOR				
CN51		CENTRALLY CONTROL	MV	FAN MOTOR	SW1		MODE SELECTION				
CN52		REMOTE INDICATION	TB2	VANE MOTOR	SW11		ADDRESS SETTING 1s DIGIT				
FUSE	FUSE (T6.3AL/250V)		TB5	TERMINAL BLOCK	SW12		ADDRESS SETTING 10ths DIGIT				
LED1	POWER SUPPLY (I. B)		TB15		SW14		BRANCH NO.				
LED2	POWER SUPPLY (I. B)		TH21	THERMISTOR	OPTION PART						
SW2	SWITCH	CAPACITY CODE			W.B	PCB FOR WIRELESS REMOTE CONTROLLER					
SW3		MODE SELECTION	TH22		BZ	BUZZER					
SW4		MODEL SELECTION			LED1	LED (OPERATION INDICATION : GREEN)					
SWE		DRAIN PUMP (TEST MODE)	TH23		LED2	LED (PREPARATION FOR HEATING : ORANGE)					
X1	AUX. RELAY	DRAIN PUMP			RU	RECEIVING UNIT					
					SW1	EMERGENCY OPERATION (HEAT / DOWN)					
					SW2	EMERGENCY OPERATION (COOL / UP)					
					MT	I-SEE SENSOR MOTOR					


LED on indoor board for service

Mark	Meaning	Function
LED1	Main power supply	Main Power supply (Indoor unit: 208-230V) power on → lamp is lit
LED2	Power supply for MA-Remote controller	Power supply for MA-Remote controller on → lamp is lit

PLFY-P12/15/18/24/30/36NBMU-E

PLFY-P12/15/18/24/30/36NBMU-ER1

PLFY-P12/15/18/24/30/36NBMU-ER2

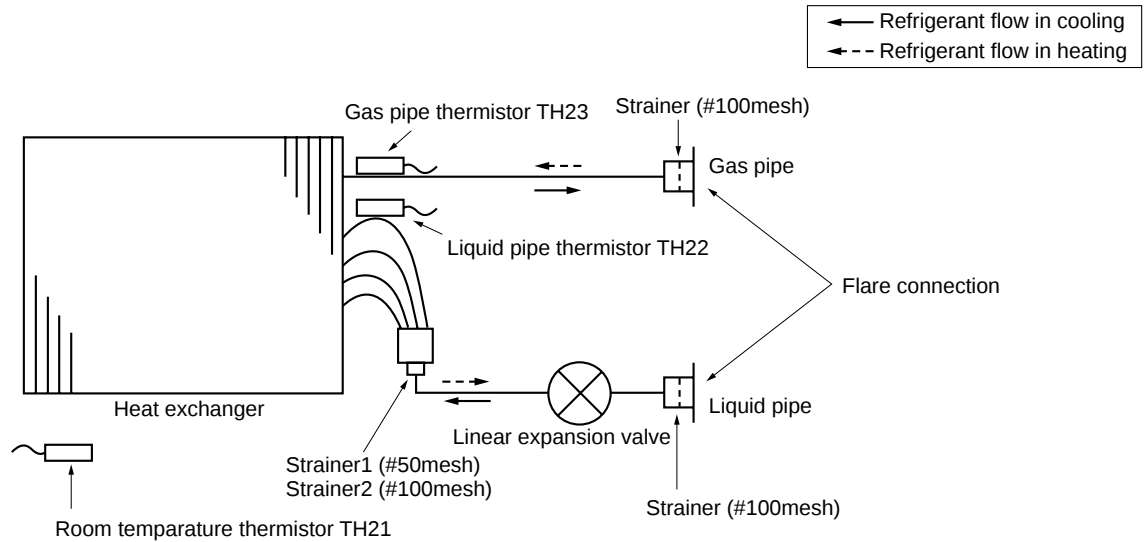


Unit : mm (inch)

Model Item	PLFY-P12/P15NBMU-E PLFY-P12/P15NBMU-ER1 PLFY-P12/P15NBMU-ER2	PLFY-P18NBMU-E PLFY-P18NBMU-ER1 PLFY-P18NBMU-ER2	PLFY-P24/P30NBMU-E PLFY-P24/P30NBMU-ER1 PLFY-P24/P30NBMU-ER2	PLFY-P36NBMU-E PLFY-P36NBMU-ER1 PLFY-P36NBMU-ER2
Gas pipe	$\phi 12.7$ (1/2")	$\phi 12.7$ (1/2")/ $\phi 15.88$ (5/8")	$\phi 15.88$ (5/8")	$\phi 15.88$ (5/8")/ $\phi 19.05$ (3/4")
Liquid pipe	$\phi 6.35$ (1/4")	$\phi 6.35$ (1/4")/ $\phi 9.52$ (3/8")	$\phi 9.52$ (3/8")	$\phi 9.52$ (3/8")

INDOOR UNIT CONTROL

9-1. COOL OPERATION

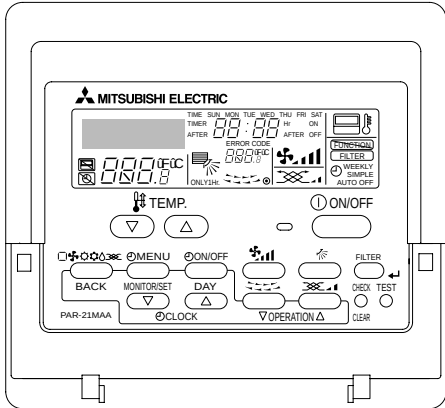

<How to operate>

- ① Press POWER ON/OFF button.
- ② Press the operation MODE button to display COOL.
- ③ Press the TEMP. button to set the desired temperature.

NOTE: The set temperature changes 2°F when the or button is pressed one time. Cooling 67 to 87°F


Control modes	Control details	Remarks				
1. Thermostat function	1-1. Thermostat function (Function to prevent restarting for 3 minutes) - Room temperature $\geq$ desired temperature + 2°F ...Thermo ON - Room temperature $\leq$ desired temperature ...Thermo OFF					
	1-2. Anti-freezing control Detected condition : When the liquid pipe temp. (TH22) is 32°F or less in 16 minutes from compressors start up, anti-freezing control starts and the thermo OFF. Released condition : The timer which prevents reactivating is set for 3 minutes, and anti-freezing control is cancelled when any one of the following conditions is satisfied. ① Liquid pipe temp. (TH22) turns 50°F or above. ② The condition of the thermo OFF has become complete by thermostat, etc. ③ The operation modes became mode other than COOL. ④ The operation stopped.					
2. Fan	By the remote controller setting (switch of 4 speeds+Auto) <table border="1"><thead><tr><th>Type</th><th>Fan speed notch</th></tr></thead><tbody><tr><td>4 speeds + Auto type</td><td>[Low], [Med2], [Med1], [High], [Auto]</td></tr></tbody></table> When [Auto] is set, fan speed is changed depending on the value of: Room temperature - Desired temperature	Type	Fan speed notch	4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]	
Type	Fan speed notch					
4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]					

To be continued on the next page.

From the preceding page.

Control modes	Control details	Remarks
3. Drain pump	3-1. Drain pump control • Always drain pump ON during the COOL and DRY mode operation. (Regardless of the thermo ON/OFF) • When the operation mode has changed from the COOL or DRY to the others (including Stop), OFF the control after the drain pump ON for 3 minutes.	
	Float switch control • Float switch control judges whether the sensor is in the air or in the water by turning the float switch ON/OFF. In the water: Detected that the float switch is ON for 15 seconds. In the air : Detected that the float switch is OFF for 15 seconds. Float SW ON OFF 15sec. 15sec. 15sec. 1min.30sec. 1min.30sec. In the water In the air In the water Error postponement Drain pump abnormal	
4. Vane (up/down vane change)	(1) Initial setting: Start at COOL mode and horizontal vane. (2) Vane position: Horizontal → Downward A → Downward B → Downward C → Downward D → Swing → Auto (3) Restriction of the downward vane setting When setting the downward vane A, B, C or D in [Med1], [Med2] or [Low] of the fan speed notch, the vane changes to horizontal position after 1 hour have passed.	· "ONLY 1 Hr" appears on the wired remote controller.

9-2. DRY OPERATION

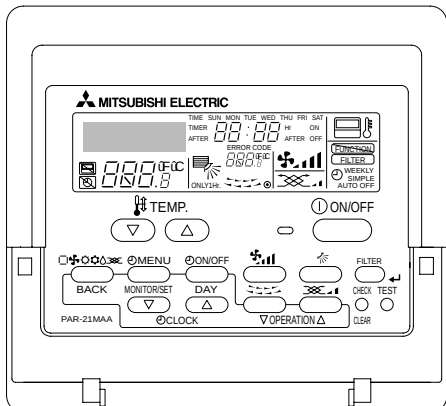


<How to operate>

- ① Press POWER ON/OFF button.
- ② Press the operation MODE button to display DRY.
- ③ Press the TEMP. button to set the desired temperature.

NOTE: The set temperature changes 2°F when the ∇ or Δ button is pressed one time. Dry 67 to 87°F

Control modes	Control details	Remarks																														
1. Thermostat function	1-1. Thermostat function (Function to prevent restarting for 3 minutes) Setting the Dry thermo by the thermostat signal and the room temperature (TH21). Dry thermo ON Room temperature ≥ desired temperature + 2°F Dry thermo OFF Room temperature ≤ desired temperature <table><tr><th rowspan="2">Room temperature</th><th colspan="2">3 min. passed since starting operation</th><th rowspan="2">Dry thermo ON time (min)</th><th rowspan="2">Dry thermo OFF time (min)</th></tr><tr><th>Thermostat signal</th><th>Room temperature (T1)</th></tr><tr><td rowspan="5">Over 64°F</td><td rowspan="4">ON</td><td>T1 ≥ 83°F</td><td>9</td><td>3</td></tr><tr><td>83°F > T1 ≥ 79°F</td><td>7</td><td>3</td></tr><tr><td>79°F > T1 ≥ 75°F</td><td>5</td><td>3</td></tr><tr><td>75°F > T1</td><td>3</td><td>3</td></tr><tr><td>OFF</td><td>Unconditional</td><td>3</td><td>10</td></tr><tr><td>Less than 64°F</td><td colspan="3">Dry thermo OFF</td><td></td></tr></table>	Room temperature	3 min. passed since starting operation		Dry thermo ON time (min)	Dry thermo OFF time (min)	Thermostat signal	Room temperature (T1)	Over 64°F	ON	T1 ≥ 83°F	9	3	83°F > T1 ≥ 79°F	7	3	79°F > T1 ≥ 75°F	5	3	75°F > T1	3	3	OFF	Unconditional	3	10	Less than 64°F	Dry thermo OFF				
	Room temperature		3 min. passed since starting operation				Dry thermo ON time (min)	Dry thermo OFF time (min)																								
Thermostat signal		Room temperature (T1)																														
Over 64°F	ON	T1 ≥ 83°F	9	3																												
		83°F > T1 ≥ 79°F	7	3																												
		79°F > T1 ≥ 75°F	5	3																												
		75°F > T1	3	3																												
	OFF	Unconditional	3	10																												
Less than 64°F	Dry thermo OFF																															
1-2. Frozen prevention control No control function																																
2. Fan	Indoor fan operation controlled depends on the compressor conditions. <table><tr><th>Dry thermo</th><th colspan="2">Fan speed notch</th></tr><tr><td>ON</td><td colspan="2">[Low]</td></tr><tr><td rowspan="2">OFF</td><td>Excluding the following</td><td>Stop</td></tr><tr><td>Room temp. < 64°F</td><td>[Low]</td></tr></table> Note: Remote controller setting is not acceptable.	Dry thermo	Fan speed notch		ON	[Low]		OFF	Excluding the following	Stop	Room temp. < 64°F	[Low]																				
Dry thermo	Fan speed notch																															
ON	[Low]																															
OFF	Excluding the following	Stop																														
	Room temp. < 64°F	[Low]																														
3. Drain pump	Same control as COOL operation																															
4. Vane (up/down vane change)	Same control as COOL operation																															

9-3. FAN OPERATION

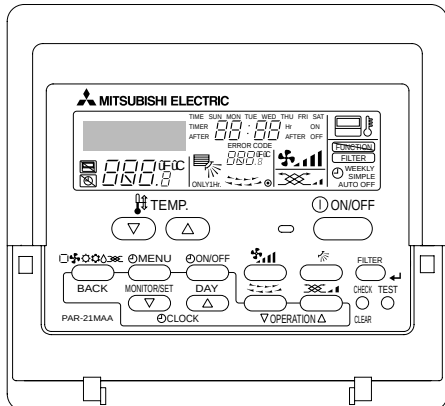


<How to operate>

- ① Press POWER ON/OFF button.
- ② Press the operation MODE button to display FAN.

Control modes	Control details	Remarks				
1. Fan	Set by remote controller. <table><tr><td>Type</td><td>Fan speed notch</td></tr><tr><td>4 speeds + Auto type</td><td>[Low], [Med2], [Med1], [High], [Auto]</td></tr></table> When [Auto] is set, fan speed becomes [Low].	Type	Fan speed notch	4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]	
Type	Fan speed notch					
4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]					
2. Drain pump	2-1. Drain pump control The drain pump turns ON for the specified amount of time when any of the following conditions is met: ① ON for 3 minutes after the operation mode is switched from COOL or DRY to another operation mode (FAN). ② ON for 6 minutes after the float switch is submerged in the water when the float switch control judges the sensor is in the water.					
	2-2. Float switch control • Float switch control judges whether the sensor is in the air or in the water by turning the float switch ON/OFF. In the water : Detected that the float switch is ON for 15 seconds. In the air : Detected that the float switch is OFF for 15 seconds.	· Same control as COOL operation				
3. Vane (up/down vane change)	Same as the control performed during the COOL operation, but with no restriction on the vane's downward blow setting					

9-4. HEAT OPERATION

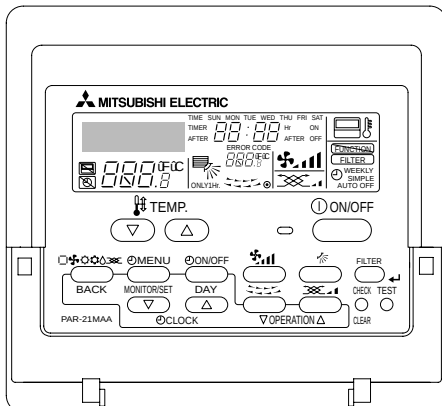

<How to operate>

- ① Press POWER ON/OFF button.
 - ② Press the operation MODE button to display HEAT.
 - ③ Press the TEMP. button to set the desired temperature.
- NOTE:** The set temperature changes 2°F when the or button is pressed one time. Heating 63 to 83°F.

<Display in HEAT operation>

[DEFROST]

The [DEFROST] symbol is only displayed during the defrost operation.

[STANDBY]

The [STANDBY] symbol is only displayed during the hot adjust mode.


Control modes	Control details	Remarks				
1. Thermostat function	1-1. Thermostat function (Function to prevent restarting for 3 minutes) - Room temperature ≤ desired temperature -2°F ...Thermo ON - Room temperature ≥ desired temperature ...Thermo OFF					
2. Fan	By the remote controller setting (switch of 4 speeds+Auto) <table><tr><th>Type</th><th>Fan speed notch</th></tr><tr><td>4 speeds + Auto type</td><td>[Low], [Med2], [Med1], [High], [Auto]</td></tr></table> When [Auto] is set, fan speed is changed depending on the value of: Desired temperature - Room temperature Give priority to under-mentioned controlled mode 2-1. Hot adjust mode 2-2. Preheating exclusion mode 2-3. Thermo OFF mode (When the compressor off by the thermostat) 2-4. Cool air prevention mode (Defrosting mode)	Type	Fan speed notch	4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]	
Type	Fan speed notch					
4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]					
	2-1. Hot adjust mode The fan controller becomes the hot adjuster mode for the following conditions. ① When starting the HEAT operation ② When the thermostat function changes from OFF to ON. ③ When release the HEAT defrosting operation A: Hot adjust mode starts. B: 5 minutes have passed since the condition A or the indoor liquid pipe temperature turned 95°F or more. C: 2 minutes have passed since the condition A. (Terminating the hot adjust mode)	*1 "STAND BY" will be displayed during the hot adjust mode.				
	2-2. Preheating exclusion mode When the condition changes the auxiliary heater ON to OFF (thermostat or operation stop, etc), the indoor fan operates in [Low] mode for 1 minute.	· This control is same for the model without auxiliary heater.				

To be continued on the next page.

From the preceding page

Control modes	Control details	Remarks
2. Fan	2-3. Thermo OFF mode When the thermostat function changes to OFF, the indoor fan operates in [Extra low].	
	2-4. Heat defrosting mode The indoor fan stops.	
3. Drain pump	3-1. Drain pump control The drain pump turns ON for the specified amount of time when any of the following conditions is met: ① ON for 3 minutes after the operation mode is switched from COOL or DRY to another operation mode (FAN). ② ON for 6 minutes after the float switch is submerged in the water when the float switch control judges the sensor is in the water.	
	3-2. Float switch control • Float switch control judges whether the sensor is in the air or in the water by turning the float switch ON/OFF. In the water: Detected that the float switch is ON for 15 seconds. In the air : Detected that the float switch is OFF for 15 seconds.	• Same control as COOL operation
4. Vane control (Up/down vane change)	(1) Initial setting: OFF → HEAT...[last setting] When the last setting is [Swing] ... [Downward D] When changing the mode from exception of HEAT to HEAT operation ...[Downward D] (2) Vane position: Horizontal →Downward A →Downward B →Downward C→Downward D→Swing→Auto ↑ (3) Restriction of vane position ① The vane is horizontally fixed for the following modes. (The control by the remote controller is temporally invalidated and control by the unit.) •Thermo OFF •Hot adjust [Extra low] mode •Heat defrost mode	

9-5. AUTO OPERATION [AUTOMATIC COOL/HEAT CHANGE OVER OPERATION]

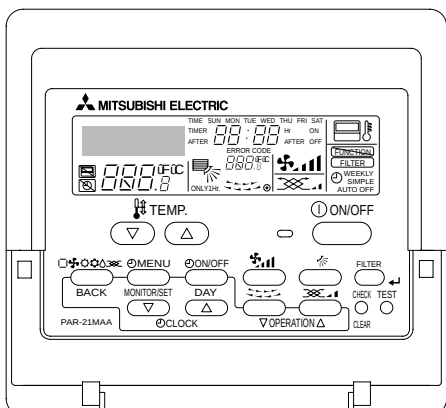

<How to operate>

- ① Press POWER ON/OFF button.
 - ② Press the operation MODE button to display AUTO.
 - ③ Press the TEMP. button to set the desired temperature.
- NOTE:** The set temperature changes 2°F when the  or  button is pressed one time. Automatic 67 to 83°F

Control modes	Control details	Remarks
1. Initial value of operation mode	HEAT mode for room temperature < Desired temperature COOL mode for room temperature ≥ Desired temperature	
2. Mode change	(1) HEAT mode → COOL mode Room temperature ≥ Desired temperature + 3°F. or 3 min. has passed (2) COOL mode → HEAT mode Room temperature ≤ Desired temperature - 3°F. or 3 min. has passed	
3. COOL mode	Same control as cool operation	
4. HEAT mode	Same control as heat operation	

9-6. WHEN UNIT IS STOPPED CONTROL MODE









Control modes	Control details	Remarks
1. Drain pump	1-1. Drain pump control The drain pump turns ON for the specified amount of time when any of the following conditions is met: ① ON for 3 minutes after the operation mode is switched from COOL or DRY to another operation mode (FAN). ② ON for 6 minutes after the float switch is submerged in the water when the float switch control judges the sensor is in the water.	
	1-2. Float switch control • Float switch control judges whether the sensor is in the air or in the water by turning the float switch ON/OFF. In the water : Detected that the float switch is ON for 15 seconds. In the air : Detected that the float switch is OFF for 15 seconds.	• Same control as COOL operation

10-1. HOW TO CHECK THE PARTS

PLFY-P12/15/18/24/30/36NBMU-E

PLFY-P12/15/18/24/30/36NBMU-ER2

PLFY-P12/15/18/24/30/36NBMU-ER1

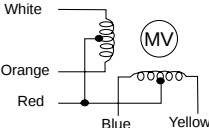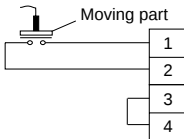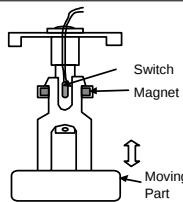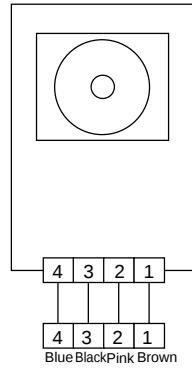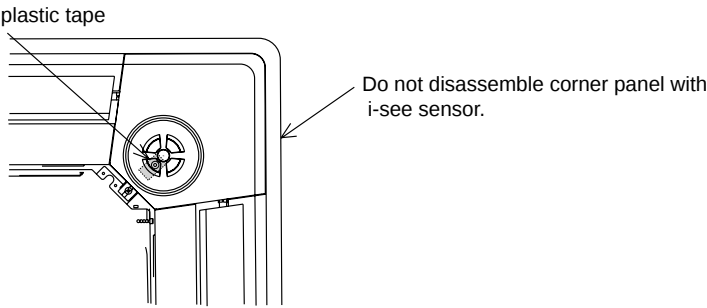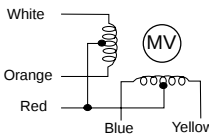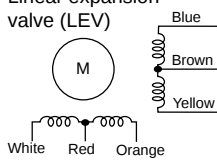Parts name	Check points														
Room temperature thermistor (TH21) Liquid pipe thermistor (TH22) Gas pipe thermistor (TH23)	Disconnect the connector then measure the resistance with a tester. (At the ambient temperature 50°F~86°F) <table><tr><td>Normal</td><td>Abnormal</td></tr><tr><td>4.3kΩ~9.6kΩ</td><td>Open or short</td></tr></table> (Refer to the next page for a detail.)	Normal	Abnormal	4.3kΩ~9.6kΩ	Open or short										
Normal	Abnormal														
4.3kΩ~9.6kΩ	Open or short														
Vane motor (MV) 	Measure the resistance between the terminals with a tester. (At the ambient temperature of 68°F~86°F) <table><tr><td>Connector</td><td>Normal</td><td>Abnormal</td></tr><tr><td>Red - Yellow</td><td rowspan="4">300Ω</td><td rowspan="4">Open or short</td></tr><tr><td>Red - Blue</td></tr><tr><td>Red - Orange</td></tr><tr><td>Red - White</td></tr></table>	Connector	Normal	Abnormal	Red - Yellow	300Ω	Open or short	Red - Blue	Red - Orange	Red - White					
Connector	Normal	Abnormal													
Red - Yellow	300Ω	Open or short													
Red - Blue															
Red - Orange															
Red - White															
Drain pump (DP) (Option) 	Measure the resistance between the terminals with a tester. (Winding temperature 68°F) <table><tr><td>Normal</td><td>Abnormal</td></tr><tr><td>290Ω</td><td>Open or short</td></tr></table>	Normal	Abnormal	290Ω	Open or short										
Normal	Abnormal														
290Ω	Open or short														
Drain float switch (FS) (Option) 	Measure the resistance between the terminals using a tester. <table><tr><td>State of moving part</td><td>Normal</td><td>Abnormal</td></tr><tr><td>UP</td><td>Short</td><td>Other than short</td></tr><tr><td>DOWN</td><td>Open</td><td>Other than open</td></tr></table> 	State of moving part	Normal	Abnormal	UP	Short	Other than short	DOWN	Open	Other than open					
State of moving part	Normal	Abnormal													
UP	Short	Other than short													
DOWN	Open	Other than open													
i-see sensor (Option) 	Turn on the indoor unit with black plastic tape on the outside of the i-see sensor controller board. With electricity being turned on, measure the power voltage between connectors with a tester. The i-see sensor rotates, and pull out the connector of motor for the i-see sensor.  i-see sensor (At the ambient temperature of 50°F~104°F) <table><tr><td>i-see sensor connector</td><td>Normal</td><td>Abnormal</td></tr><tr><td>②(-)—③(+)</td><td>DC 1.857V~ 3.132V</td><td>Other than the normal</td></tr><tr><td>①(+)—②(-)</td><td>DC 0.939V~ 1.506V</td><td>Other than the normal</td></tr></table> NOTE : Be careful when handling static electricity.	i-see sensor connector	Normal	Abnormal	②(-)—③(+)	DC 1.857V~ 3.132V	Other than the normal	①(+)—②(-)	DC 0.939V~ 1.506V	Other than the normal					
i-see sensor connector	Normal	Abnormal													
②(-)—③(+)	DC 1.857V~ 3.132V	Other than the normal													
①(+)—②(-)	DC 0.939V~ 1.506V	Other than the normal													
i-see sensor motor (MT) (Option) 	Measure the resistance between the terminals with a tester. (At the ambient temperature of 68°F~86°F) <table><tr><td>Connector</td><td>Normal</td><td>Abnormal</td></tr><tr><td>Red - Yellow</td><td rowspan="4">250Ω</td><td rowspan="4">Open or short</td></tr><tr><td>Red - Blue</td></tr><tr><td>Red - Orange</td></tr><tr><td>Red - White</td></tr></table>	Connector	Normal	Abnormal	Red - Yellow	250Ω	Open or short	Red - Blue	Red - Orange	Red - White					
Connector	Normal	Abnormal													
Red - Yellow	250Ω	Open or short													
Red - Blue															
Red - Orange															
Red - White															
Linear expansion valve (LEV) 	Disconnect the connector then measure the resistance valve with a tester. <table><tr><td colspan="4">Normal</td><td>Abnormal</td></tr><tr><td>White-Red</td><td>Yellow-Brown</td><td>Orange-Red</td><td>Blue-Brown</td><td rowspan="2">Open or short</td></tr><tr><td colspan="4">200Ω ±10%</td></tr></table> Refer to 7-1-2.	Normal				Abnormal	White-Red	Yellow-Brown	Orange-Red	Blue-Brown	Open or short	200Ω ±10%			
Normal				Abnormal											
White-Red	Yellow-Brown	Orange-Red	Blue-Brown	Open or short											
200Ω ±10%															

10-1-1. Thermistor

<Thermistor characteristic graph>

Thermistor for lower temperature


Room temperature thermistor (TH21)
Liquid pipe temperature thermistor (TH22)
Gas pipe temperature thermistor (TH23)

Thermistor $R_0 = 15k\Omega \pm 3\%$

Fixed number of $B = 3480 \pm 2\%$

$$R_t = 15 \exp \left\{ 3480 \left(\frac{1}{273 + (t - 32)/1.8} - \frac{1}{273} \right) \right\}$$

30°F	15.8kΩ
50°F	9.6kΩ
70°F	6.0kΩ
80°F	4.8kΩ
90°F	3.9kΩ
100°F	3.2kΩ

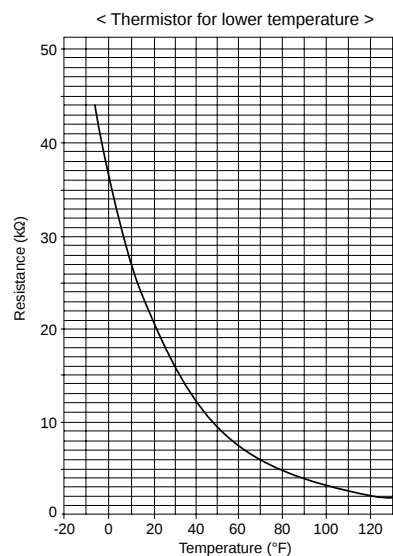


10-1-2. Linear expansion valve

① Operation summary of the linear expansion valve

- Linear expansion valve open/close through stepping motor after receiving the pulse signal from the indoor controller board.
- Valve position can be changed in proportion to the number of pulse signals.

<Connection between the indoor controller board and the linear expansion valve>

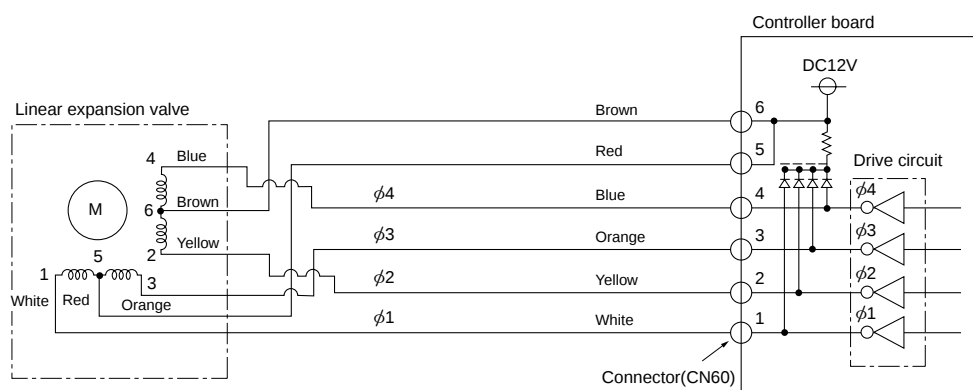

Note : Since the number of the connector at the controller board side and the relay connector are different, follow the color of the lead wire.

<Output pulse signal and the valve operation>


Output (Phase)	Output			
	1	2	3	4
φ1	ON	OFF	OFF	ON
φ2	ON	ON	OFF	OFF
φ3	OFF	ON	ON	OFF
φ4	OFF	OFF	ON	ON

Closing a valve : 1 → 2 → 3 → 4 → 1
 Opening a valve : 4 → 3 → 2 → 1 → 4
 The output pulse shifts in above order.

Note:

- When linear expansion valve operation stops, all output phase become OFF.
- At phase interruption or when phase does not shift in order, motor does not rotate smoothly and motor will lock and vibrate.
- When the switch is turned on, 2200 pulse closing valve signal will be sent till it goes to point ㉔ in order to define the valve position.
- When the valve moves smoothly, there is no sound or vibration occurring from the linear expansion valves, however, when the pulse number moves from ㉔ to ㉓ or when the valve is locked, more sound can be heard than in a normal situation.
- Sound can be detected by placing the ear against the screw driver handle while putting the screw driver tip to the linear expansion valve.

② Linear expansion valve operation

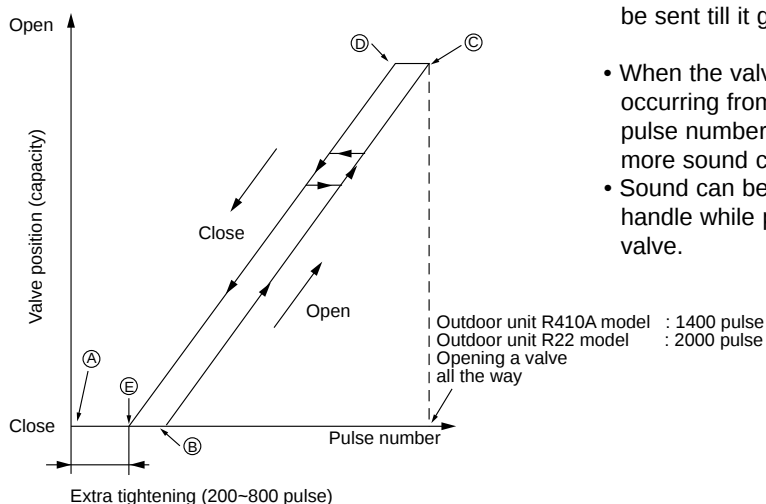

③ Troubleshooting

Symptom	Check points	Countermeasures
Operation circuit failure of the micro processor	Disconnect the connector on the controller board, then connect LED for checking. 1kΩ LED When power is turned on, pulse signals will output for 10 seconds. There must be some defects in the operation circuit if the LED does not light while the signals are output or keeps lighting even after the signals stop.	Exchange the indoor controller board at drive circuit failure.
Linear expansion valve mechanism is locked.	Motor will idle and make a ticking noise when the motor is operated while the linear expansion valve is locked. This ticking sound is the sign of the abnormality.	Exchange the linear expansion valve.
Short or breakage of the motor coil of the linear expansion valve	Measure the resistance between each coil (white-red, yellow-brown, orange-red, blue-brown) with a tester. It is normal if the resistance is in the range of $150\Omega \pm 10\%$.	Exchange the linear expansion valve.
Valve does not close completely.	To check the linear expansion valve, operate the indoor unit in fan mode and at the same time operate other indoor units in cooling mode, then check the pipe temperature <liquid pipe temperature> of the indoor unit by the outdoor multi controller board operation monitor. During fan operation, linear expansion valve is closed completely and if there is any leaking, detecting temperature of the thermistor will go lower. If the detected temperature is much lower than the temperature indicated in the remote controller, it means the valve is not closed all the way. It is not necessary to exchange the linear expansion valve, if the leakage is small and not affecting normal operation.	If large amount of refrigerant is leaked, exchange the linear expansion valve.
Wrong connection of the connector or contact failure	Check the color of lead wire and missing terminal of the connector.	Disconnect the connector at the controller board, then check the continuity.

10-1-3. DC Fan motor (fan motor/indoor controller board)


Check method of indoor fan motor (fan motor/indoor controller board)

① Notes

- High voltage is applied to the connector (CNMF) for the fan motor. Pay attention to the service.
- Do not pull out the connector (CNMF) for the motor with the power supply on.
(It causes trouble of the indoor controller board and fan motor)

② Self check

Conditions : The indoor fan cannot turn around.

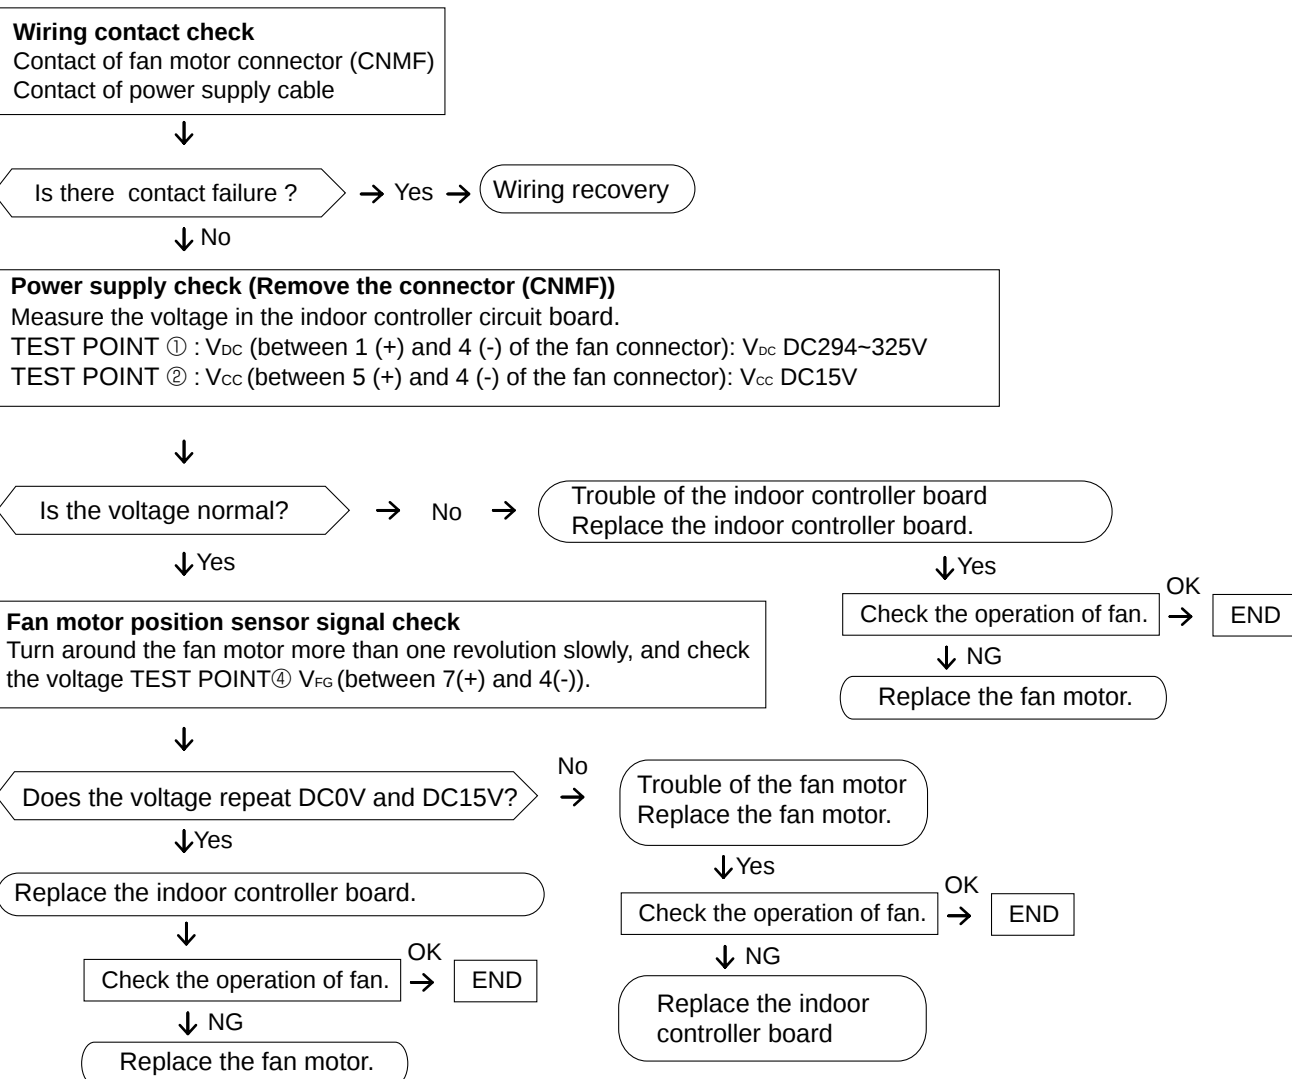

10-2. FUNCTION OF DIP SWITCH

The black square (■) indicates a switch position.








Switch	Pole	Function	Operation by switch		Effective timing	Remarks																
			ON	OFF																		
SW1 Function setting	1	Thermistor <Room temperature detection> position	Built-in remote controller	Indoor unit	Under suspension	Address board <Initial setting> ON OFF 1 2 3 4 5 6 7 8 9 10 Note : *1 Fan operation at Heating mode *2 Heating thermo ON is operating. *3 <table><tr><td>SW1-7</td><td>SW1-8</td><td></td></tr><tr><td>OFF</td><td>OFF</td><td>Extra low</td></tr><tr><td>ON</td><td>OFF</td><td>Low</td></tr><tr><td>OFF</td><td>ON</td><td>Setting air flow</td></tr><tr><td>ON</td><td>ON</td><td>Stop</td></tr></table>	SW1-7	SW1-8		OFF	OFF	Extra low	ON	OFF	Low	OFF	ON	Setting air flow	ON	ON	Stop	
	SW1-7	SW1-8																				
	OFF	OFF	Extra low																			
	ON	OFF	Low																			
	OFF	ON	Setting air flow																			
	ON	ON	Stop																			
	2	Filter clogging detection	Provided	Not provided																		
	3	Filter cleaning	2,500hr	100hr																		
	4	Fresh air intake	Effective	Not effective																		
	5	Switching remote display	Thermo ON signal display	Indicating fan operation ON/OFF																		
6	Humidifier control	Always operated while the heat in ON *1	Operated depends on the condition *2																			
7	Air flow set in case of Heat thermo OFF	Low *3	Extra low *3																			
8		Setting air flow *3	Depends on SW1-7																			
9	Auto restart function	Effective	Not effective																			
10	Power ON/OFF by breaker	Effective	Not effective																			
SW2 Capacity code setting	1~6	<table><tr><td>MODELS</td><td>SW2</td><td>MODELS</td><td>SW2</td></tr><tr><td>P12</td><td> ON OFF 1 2 3 4 5 6 </td><td>P24</td><td> ON OFF 1 2 3 4 5 6 </td></tr><tr><td>P15</td><td> ON OFF 1 2 3 4 5 6 </td><td>P30</td><td> ON OFF 1 2 3 4 5 6 </td></tr><tr><td>P18</td><td> ON OFF 1 2 3 4 5 6 </td><td>P36</td><td> ON OFF 1 2 3 4 5 6 </td></tr></table>			MODELS	SW2	MODELS	SW2	P12	ON OFF 1 2 3 4 5 6	P24	ON OFF 1 2 3 4 5 6	P15	ON OFF 1 2 3 4 5 6	P30	ON OFF 1 2 3 4 5 6	P18	ON OFF 1 2 3 4 5 6	P36	ON OFF 1 2 3 4 5 6	Before power supply ON	Indoor controller board <Initial setting> Set for each capacity.
MODELS	SW2	MODELS	SW2																			
P12	ON OFF 1 2 3 4 5 6	P24	ON OFF 1 2 3 4 5 6																			
P15	ON OFF 1 2 3 4 5 6	P30	ON OFF 1 2 3 4 5 6																			
P18	ON OFF 1 2 3 4 5 6	P36	ON OFF 1 2 3 4 5 6																			
SW3 Function setting	1	Heat pump/Cooling only	Cooling only	Heat pump	Under suspension	Indoor controller board <Initial setting> ON OFF 1 2 3 4 5 6 7 8 9 10 Note : *4 SW3-5,6 *5 Please do not use SW-3-9,10 as trouble might be caused by the usage condition.																
	2	Louver/Humidifier	Available	Not available																		
	3	Vane	Available	Not available																		
	4	Vane swing function in heating (wave-flow)	Available	Not available																		
	5	Vane horizontal angle ①	Second setting *4	First setting *4																		
	6	Vane horizontal angle ②	Third setting *4	Depends on SW3-5																		
	7	Changing the opening of linear expansion valve	Effective	Not effective																		
	8	Sensible temperature correction	Not effective	Effective																		
	9	Superheat setting temperature *5	—	—																		
	10	Sub cool setting temperature *5	—	—																		
SW4 Model Selection (Setting for PLFY series)	1~5	ON OFF 1 2 3 4 5			Before power supply ON	Indoor controller board																

Note : *4 SW3-5,6

SW3-5	SW3-6	Vane setting	Initial setting	Setting	Vane position
OFF	OFF	Set up ①	●	Standard	Standard
ON	OFF	Set up ②		Less draft *	Upward position than the standard
OFF	ON	Set up ③		Less smudging	Downward position than the standard
ON	ON	unused		—	—

* Be careful of the smudge on ceiling.

The black square (■) indicates a switch position.

Switch	Pole	Operation by switch		Effective timing	Remarks																									
SWA Ceiling height selector	1~3	(High ceiling) 3 (Standard) 2 (Silent) 1	 * Ceiling height can be changed depending on SWB setting. PLFY-P12-P15-P18-P24-P30NBMU-E PLFY-P12-P15-P18-P24-P30NBMU-ER1 PLFY-P12-P15-P18-P24-P30NBMU-ER2 <table><tr><th></th><th>SWA</th><th>①</th><th>②</th><th>③</th></tr><tr><th>SWB</th><th></th><th>Silent</th><th>Standard</th><th>High ceiling</th></tr><tr><td>④</td><td>4 direction</td><td>2.5m, 8.2ft</td><td>2.7m, 8.9ft</td><td>3.5m, 11.5ft</td></tr><tr><td>③</td><td>3 direction</td><td>2.7m, 8.9ft</td><td>3.0m, 9.8ft</td><td>3.5m, 11.5ft</td></tr><tr><td>②</td><td>2 direction</td><td>3.0m, 9.8ft</td><td>3.3m, 10.8ft</td><td>3.5m, 11.5ft</td></tr></table>		SWA	①	②	③	SWB		Silent	Standard	High ceiling	④	4 direction	2.5m, 8.2ft	2.7m, 8.9ft	3.5m, 11.5ft	③	3 direction	2.7m, 8.9ft	3.0m, 9.8ft	3.5m, 11.5ft	②	2 direction	3.0m, 9.8ft	3.3m, 10.8ft	3.5m, 11.5ft	Under operation or suspension	Address board <Initial setting> 3 2 1 
			SWA	①	②	③																								
SWB		Silent	Standard	High ceiling																										
④	4 direction	2.5m, 8.2ft	2.7m, 8.9ft	3.5m, 11.5ft																										
③	3 direction	2.7m, 8.9ft	3.0m, 9.8ft	3.5m, 11.5ft																										
②	2 direction	3.0m, 9.8ft	3.3m, 10.8ft	3.5m, 11.5ft																										
SWB Discharge outlet number selector	3	(2 direction) 2 (3 direction) 3 (4 direction) 4	 PLFY-P36NBMU-E PLFY-P36NBMU-ER1 PLFY-P36NBMU-ER2 <table><tr><th></th><th>SWA</th><th>①</th><th>②</th><th>③</th></tr><tr><th>SWB</th><th></th><th>Silent</th><th>Standard</th><th>High ceiling</th></tr><tr><td>④</td><td>4 direction</td><td>2.7m, 8.9ft</td><td>3.2m, 10.5ft</td><td>4.5m, 14.8ft</td></tr><tr><td>③</td><td>3 direction</td><td>3.0m, 9.8ft</td><td>3.6m, 11.8ft</td><td>4.5m, 14.8ft</td></tr><tr><td>②</td><td>2 direction</td><td>3.3m, 10.8ft</td><td>4.0m, 13.1ft</td><td>4.5m, 14.8ft</td></tr></table>		SWA	①	②	③	SWB		Silent	Standard	High ceiling	④	4 direction	2.7m, 8.9ft	3.2m, 10.5ft	4.5m, 14.8ft	③	3 direction	3.0m, 9.8ft	3.6m, 11.8ft	4.5m, 14.8ft	②	2 direction	3.3m, 10.8ft	4.0m, 13.1ft	4.5m, 14.8ft	Address board <Initial setting> 2 3 4 	
	SWA	①	②	③																										
SWB		Silent	Standard	High ceiling																										
④	4 direction	2.7m, 8.9ft	3.2m, 10.5ft	4.5m, 14.8ft																										
③	3 direction	3.0m, 9.8ft	3.6m, 11.8ft	4.5m, 14.8ft																										
②	2 direction	3.3m, 10.8ft	4.0m, 13.1ft	4.5m, 14.8ft																										
SWC Option selector	2	② オプ (Option) ① 標 (Standard)	 When attaching the optional high performance filter elements (multi function casement) to the unit, be sure to attach it to the option side in order to prevent the airflow reducing.		Address board <Initial setting> ② オプ ① 標 																									
SW11 1s digit address setting SW12 10ths digit address setting	Rotary switch	 How to set address Example : If address is "3", remain SW12 (for over 10) at "0", and match SW11 (for 1 to 9) with "3".		Before power supply ON	Address board <Initial setting> SW12 SW11 																									
SW14 Branch No. setting	Rotary switch	 How to set branch number SW14 (Series R2 only) Match the indoor unit's refrigerant pipe with the BC controller's end connection number Remain other than series R2 at "0".			Address board <Initial setting> SW14 																									

Switch	Pole	Operation by switch	Effective timing	Remarks																											
J41, J42 Wireless remote controller Pair No.	Jumper	- To operate each indoor unit by each remote controller when installed 2 indoor units or more are near, Pair No. setting is necessary. - Pair No. setting is available with the 4 patterns (Setting patters A to D). - Make setting for J41, J42 of indoor controller board and the Pair No. of wireless remote controller. - You may not set it when operating it by one remote controller. - Setting for indoor unit Jumper wire J41, J42 on the indoor controller board are cut according to the table below. - Wireless remote controller Pair No.: Setting operation - Press the SET button (using a pointed implement). Check that the remote controller's display has stopped before continuing. MODEL SELECT blinks, and the model No. (3 digits) appears (steadily-lit). - Press the MINUTE button twice. The pair number appears flashing. - Press the temperature buttons to select the pair number to set. - Press the SET button (using a pointed implement). The set Pair No. is displayed (steadily-lit) for 3 seconds, then disappears. <table border="1"> <thead> <tr> <th rowspan="2">Setting pattern</th><th colspan="2">Indoor controller Jumper wire</th><th rowspan="2">Pair No. of wireless remote controller *</th><th rowspan="2"></th></tr> <tr> <th>J41</th><th>J42</th></tr> </thead> <tbody> <tr> <td>A</td><td>—</td><td>—</td><td>0</td><td>Initial setting</td></tr> <tr> <td>B</td><td>Cut</td><td>—</td><td>1</td><td>—</td></tr> <tr> <td>C</td><td>—</td><td>Cut</td><td>2</td><td>—</td></tr> <tr> <td>D</td><td>Cut</td><td>Cut</td><td>3</td><td>—</td></tr> </tbody> </table> * Pair No.4-9 of wireless remote controller is setting pattern D.	Setting pattern	Indoor controller Jumper wire		Pair No. of wireless remote controller *		J41	J42	A	—	—	0	Initial setting	B	Cut	—	1	—	C	—	Cut	2	—	D	Cut	Cut	3	—	Under operation or suspension	Indoor controller board <Initial setting> Pattern A
Setting pattern	Indoor controller Jumper wire			Pair No. of wireless remote controller *																											
	J41	J42																													
A	—	—	0	Initial setting																											
B	Cut	—	1	—																											
C	—	Cut	2	—																											
D	Cut	Cut	3	—																											
SWE Test run for Drain pump	Connector	Drain pump and fan are activated simultaneously after the connector SWE is set to ON and turn ON the power. The connector SWE is set to OFF after test run.	Under operation	Indoor controller board <Initial setting>																											


10-3. TEST POINT DIAGRAM

10-3-1. Indoor controller board

PLFY-P12/15/18/24/30/36NBMU-E

PLFY-P12/15/18/24/30/36NBMU-ER1

PLFY-P12/15/18/24/30/36NBMU-ER2

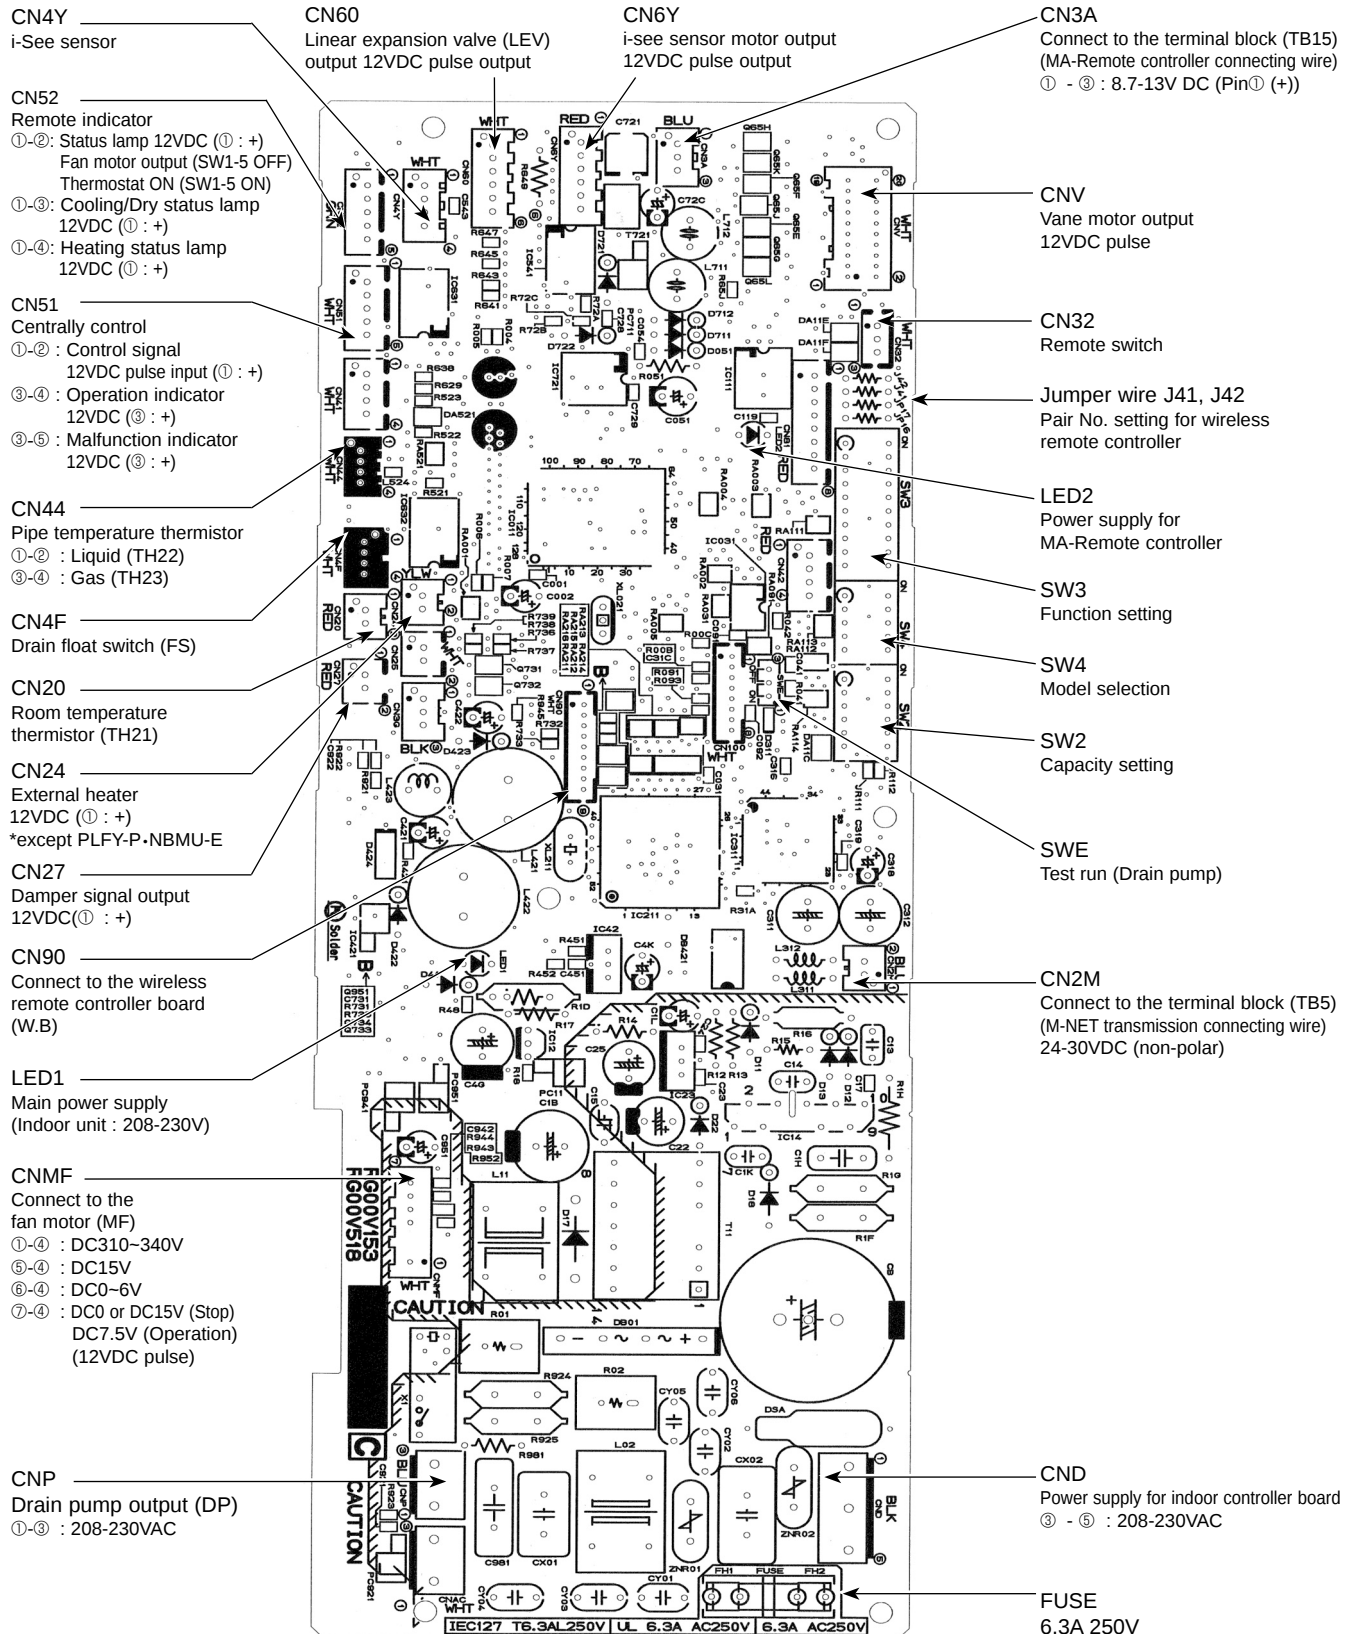


10-3-2. Circuit board

PLFY-P12/15/18/24/30/36NBMU-E

PLFY-P12/15/18/24/30/36NBMU-ER1




PLFY-P12/15/18/24/30/36NBMU-ER2





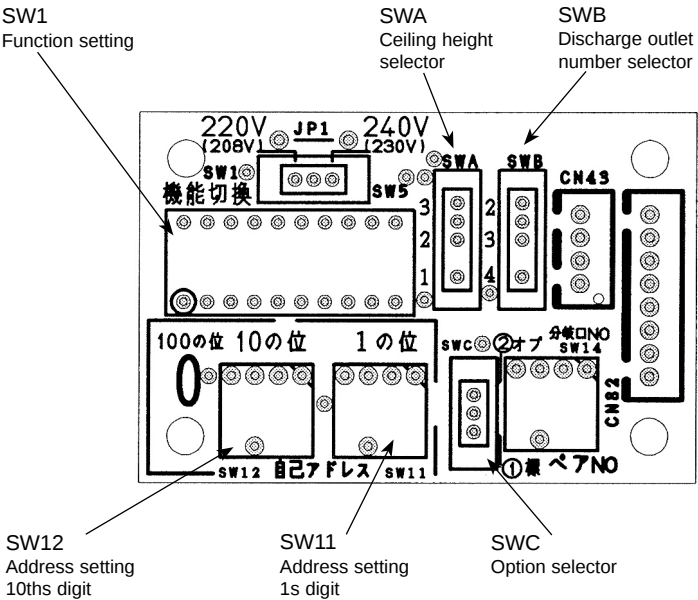





PLFY-P12/15/18/24/30/36NBMU-E
PLFY-P12/15/18/24/30/36NBMU-ER2

PLFY-P12/15/18/24/30/36NBMU-ER1

Be careful when removing heavy parts.

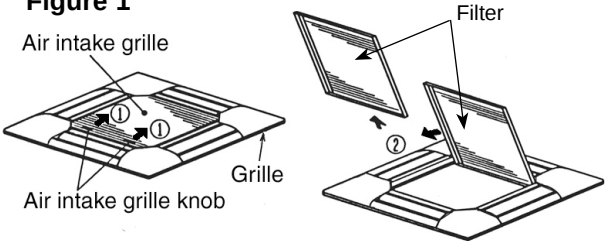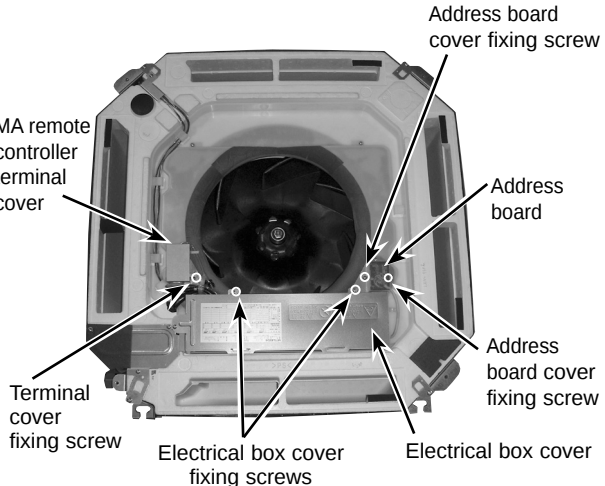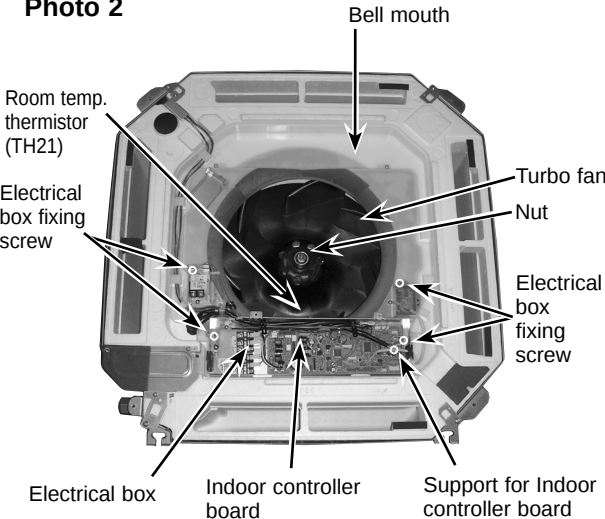OPERATING PROCEDURE	PHOTOS & ILLUSTRATIONS
1. Removing the air intake grille - Slide the knob of air intake grille toward the arrow ① to open the air intake grille. - Remove drop prevention hook from the panel. - Slide the shaft in the hinge to the direction of the arrow ② and remove the air intake grille.	Figure 1 
2. Removing the room temperature thermistor (TH21) - Remove the air intake grille and the filter. (See Figure 1) - Remove the 2 screws from the electrical box cover. - Disconnect the connector CN20 (Red) from the indoor controller board. - Remove the room temperature thermistor.	Photo 1 
3. Removing the address board (A.B) - Remove the air intake grille and the filter. (See Figure 1) - Remove the 2 screws from the address board cover. - Disconnect the connectors CN43 (RED/4P) and CN82 (RED/8P). - Slide and remove the address board.	
4. Removing the indoor controller board (I.B) - Remove the air intake grille and the filter. (See Figure 1) - Remove the 2 screws from the electrical box cover. - Disconnect the connectors : - CNMF (White/7P) for fan motor - CN44 (White/4P) for thermistor (TH22/TH23) - CNP (Blue/3P) for drain pump - CN4F (White/4P) for float switch - CND (Black/5P) for earth and TB2 - CNV (White/20P) for vane motor - CN81, CN42 (Red/8P, 4P) for address board - CN2M (Blue/2P) for TB5 - CN3A (Blue/3P) for TB15 - Remove the 6 supports from indoor controller board. - Remove the indoor controller board.	
5. Removing the electrical box - Remove the air intake grille and the filter. (See Figure 1) - Remove the 2 screws from the electrical box cover. - Disconnect the connectors. (Refer to procedure 4) - Remove 4 electrical box fixing screws and remove 2 hooks. - Pull the electrical box. <Electrical parts in the electrical box> - Indoor controller board - Terminal block (TB2) (TB5)	Photo 2 

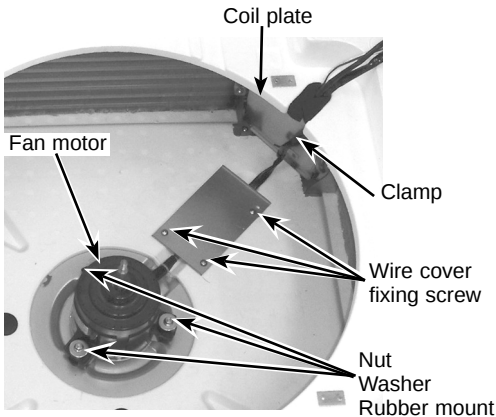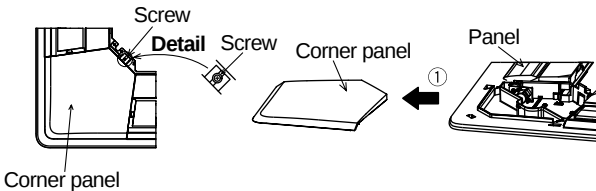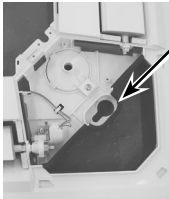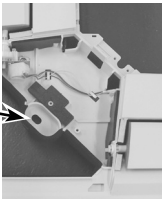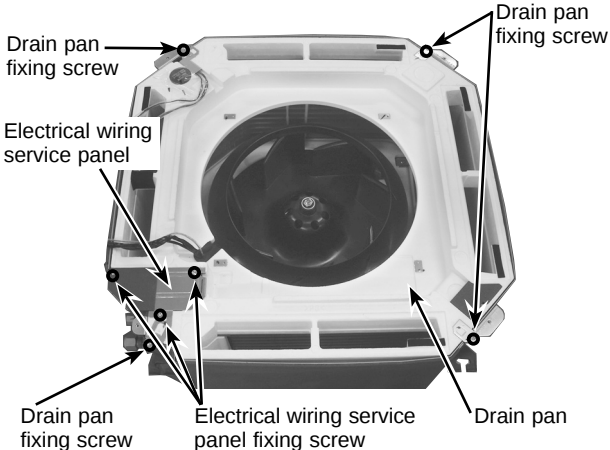OPERATING PROCEDURE	PHOTOS & ILLUSTRATIONS
6. Removing the fan and fan motor (MF) (1) Remove the electrical box. (See Photo 2) (2) Remove the bell mouth (3 screws). (See Photo 2) (3) Remove the turbo fan nut. (4) Pull out the turbo fan. (5) Remove the wire cover (3 screws). (6) Remove 2 wiring clamps. (7) Disconnect the connector of the fan motor (CNMF). (8) Remove the 3 nuts and washers and rubber mounts of the fan motor.	Photo 3 
7. Removing the panel (1) Remove the air intake grille and the filter. (See Figure 1) (2) Disconnect the connector CNV (White/20P). Corner panel (See Figure 2) (3) Remove the corner screw. (4) Slide the corner panel to the direction of the arrow ①, and remove the corner panel. Panel (See Photo 4, 5) (5) Remove the 2 screws from the panel which fixes to the oval holes. (6) Rotate the panel a little to come to the bell shaped hole where the screw is large and remove the panel.	Figure 2  Photo 4  Photo 5 
8. Removing the drain pan (1) Remove the air intake grille and the filter. (See Figure 1) (2) Remove the 2 screws from the electrical box cover. (3) Disconnect the connectors. (Refer to procedure 4) (4) Remove the panel. (See Photo 4, 5) (5) Remove the electrical wiring service panel (3 screws). (6) Remove the electrical box. (See Photo 2) (7) Remove the bell mouth. (See Photo 2) (8) Remove the 4 screws and pull out the drain pan. ※ Pull out the left and right of the pan gradually. Be careful not to crack or damage the pan.	Photo 6 

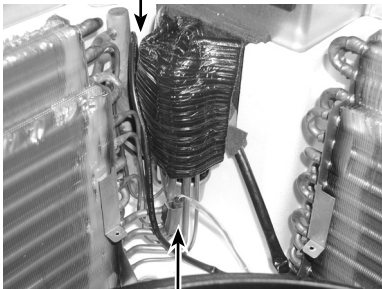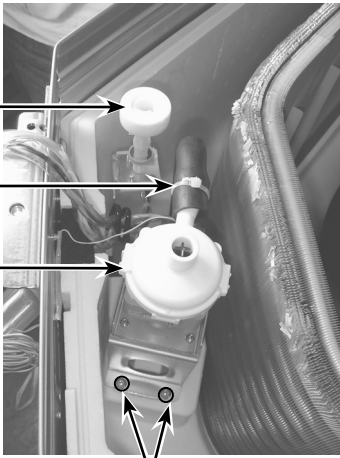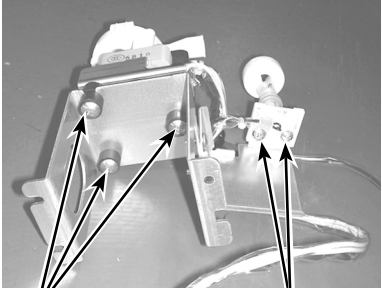OPERATING PROCEDURE	PHOTOS & ILLUSTRATIONS
9. Removing the liquid pipe temperature thermistor (TH22) and gas pipe temperature thermistor (TH23) (1) Remove the drain pan. (See Photo 6) (2) Remove the turbo fan. (Refer to procedure 6) (3) Remove the 2 wiring clamps. (See Photo 3) (4) Remove the coil plate (2 screws). (5) Remove the thermistors which are inserted into the holders installed to the thin copper pipe. (6) Disconnect the 4-pin white connector (CN44).	Photo 7  Gas pipe temp. thermistor (TH23) Liquid pipe temp. thermistor (TH22)
10 Removing the drain pump (DP) and float switch (FS) (1) Remove the drain pan. (See Photo 6) (2) Cut the hose band and remove the hose. (3) Remove the drain pump assembly (3 screws and 2 hooks). (4) Remove the drain pump (3 screws). (5) Remove the float switch (2 screws).	Photo 8  Float switch Hose band Drain pump Drain pump assembly fixing screw Photo 9  Drain pump fixing screw Float switch fixing screw


OPERATING PROCEDURE

11. Removing the heat exchanger

- (1) Remove the drain pan. (See Photo 6)
- (2) Remove the 3 screws of the piping cover, and pull out piping cover.
- (3) Remove the 2 screws of coil plate.
- (4) Remove the 2 screws of the coil.
- (5) Remove the screw of the coil support.
- (6) Pull out the heat exchanger.

PHOTOS & ILLUSTRATIONS

Photo 10

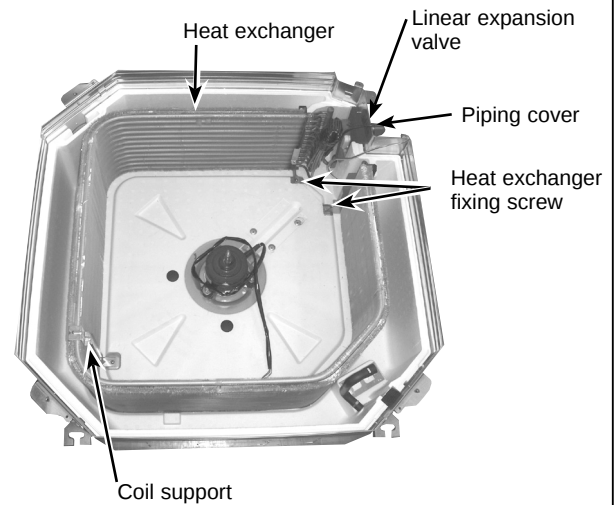

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU TOKYO 100-8310, JAPAN