

Service Manual

Telephone Equipment

Caller ID Compatible

Model No. **KX-TG6572C**

KX-TG6572R


KX-TGA653C

KX-TGA653R


DECT
6.0



KX-TGA653C/R
(Handset)

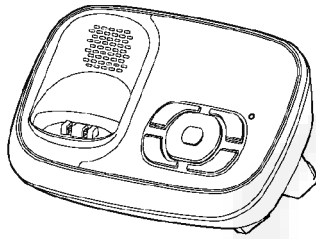

KX-TG6521C/R
(Base Unit)

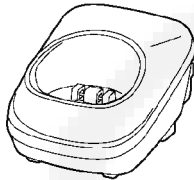

(Charger Unit)

Expandable Digital Cordless Answering System

C: Dark Blue Metallic Version

R: Wine Red Version

(for U.S.A)

Configuration for each model

Model No	Base Unit	Handset	Charger Unit	Expandable
KX-TG6572	1 (TG6521)	2(TGA653)	1	Up to 6

Information for optional accessories

You can expand your phone system by registering optional handsets (KX-TGA651/KX-TGA401/KX-TGA750) to a single base unit.


Optional handsets and the supplied handset are different model so that some functions may not be available.

Refer to each Operating Instruction for details.

 **WARNING**

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product, the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark. When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary slightly from the actual product.

TABLE OF CONTENTS

	PAGE		PAGE
1 Safety Precautions -----	4	16.4. Accessories and Packing Materials-----	83
1.1. For Service Technicians-----	4	16.5. Replacement Parts List-----	84
2 Warning -----	4		
2.1. Battery Caution-----	4		
2.2. About Lead Free Solder (PbF: Pb free)-----	4		
2.3. Discarding of P. C. Board-----	5		
3 Specifications -----	6		
4 Technical Descriptions -----	7		
4.1. US-DECT Description-----	7		
4.2. Block Diagram (Base Unit_Main)-----	9		
4.3. Block Diagram (Base Unit_RF Part)-----	10		
4.4. Circuit Operation (Base Unit)-----	11		
4.5. Block Diagram (Handset)-----	18		
4.6. Block Diagram (Handset_RF Part)-----	19		
4.7. Circuit Operation (Handset)-----	20		
4.8. Circuit Operation (Charger Unit)-----	22		
4.9. Signal Route-----	23		
5 Location of Controls and Components -----	25		
6 Installation Instructions -----	25		
7 Operating Instructions -----	25		
8 Test Mode -----	26		
8.1. Engineering Mode-----	26		
9 Service Mode -----	30		
9.1. How to Clear User Setting (Handset Only)-----	30		
10 Troubleshooting Guide -----	31		
10.1. Troubleshooting Flowchart-----	31		
11 Disassembly and Assembly Instructions -----	45		
11.1. Disassembly Instructions-----	45		
11.2. How to Replace the Handset LCD-----	49		
12 Measurements and Adjustments -----	50		
12.1. Equipment Required-----	50		
12.2. The Setting Method of JIG-----	50		
12.3. Adjustment Standard (Base Unit)-----	54		
12.4. Adjustment Standard (Charger Unit)-----	55		
12.5. Adjustment Standard (Handset)-----	56		
12.6. Things to Do after Replacing IC or X'tal-----	57		
12.7. Frequency Table-----	59		
13 Miscellaneous -----	60		
13.1. How to Replace the Flat Package IC-----	60		
13.2. How to Replace the LLP (Leadless Leadframe Package) IC-----	62		
13.3. Terminal Guide of the ICs, Transistors and Diodes-----	64		
14 Schematic Diagram -----	65		
14.1. For Schematic Diagram-----	65		
14.2. Schematic Diagram (Base Unit_Main)-----	66		
14.3. Schematic Diagram (Base Unit_Operation)-----	68		
14.4. Schematic Diagram (Handset_Main)-----	70		
14.5. Schematic Diagram (Charger Unit)-----	72		
15 Printed Circuit Board -----	73		
15.1. Circuit Board (Base Unit_Main)-----	73		
15.2. Circuit Board (Base Unit_Operation)-----	75		
15.3. Circuit Board (Handset_Main)-----	77		
15.4. Circuit Board (Charger Unit)-----	79		
16 Exploded View and Replacement Parts List -----	80		
16.1. Cabinet and Electrical Parts (Base Unit)-----	80		
16.2. Cabinet and Electrical Parts (Handset)-----	81		
16.3. Cabinet and Electrical Parts (Charger Unit)-----	82		

1 Safety Precautions

1.1. For Service Technicians

• **Repair service shall be provided in accordance with repair technology information such as service manual so as to prevent fires, injury or electric shock, which can be caused by improper repair work.**

1. When repair services are provided, neither the products nor their parts or members shall be remodeled.
2. If a lead wire assembly is supplied as a repair part, the lead wire assembly shall be replaced.
3. FASTON terminals shall be plugged straight in and unplugged straight out.

• **ICs and LSIs are vulnerable to static electricity.**

When repairing, the following precautions will help prevent recurring malfunctions.

1. Cover plastic parts boxes with aluminum foil.
2. Ground the soldering irons.
3. Use a conductive mat on worktable.
4. Do not grasp IC or LSI pins with bare fingers.

2 Warning

2.1. Battery Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

2.2. About Lead Free Solder (PbF: Pb free)

Note:


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead.

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.

Caution




- PbF solder has a melting point that is 50 °F ~ 70 °F (30 °C ~ 40 °C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700 °F ± 20 °F (370 °C ± 10 °C).
- Exercise care while using higher temperature soldering irons.:
Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100 °F (600 °C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

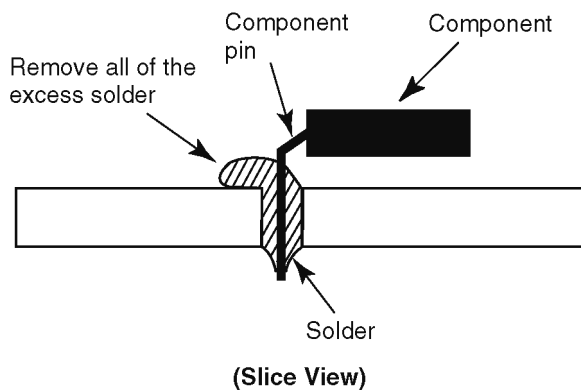

2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu), or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials.

The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

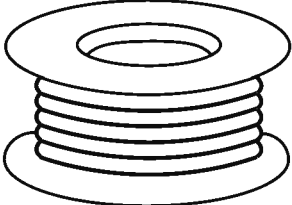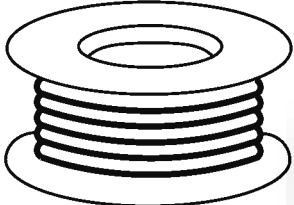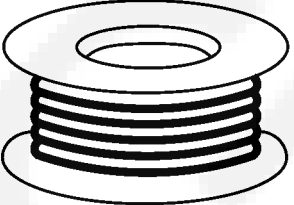0.3 mm X 100 g	0.6 mm X 100 g	1.0 mm X 100 g
		

2.3. Discarding of P. C. Board

When discarding P. C. Board, delete all personal information such as telephone directory and caller list or scrap P. C. Board.

3 Specifications

■ **Standard:**

DECT 6.0 (Digital Enhanced
Cordless Telecommunications 6.0)

■ **Number of channels:**

60 Duplex Channels

■ **Frequency range:**

1.92 GHz to 1.93 GHz

■ **Duplex procedure:**

TDMA (Time Division Multiple Access)

■ **Channel spacing:**

1,728 kHz

■ **Bit rate:**

1,152 kbit/s

■ **Modulation:**

GFSK (Gaussian Frequency Shift Keying)

■ **RF transmission power:**

115 mW (max.)

■ **Voice coding:**

ADPCM 32 kbit/s

	Base Unit	Handset	Charger
Power source	AC Adaptor (PQLV219Y, 120 V AC, 60 Hz)	Rechargeable Ni-MH battery AAA (R03) size (1.2 V 550 mAh)	AC Adaptor (PQLV219Y, 120 V AC, 60 Hz)
Receiving Method	Super Heterodyne	Super Heterodyne	—
Oscillation Method	PLL synthesizer	PLL synthesizer	—
Detecting Method	Quadrature Discriminator	Quadrature Discriminator	—
Tolerance of OSC Frequency	13.824 MHz ±100 Hz	13.824 MHz ±100 Hz	—
Modulation Method	Frequency Modulation	Frequency Modulation	—
ID Code	40 bit	40 bit	—
Ringer Equivalence No. (REN)	0.1B	—	—
Dialing Mode	—	Tone (DTMF)/Pulse	—
Redial	—	Up to 48 digits	—
Speed Dialer	—	Up to 32 digits (Phonebook)	—
Power Consumption	Standby: Approx. 1.0 W Maximum: Approx. 4.0 W	11 days at Standby, 13 hours at Talk	Standby: Approx. 0.1 W, Maximum: Approx. 2.6 W
Operating Conditions	0 °C - 40 °C (32 °F - 104 °F), 20 % - 80 % relative air humidity (dry)	0 °C - 40 °C (32 °F - 104 °F), 20 % - 80 % relative air humidity (dry)	0 °C - 40 °C (32 °F - 104 °F), 20 % - 80 % relative air humidity (dry)
Dimensions (H x W x D)	Approx. 83 mm × 146 mm × 129 mm	Approx. 160 mm × 48 mm × 33 mm	Approx. 52 mm × 72 mm × 85 mm
Mass (Weight)	Approx. 200 g	Approx. 130 g	Approx. 60 g

Note:

- Design and specifications are subject to change without notice.

Note for Service:


- **Operation range:** Up to 300 m outdoors, Up to 50 m indoors, depending on the condition.
- **Analog telephone connection:** Telephone Line

4 Technical Descriptions

4.1. US-DECT Description

The frequency range of 1.92 GHz-1.93 GHz is used. Transmitting and receiving carrier between base unit and handset is same frequency. Refer to **Frequency Table** (P.59).

4.1.1. TDD Frame Format

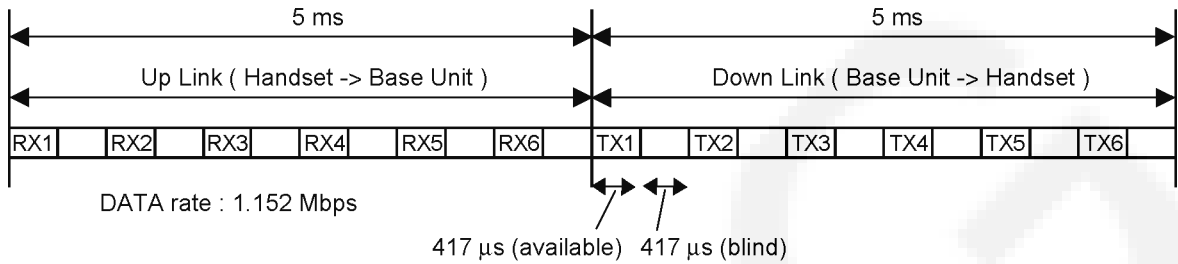


4.1.2. TDMA system

This system is the cycles of 10 ms, and has 6 duplex paths, but maximum duplex communication path is 5 because of dummy bearer use.

In 1 slot 417 μs, the 10 ms of voice data is transmitted.

• **2 - Handsets Link**

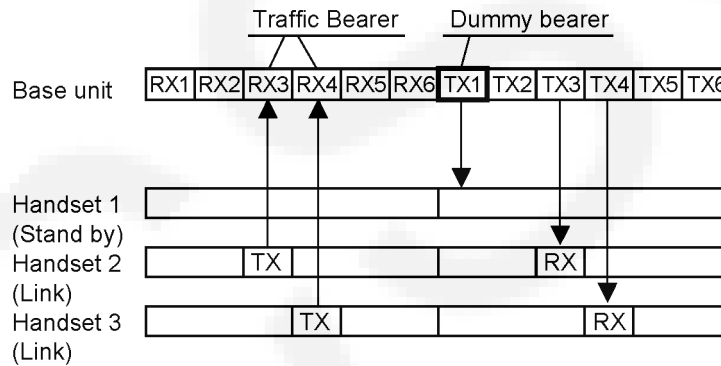

Traffic Bearer

A link is established between base unit and handset.

The state where duplex communication is performed.

Handset doesn't make up duplex in no free RF channels because of interference. (*1)

Dummy Bearer

Base unit sends Dummy-data to the all stand-by state handsets.

Handsets receive that data for synchronization and monitoring request from the base unit.

Base unit doesn't send Dummy bearer in no free RF channels because of interference. (*1)

Note:

(*1) It is a feature under FCC 15 regulation and for interference avoidance.

In the case of checking RF parts, it is better in least interference condition.

4.1.3. Signal Flowchart in the Radio Parts

Reception

A voice signal from TEL line is encoded to digital data "TXDATA" by BBIC (IC501) in a base unit.
Then TXDATA goes to RF PART and it's modulated to 1.9 GHz. The RF signal is amplified and fed to a selected antenna.

As for a handset RF, RF signal is received in one antenna.

BBIC down-converts to 864 kHz IF signal from RX signal and demodulates it to digital data "RXDATA".

BBIC (IC1) converts RXDATA into a voice signal and outputs it to speaker.

Transmission

A voice signal from microphone is encoded to digital data "TXDATA" by BBIC (IC1) in a handset.


Then TXDATA goes to RF PART, and it's modulated to 1.9 GHz. The RF signal is amplified and fed to a antenna.

As for a base unit RF, RF signal is received in two antennas.

BBIC (IC501) compares RF signal levels and selects the antenna to be used. Then BBIC down-converts to 864 kHz IF signal from RX signal in the selected antenna, and demodulates it to digital data "RXDATA".


BBIC (IC501) converts RXDATA into a voice signal and outputs it to TEL line.

4.2. Block Diagram (Base Unit_Main)

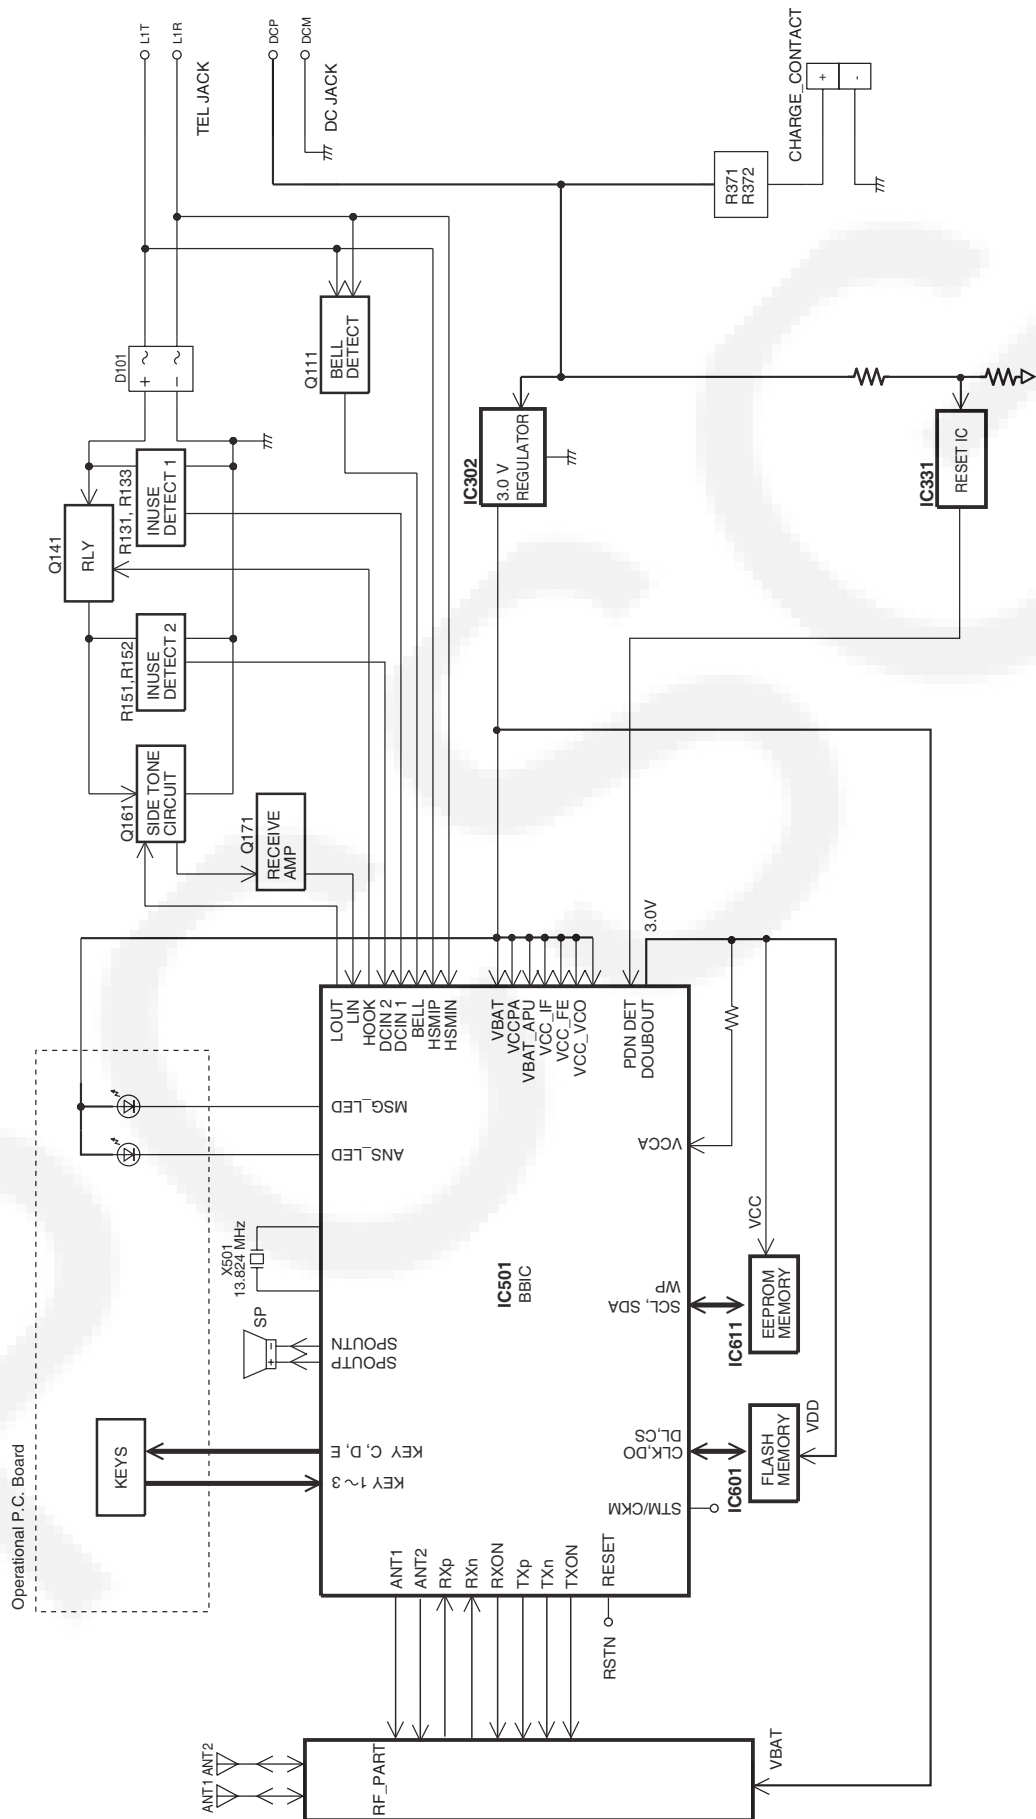

KX-TG6572 BLOCK DIAGRAM (Base Unit_Main)

4.3. Block Diagram (Base Unit_RF Part)

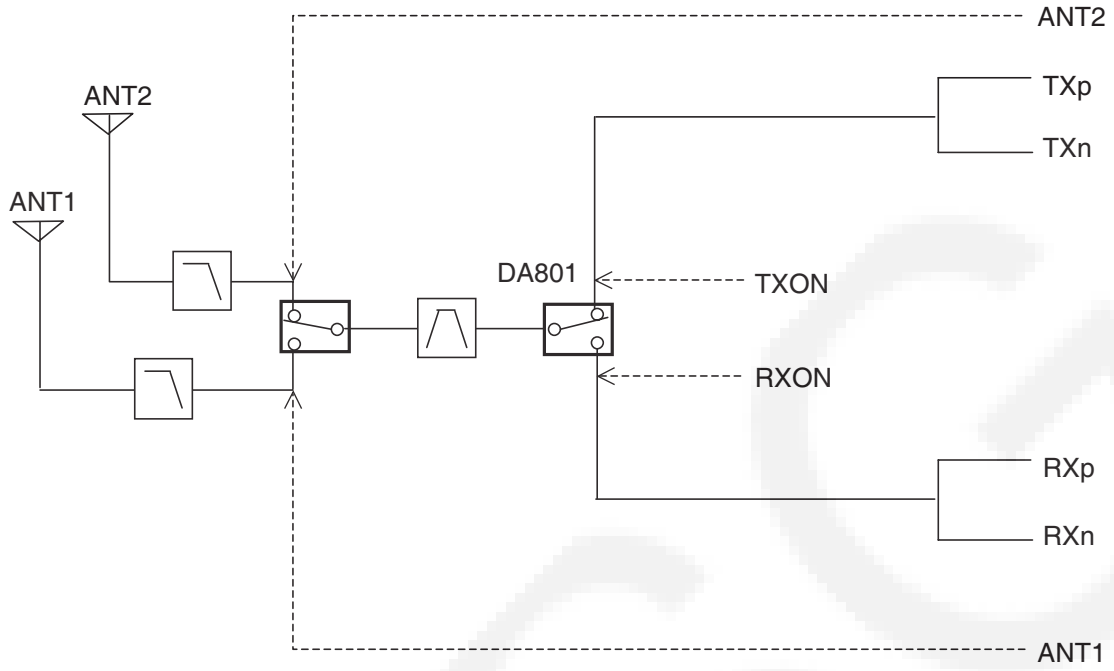


KX-TG6572 BLOCK DIAGRAM (Base Unit_RF Part)

4.4. Circuit Operation (Base Unit)

General Description:

(BBIC, Flash Memory, EERROM) is a digital speech/signal processing system that implements all the functions of speech compression, record and playback, and memory management required in a digital telephone answering machine.

The BBIC system is fully controlled by a host processor. The host processor provides activation and control of all that functions as follows.

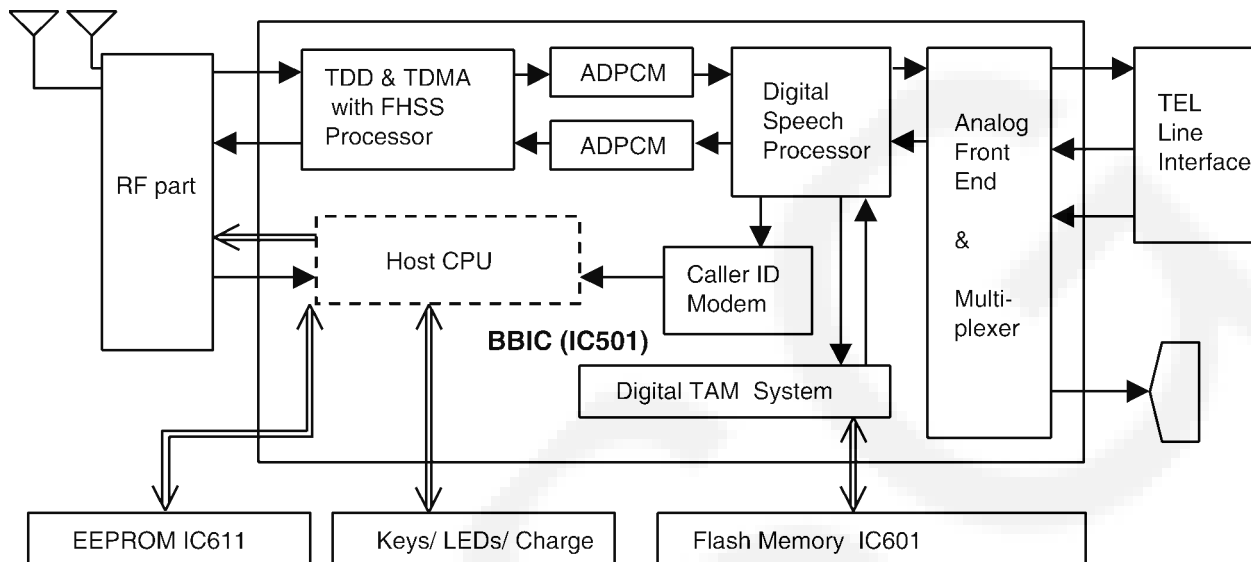

4.4.1. BBIC (Base Band IC: IC501)

- **Voice Message Recording/Play back**

The BBIC system uses a proprietary speech compression technique to record and store voice message in Flash Memory. An error correction algorithm is used to enable playback of these messages from the Flash Memory.

- **DTMF Generator**

When the DTMF data from the handset is received, the DTMF signal is output.

- **Synthesized Voice (Pre-recorded message)**

The BBIC implements synthesized Voice, utilizing the built in speech detector and a Flash Memory, which stored the vocabulary.

- **Caller ID demodulation**

The BBIC implements monitor and demodulate the FSK/DTMF signals that provide CID information from the Central Office.

- **Digital Switching**

The voice signal from telephone line is transmitted to the handset or the voice signal from the handset is transmitted to the Telephone line, etc. They are determined by the signal path route operation of voice signal.

- **Block Interface Circuit**

RF part, LED, Key scan, Speaker, Telephone line.

4.4.2. Flash Memory (IC601)

Following information data is stored.

- **Voice signal**

ex: Pre-recorded Greeting message, Incoming message

4.4.3. EEPROM (IC611)

Following information data is stored.



- **Settings**

ex: message numbers, ID code, Flash Time, Tone/Pulse

4.4.4. Power Supply Circuit/Reset Circuit


The power supply voltage from AC adaptor is converted to VBAT (3.0V) in IC302. And +3.0V for peripherals and analog part is insulated from VBAT by Doublver of BBIC.

Circuit Operation:

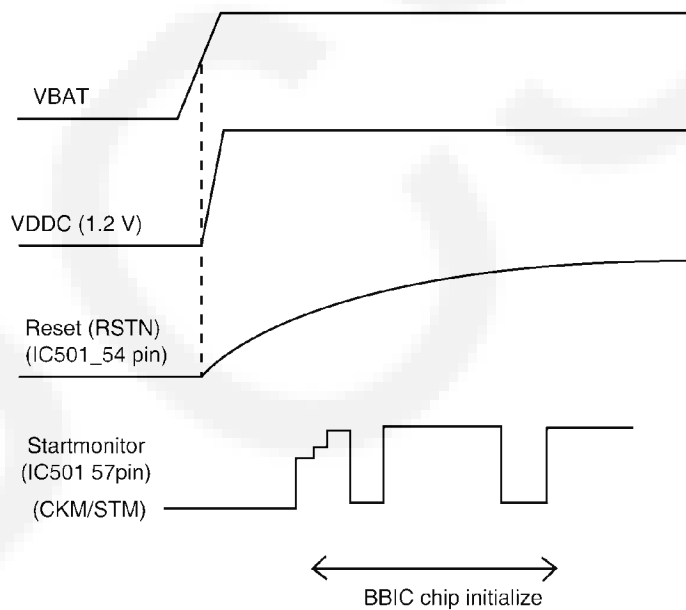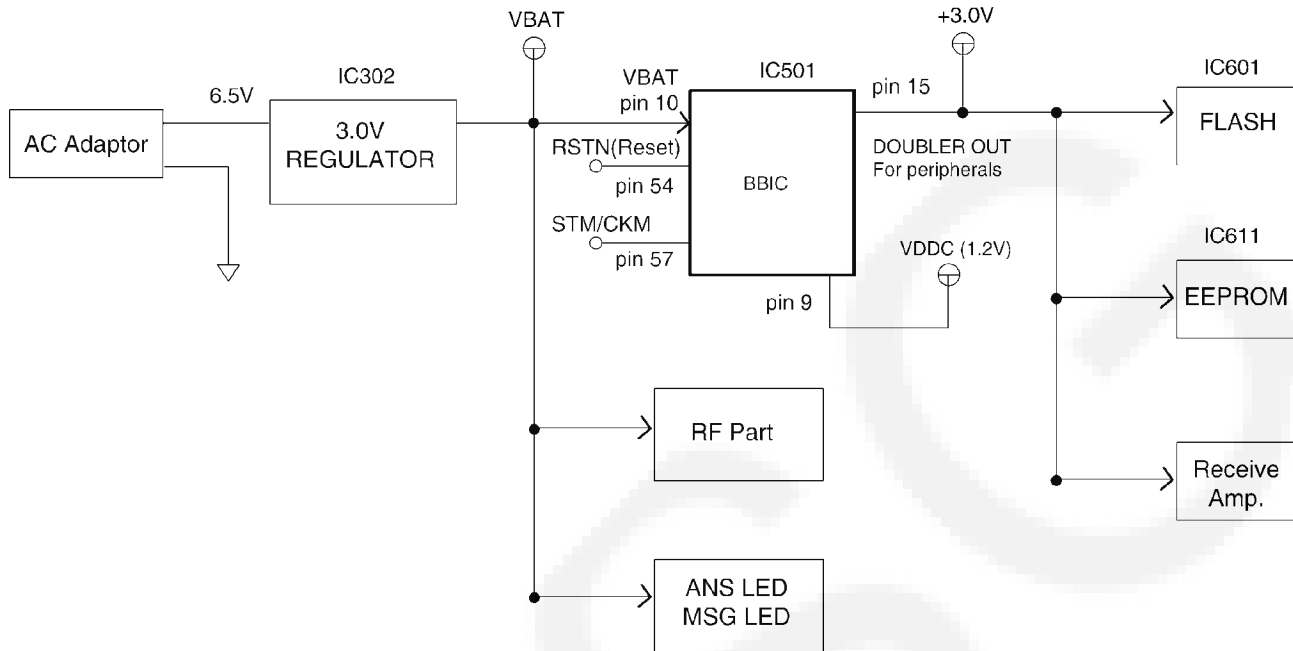

4.4.4.1. Charge Circuit

The voltage from the AC adaptor is supplied to the charge circuits.

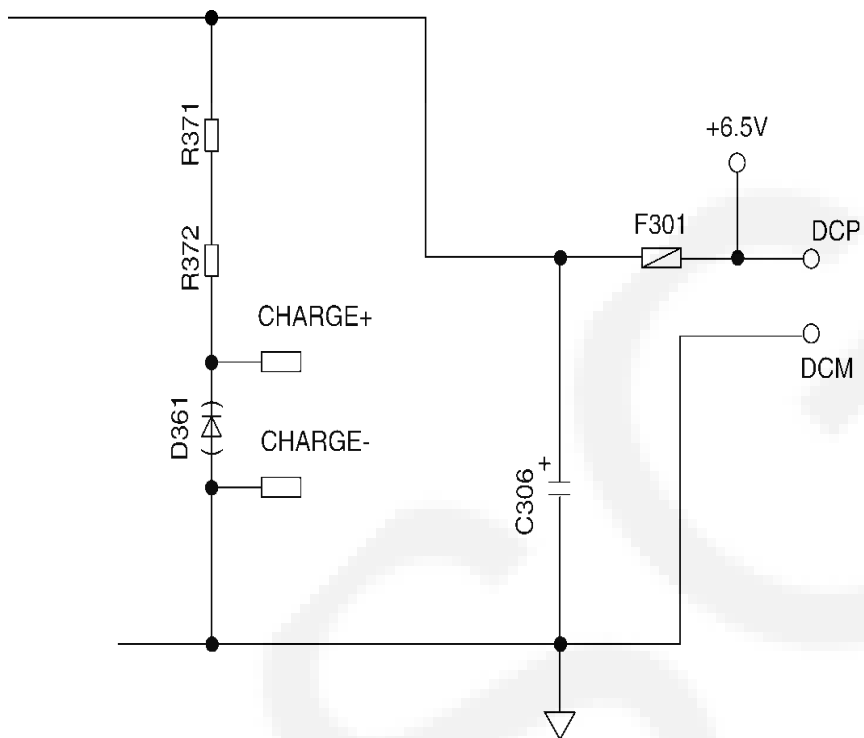

4.4.5. Telephone Line Interface

Telephone Line Interface Circuit:

Function

- Bell signal detection
- ON/OFF hook and pulse dial circuit
- Side tone circuit

Bell signal detection and OFF HOOK circuit:

In the idle mode, Q141 is open to cut the DC loop current and decrease the ring load. When ring voltage appears at the Tip (T) and Ring (R) leads (When the telephone rings), the AC ring voltage is transferred as follows:

T → L101 → R111 → C111 → Q111 → BBIC pin 5 [BELL]

When the CPU (BBIC) detects a ring signal, Q141 turns on, thus providing an off-hook condition (active DC current flow through the circuit). Following signal flow is the DC current flow.

T → L101 → D101 → Q141 → Q161 → R163 → R167 → D101 → L102 → P101 → R

ON HOOK Circuit:


Q141 is open, Q141 is connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an on-hook condition.

Pulse Dial Circuit:

Pin 6 of BBIC turns Q141 ON/OFF to make the pulse dialing.

Side Tone Circuit:

Basically this circuit prevents the TX signal from feeding back to RX signal. As for this unit, TX signal feed back from Q161 is canceled by the canceller circuit of BBIC.

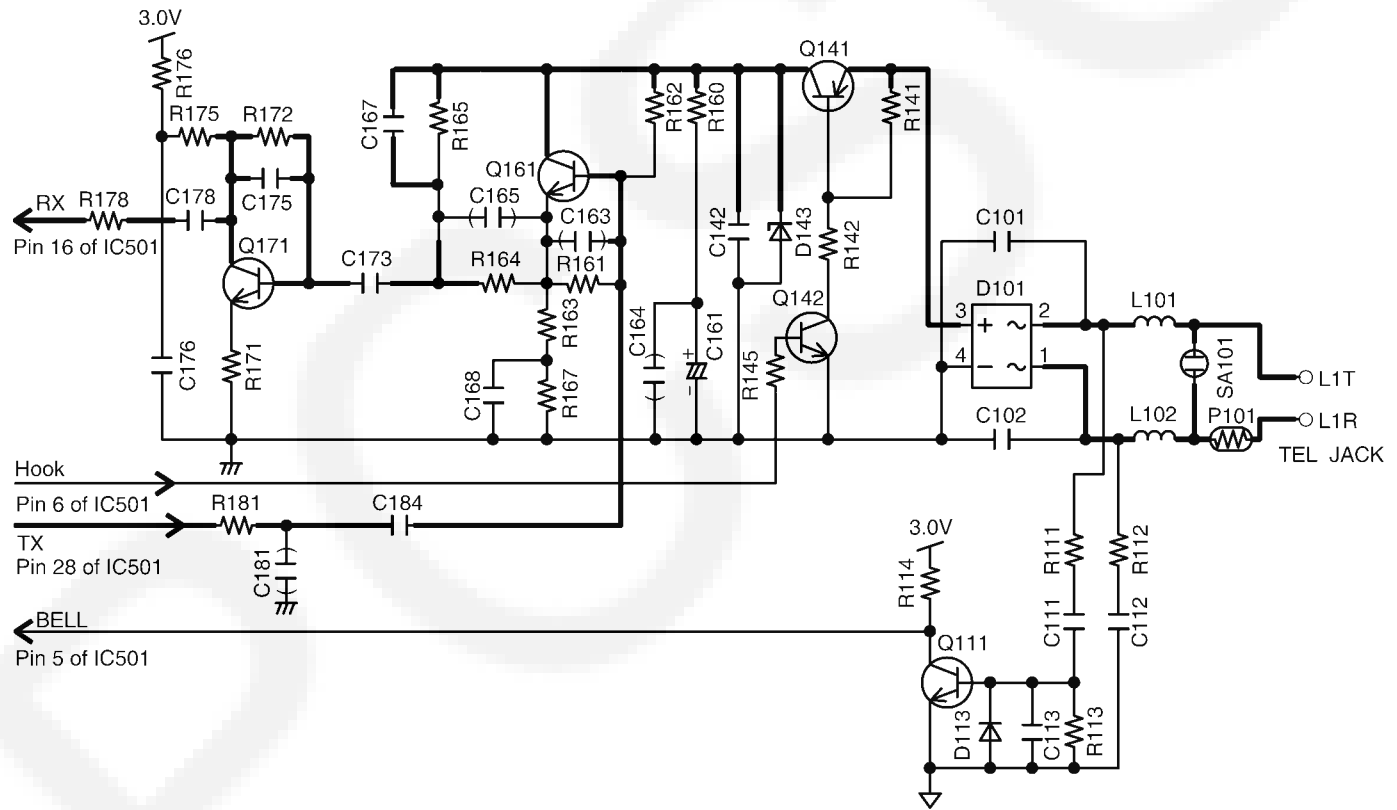

4.4.6. Parallel Connection Detect Circuit/Auto Disconnect Circuit

Function:

In order to disable call waiting and stutter tone functions when using telephones connected in parallel, it is necessary to have a circuit that judges whether a telephone connected in parallel is in use or not. This circuit determines whether the telephone connected in parallel is on hook or off hook by detecting changes in the T/R voltage.

Circuit Operation:


Parallel connection detection when on hook:

When on hook, the voltage is monitored at pin 17 of IC501. There is no parallel connection if the voltage is 0.54 V or higher, while a parallel connection is deemed to exist if the voltage is lower.

Parallel connection detection when off hook:

When off hook, the voltage is monitored at pin 18 of IC501; the presence/absence of a parallel connection is determined by detecting the voltage changes.

If the Auto disconnect function is ON and statuses are Hold, receiving ICM, OGM transmitting, BBIC disconnects the line after detecting parallel connection is off hook.

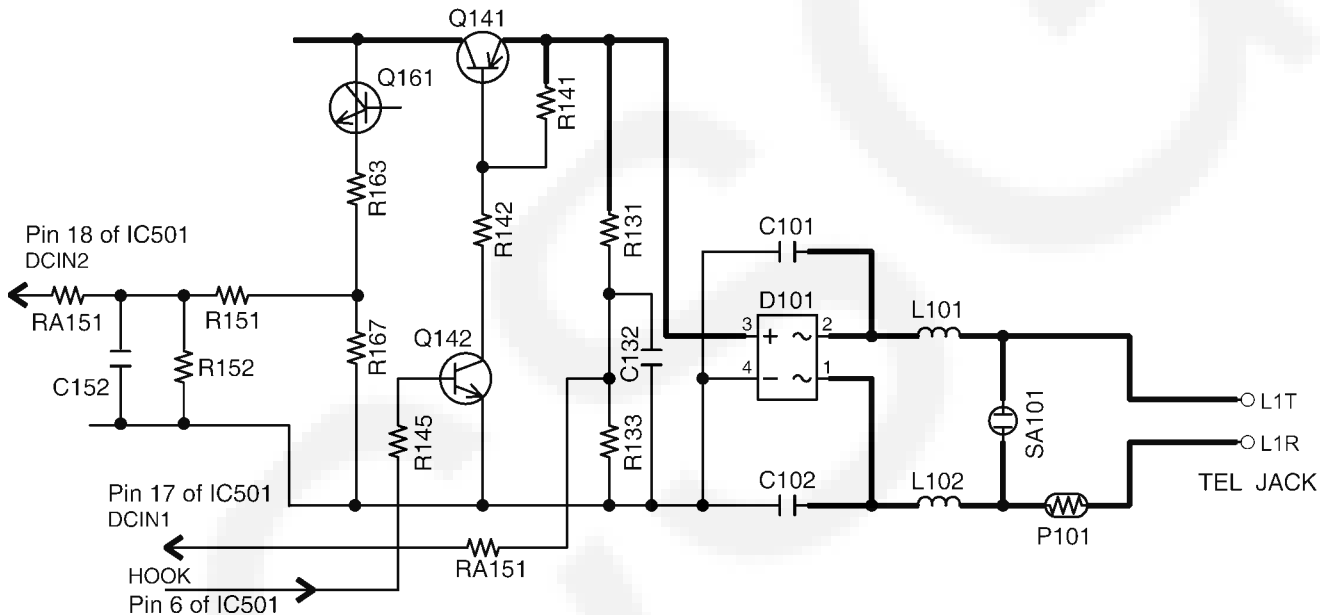

4.4.7. Calling Line Identification (Caller ID)/Call Waiting Caller ID


Function:

Caller ID


The caller ID is a chargeable ID which the user of a telephone circuit obtains by entering a contract with the telephone company to utilize a caller ID service. For this reason, the operation of this circuit assumes that a caller ID service contract has been entered for the circuit being used. The data for the caller ID from the telephone exchange is sent during the interval between the first and second rings of the bell signal. The data from the telephone exchange is a modem signal which is modulated in an FSK (Frequency Shift Keying) * format. Data "1" is a 1200 Hz sine wave, and data "0" is a 2200 Hz sine wave. There are two types of the message format which can be received: i.e. the single message format and plural message format. The plural message format allows to transmit the name and data code information in addition to the time and telephone number data.

*: Also the telephone exchange service provides other formats.

- Single message format

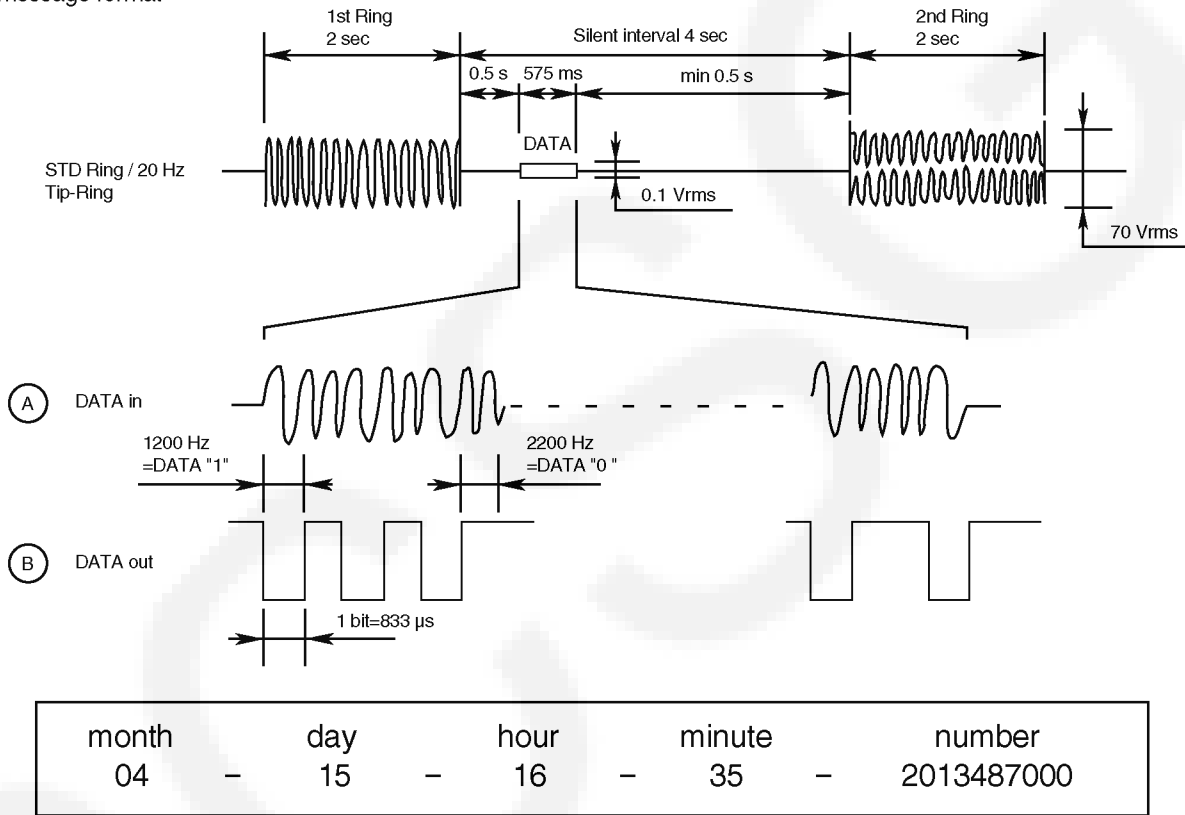

- Plural message format

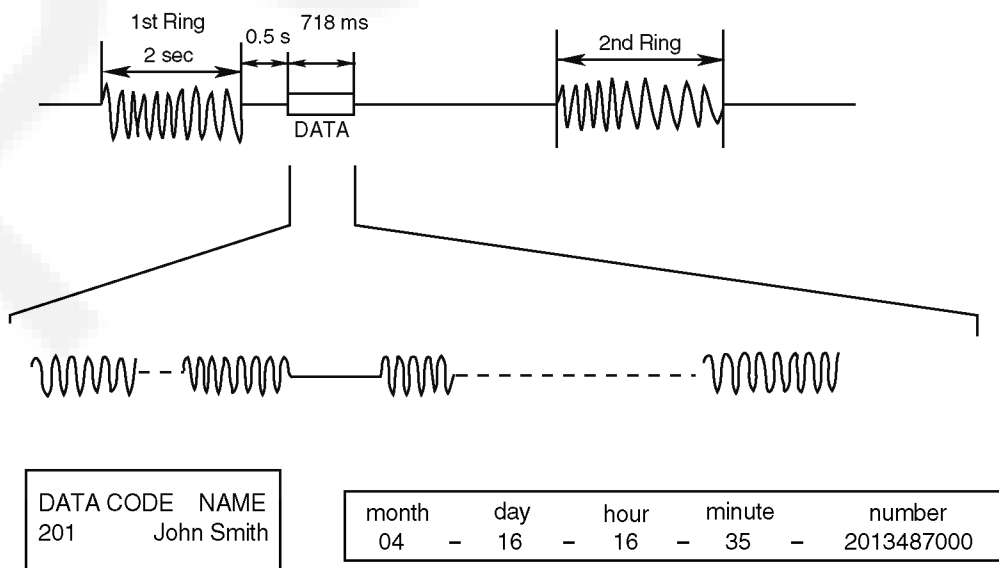

Call Waiting Caller ID

Calling Identity Delivery on Call Waiting (CIDCW) is a CLASS service that allows a customer, while off-hook on an existing call, to receive information about a calling party on a waited call. The transmission of the calling information takes place almost immediately after the customer is alerted to the new call so he/she can use this information to decide whether to take the new call.



Function:

The telephone exchange transmits or receives CAS and ACK signals through each voice RX/TX route. Then FSK data and MARK data pass the following route.


Telephone Line → P101 → L101, L102 → C121, C122 → R121, R122 → IC501 (25, 24).

If the unit deems that a telephone connected in parallel is in use, ACK is not returned even if CAS is received, and the information for the second and subsequent callers is not displayed on the portable handset display.

Call Waiting Format

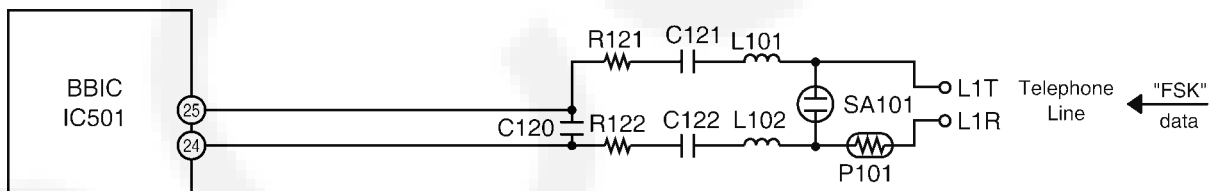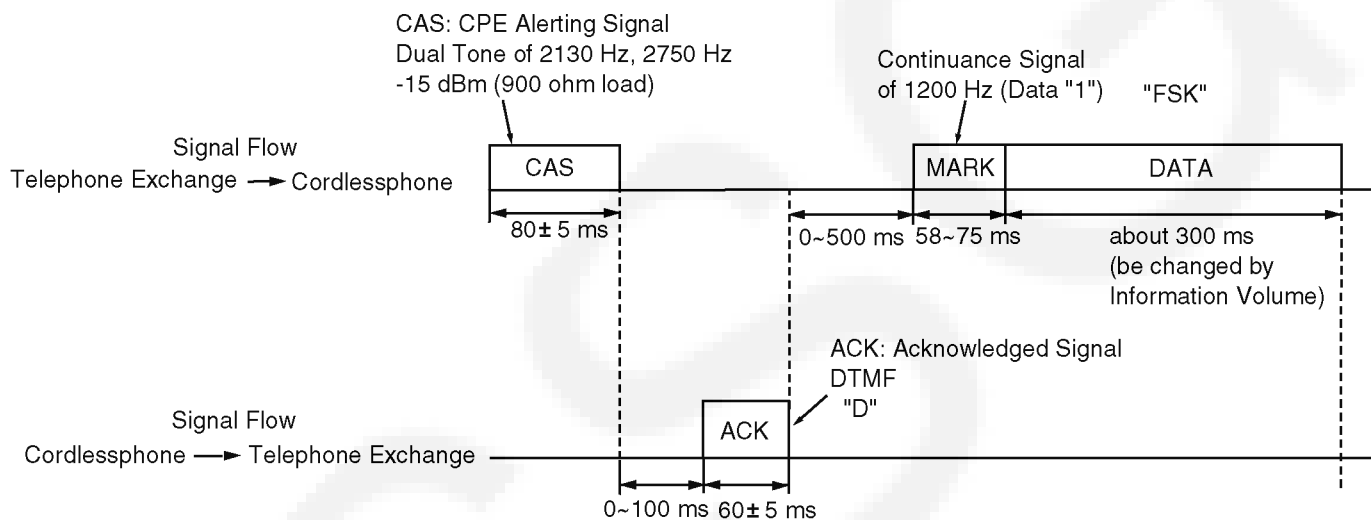


4.5. Block Diagram (Handset)

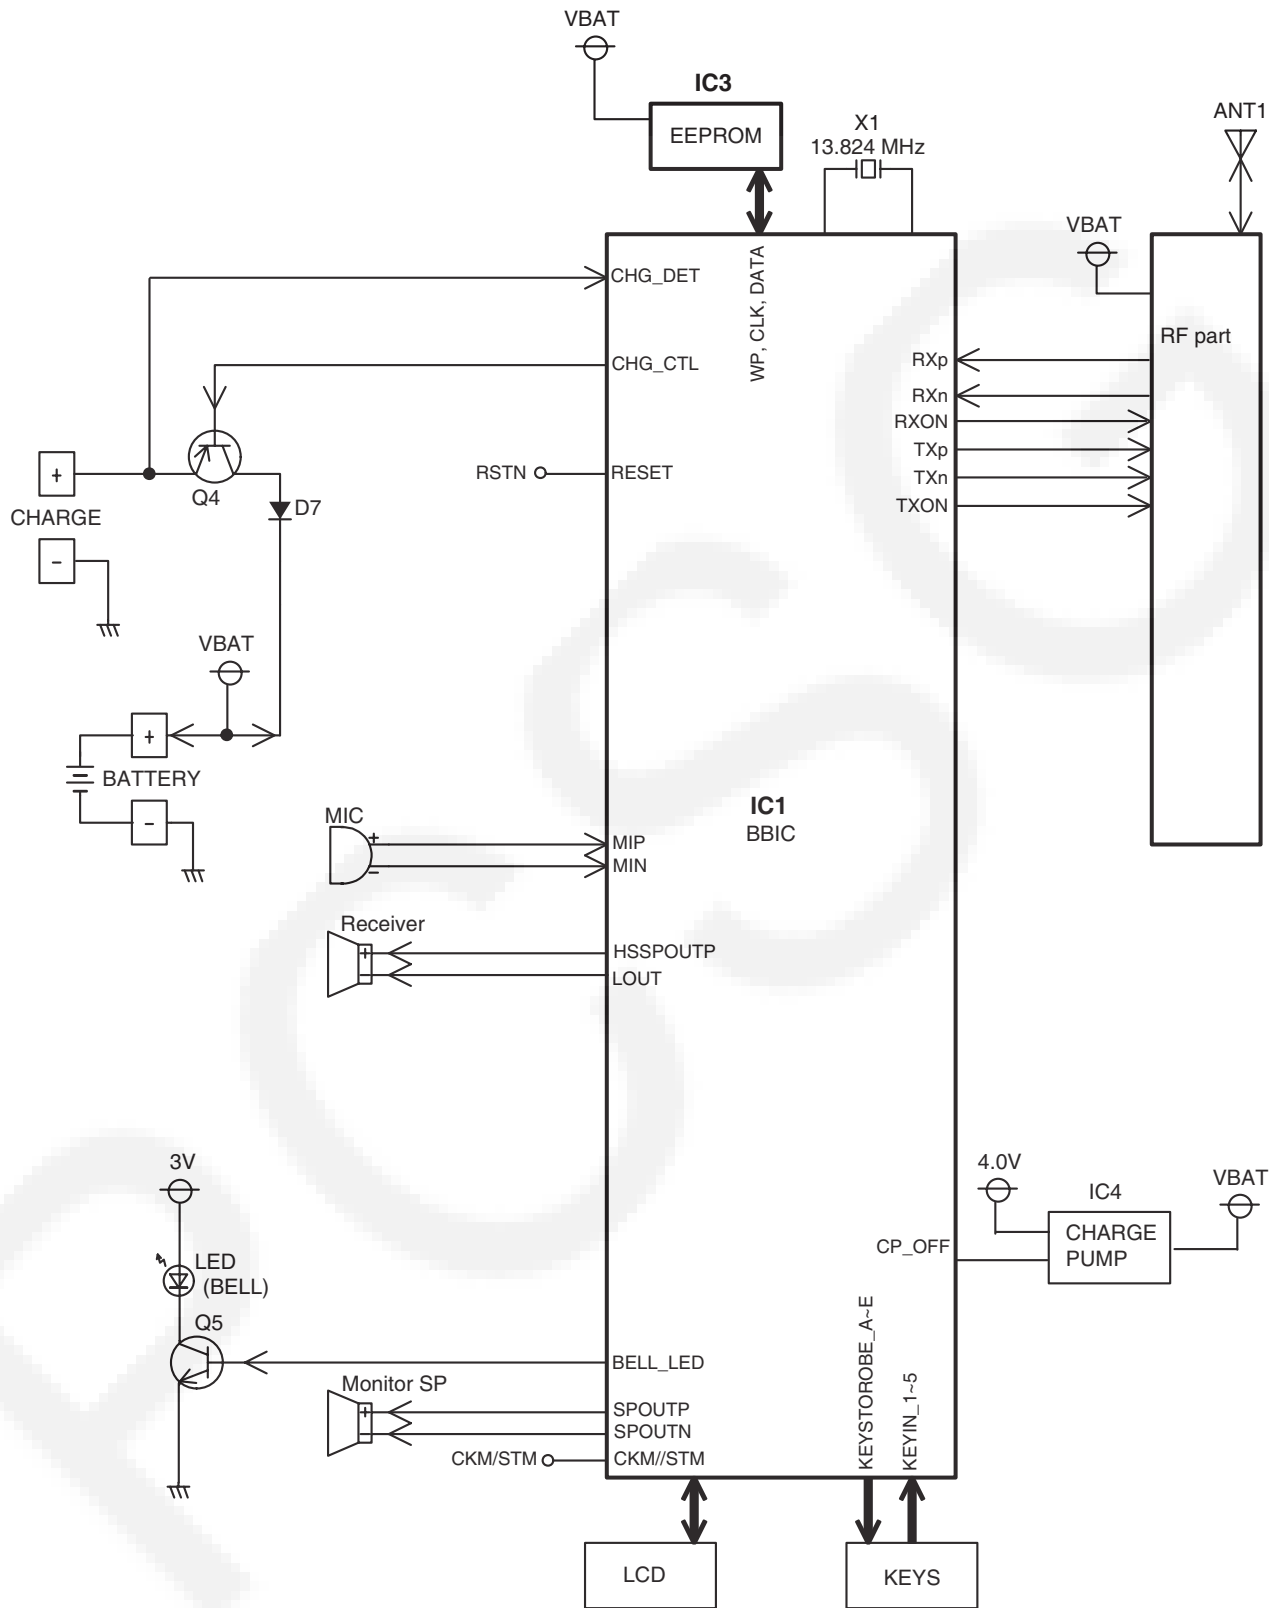

KX-TGA653 BLOCK DIAGRAM (Handset)

4.6. Block Diagram (Handset_RF Part)

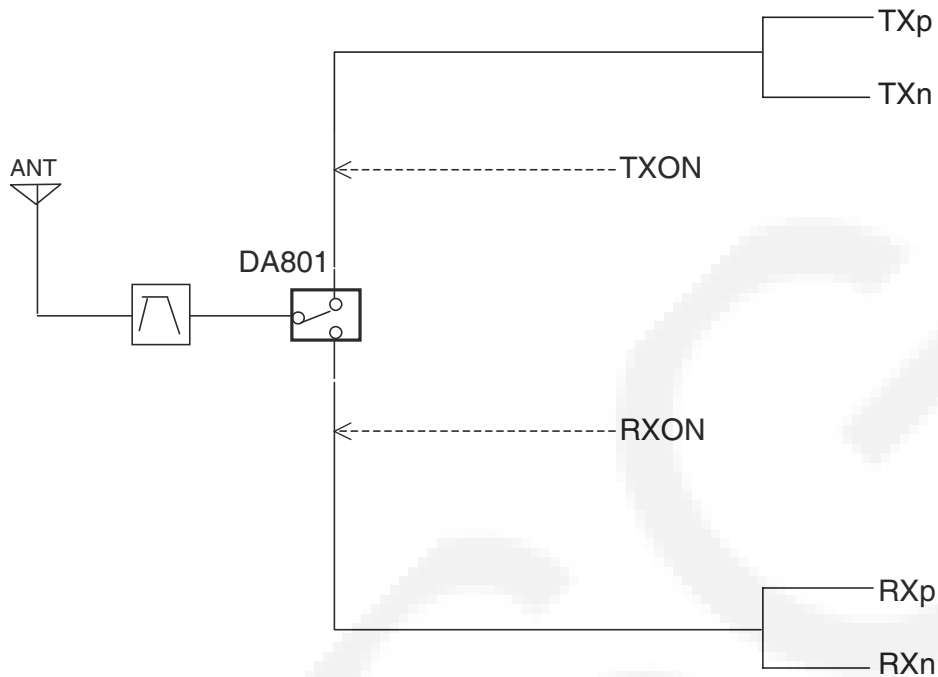

KX-TGA653 BLOCK DIAGRAM (Handset_RF Part)

4.7. Circuit Operation (Handset)

4.7.1. Outline



Handset consists of the following ICs as shown in **Block Diagram (Handset)** (P.18).

- DECT BBIC (**B**ase **B**and IC): IC1
 - All data signals (forming/analyzing ACK or CMD signal)
 - All interfaces (ex: Key, Detector Circuit, Charge, EEPROM, LCD)
- EEPROM: IC3
 - Setting data is stored. (e.g. ID, user setting)

4.7.2. Power Supply Circuit/Reset Circuit

Circuit Operation:

When power on the Handset, the voltage is as follows;
 BATTERY(2.2 V ~ 2.6 V: BATT+) → F1 → BBC1 (IC1) 10 pin
 The Reset signal generates IC1 (54 pin) and 1.8 V.

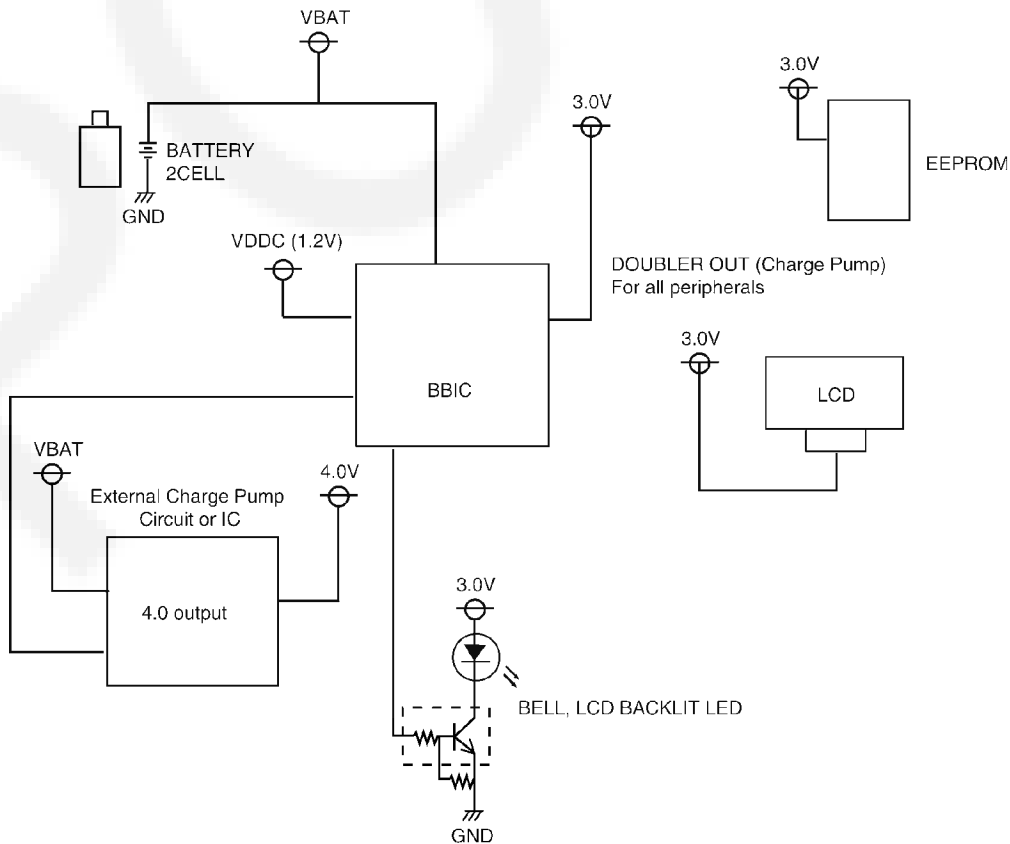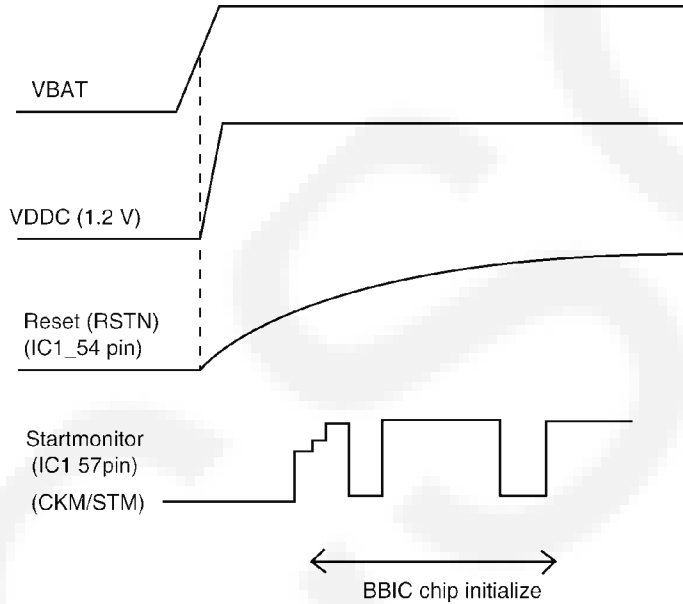

4.7.3. Charge Circuit

Circuit Operation:

When charging the handset on the Base Unit, the charge current is as follows;


DC+(6.5 V) → F301 → R371 → R372 → CHARGE+(Base) → CHARGE+(Handset) → Q4 → D7 → F1 → BATTERY+... Battery...

BATTERY- → R45 → GND → CHARGE-(Handset) → CHARGE-(Base) → GND → DC-(GND)

In this way, the BBIC on Handset detects the fact that the battery is charged.

The charge current is controlled by switching Q9 of Handset.

Refer to Fig.101 in **Power Supply Circuit/Reset Circuit** (P.12).

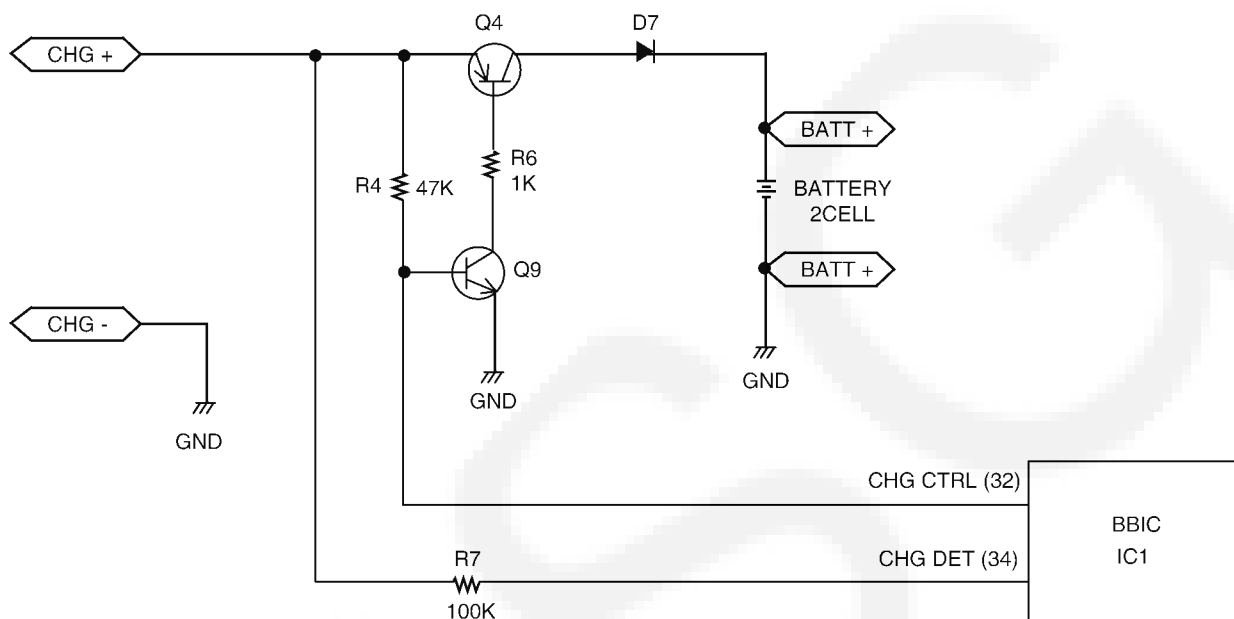

4.7.4. Battery Low/Power Down Detector

Circuit Operation:

"Battery Low" and "Power Down" are detected by BBIC which check the voltage from battery.

The detected voltage is as follows;

- Battery Low

Battery voltage: $V(\text{Batt}) \leq 2.35 \text{ V} \pm 50 \text{ mV}$

The BBIC detects this level and "🔋" starts flashing.

- Power Down

Battery voltage: $V(\text{Batt}) \leq 2.0 \text{ V} \pm 50 \text{ mV}$


The BBIC detects this level and power down.

4.7.5. Speakerphone

The hands-free loudspeaker at SP+ and SP- is used to generate the ring alarm.

4.8. Circuit Operation (Charger Unit)

Charge control is executed at handset side so that the operation when using charger is also controlled by handset.
Refer to **Circuit Operation (Handset)** (P.20)

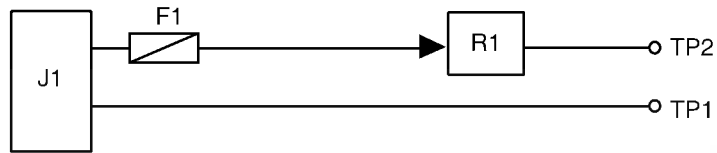

AC Adaptor

The route for this is as follows: DC+pin of J1(+) → F1 → R1 → CHARGE+pad → Handset → CHARGE-pad → DC-pin of J1(-).

4.9. Signal Route

SIGNAL ROUTE	IN	→	ROUTE	→	OUT
HANDSET TX			HANDSET MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - <HANDSET_RF_TX_ROUTE> - ANT. ---		
			---ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(46/47 - 28) - R181 - C184 - Q161 - Q141 - D101 - L101/[L102 - P101] - T/R(TEL LINE)		
HANDSET RX			T/R(TEL LINE) - L101/[P101 - L102] - D101 - Q141 - R165 - C173 - Q171 - C178 - R178 - IC501(16 - 44/45) - <BASE_UNIT_RF_TX_ROUTE> - ANT. ---		
			--- ANT. - <HANDSET_RF_RX_ROUTE> - IC1(28/27) - C86 - L74 - HEADSET_JACK(5 - 4) - R11 - HANDSET SPEAKER		
HANDSET SP-Phone TX			HANDSET MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - <HANDSET_RF_TX_ROUTE> - ANT. ---		
			---ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(46/47 - 28) - R181 - C184 - Q161 - Q141 - D101 - L101/[L102 - P101] - T/R(TEL LINE)		
HANDSET SP-Phone RX			T/R(TEL LINE) - L101/[P101 - L102] - D101 - Q141 - R165 - C173 - Q171 - C178 - R178 - IC501(16-44/45) - <BASE_UNIT_RF_TX_ROUTE> - ANT. ---		
			--- ANT. - <HANDSET_RF_RX_ROUTE> - IC1(29/31) - Backside SP		
GREETING RECORDING			HANDSET MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - <HANDSET_RF_TX_ROUTE> - ANT. ---		
			---ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(46/47- 73/74) - IC601		
GREETING PLAY TO TEL LINE			IC601 - IC501(73/74 - 28) - R181 - C184 - Q161 - Q141 - D101 - L101/[L102 - P101] - T/R(TEL LINE)		
ICM RECORDING			T/R(TEL LINE) - L101/[P101 - L102] - D101 - Q141 - R165 - C173 - Q171 - C178 - R178 - IC501(16 - 73/74) - IC601		
ICM PLAY TO SPEAKER			IC601 - IC501(73/74 - 29/31) - L474/L476 - SPEAKER		
DTMF SIGNAL TO TEL LINE			IC501(28) - R181 - C184 - Q161 - Q141 - D101 - L101/[L102 - P101] - T/R(TEL LINE)		
CALLER ID			T/R(TEL LINE) - L101/[P101 - L102] - C121/C122 - R121/R122 - IC501(24/25)		
BELL DETECTION			T/R(TEL LINE) - L101/[P101 - L102] - R111/R112 - C111/C112 - Q111 - IC501(5)		

Note:

: inside of Handset

RF part signal route

SIGNAL ROUTE	IN	→	ROUTE	→	OUT
HANDSET RF [TX_ROUTE]			IC1(44/45) - L809 - C812 - DA801 - C895 - ANT		
HANDSET RF [RX_ROUTE]			ANT - C895 - DA801 - C826 - IC1(46/47)		
BASE UNIT RF [TX_ROUTE]			IC501(44/45) - C812 - L809 - DA801 - C895 - DA802 - C893/C894 - ANT1/ANT2		
BASE UNIT RF [RX_ROUTE]			ANT1/ANT2 - C893/C894 - DA802 - C895 - DA801 - C826 - IC501(46/47)		

Note:

: inside of Handset

5 Location of Controls and Components

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

6 Installation Instructions

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

7 Operating Instructions

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.



8 Test Mode

8.1. Engineering Mode

8.1.1. Base Unit

Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

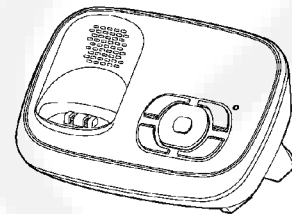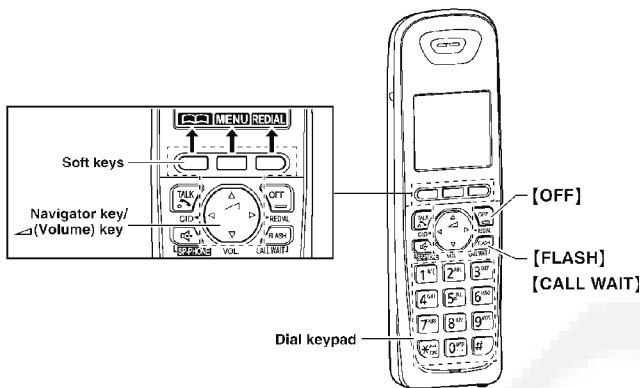

H/S key operation


- 1). Press **MENU** .

- 2). Select "Initial Setting" using [**▲**]or[**▼**] then press **SELECT** or [**▶**].

 Select "Set tel line" using [**▲**]or[**▼**] then press **SELECT** or [**▶**].
- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4".
Note: 7262 7664 = PANA SONI
 (see letters printed on dial keys)
- 4). Select "Write EEP" using [**▲**]or[**▼**] then press **SELECT** or [**▶**].
- 5). Enter "●", "●", "●", "●" (Address). (*1)
- 6). Enter "* ", "* " (New Data). (*1)
- 7). Press **OK** , a long confirmation beep will be heard.

- 8). Press [**OFF**] to return to standby mode.
 After that, turn the base unit power off and then power on.

H/S LCD

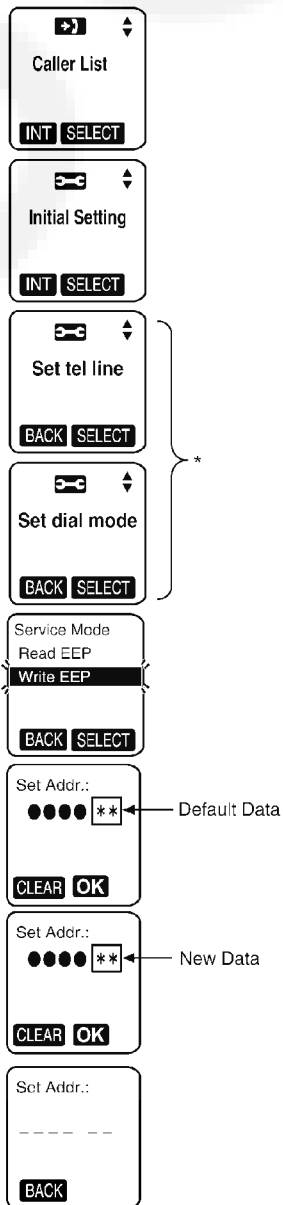

Note: * To enter "Set dial mode", press **SELECT** or [**▶**] at " Set tel line". It is necessary to turn on the power of base unit.

Frequently Used Items (Base Unit)

ex.)

Items	Address	Default Data	New Data		Remarks
Frequency	00 07 / 00 08	00/01	-	-	Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the computer system.
ID	00 02 ~ 00 06	Given value	-	-	

Note:


(*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex)	Input Keys	Desired Number (hex)	Input Keys
0	0	A	[Flash] + 0
1	1	B	[Flash] + 1
.	.	C	[Flash] + 2
.	.	D	[Flash] + 3
.	.	E	[Flash] + 4
9	9	F	[Flash] + 5

8.1.2. Handset

Important:


Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

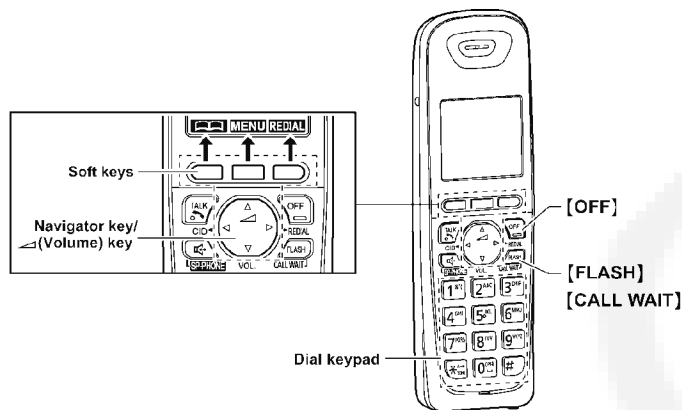

H/S key operation

- 1). Press **MENU**.
- 2). Select "Initial Setting" using **[▲]** or **[▼]** then press **SELECT** or **[▶]**.
- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4".
Note: 7262 7664 = PANA SONI
 (see letters printed on dial keys)
- 4). Select "Write EEP" using **[▲]** or **[▼]** then press **SELECT** or **[▶]**.
- 5). Enter "●", "●", "●", "●" (Address). (*1)
- 6). Enter "*", "*" (New Data). (*1)
- 7). Press **OK**, a long confirmation beep will be heard.
- 8). Press **[OFF]** to return to standby mode.

H/S LCD

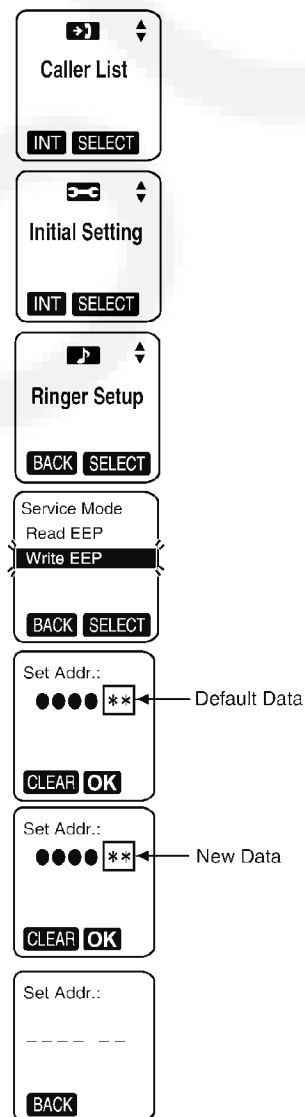

After that, remove and reinsert the batteries. Press the Power button for about 1 second if the power is not turned on.

Frequently Used Items (Handset)

ex.)

Items	Address	Default Data	New Data	Possible Adjusted Value MAX (hex)	Possible Adjusted Value MIN (hex)	Remarks
Battery Low	00 11 / 00 12	00 / 00	-	-	-	(*2)
Frequency	00 07 / 00 08	00 / 01	-	-	-	
ID	00 02 ~ 00 06	Given value	-	-	-	

Note:

(*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex.)	Input Keys	Desired Number (hex.)	Input Keys
0	0	A	[Flash] + 0
1	1	B	[Flash] + 1
.	.	C	[Flash] + 2
.	.	D	[Flash] + 3
.	.	E	[Flash] + 4
9	9	F	[Flash] + 5

(*2) Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the handset.

9 Service Mode

9.1. How to Clear User Setting (Handset Only)

Handset

Press **2**, **5**, **8**, **0** simultaneously until a beep sound is heard. Then single handset is initialized.


(The contents of user setting are reset to factory default)

*Usage time is not cleared.

10 Troubleshooting Guide

10.1. Troubleshooting Flowchart

FLOW CHART

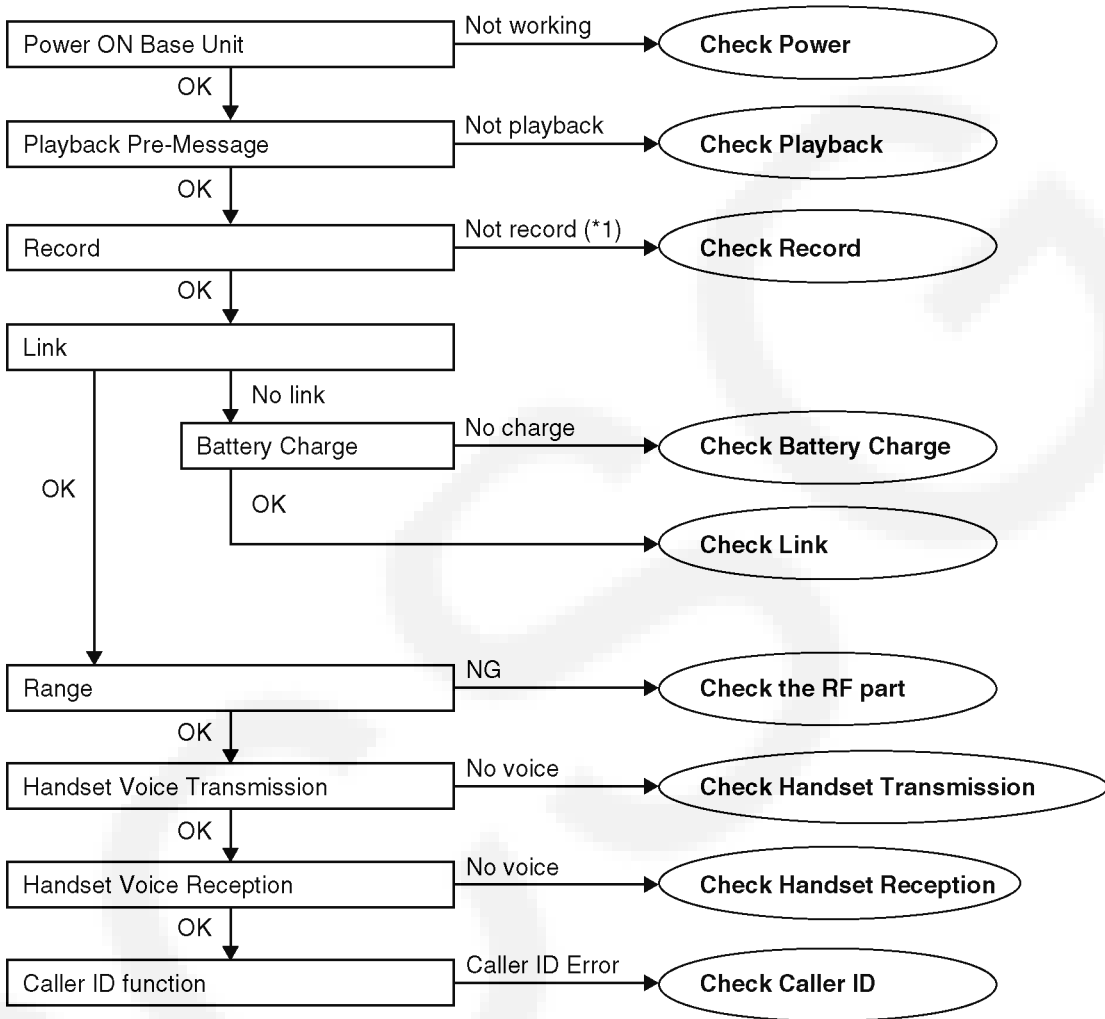

Cross Reference:

Check Power (P.32)

Check Playback (P.36)

Check Record (P.33)

Check Battery Charge (P.36)

Check Link (P.37)

Check the RF part (P.39)

Check Handset Transmission (P.44)

Check Handset Reception (P.44)

Check Caller ID (P.44)


Note:

(*1) When a user claims that the unit disconnects a call right after the greeting message and no incoming messages can be recorded, this symptom can not be reappeared with TEL simulator in the service center. In this case, try to change the Auto disconnect activation time and Vox level.

<How to change the Auto Disconnect activation time and VOX level> (P.34) item (A) and (B).

10.1.1. Check Power


10.1.1.1. Base Unit

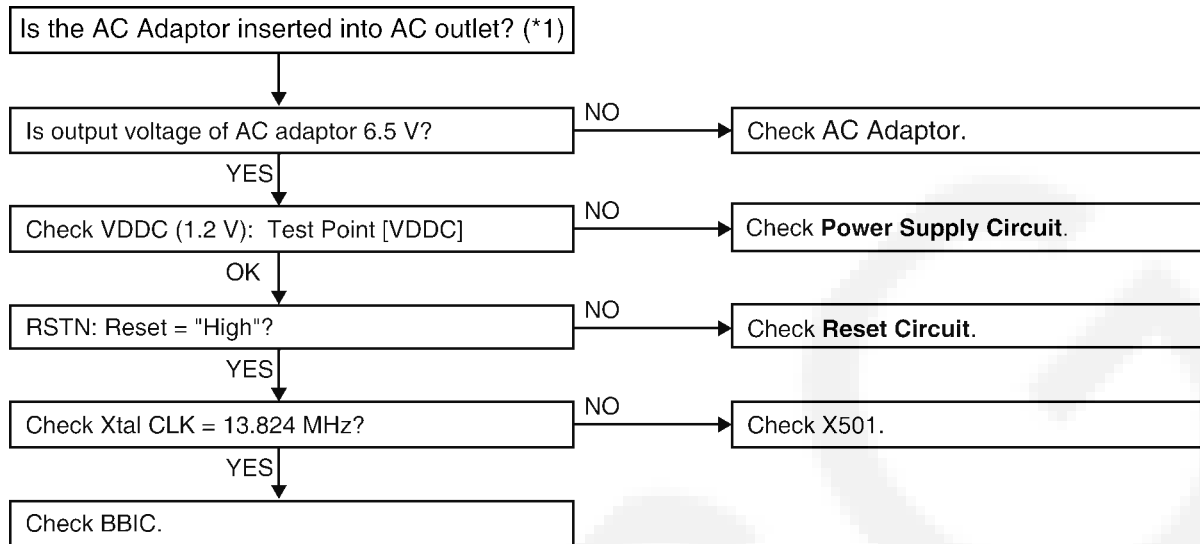

Cross Reference:
Power Supply Circuit/Reset Circuit (P.12)

Note:
 BBIC is IC501.
 (*1) Refer to **Specifications (P.6)** for part number and supply voltage of AC adaptor.
 (*2) Refer to **Circuit Board (Base Unit_Main) (P.73)**.

10.1.1.2. Handset

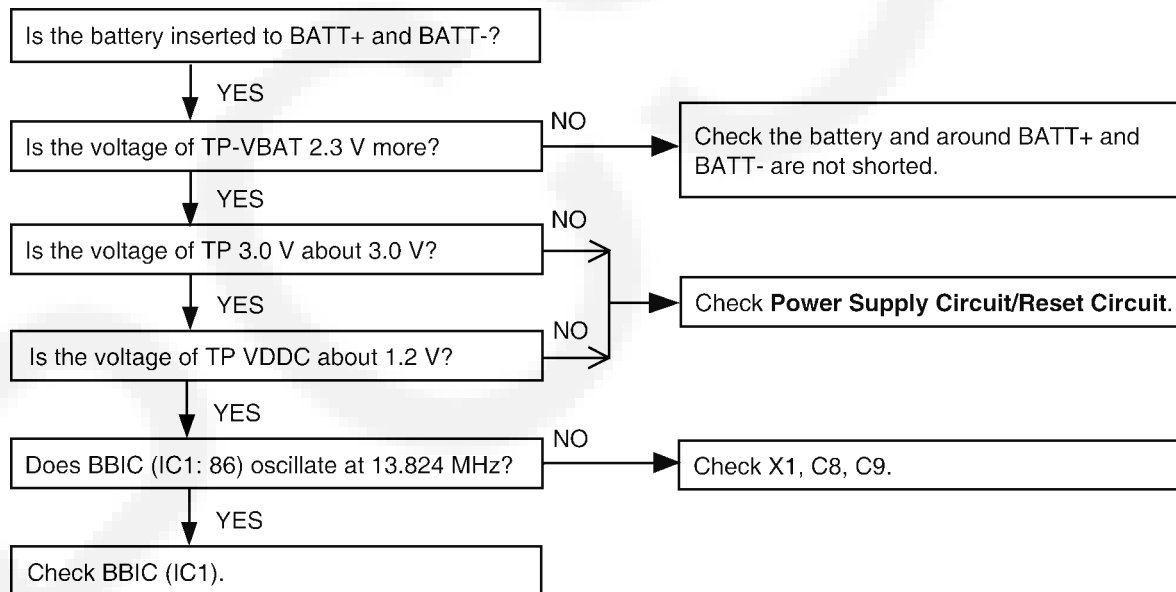


Cross Reference:
Power Supply Circuit/Reset Circuit (P.20)

10.1.2. Check Record

10.1.2.1. Base Unit

Not record Incoming Message

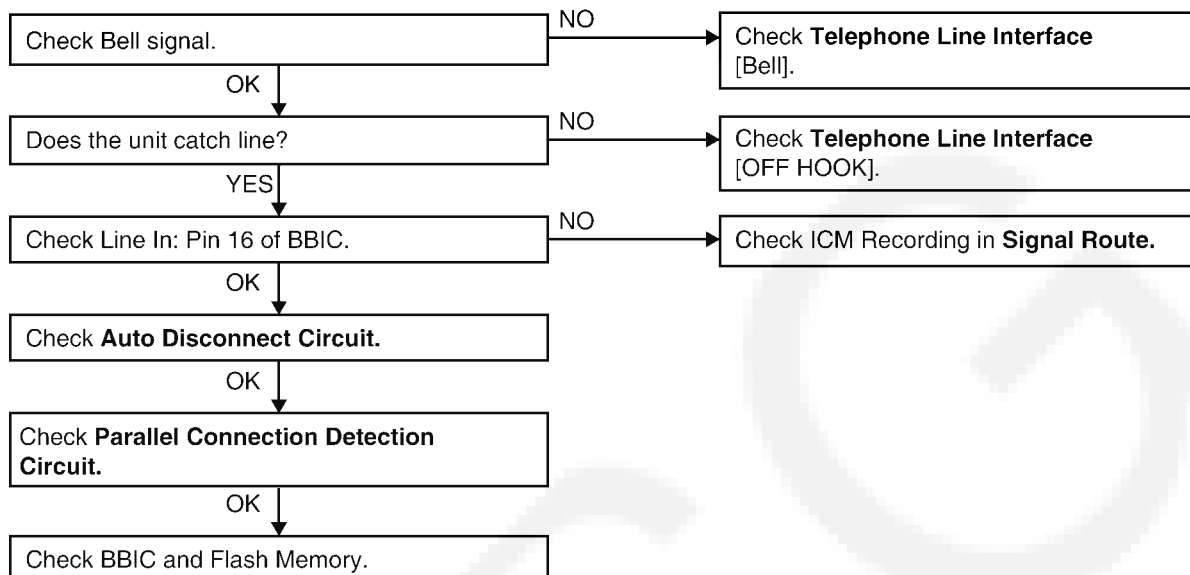

Cross Reference:

Signal Route (P.23)

Telephone Line Interface (P.14)

Parallel Connection Detect Circuit/Auto Disconnect Circuit (P.15)

Note:

Flash Memory is IC601.

BBIC is IC501.

<How to change the Auto Disconnect activation time and VOX level>

A) Auto Disconnect activation time:

Some Telephone Company lines (fiber or cable) ON Hook and OFF Hook voltages are lower than conventional lines, which may cause a malfunction of Auto Disconnect detection. To solve this problem, try changing the Auto Disconnect activation through the procedures below.

- 1) Press "MENU " key at standby Mode and "#" key.


Note: The set must power on and be linked.

- 2) Press "9", "0", "0", "0", "*" .

LCD (H/S)



- 3) Press "7", "3", "1".

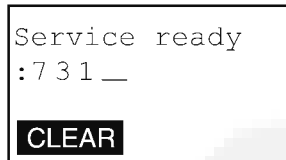

- 4) Then enter the below last digit;

last digit		
"0"	Auto disconnect & CPC ^(*1)	: enable . . . [default]
"1"	Auto disconnect : enable ^(*1)	CPC : disable
"2"	Auto disconnect & CPC	: disable ^(*2)

Note:

(*1) Both Auto Disconnect and CPC don't detect for the first 2 seconds.

(*2) If the "Disable" is selected, even if the parallel-connected telephone is OFF HOOK, the line isn't disconnected.

- 5) Back to "standby" mode automatically after step 4).
You can hear beep sound which is a confirmation tone.

B) Vox level:

It makes easier to detect a small voice (caller) by raising the sensitivity of VOX level. Therefore, the recording of TAM is not turned off during a detection.

1) ~ 2) are same as (A).

3) Press "5","1","1".

Service ready :511 _ CLEAR


4) Then enter the below last digit;

last digit	"0"	default setting : normal
	"1"	6dB up

5) Back to "standby" mode automatically after step 4).
You can hear beep sound which is a confirmation tone.

10.1.3. Check Playback

10.1.3.1. Base Unit

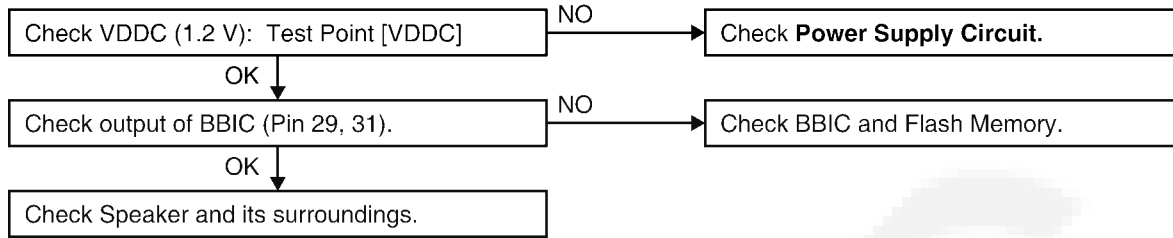


Cross Reference:
Power Supply Circuit/Reset Circuit (P.12)

Note:
 Flash Memory is IC601.
 BBIC is IC1.
 (*1) Refer to **Circuit Board (Base Unit_Main) (P.73)**.


10.1.4. Check Battery Charge

10.1.4.1. Base Unit

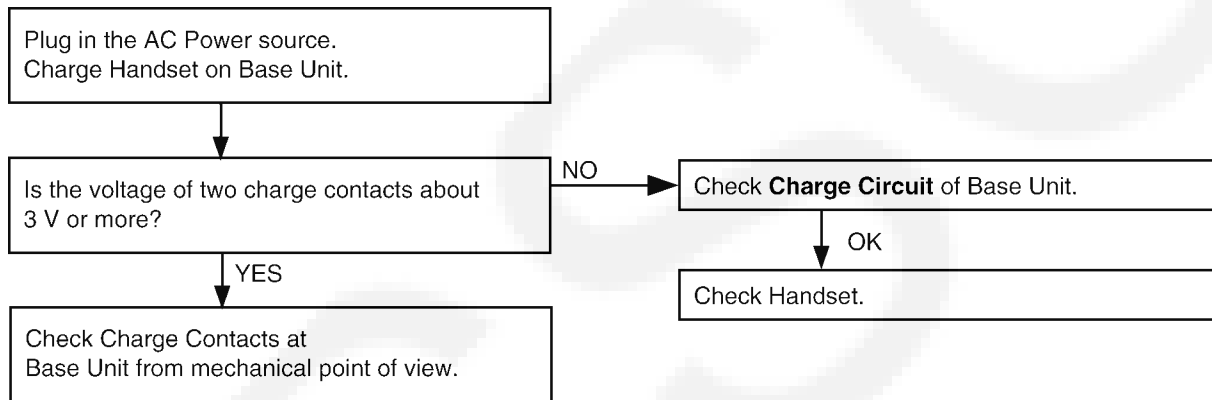


Cross Reference:
Charge Circuit (P.13)

10.1.4.2. Handset

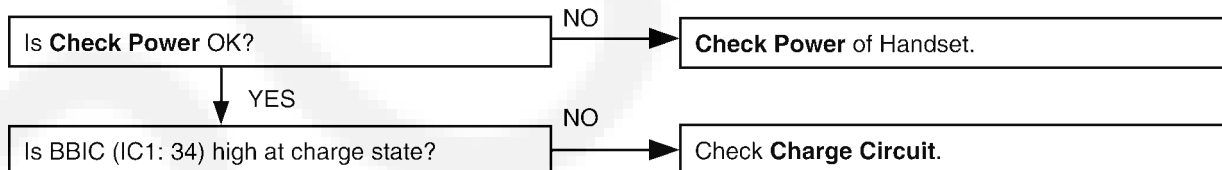

Cross Reference:
Check Power (P.32)
Charge Circuit (P.21)


10.1.4.3. Charger Unit

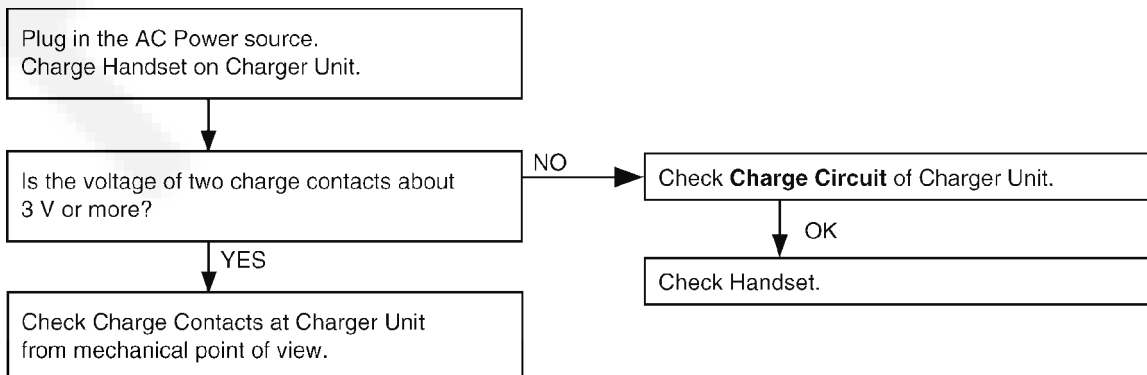

Cross Reference:
Charge Circuit (P.21)

10.1.5. Check Link

10.1.5.1. Base Unit

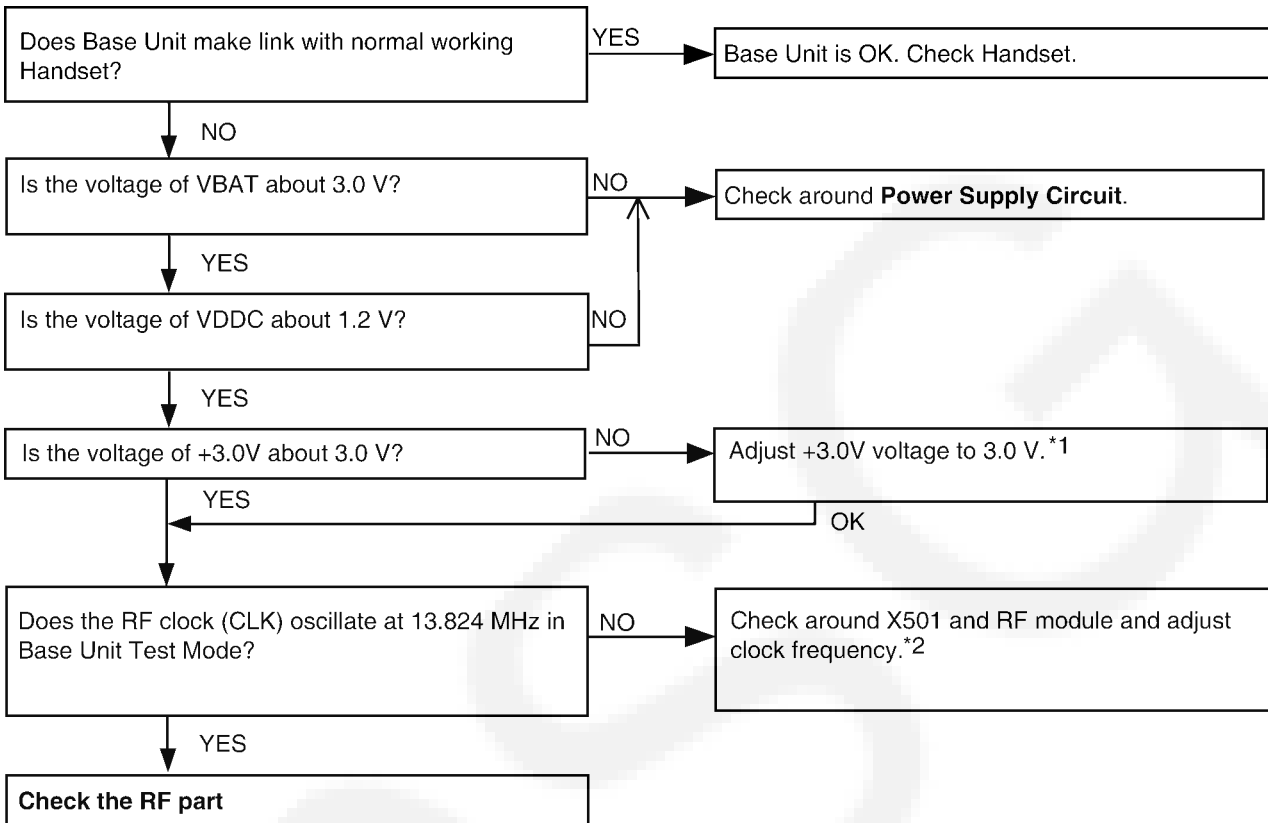

Cross Reference:

Power Supply Circuit/Reset Circuit (P.12)

Check the RF part (P.39)

Note:

*1 How to adjust +3.0V:

Execute the command "VDA"


Refer to **Things to Do after Replacing IC or X'tal (P.57)** for Base Unit.

*2 How to adjust the frequency of X501:

To see the frequency, execute the command "SFR", then check the TP_CKM (IC501-57pin).

To adjust frequency, send command "SFR □○○□○○" until the frequency counter becomes 13.824 MHz±55HZ.

10.1.5.2. Handset

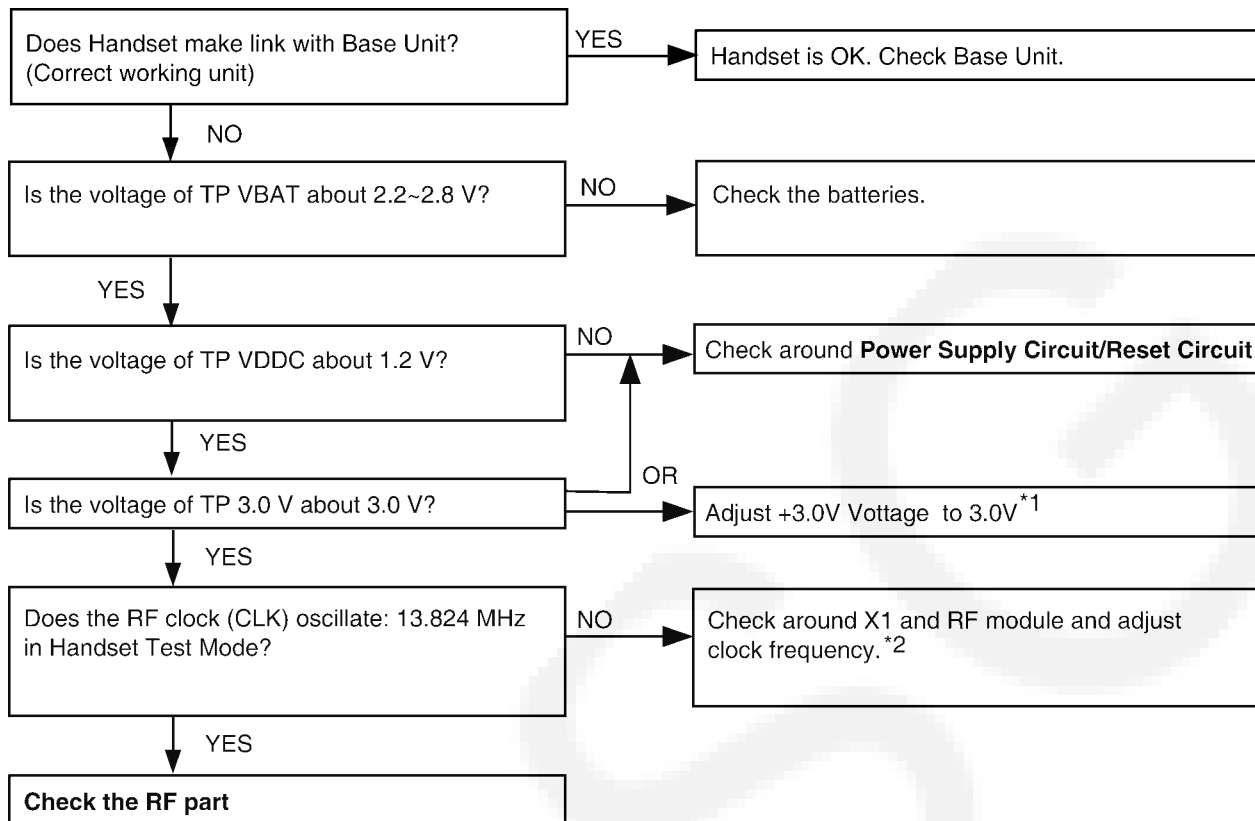

Cross Reference:

Power Supply Circuit/Reset Circuit (P.20)

Check the RF part (P.39)

Note:

*1 How to adjust +3.0V:

Execute the command "VDA"

Refer to **Things to Do after Replacing IC or X'tal (P.58)** for Handset.

*2 How to adjust the frequency of X1:

To see the frequency, execute the command "SFR", then check the TP_CKM (IC1-57pin).

To adjust frequency, send command "SFR □○○□○○" until the frequency counter becomes 13.824 MHz±55HZ.


10.1.6. Check the RF part

10.1.6.1. Finding out the Defective part

1. Prepare Regular HS(*1) and Regular BU(*2).
2. a. Re-register regular HS (Normal mode) to base unit (to be checked).
If this operation fails in some ways, the base unit is defective.
- b. Re-register handset (to be checked) to regular BU (Normal mode).
If this operation fails in some ways, the handset is defective.

After All the Checkings or Repairing

1. Re-register the checked handset to the checked base unit, and Regular HS to Regular BU.

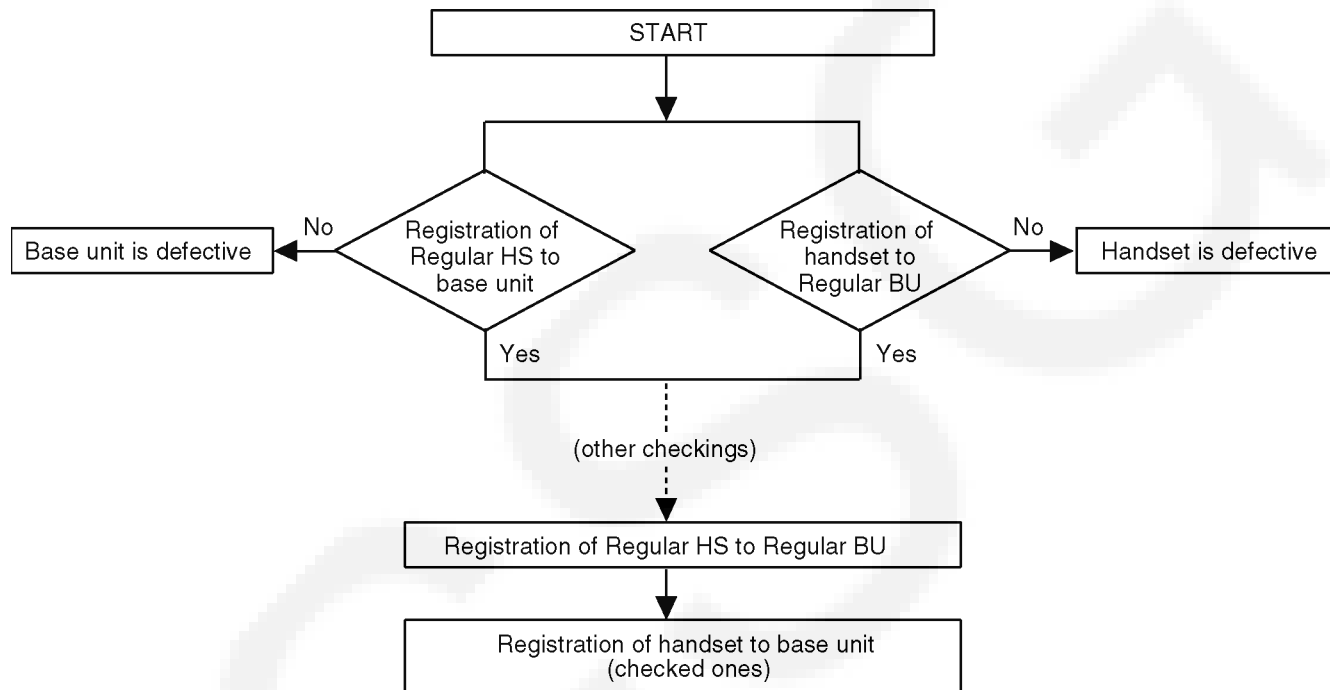


Note:

- (*1) HS: Handset
- (*2) BU: Base Unit

10.1.6.2. RF Check Flowchart

Each item (1 ~ 6) of RF Check Flowchart corresponds to **Check Table for RF part** (P.41).
Please refer to the each item.

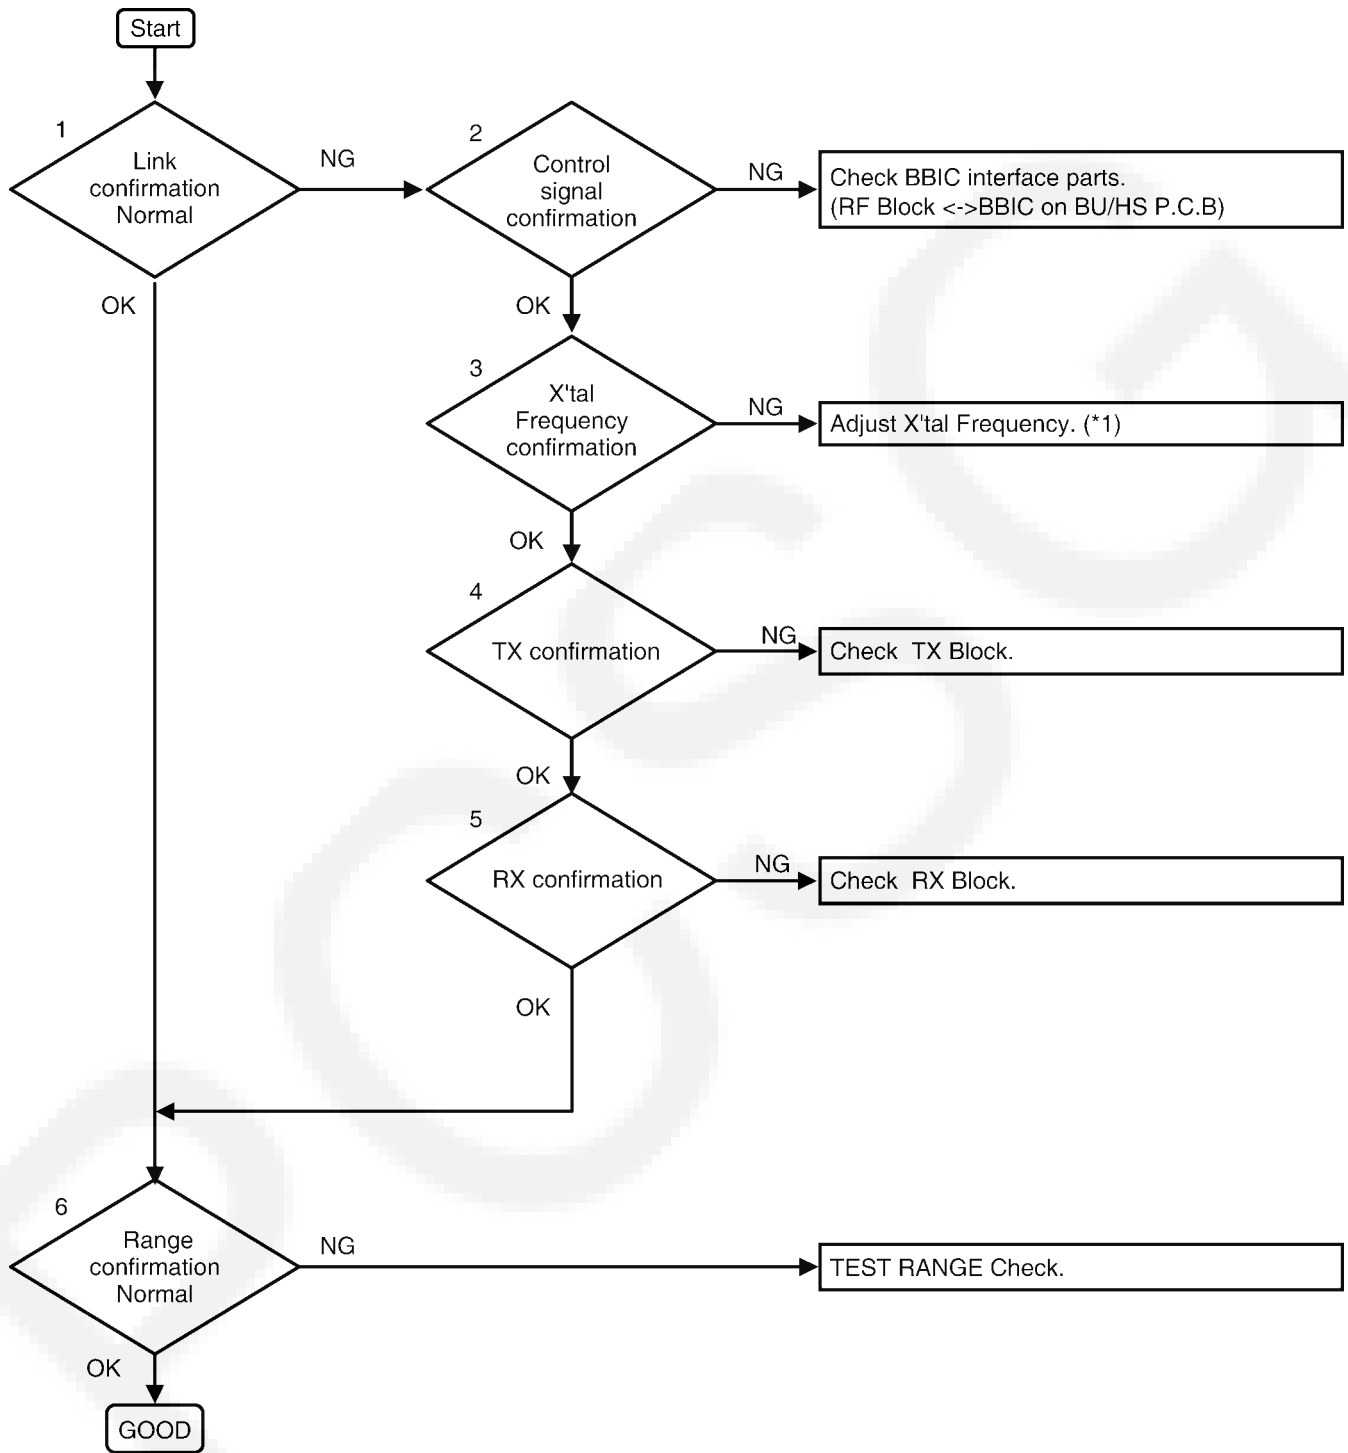

Note:
(*1) Refer to **Check Link** (P.37).

10.1.6.3. Check Table for RF part

No.	Item	BU (Base Unit) Check	HS (Handset) Check
1	Link Confirmation Normal HS, BU Mode [Normal Mode]	<ol style="list-style-type: none"> 1. Register Regular HS to BU (to be checked). 2. Press [Talk] key of the Regular HS to establish link. 	<ol style="list-style-type: none"> 1. Register HS (to be checked) to Regular BU. 2. Press [Talk] key of the HS to establish link.
2	X'tal Frequency confirmation HS, BU Mode: [Adjustment]	Check X'tal Frequency. (13.824000 MHz \pm 100 Hz)	Check X'tal Frequency. (13.824000 MHz \pm 100 Hz)
3	TX confirmation Regular HS (BU) Mode: [Test RX Mode] BU (HS) Mode: [Test TX_Burst Mode]	<ol style="list-style-type: none"> 1. Place Regular HS 15 cm away from a checked BU. 2. Confirm "TXDATA" waveform of BU (*1) and "RXDATA" waveform of Regular HS by Digital Oscilloscope. 	<ol style="list-style-type: none"> 1. Place Regular BU 15 cm away from a checked HS. 2. Confirm "TXDATA" waveform of HS (*2) and "RXDATA" waveform of Regular BU by Digital Oscilloscope.
4	RX confirmation Regular HS (BU) Mode: [Test TX_Burst Mode] BU (HS) Mode: [Test RX Mode]	<ol style="list-style-type: none"> 1. Place Regular HS 15 cm away from a checked BU. 2. Confirm "RXDATA" waveform of BU (*1) and "TXDATA" waveform of Regular HS by Digital Oscilloscope. 	<ol style="list-style-type: none"> 1. Place Regular BU 15 cm away from a checked HS. 2. Confirm "RXDATA" waveform of HS (*2) and "TXDATA" waveform of Regular BU by Digital Oscilloscope.
5	Range Confirmation Normal HS, BU Mode: [Normal Mode]	<ol style="list-style-type: none"> 1. Register Regular HS to BU (to be checked). 2. Press [Talk] key of the Regular HS to establish link. 3. Compare the range of the BU (being checked) with that of the Regular BU. 	<ol style="list-style-type: none"> 1. Register HS (to be checked) to Regular BU. 2. Press [Talk] key of the HS to establish link. 3. Compare the range of the HS (being checked) with that of the Regular HS.

Note:

(*1) **Adjustment Standard (Base Unit)** (P.54)

(*2) **Adjustment Standard (Handset)** (P.56)

10.1.6.4. TEST RANGE Check

Circuit block which range is defective can be found by the following check.

Item	BU (Base Unit) Check	HS (Handset) Check
Range Confirmation TX TEST (TX Power check) HS, BU setting Checked unit: Low TX power (*1) Regular unit: High TX power (*1)	1. Register Regular HS to BU (to be checked). 2. Set TX Power of the BU and the Regular HS according to CHART1. 3. At distance of about 20m between HS and BU, Link OK = TX Power of the BU is OK. No Link = TX Power of the BU is NG.	1. Register HS (to be checked) to Regular BU. 2. Set TX Power of the HS and the Regular BU according to CHART1. 3. At distance of about 20m between HS and BU, Link OK = TX Power of the HS is OK. No Link = TX Power of the HS is NG.
Range Confirmation RX TEST (RX sensitivity check) HS, BU setting Checked unit: High TX power (*1) Regular unit: Low TX power (*1)	1. Register Regular HS to BU (to be checked). 2. Set TX Power of the BU and the Regular HS according to CHART1. 3. At distance of about 20m between HS and BU, Link OK= RX Sensitivity of the BU is OK. No Link = RX Sensitivity of the BU is NG.	1. Register HS (to be checked) to Regular BU. 2. Set TX Power of the Checking HS and the Regular BU according to CHART1. 3. At distance of about 20m between HS and BU, Link OK= RX Sensitivity of the HS is OK. No Link = RX Sensitivity of the HS is NG

CHART1: Setting of TX Power and RX Sensitivity in Range Confirmation TX TEST, RX TEST

	BU (to be checked)	Regular_HS
	TX Power	TX Power
BU (Base Unit) TX Power Check	Low	High
BU (Base Unit) RX Sensitivity Check	High	Low

	HS (to be checked)	Regular_BU
	TX Power	TX Power
HS (Handset) TX Power Check	Low	High
HS (Handset) RX Sensitivity Check	High	Low

Note:

(*1) Refer to **Commands (Base Unit)** (P.53).

10.1.7. Registering a Handset to a Base Unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit, re-register the handset.

- 1 **Handset:**
[MENU] → [#][1][3][0]
- 2 **Base unit:**
Press and hold [LOCATOR] for about 5 seconds until the registration tone sounds.
 - If all registered handsets start ringing, press the same button to stop. Then repeat this step.
 - The next step must be completed within 90 seconds.
- 3 **Handset:**
Press [OK], then wait until a long beep sounds.

Note:

- While registering, “Base in registering” is displayed on all registered handsets.
- When you purchase an additional handset, refer to the additional handset’s installation manual for registration.

10.1.8. Deregistering a Handset

A handset can cancel its own registration (or the registration of another handset) that is stored to the base unit. This allows the handset to end its wireless connection with the system.

- 1 [MENU] → [#][1][3][1]
 - All handsets registered to the base unit are displayed.
- 2 [▼]/[▲]: Select the handset you want to cancel. → [SELEC.]
- 3 [▼]/[▲]: “Yes” → [SELEC.]
- 4 [OFF]

10.1.9. Deregistering All Handsets by the Base Unit

Base unit:


- 1 Press and hold [LOCATOR/INTERCOM] again until a long beep sounds.

Important:

When deregistering all handsets by the base unit, the registration information of all handsets in the base unit is erased.


However the registration information in each handset will still remain.

10.1.10. Check Handset Transmission

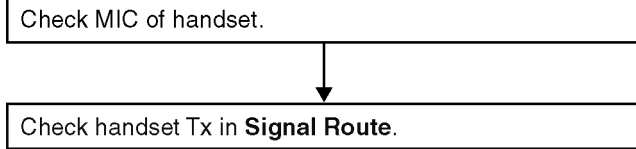

Cross Reference:
Signal Route (P.23)

10.1.11. Check Handset Reception

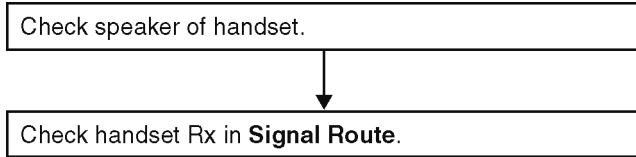


Cross Reference:
Signal Route (P.23)

Note:
 When checking the RF part, Refer to **Check the RF part (P.39)**.

10.1.12. Check Caller ID

BASE UNIT

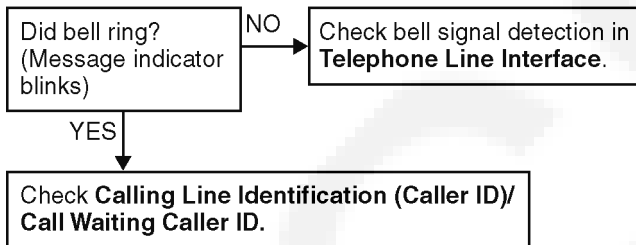

Cross Reference:
Telephone Line Interface (P.14)
Calling Line Identification (Caller ID)/Call Waiting Caller ID (P.16)

Note:


- Make sure the format of the Caller ID service of the Telephone company that the customer subscribes to.
- It is also recommended to confirm that the customer is really a subscriber of the service.

11 Disassembly and Assembly Instructions


11.1. Disassembly Instructions

11.1.1. Base Unit


- ① Remove the 4 screws to remove the cabinet cover.
- ② Remove the tapes and solders.

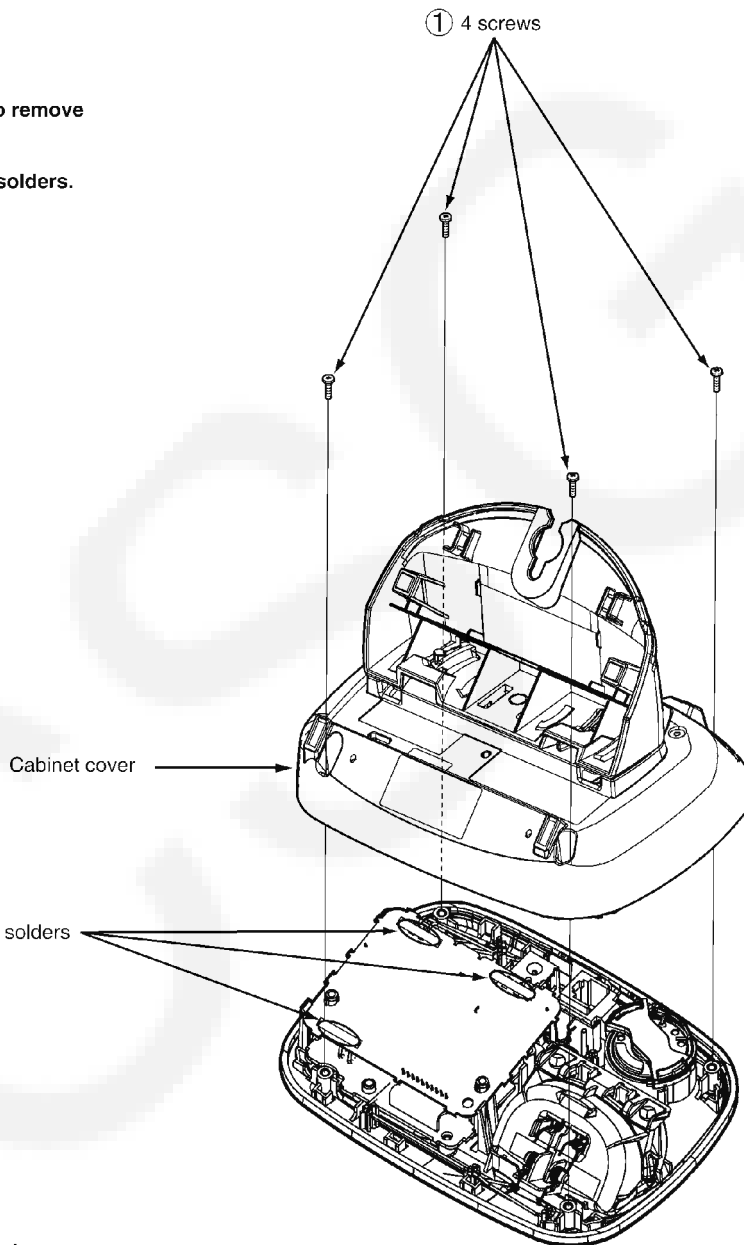

- ③ Remove the parallel wire to remove the main P.C. board.

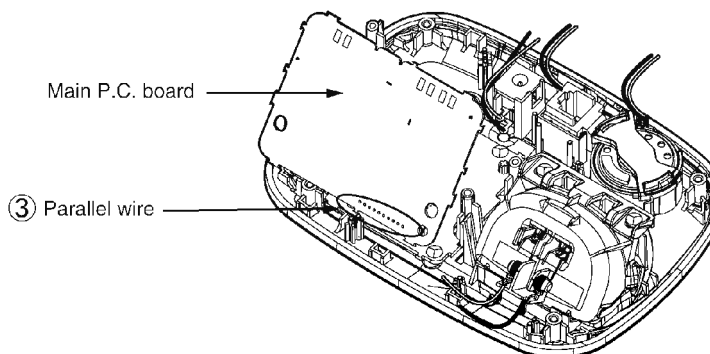


- ④ Remove the 3 screws to remove the the operational P. C. board.

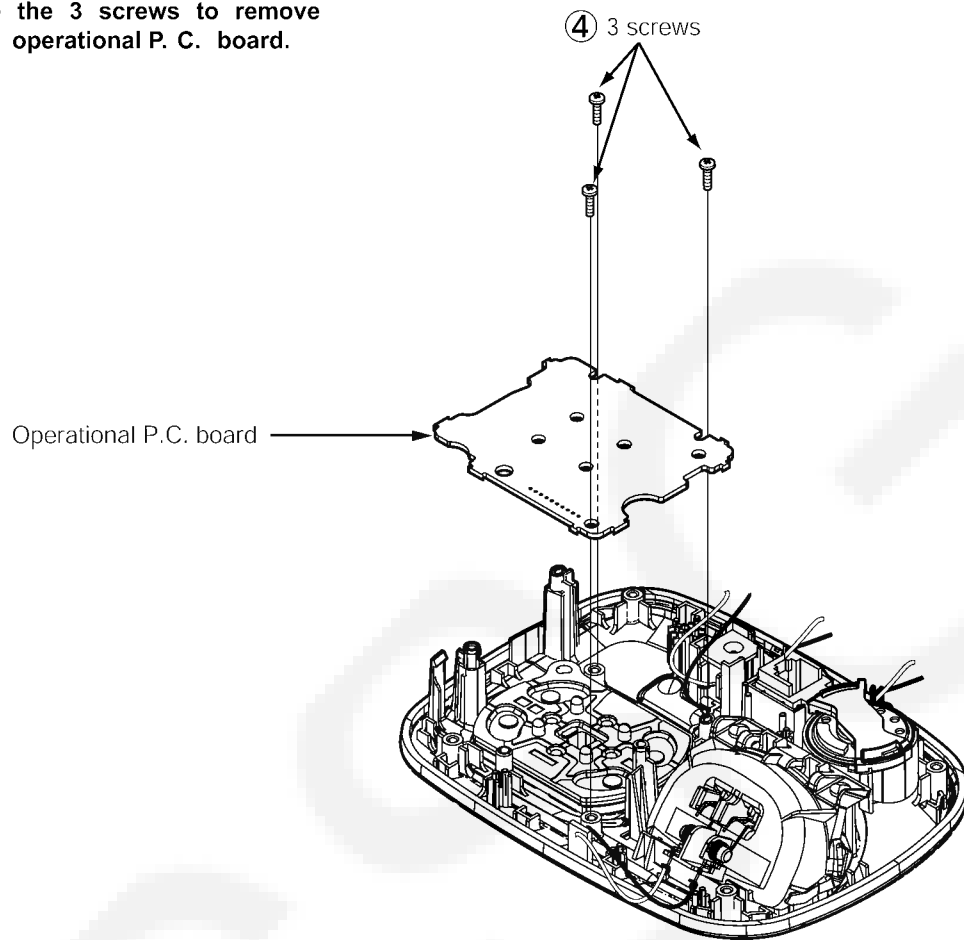


11.1.2. Handset


- ① Remove the 2 screws.

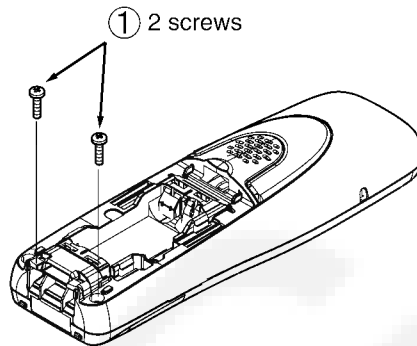


- ② Insert a JIG (PQDJ10006Y) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.

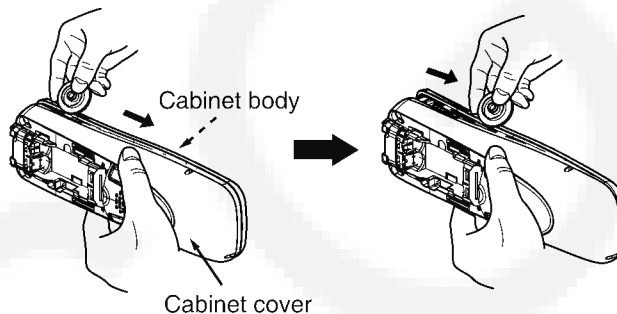


- ③ Likewise, open the other side of the cabinet.

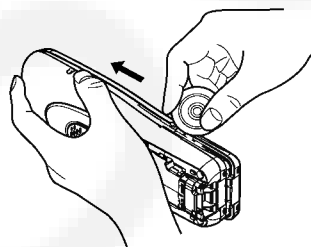

- ④ Remove the cabinet cover by pushing it upward.

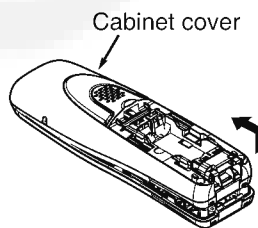

- ⑤ Remove the solders and tape.

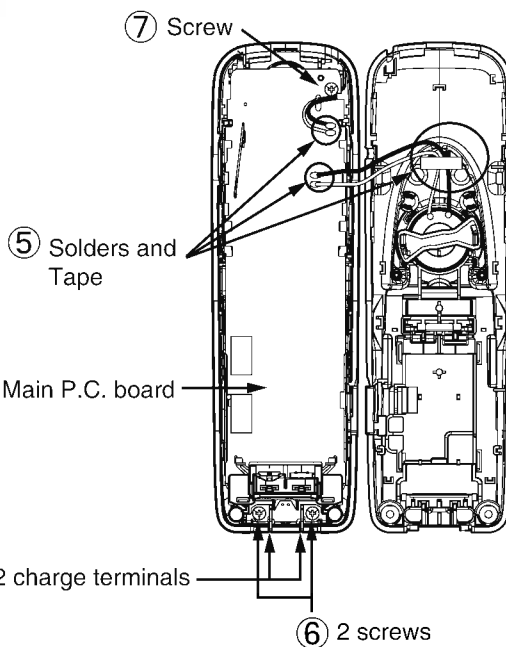


- ⑥ Remove the 2 screws to remove the 2 charge terminals.


- ⑦ Remove the screw to remove the main P. C. board.

11.1.3. Charger Unit


- ① Remove the screw to remove the cabinet cover.

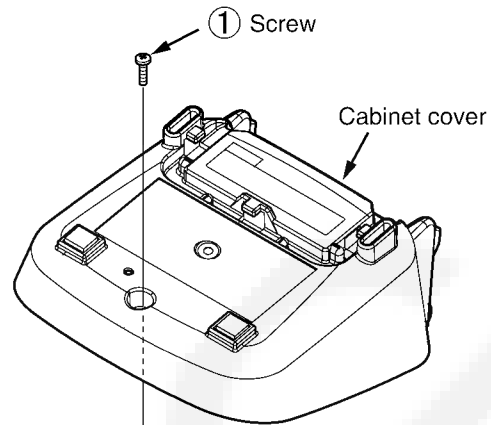

- ② Remove the solders to remove the 2 charge terminals.

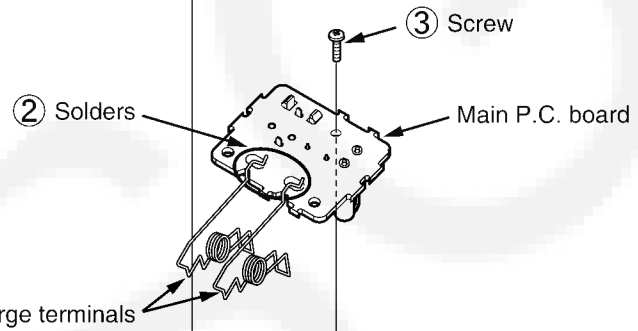

- ③ Remove the screw to remove the main P.C. board.

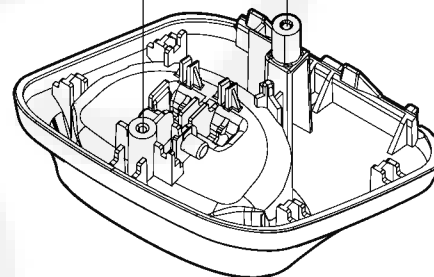


11.2. How to Replace the Handset LCD

Note:

The illustrations are simplified in this page.


They may differ from the actual product.

①

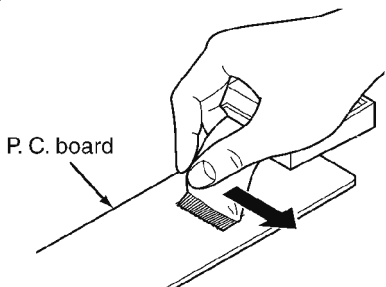


Peel off the FFC (Flexible Flat Cable) from the LCD, in the direction of the arrow. Take care to ensure that the foil on the P.C. board is not damaged.

②

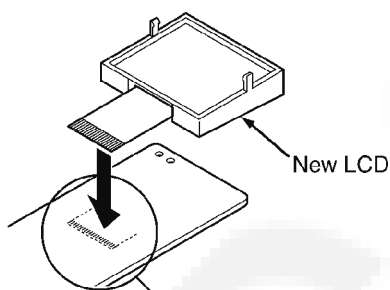


Fit the heatseal of a new LCD.

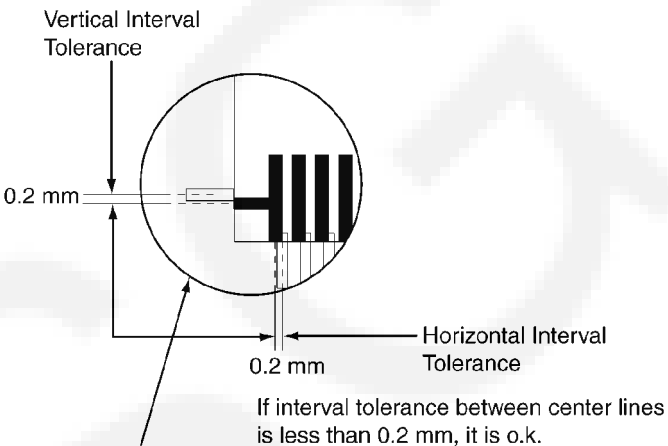


OK

③

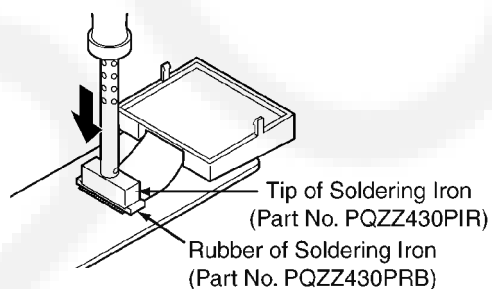


Heatweld with the tip of the soldering iron about 5 to 8 seconds (in case of 60W soldering iron).

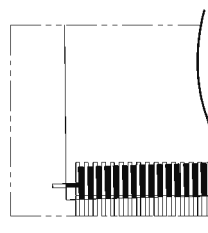


NG

(Inclined)

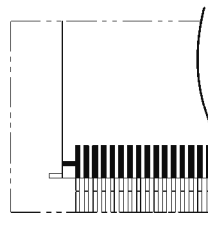

NG

(Vertical interval tolerance is more than 0.2 mm.)

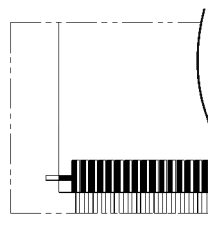

NG

(Horizontal interval tolerance is more than 0.2 mm.)

12 Measurements and Adjustments

This chapter explains the measuring equipment, the JIG connection, and the PC setting method necessary for the measurement in **Troubleshooting Guide** (P.31)

12.1. Equipment Required

- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope.
- Frequency counter: It must be precise enough to measure intervals of 1 Hz (precision; ± 4 ppm)
Hewlett Packard, 53131A is recommended.
- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
This equipment may be useful in order to precisely adjust like a mass production.

12.2. The Setting Method of JIG

<Preparation>

- Serial JIG cable: PQZZ1CD300E*
- PC which runs in DOS mode
- **Batch file CD-ROM** for setting: PNZZTG6521M


Note:

*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (k Ω)	New value (k Ω)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

12.2.1. Connections (Base Unit)

- ① Connect the AC adaptor.
- ② Connect the JIG Cable GND (black).
- ③ Connect the JIG Cable RX (red) and TX (yellow).

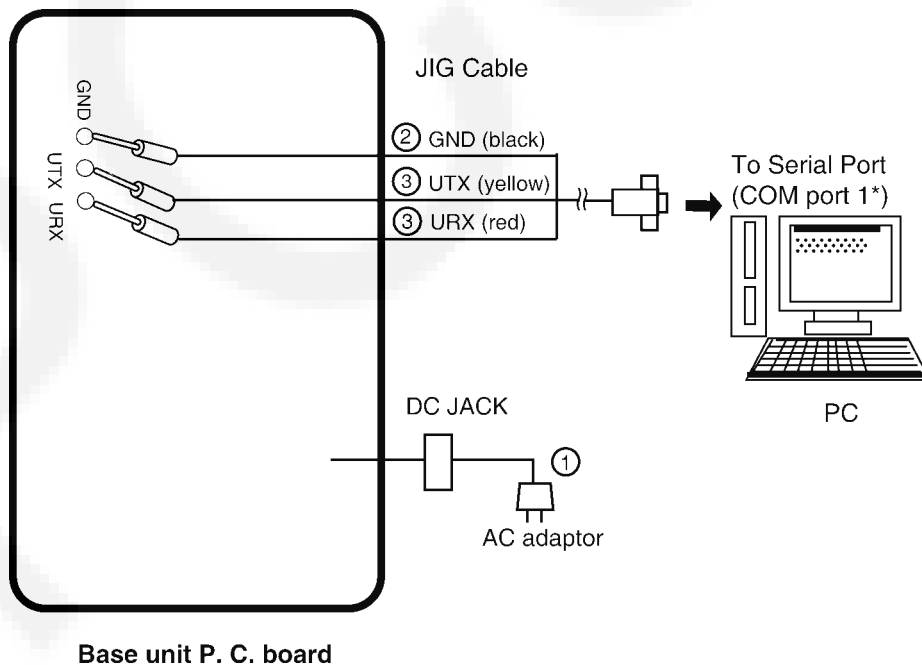


Note:

*: COM port names may vary depending on what your PC calls it.

12.2.2. Connections (Handset)

- ① Connect the DC Power or Battery to BATT+ and BATT-.
- ② Connect the JIG cable GND (black) to GND.
- ③ Connect the JIG cable UTX (yellow) to UTX and URX (red) to URX.

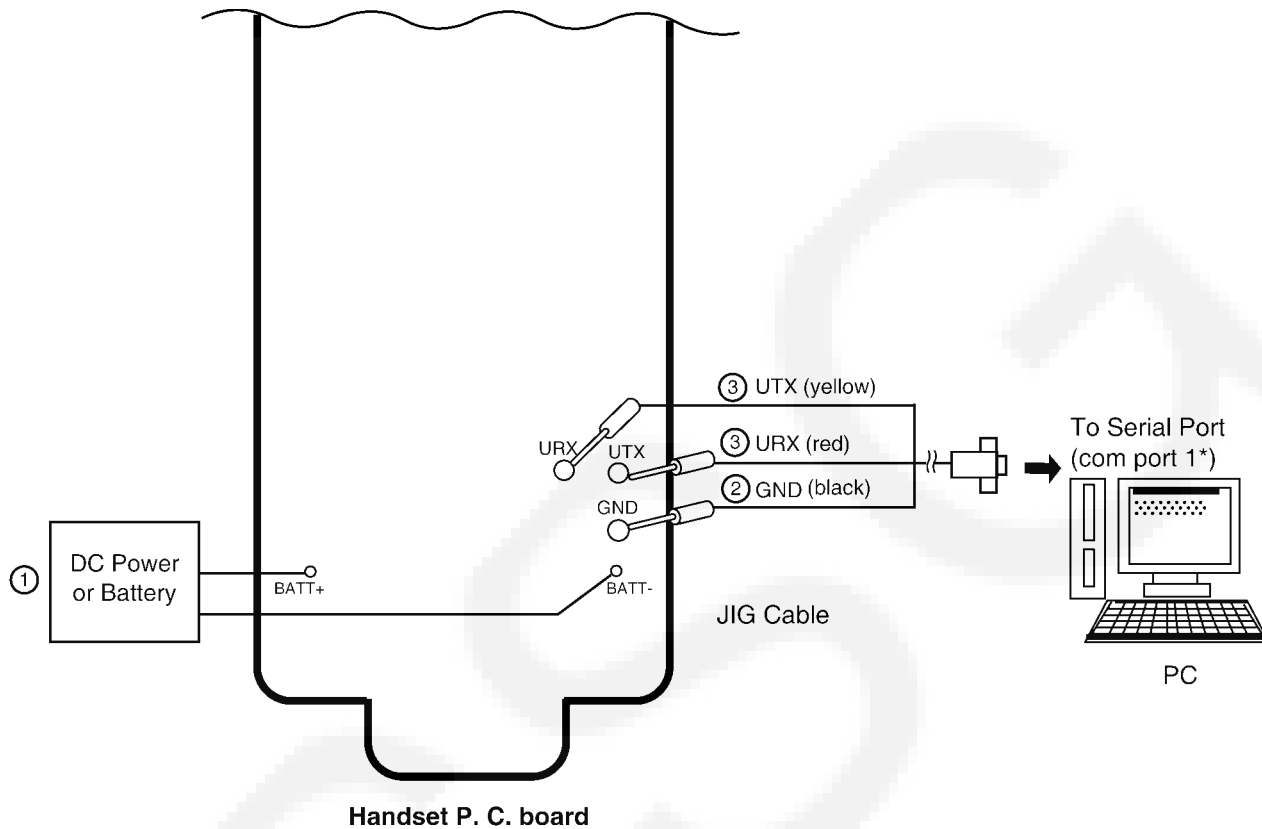

Note:

*: COM port names may vary depending on what your PC calls it.

12.2.3. How to install Batch file into P.C.

1. Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG**** folder to your PC (example: D drive).

2. Open an MS-DOS mode window.

3. At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.

4. Type "CD ¥PNZZTG****", then press the **Enter** key.

5. Type "SET_COM=X", then press the **Enter** key
(X: COM port number used for the serial connection on your PC).

6. Type "READID", then press the **Enter** key.
 • If any error messages appear, change the port number or check the cable connection.
 • If any value appear, go to next step.

7. Type "DOSKEY", then press the **Enter** key.

<Example for Windows>

On your computer, click [**Start**], select **Programs** (**All Programs** for Windows XP/Windows Server 2003), then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Or

Accessories-MS-DOS Prompt. (for Windows Me)

Or

Command Prompt. (for Windows NT 4.0)

Or

Accessories-Command Prompt.

(for Windows 2000/Windows XP/Windows Server 2003)

<Example>

```
C: ¥Documents and Settings>D:
D: ¥>CD ¥PNZZTG****
D: ¥PNZZTG**** >SET_COM=X
D: ¥PNZZTG****>READID
00 52 4F A8 A8
D: ¥PNZZTG****>DOSKEY
D: ¥PNZZTG****>_
```

<Example: error happens>

```
C: ¥Documents and Settings>D:
D: ¥>CD ¥PNZZTG****
D: ¥PNZZTG**** >SET_COM=X
D: ¥PNZZTG****>READID
CreateFile error
ERROR 10: Can't open serial port
D: ¥PNZZTG ****>_
```

Note:

- "****" varies depending on the country or models.

12.2.4. Commands (Base Unit)

See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
hookoff	Off-hook mode on Base	Type "hookoff".
hookon	On-hook mode on Base	Type "hookon".
RdEeprom	Read EEPROM	Type "RdEeprom 03 e2 04", and the data from address "03 e2" to "03 e5" is read out *This command gets 4 byte "WW", "XX", "YY", "ZZ". *Please NEVER forget these 4 byte data!
sendchar epw	Write EEPROM	Type "sendchar epw 03 e2 04 FF FF FF FF"
sendchar RST	Reset baseset	Type "sendchar RST"
getchk	Read checksum	Type "getchk".
sendchar epw	Write EEPROM	Type "sendchar epw 03 e2 04 WW XX YY ZZ" **"WW", "XX", "YY", "ZZ" is 4 byte data that already read from same address.
getchk	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

12.2.5. Commands (Handset)


See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
RdEeprom	Read EEPROM	Type "RdEeprom 03 7D 04", and the data from address "03 7D" to "03 80" is read out *NEVER forget the read 4 byte data!
sendchar epw	Write EEPROM	Type "sendchar epw 03 7D 04 FF FF FF FF"
sendchar RST	Reset baseset	Type "sendchar RST"
getchk	Read checksum	Type "getchk".
sendchar epw	Write EEPROM	Type "sendchar epw 03 7D 04 WW XX YY ZZ" **"WW", "XX", "YY", "ZZ" is 4 byte data that already read from same address.
wreeprom	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

12.3. Adjustment Standard (Base Unit)

When connecting the simulator equipment for checking, please refer to below.

12.3.1. Bottom View

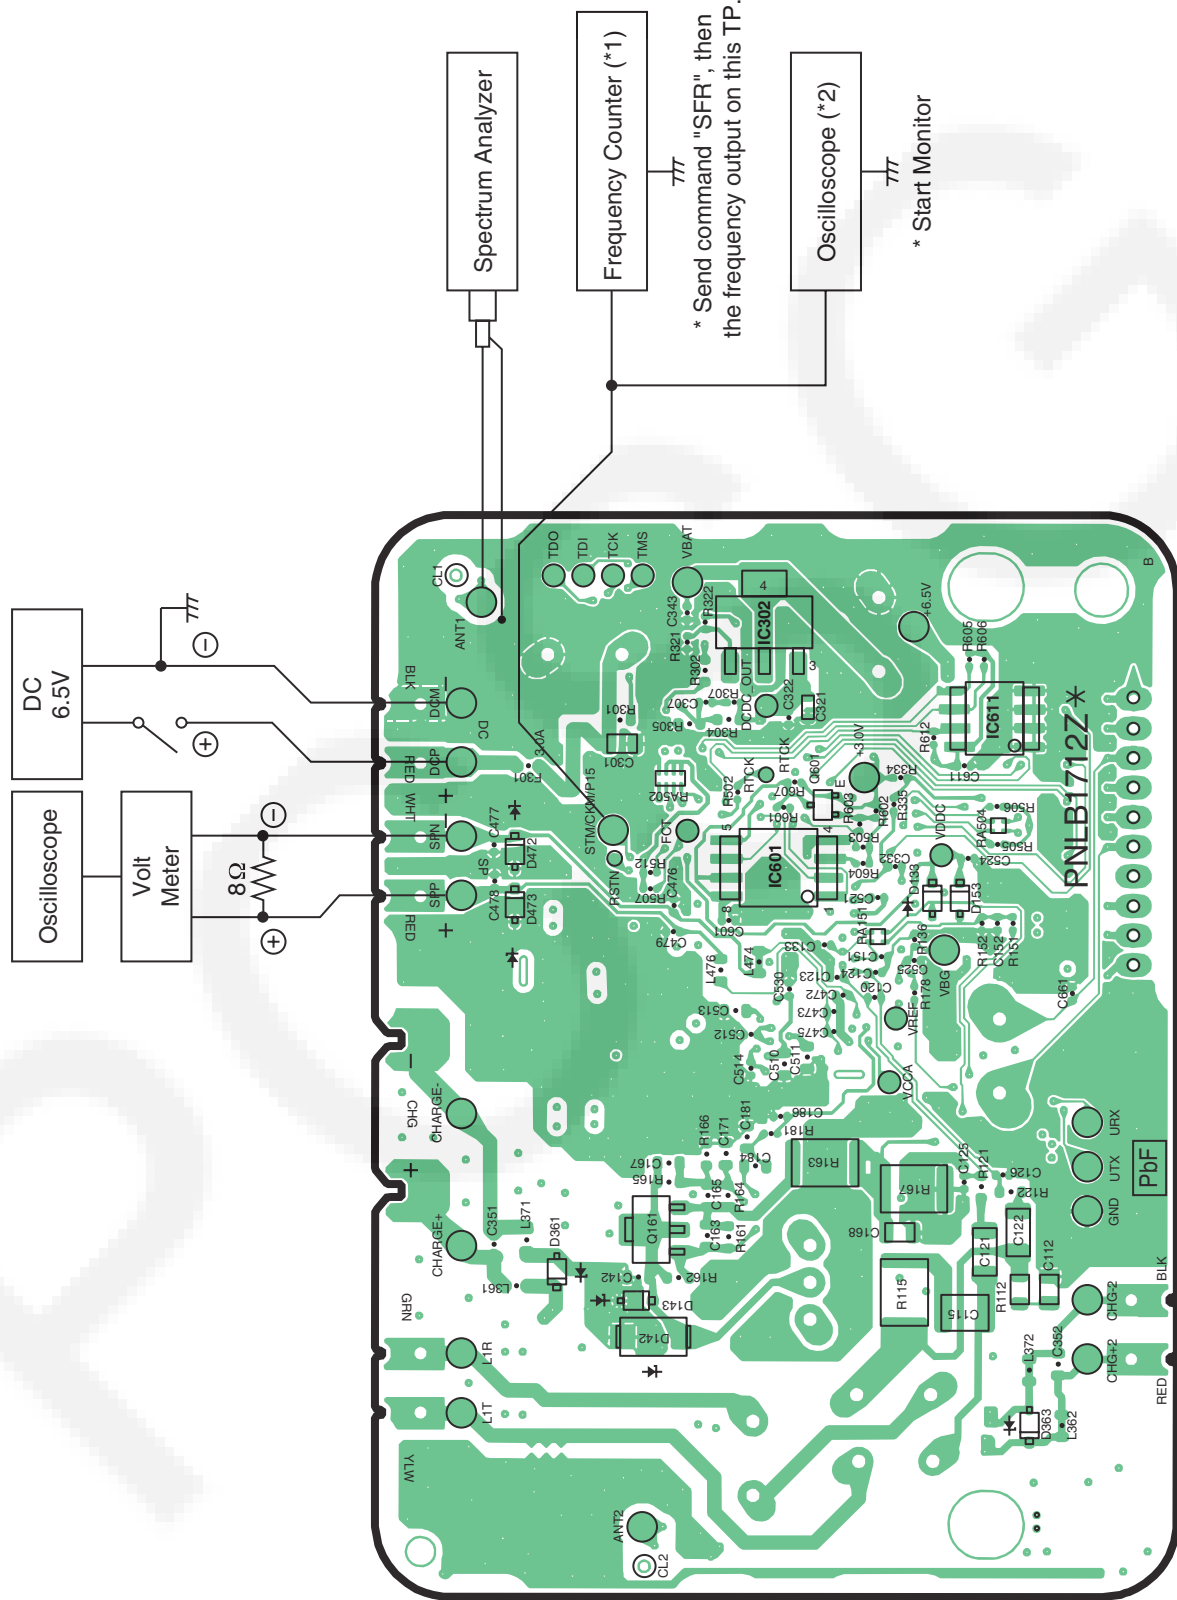


Note:

- (*1) is referred to No.2 of Check **Check Table for RF part** (P.41)
- (*2) is referred to **Power Supply Circuit/Reset Circuit** (P.12)

12.4. Adjustment Standard (Charger Unit)

When connecting the simulator equipment for checking, please refer to below.


12.4.1. Bottom View

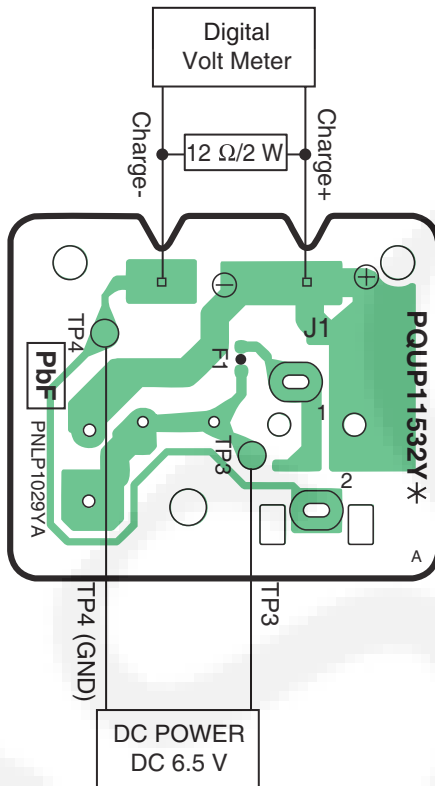

12.5. Adjustment Standard (Handset)

When connecting the simulator equipment for checking, please refer to below.

12.5.1. Component View

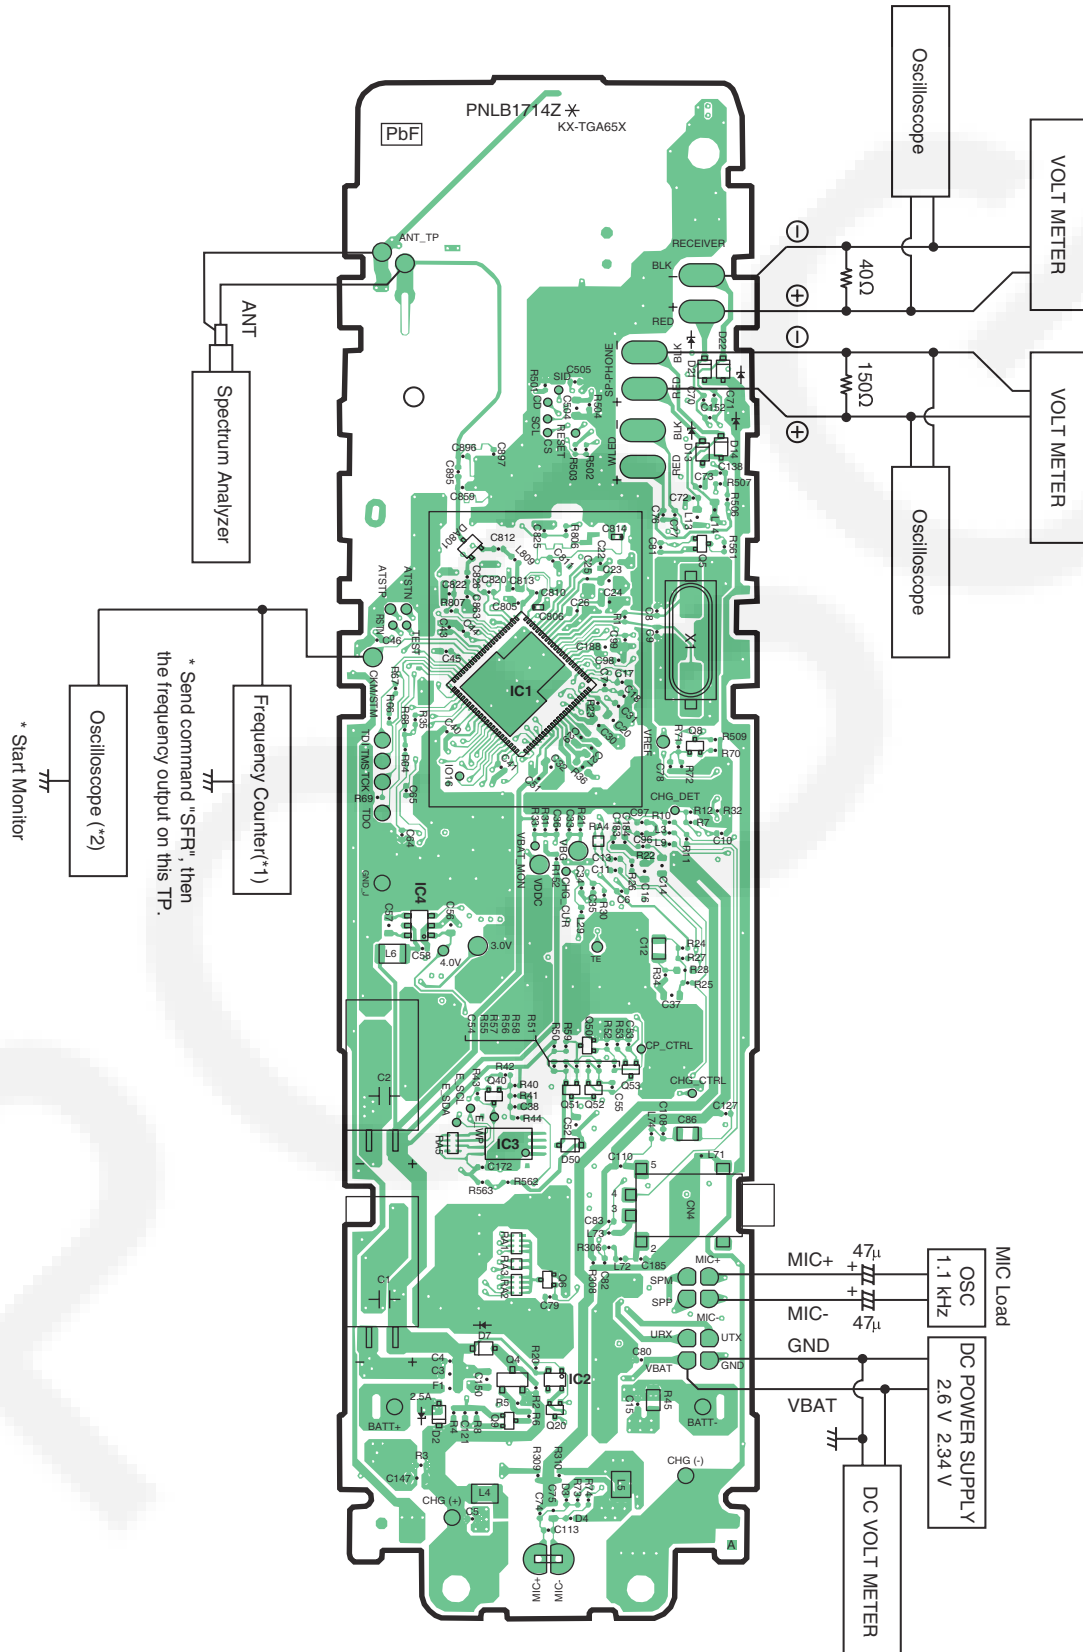

Note:

- (*1) is referred to No.2 of Check **Check Table for RF part** (P.41)
- (*2) is referred to **Power Supply Circuit/Reset Circuit** (P.20)

12.6. Things to Do after Replacing IC or X'tal

If repairing or replacing EEPROM and X'tal, it is necessary to download the required data such as Programming data or adjustment data, etc in memory.

The set doesn't operate if it is not executed.

12.6.1. How to download the data

12.6.1.1. Base Unit

First, operate the PC setting according to **The Setting Method of JIG** (P.50).

Then download the appropriate data according to the following procedures.

Items		How to download/Required adjustment
EEPROM (IC611)	Adjusted parameter data is stored in memory. (country version batch file, default batch file, etc.)	1) Change the address "0001" of EEPROM to "55" to download the data. 2) Default batch file: Execute the command "default.bat". 3) Country version batch file: Execute the command "TG6521USUSrevXXX_YYY.bat". (*1) 4) Clock adjustment
X'tal (X1)	System clock	Clock adjustment data is in EEPROM, adjust the data again after replacing it. 1) Apply 6.5V between DCP and DCM with DC power. 2) Input Command "sendchar sfr", then you can confirm the current value. 3) Check X'tal Frequency.(13.824 MHz \pm 100 Hz). 4) If the frequency is not 13.824 MHz \pm 100 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 13.824000 MHz \pm 15 Hz.

Note:

(*1) XXX_YYY:revision number

"XXX", "YYY" vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG** (P.50).

12.6.1.2. Handset

First, operate the PC setting according to **The Setting Method of JIG** (P.50).
Then download the appropriate data according to the following procedures.

Items		How to download/Required adjustment
EEPROM (IC3)	Adjusted parameter data is stored in memory. (country version batch file, default batch file, etc.)	<ol style="list-style-type: none"> 1) Default batch file: Execute the command "default.bat". 2) Default batch file (remaining): Execute the command "TGA650USDEFrevXXX_YYY.bat". (*2) 3) Country version batch file: Execute the command "TGA650USUSrevXXX_YYY.bat". (*2) 4) Clock adjustment 5) 2.35 V setting and battery low detection
X'tal (X1)	System clock	<ol style="list-style-type: none"> 1) Apply 2.6V between BATT+ and BATT- with DC power. 2) Input Command "sendchar sfr", then you can confirm the current value. 3) Check X'tal Frequency.(13.824 MHz \pm 100 Hz). 4) If the frequency is not 13.824 MHz \pm 100 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 13.824000 MHz \pm 5 Hz.

Note:

(*2) XXX_YYY:revision number

"XXX" and "YYY" vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG** (P.50).

12.7. Frequency Table

	Ch. (hex)	TX/RX Frequency (MHz)
Channel 0	00	1928.448
Channel 1	01	1926.720
Channel 2	02	1924.992
Channel 3	03	1923.264
Channel 4	04	1921.536

13 Miscellaneous

13.1. How to Replace the Flat Package IC

Even if you do not have the special tools (for example, a spot heater) to remove the Flat IC, with some solder (large amount), a soldering iron and a cutter knife, you can easily remove the ICs that have more than 100 pins.

13.1.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron

Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

Note: We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

- Flux

Recommended Flux: Specific Gravity → 0.82.

Type → RMA (lower residue, non-cleaning type)


Note: See **About Lead Free Solder (PbF: Pb free)** (P.4)

13.1.2. How to Remove the IC


1. Put plenty of solder on the IC pins so that the pins can be completely covered.

Note:


If the IC pins are not soldered enough, you may give pressure to the P.C. board when cutting the pins with a cutter.

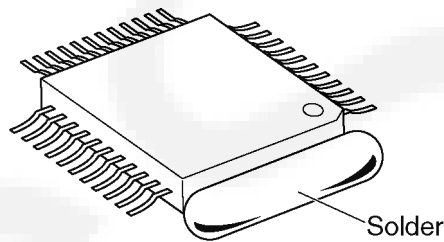

2. Make a few cuts into the joint (between the IC and its pins) first and then cut off the pins thoroughly.

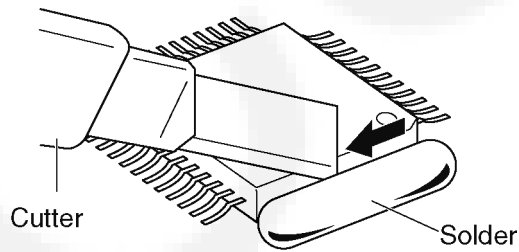


3. While the solder melts, remove it together with the IC pins.

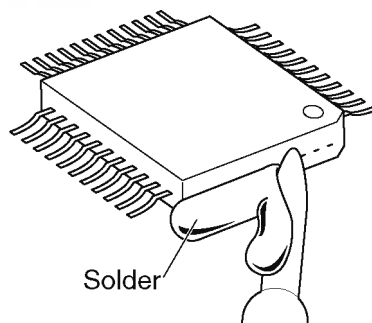

When you attach a new IC to the board, remove all solder left on the board with some tools like a soldering wire. If some solder is left at the joint on the board, the new IC will not be attached properly.

13.1.3. How to Install the IC


1. Temporarily fix the FLAT PACKAGE IC, soldering the two marked pins.

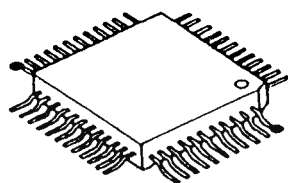

● - - - - - Temporary soldering point.


*Check the accuracy of the IC setting with the corresponding soldering foil.

2. Apply flux to all pins of the FLAT PACKAGE IC.

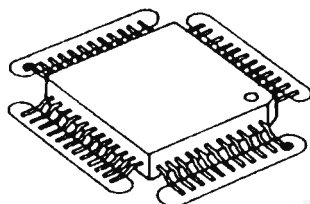

○ - - - - - Flux

3. Solder the pins, sliding the soldering iron in the direction of the arrow.

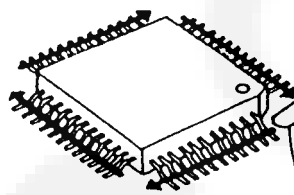


Soldering Iron


Specified Solder

13.1.4. How to Remove a Solder Bridge

1. Lightly resolder the bridged portion.
2. Remove the remaining solder along the pins using a soldering iron as shown in the figure below.

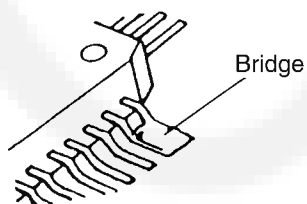

Bridge

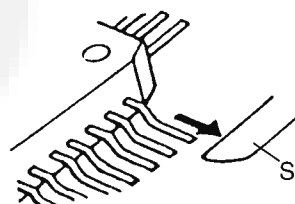

Soldering Iron

13.2. How to Replace the LLP (Leadless Leadframe Package) IC

Note:

This description is only applied on the model with Shield case.

13.2.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron
Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

Note:

We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.


- Hot Air Desoldering Tool
Temperature: 608 °F ± 68 °F (320 °C ± 20 °C)

13.2.2. Caution

- To replace the IC efficiently, choose the right sized nozzle of the hot air desoldering tool that matches the IC package.
- Be careful about the temperature of the hot air desoldering tool not to damage the PCB and/or IC.

13.2.3. How to Remove the IC


1. Heat the IC with a hot air desoldering tool through the P.C.Board.

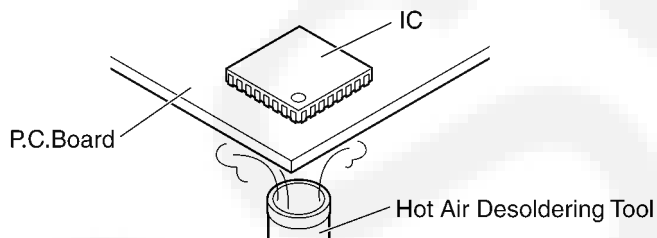


2. Pick up the IC with tweezers, etc. when the solder is melted completely.

Note:

- Be careful not to touch the peripheral parts with tweezers, etc. They are unstable.

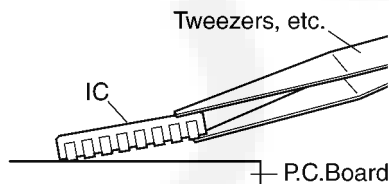


When it is hard to melt the solder completely, heat it with a hot air desoldering tool through the IC besides through the P.C.Board.

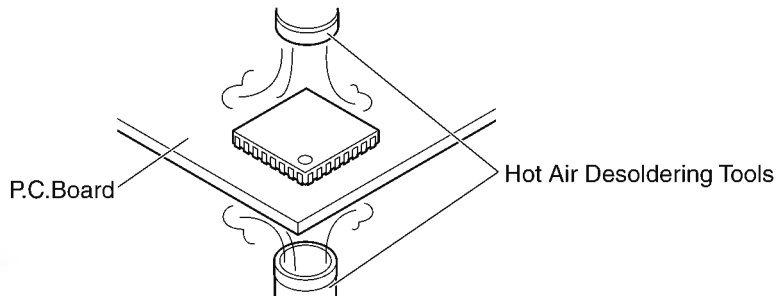

3. After removing the IC, clean the P.C.Board of residual solder.

13.2.4. How to Install the IC


1. Place the solder a little on the land where the radiation GND pad on IC bottom is to be attached.

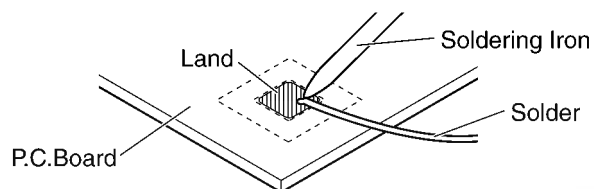

2. Place the solder a little on the land where IC pins are to be attached, then place the IC.

Note:


- When placing the IC, the positioning should be done very carefully.

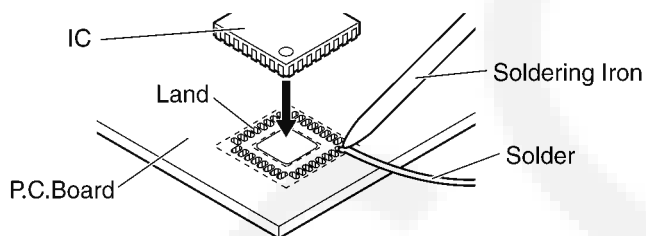

3. Heat the IC with a hot air desoldering tool through the P.C.Board until the solder on IC bottom is melted.

Note:








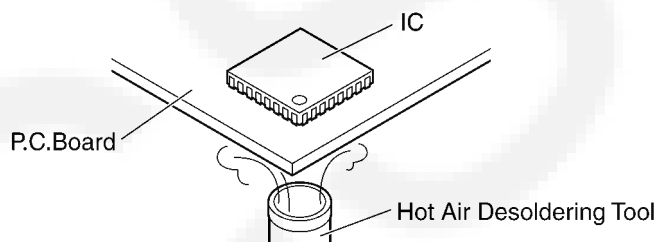



- Be sure to place it precisely, controlling the air volume of the hot air desoldering tool.










4. After soldering, confirm there are no short and open circuits with visual inspection.

13.3. Terminal Guide of the ICs, Transistors and Diodes

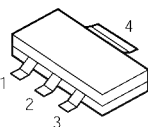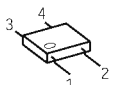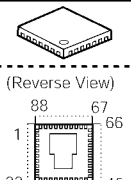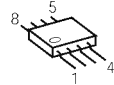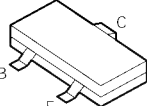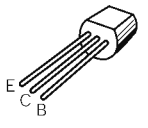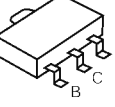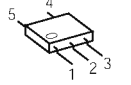13.3.1. Base Unit

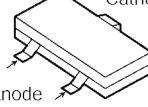 <p>COCBAYG00016</p>	 <p>COEBE0000124</p>	 <p>(Reverse View) C2HBCY000066</p>	 <p>PNWI1TG6531H PNWI2TG6531H</p>	 <p>PQVTBF822T7 2SC6054JSL</p>
 <p>B1ACGP000008</p>	 <p>2SD0874AS</p>	 <p>B1GFCFEN0011</p>	 <p>PQVDMD5S</p>	 <p>Cathode Anode MA111, MANV250GEL MAZ805100L LNJ237W82RA</p>
 <p>B0DDCD000001</p>				

13.3.2. Handset

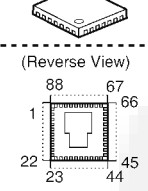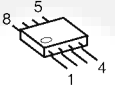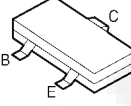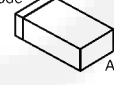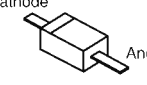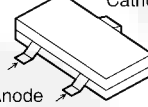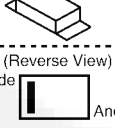 <p>(Reverse View) C2HBCY000048</p>	 <p>PNWITGA652BR</p>	 <p>B1ADGE000004 UN9219J 2SC6054JSL</p>	 <p>Cathode Anode MA2ZD0200L</p>	 <p>Cathode Anode MA8043M</p>
 <p>B0DDCD000001</p>	 <p>(Reverse View) Cathode Anode B3ACB0000216</p>			

14 Schematic Diagram

14.1. For Schematic Diagram

14.1.1. Base Unit (Schematic Diagram (Base Unit_Main))

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

2. The schematic diagrams may be modified at any time with the development of new technology.

14.1.2. Handset (Schematic Diagram (Handset_Main))

Notes:

1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
2. The schematic diagrams may be modified at any time with the development of new technology.

14.1.3. Charger Unit (Schematic Diagram (Charger_Unit))

Notes:


1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:


Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

2. The schematic diagrams may be modified at any time with the development of new technology.

14.2. Schematic Diagram (Base Unit_Main)

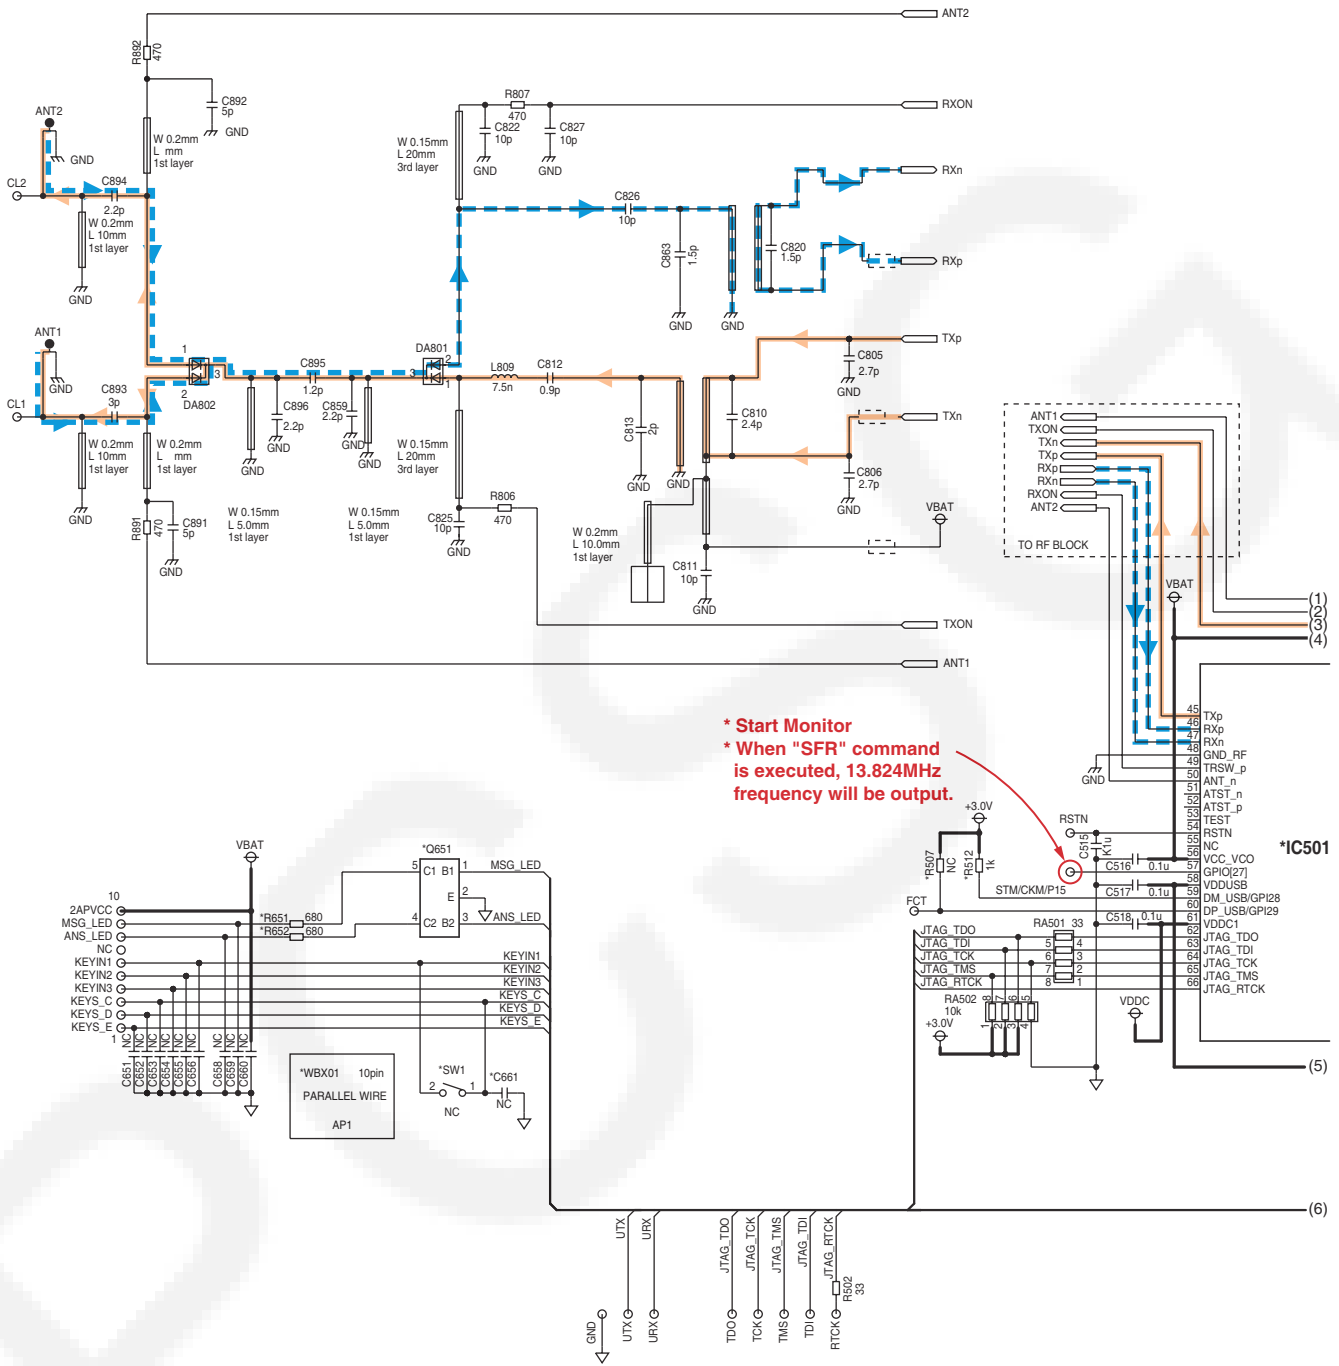

NC: No Components

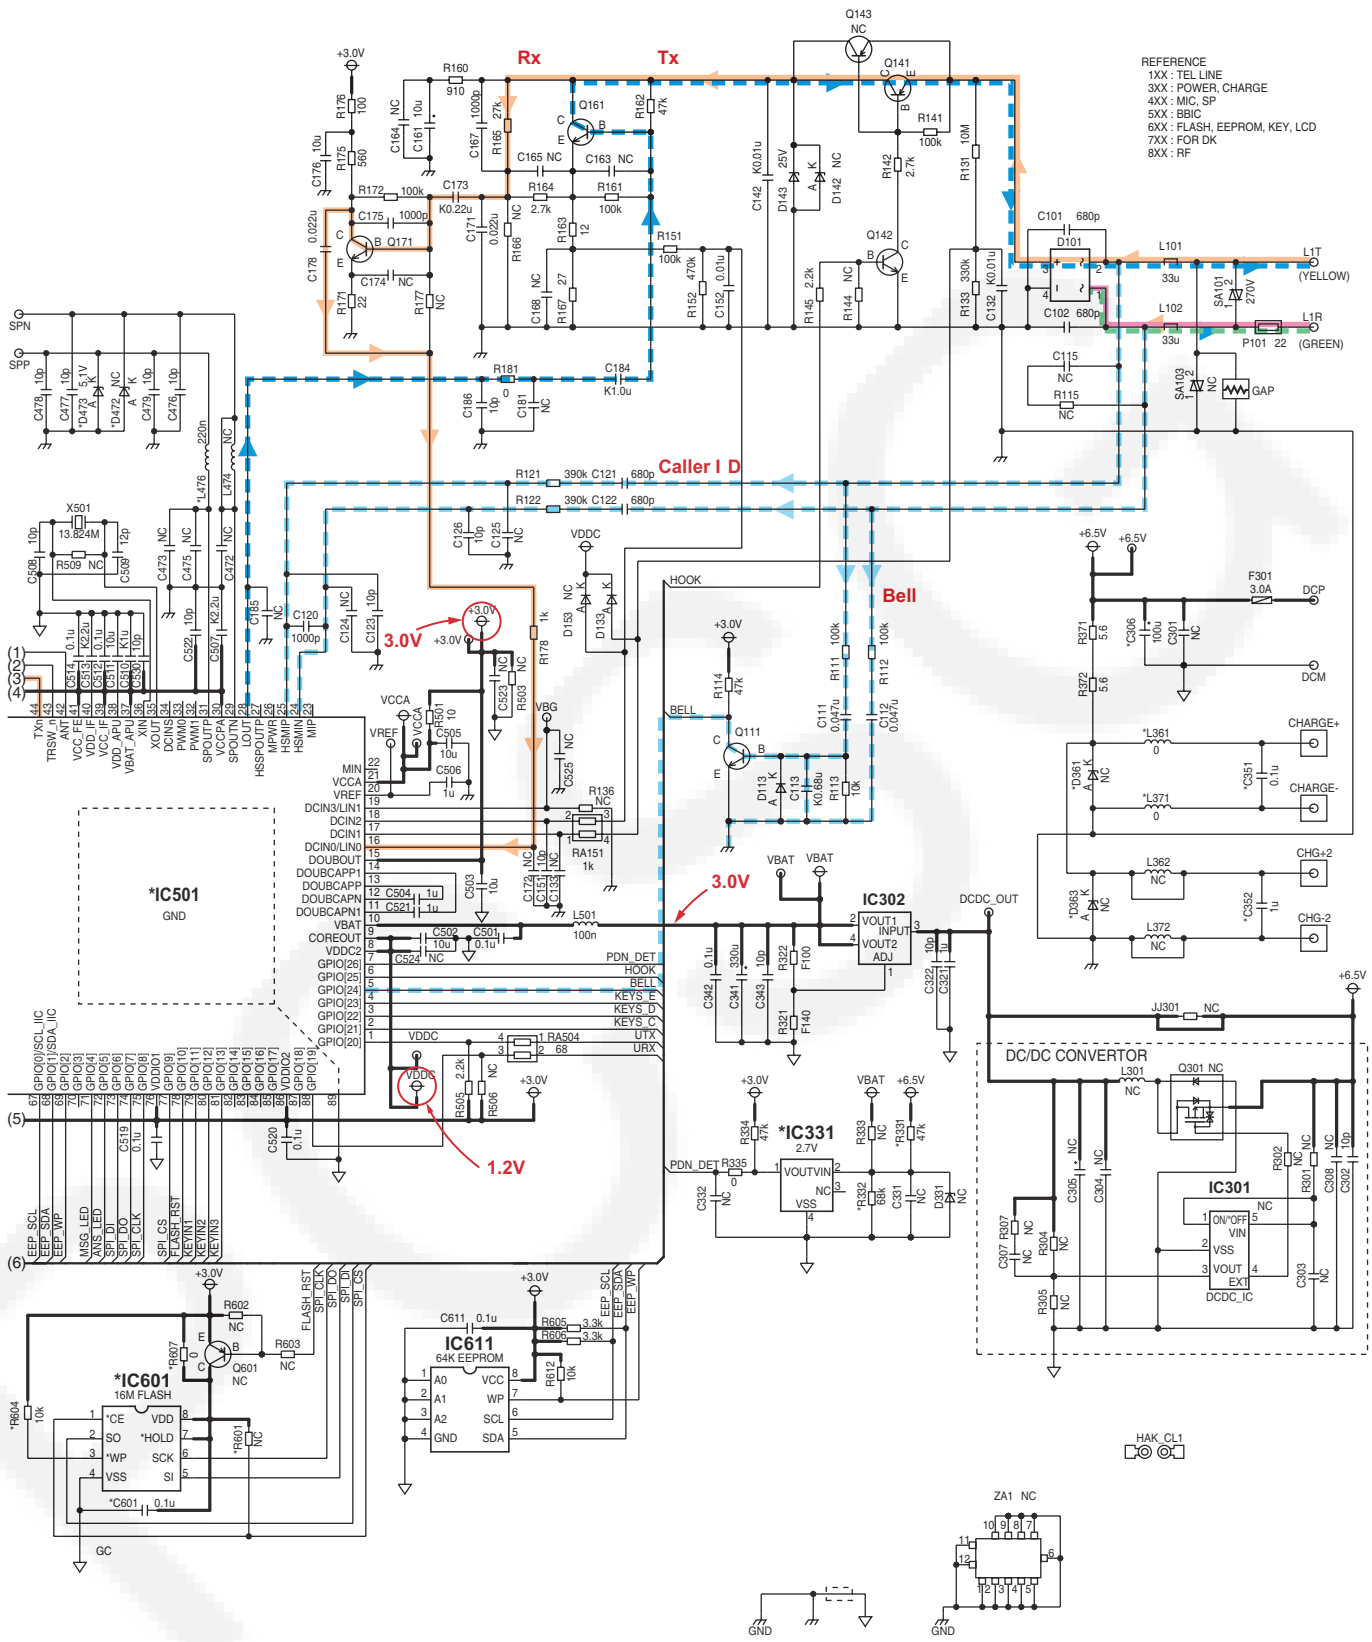


REFERENCE
1XX : TEL LINE
3XX : POWER, CHARGE
4XX : MIC, SP
5XX : BBIC
6XX : FLASH, EEPROM, KEY, LCD
7XX : FOR DK
8XX : RF

NC: No Components

KX-TG6572 SCHEMATIC DIAGRAM (Base Unit_Main)

14.3. Schematic Diagram (Base Unit_Operation)

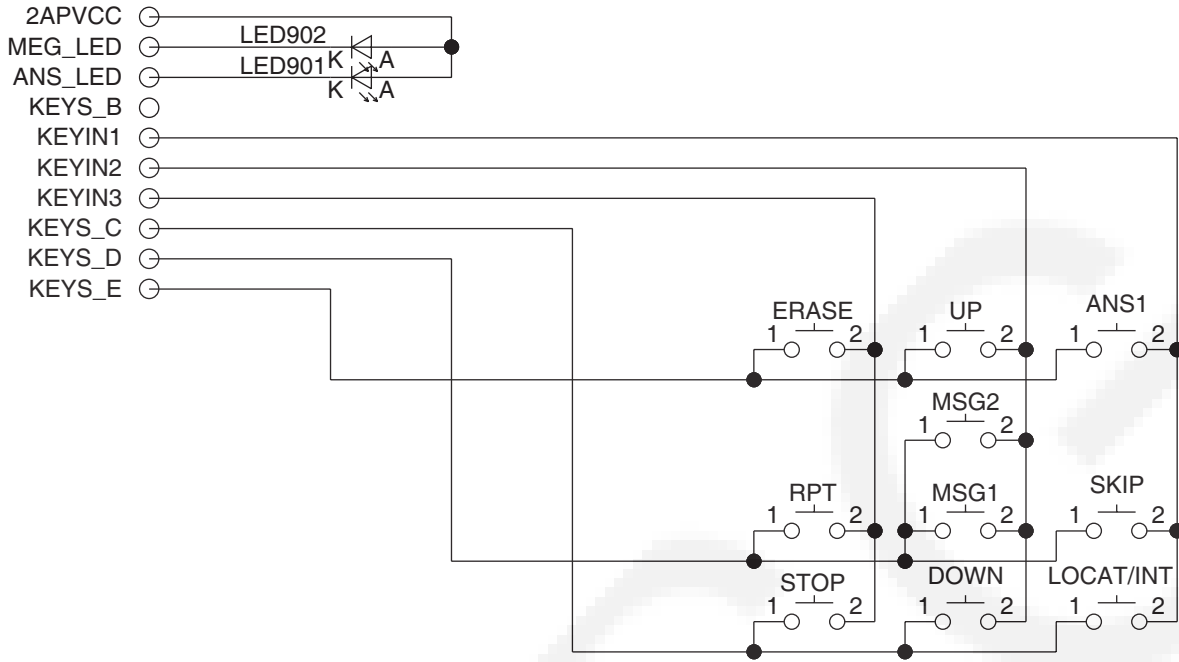


NC: No Components

KX-TG6572 SCHEMATIC DIAGRAM (Base Unit_Operation)

Memo


PROSOG

14.4. Schematic Diagram (Handset_Main)

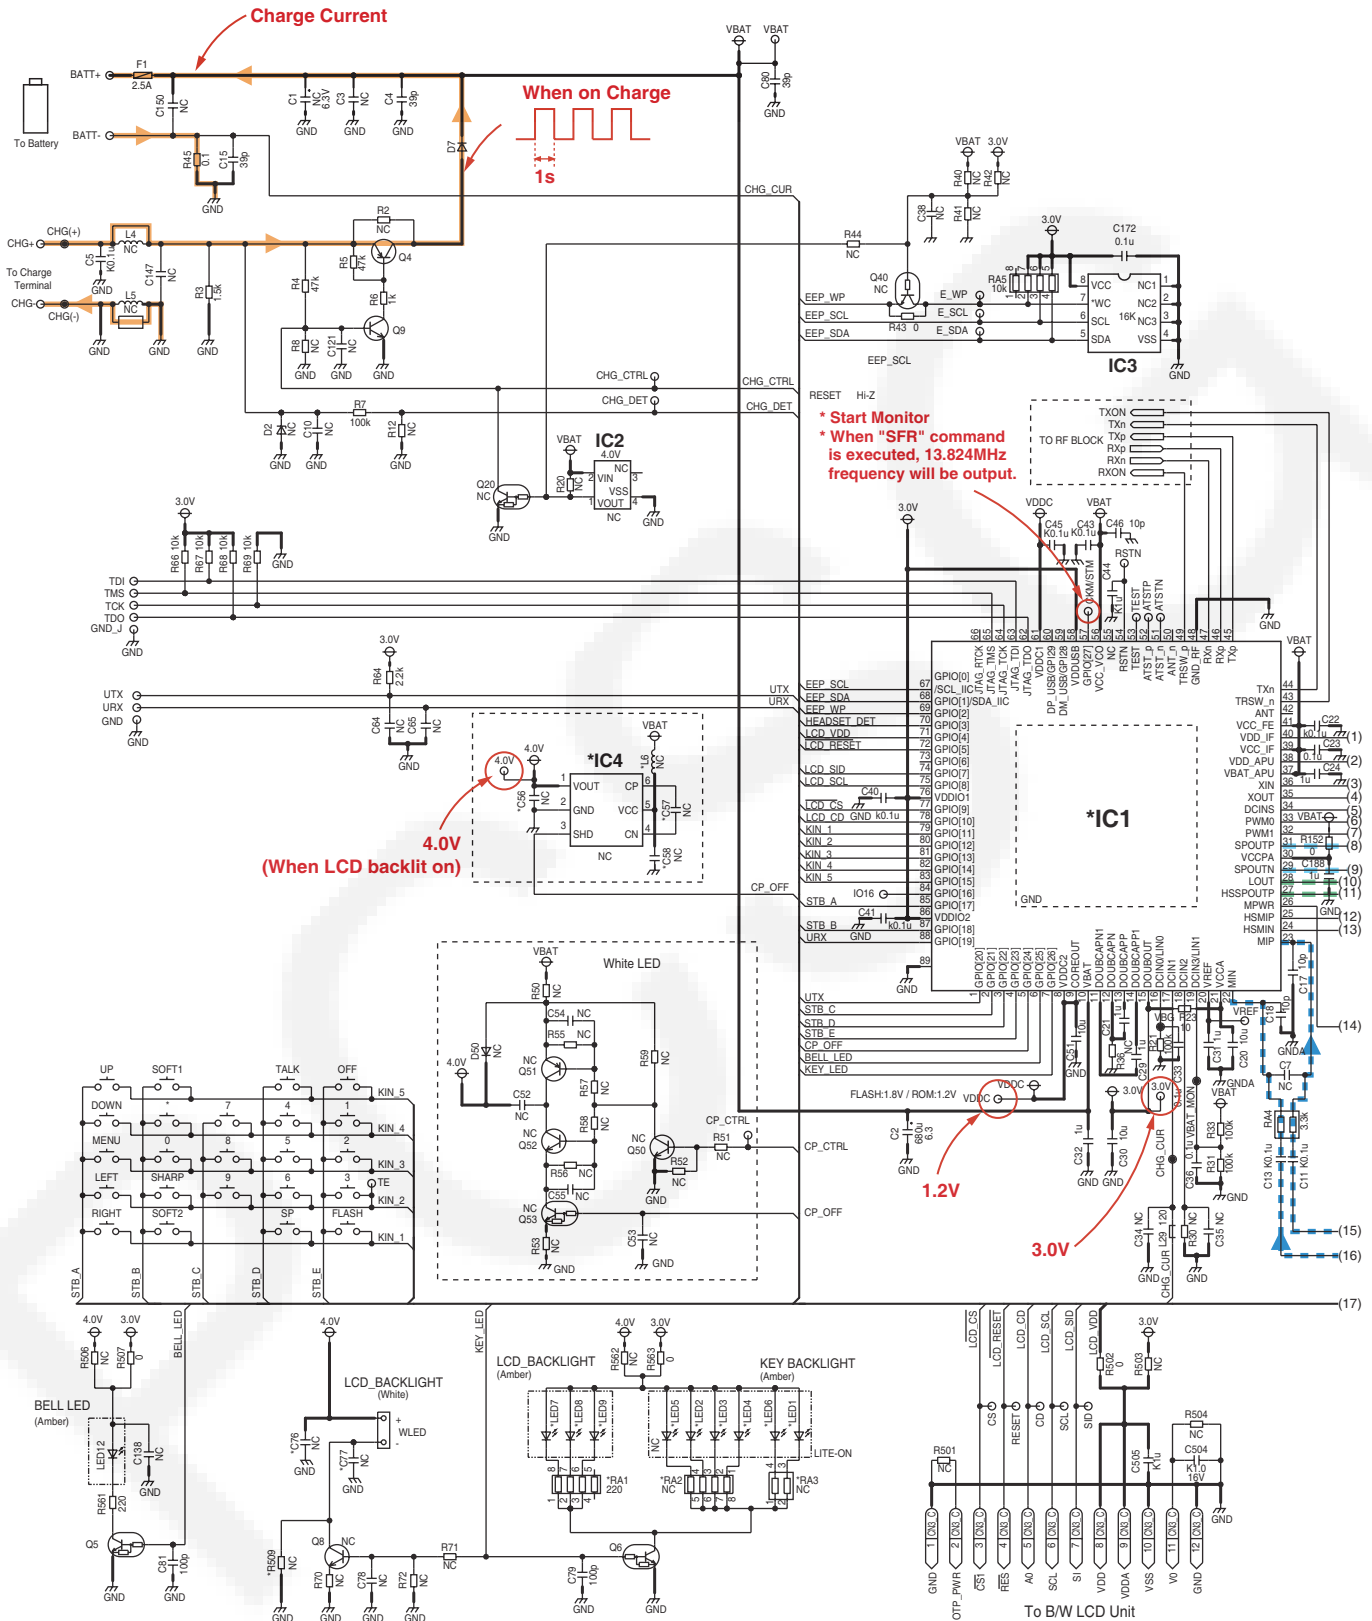

NC: No Components

14.5. Schematic Diagram (Charger Unit)

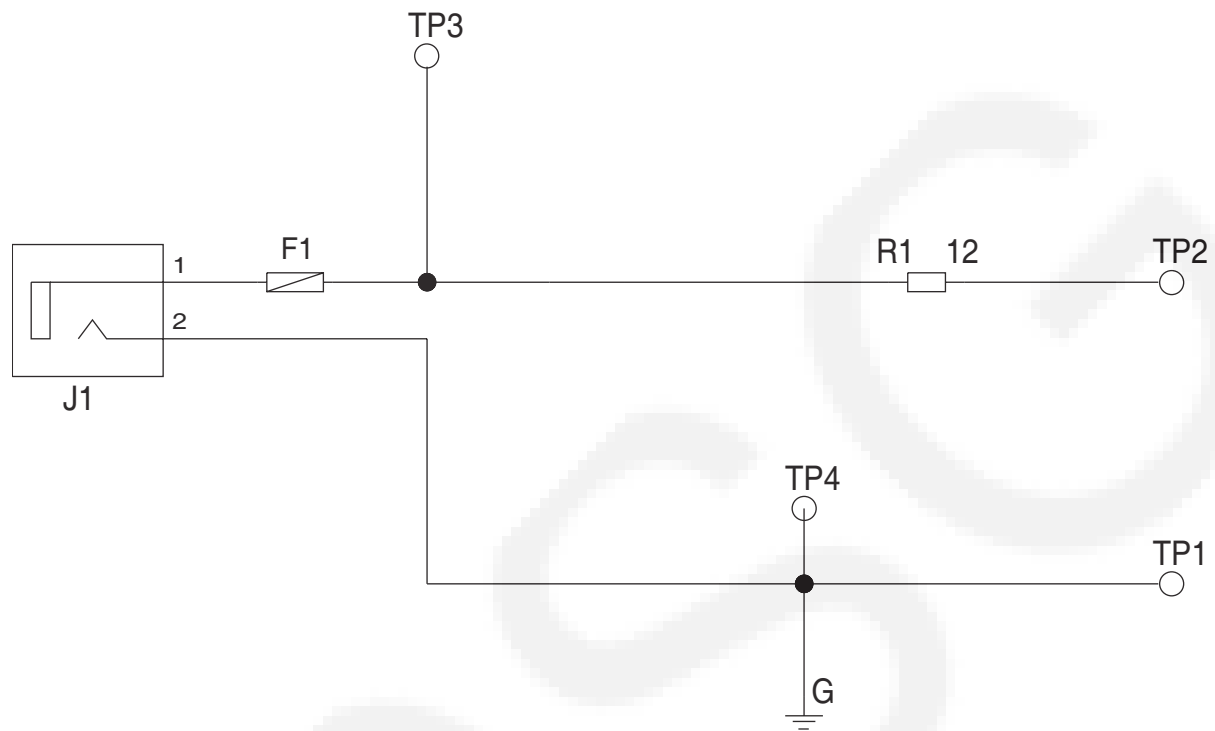


SCHEMATIC DIAGRAM (Charger Unit)

15 Printed Circuit Board


15.1. Circuit Board (Base Unit_Main)

15.1.1. Component View

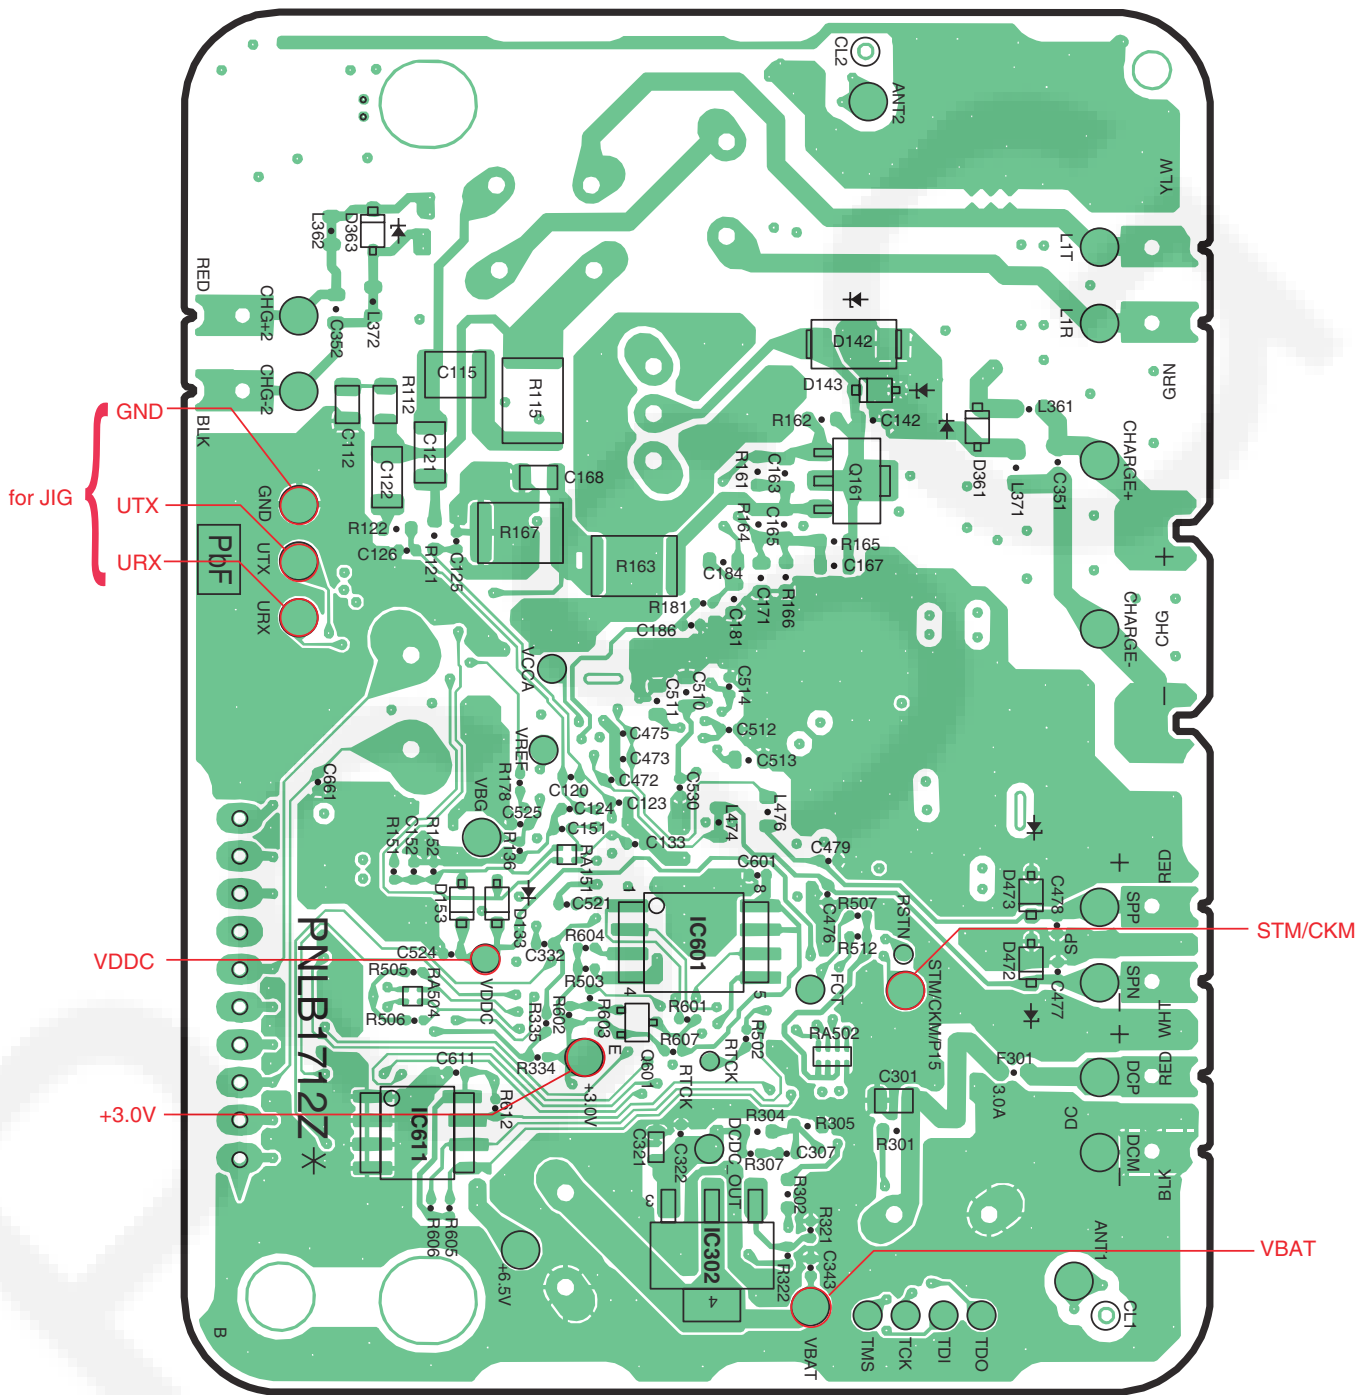


KX-TG6572 CIRCUIT BOARD (Base Unit_Main (Component View))

15.1.2. Bottom View

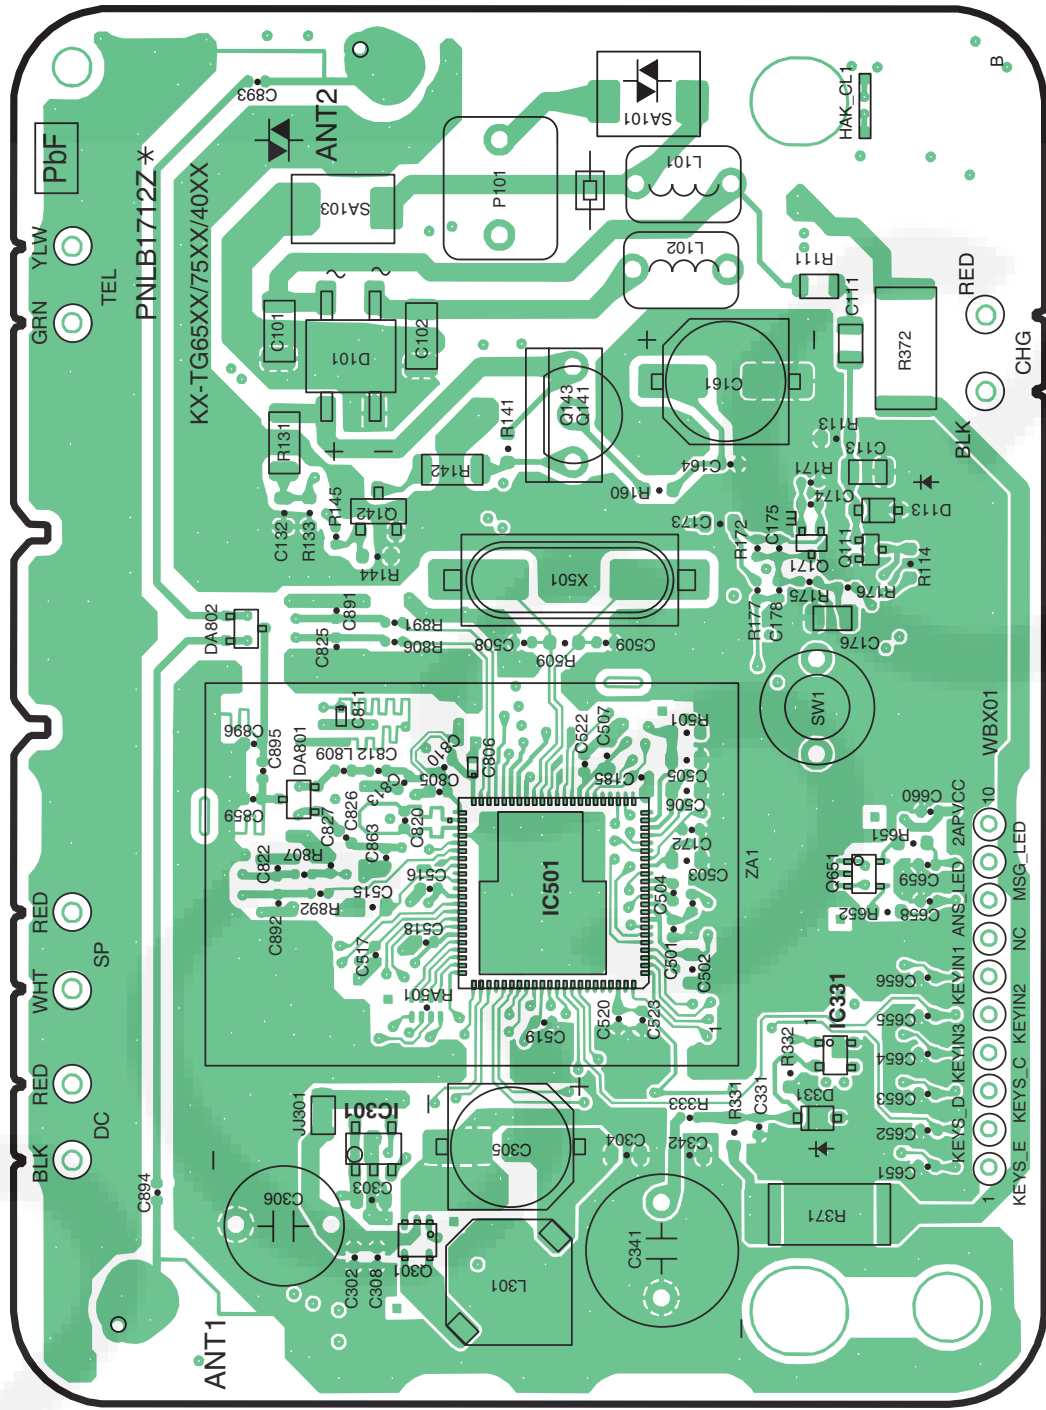

KX-TG6572 CIRCUIT BOARD (Base Unit_Main (Bottom View))

15.2. Circuit Board (Base Unit_Operation)

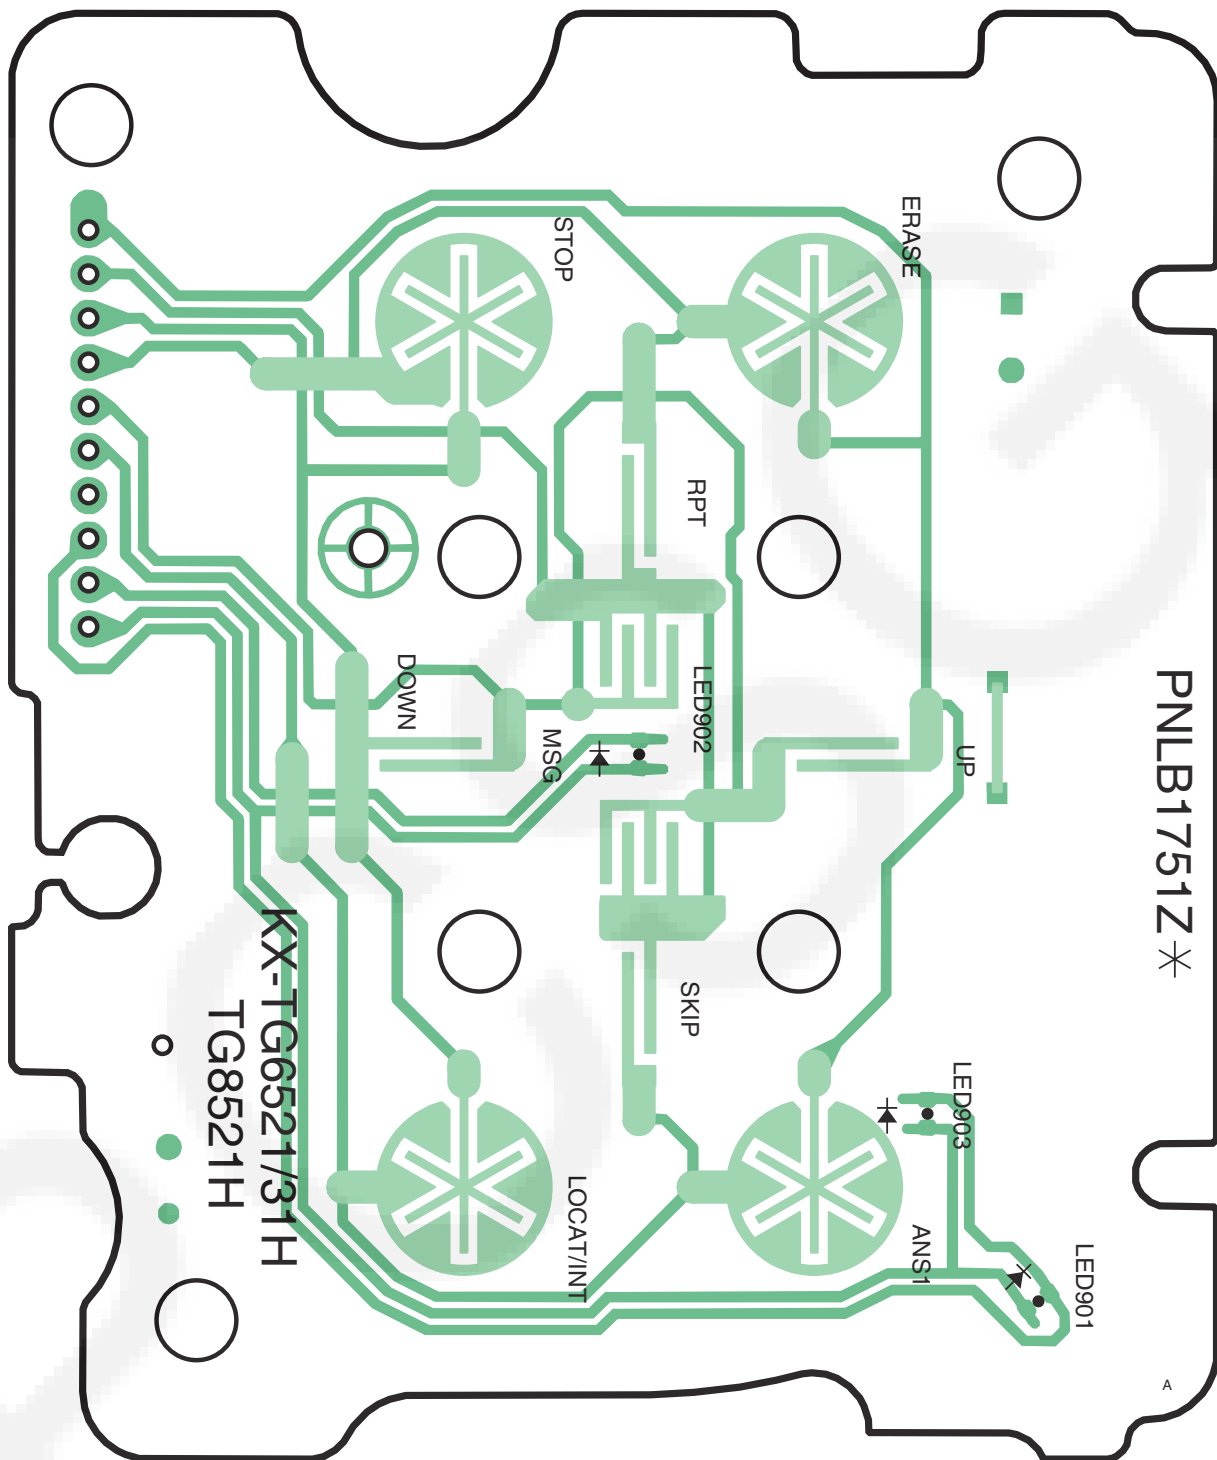


KX-TG6572 CIRCUIT BOARD (Base Unit_Operation (Component View))

Memo

PROSOG


15.3.2. Bottom View

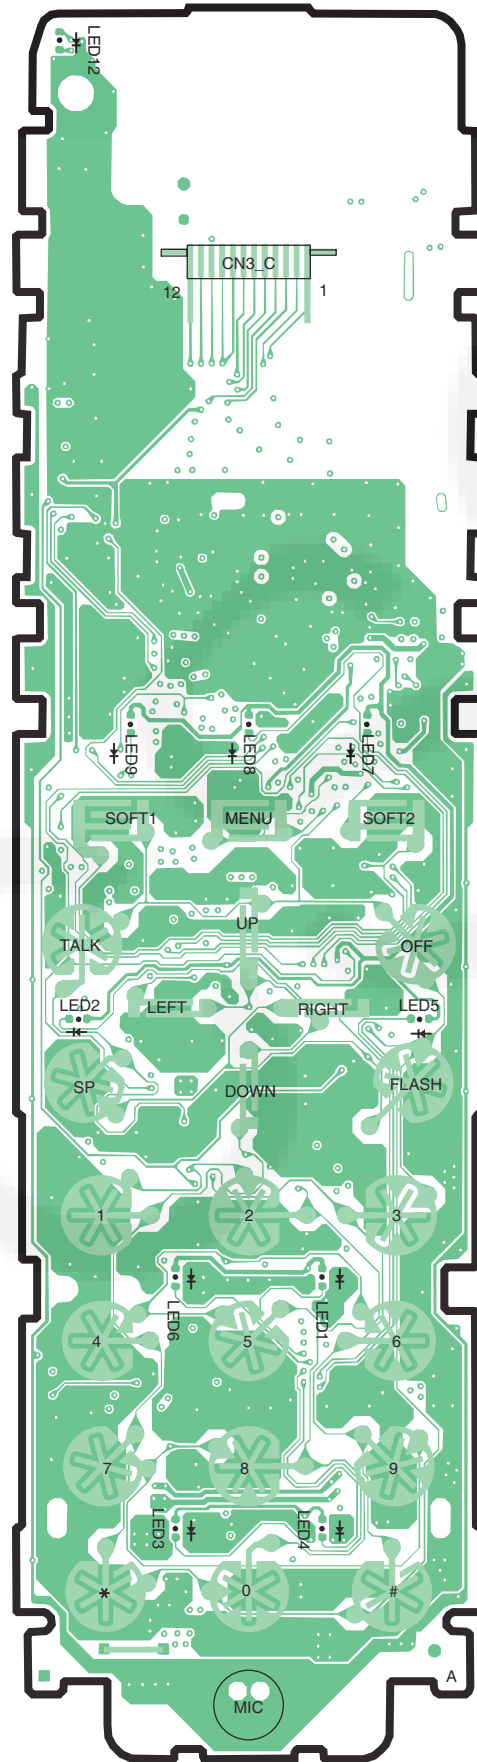

KX-TGA653 CIRCUIT BOARD (Handset_Main (Bottom View))


15.4. Circuit Board (Charger Unit)

15.4.1. Component View

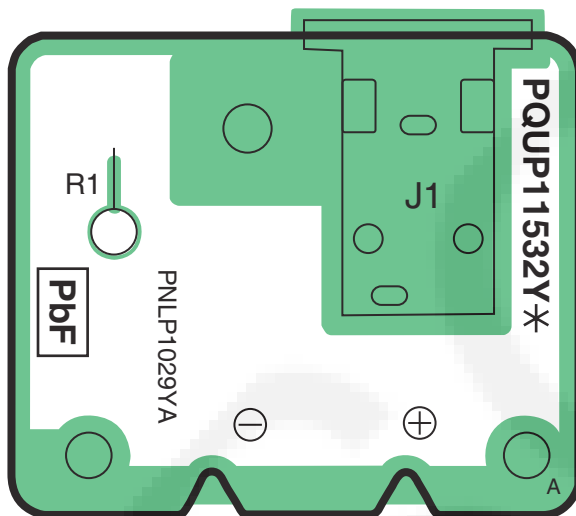

CIRCUIT BOARD (Charger unit (Component View))


15.4.2. Bottom View

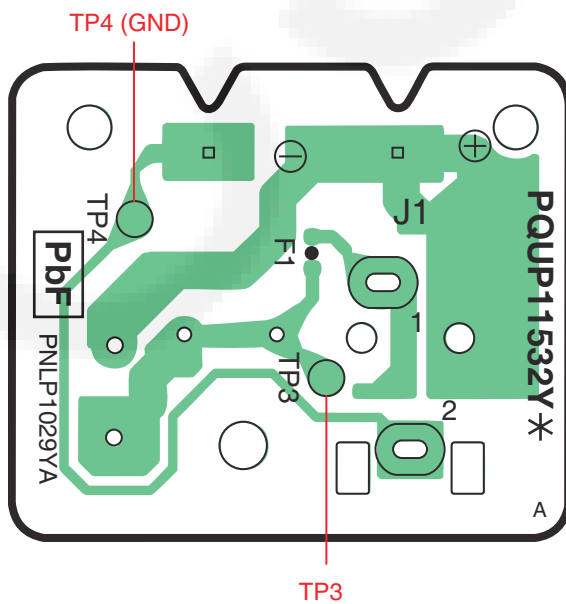


CIRCUIT BOARD (Charger unit (Bottom View))

16 Exploded View and Replacement Parts List


16.1. Cabinet and Electrical Parts (Base Unit)

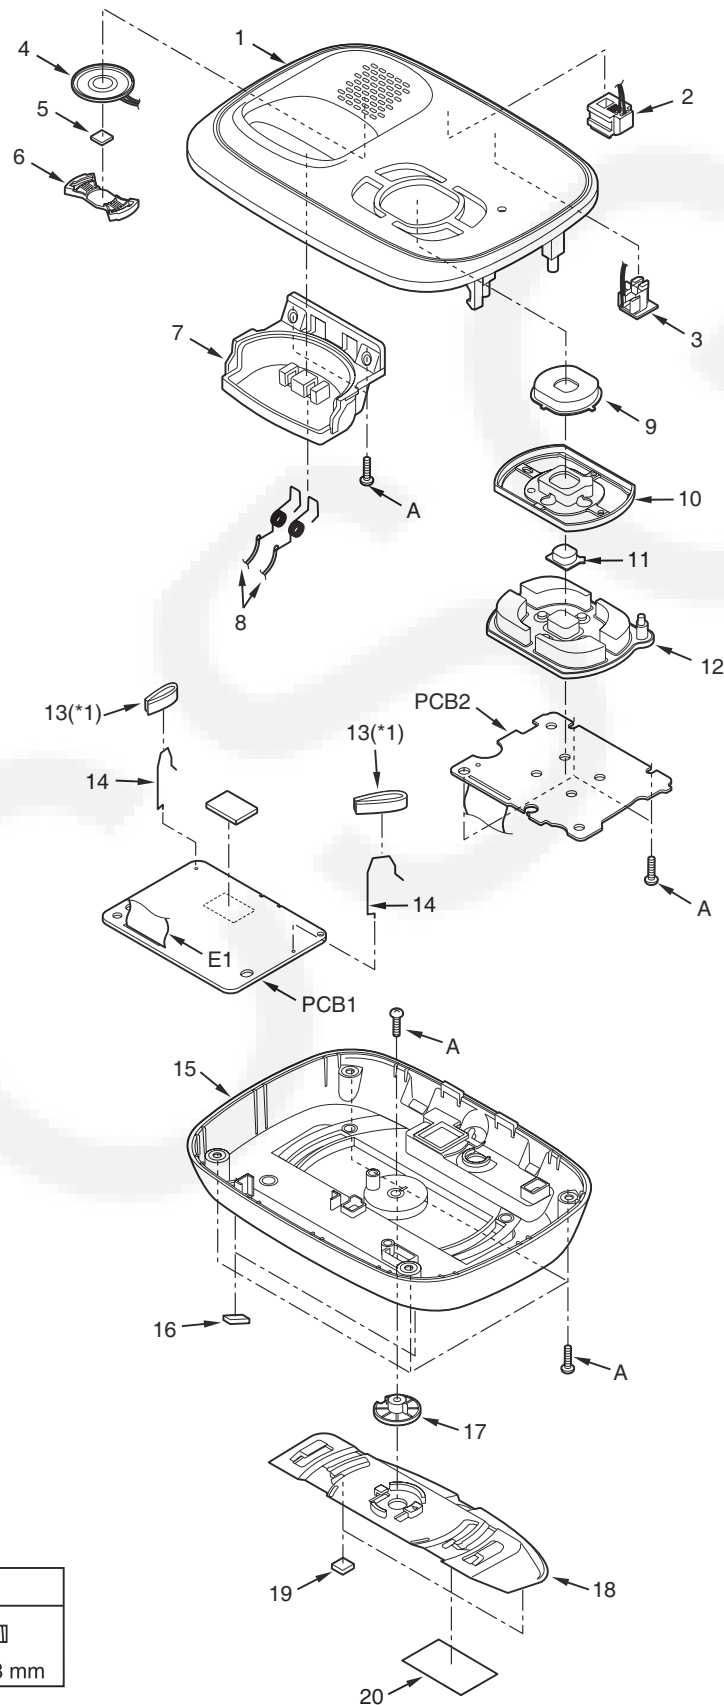


Ref.No.	Figure
A	 φ 2.6 x 8 mm

Note:
 (*1) The SPACERS (No.13) are cut from the excess parts of SPACER (No.108) of **Cabinet and Electrical Parts (Handset)** (P.81).


16.2. Cabinet and Electrical Parts (Handset)

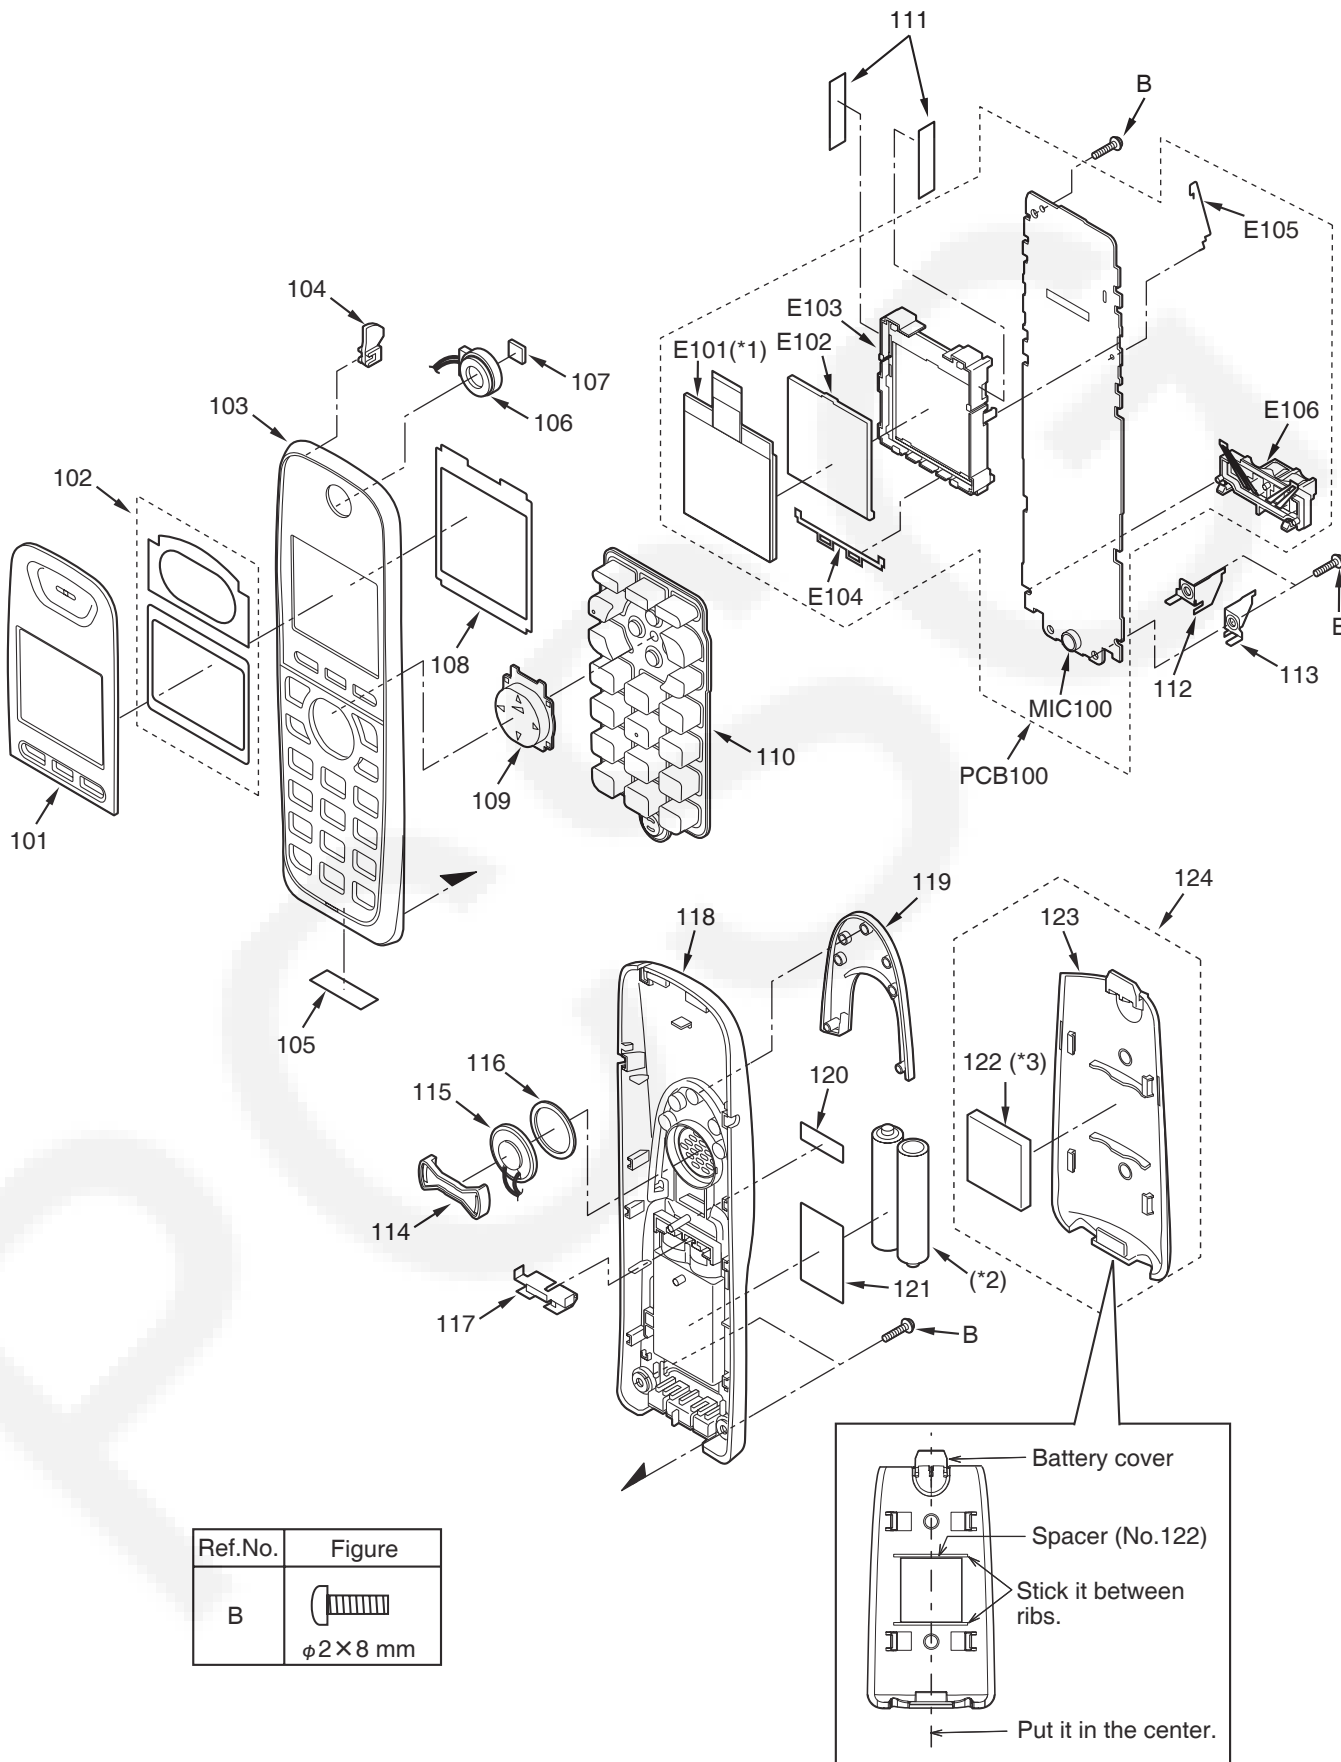

16.3. Cabinet and Electrical Parts (Charger Unit)

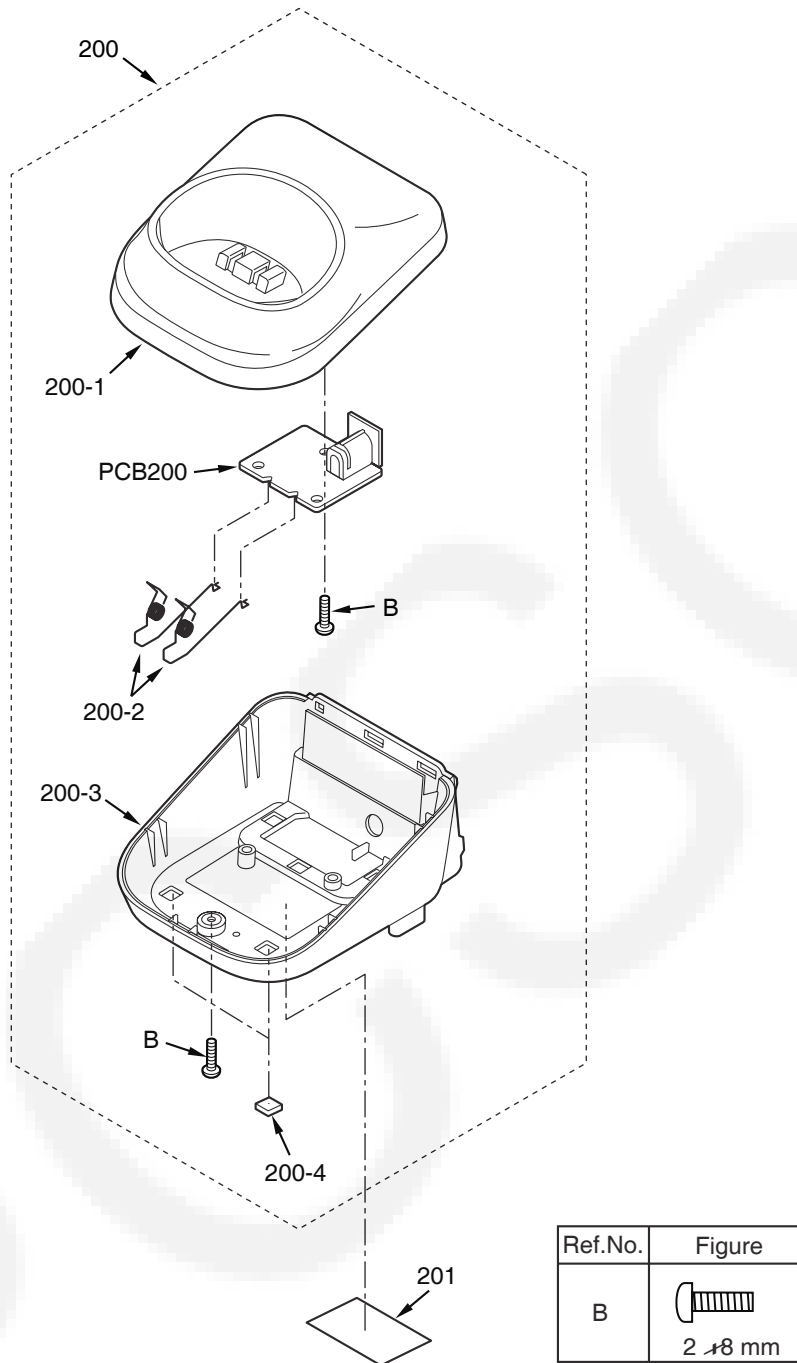

16.4. Accessories and Packing Materials

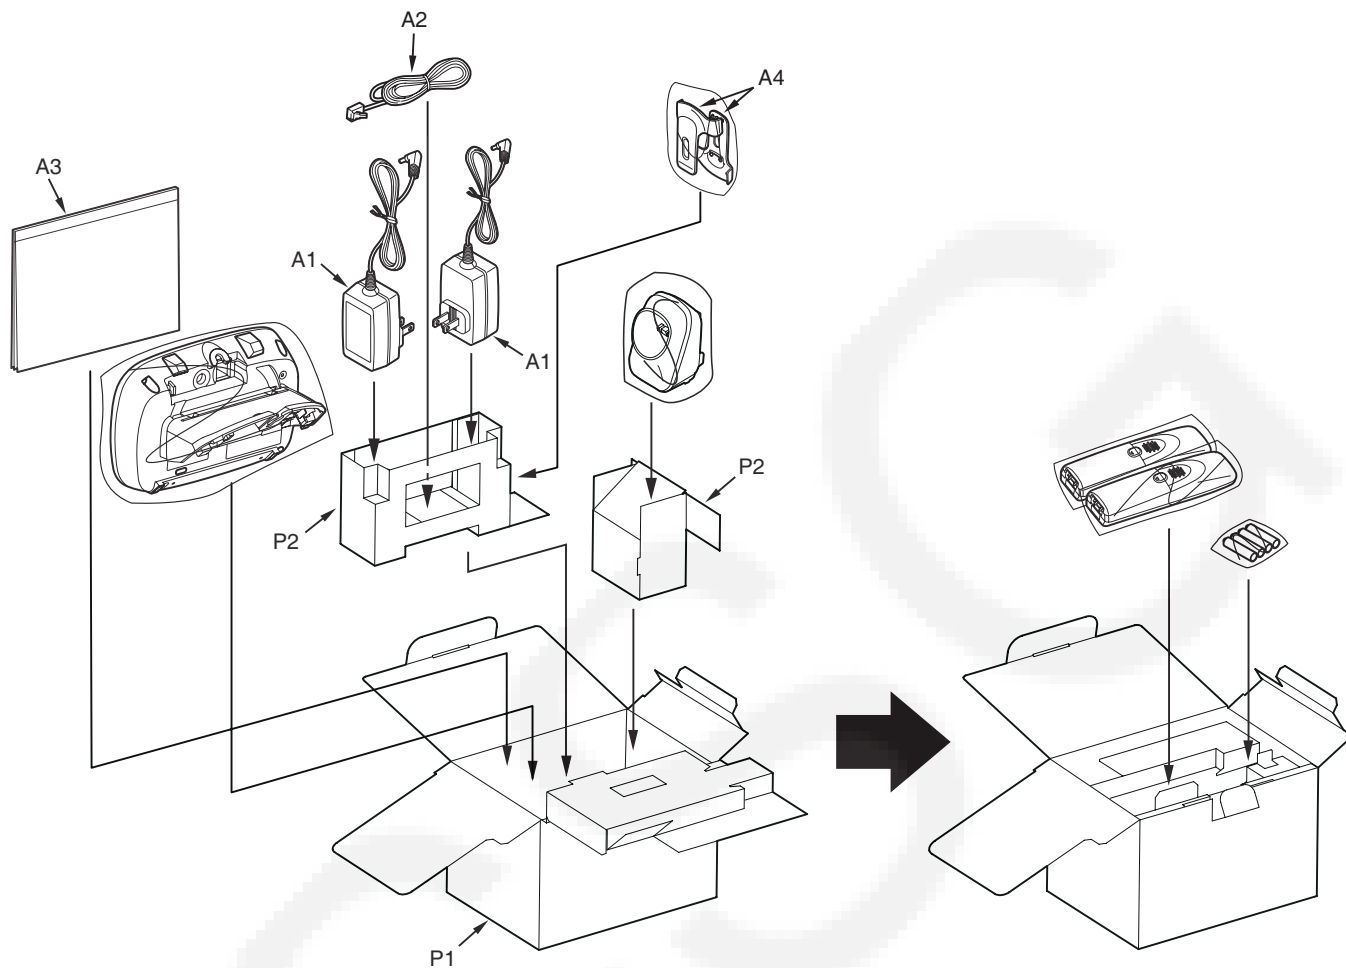

16.5. Replacement Parts List

1. RTL (Retention Time Limited)

Note:

The "RTL" marking indicates that its Retention Time is Limited.

When production is discontinued, this item will continue to be available only for a specific period of time.

This period of time depends on the type of item, and the local laws governing parts and product retention.

At the end of this period, the item will no longer be available.

2. Important safety notice

Components identified by the Δ mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

3. The S mark means the part is one of some identical parts.

For that reason, it may be different from the installed part.

4. ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.

5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms (Ω) k=1000 Ω , M=1000k Ω

All capacitors are in MICRO FARADS (μ F) p= μ μ F

*Type & Wattage of Resistor

Type

ERC:Solid ERDS:Carbon ERJ:Chip	ERX:Metal Film ERG:Metal Oxide ER0:Metal Film	PQ4R:Chip ERS:Fusible Resistor ERF:Cement Resistor
--------------------------------------	---	--

Wattage

10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W
------------	------------	---------	------	------	------

*Type & Voltage Of Capacitor

Type

ECFD:Semi-Conductor EQS:Styrol ECUV,PQCUV, ECUE:Chip EQMS:Mica	ECCD,ECKD,ECBT,F1K,ECUV:Ceramic ECQE,ECQV,ECQG:Polyester ECEA, ECST,EEE:Electlytic ECQP:Polypropylene
---	--

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type	Others		
1H:50V 2A:100V 2E:250V 2H:500V	05:50V 1:100V 2:200V	0F:3.15V 1A:10V 1V:35V 0J:6.3V	0J :6.3V 1A :10V 1C :16V 1E,25:25V	1V :35V 50,1H:50V 1J :16V 2A :100V	

16.5.1. Base Unit

16.5.1.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	1	PNKM1125RB	CABINET BODY (for KX-TG6572C)	PS-HB
	1	PNKM1125RA	CABINET BODY (for KX-TG6572R)	PS-HB
	2	PQJJ1T039T	JACK, MODULAR	
	3	K2ECYZ000001	JACK, DC	
	4	L0AA02A00087	SPEAKER	
	5	PQHG10729Z	RUBBER PARTS, SPEAKER	
	6	PQHR11313Z	GUIDE, SPEAKER	ABS-HB
	7	PNKE1055Z1	CASE, CHARGE TERMINAL (for KX-TG6572C)	PS-HB
	7	PNKE1055ZA	CASE, CHARGE TERMINAL (for KX-TG6572R)	PS-HB

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	8	PNJT1003Z	CHARGE TERMINAL	
	9	PNBC1002Y3	BUTTON, NAVIGATOR KEY	ABS-HB
	10	PNHR1001Z	GUIDE, BUTTON	PS-HB
	11	PNBC1001Z3	BUTTON, MESSAGE	AS-HB
	12	PNJK1075W	KEYBOARD SWITCH	
	13	PNYE1029Z	SPACER, ANTENNA	
	14	PNLA1030Z	ANTENNA	
	15	PNKF1094Z1	CABINET COVER	PS-HB
	16	PNHA1014Z	RUBBER PARTS, FOOT CUSHION	
	17	PNHR1249Z	PLASTIC PARTS	POM-HB
	18	PNKL1014Z1	STAND, WALL MOUNT	PS-HB
	19	PNHA1013Z	RUBBER PARTS, FOOT CUSHION	
	20	PNGT5135U	NAME PLATE (for KX-TG6572C)	
	20	PNGT5135V	NAME PLATE (for KX-TG6572R)	

16.5.1.2. Main P.C. Board Parts

Note:

(*1) When replacing IC611 or X501, make the adjustment using PNZZTG6521M. Refer to **How to download the data** (P.57) of Things to Do after Replacing IC or X'tal.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB1	PNWP1TG6531H	MAIN P.C.BOARD ASS'Y (RTL) (ICs)	
	IC302	C0CBAYG00016	IC	S
	IC331	C0EBE0000124	IC	
	IC501	C2HBCY000066	IC (BBIC)	
	IC601	PNWI2TG6531H	IC (FLASH)	
	IC611	PNWI1TG6531H	IC (EEPROM) (*1) (TRANSISTORS)	
	Q111	2SC6054JSL	TRANSISTOR (SI)	
	Q141	B1ACGP000008	TRANSISTOR (SI)	
	Q142	PQVTBF822T7	TRANSISTOR (SI)	
	Q161	2SD0874AS	TRANSISTOR (SI)	
	Q171	2SC6054JSL	TRANSISTOR (SI)	
	Q651	B1GFCFEN0011	TRANSISTOR (SI) (DIODES)	S
	D101	PQVDM5S	DIODE (SI)	
	D113	MA111	DIODE (SI)	S
	D133	MA111	DIODE (SI)	S
	D143	MANV250GEL	DIODE (SI)	
	D473	MAZ805100L	DIODE (SI)	
	DA801	B0DDCD000001	DIODE (SI)	
	DA802	B0DDCD000001	DIODE (SI) (COILS)	
	L101	PQLQXF330K	COIL	S
	L102	PQLQXF330K	COIL	S
	L476	G1CR22J00006	COIL	
	L501	G1CR10J00010	COIL	
	L809	G1C7N5JA0044	COIL (RESISTOR ARRAYS)	
	RA151	D1H410220001	RESISTOR ARRAY	
	RA501	EXB28V330	RESISTOR ARRAY	
	RA502	EXB28V103	RESISTOR ARRAY	
	RA504	D1H468020001	RESISTOR ARRAY (VARISTOR)	
	SA101	J0LF00000048	VARISTOR (SURGE) ABSORBER) (RESISTORS)	
	R111	PQ4R10XJ104	100k	S
	R112	PQ4R10XJ104	100k	S
	R113	ERJ3GEYJ103	10k	S
	R114	ERJ3GEYJ473	47k	S
	R121	ERJ3GEYJ394	390k	S
	R122	ERJ3GEYJ394	390k	S
	R131	PQ4R18XJ106	10M	S
	R133	ERJ3GEYJ334	330k	S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R141	ERJ3GEYJ104	100k	S
	R142	PQ4R18XJ272	2.7k	S
	R145	ERJ2GEJ222	2.2k	S
	R151	ERJ2GEJ104	100k	S
	R152	ERJ2GEJ474X	470k	S
	R160	ERJ3GEYJ911	910	S
	R161	ERJ3GEYJ104	100k	S
	R162	ERJ3GEYJ473	47k	S
	R163	ERJ12YJ120	12	S
	R164	ERJ3GEYJ272	2.7k	S
	R165	ERJ3GEYJ273	27k	S
	R167	ERJ12YJ270	27	S
	R171	ERJ2GEJ220	22	S
	R172	ERJ2GEJ104	100k	S
	R175	ERJ2GEJ561	560	S
	R176	ERJ2GEJ101	100	S
	R178	ERJ2GEJ102	1k	S
	R181	ERJ2GEOR00	0	S
	R321	ERJ2RKF1400	140	
	R322	ERJ2RKF1000	100	
	R331	ERJ3EKF4702	47k	
	R332	ERJ3EKF6802	68k	
	R334	ERJ2GEJ473	47k	S
	R335	ERJ2GEOR00	0	S
	R371	ERJ1TYJ5R6U	5.6	
	R372	ERJ1TYJ5R6U	5.6	
	R501	ERJ3GEYJ100	10	S
	R502	ERJ2GEJ330	33	S
	R505	ERJ2GEJ222	2.2k	S
	R512	ERJ2GEJ102	1k	S
	R604	ERJ2GEJ103	10k	S
	R605	ERJ2GEJ332	3.3k	S
	R606	ERJ2GEJ332	3.3k	S
	R607	ERJ2GEOR00	0	S
	R612	ERJ2GEJ103	10k	S
	R651	ERJ3GEYJ681	680	S
	R652	ERJ3GEYJ681	680	S
	R806	ERJ2GEJ471	470	S
	R807	ERJ2GEJ471	470	S
	R891	ERJ2GEJ471	470	S
	R892	ERJ2GEJ471	470	S
	L361	ERJ3GEY0R00	0	S
	L371	ERJ3GEY0R00	0	S
			(CAPACITORS)	
	C101	F1K2H681A008	680p	
	C102	F1K2H681A008	680p	
	C111	F1J2A473A024	0.047	
	C112	F1J2A473A024	0.047	
	C113	PQCUV1A684KB	0.68	
	C120	ECUE1H102KBQ	0.001	
	C121	F1K2H681A008	680p	
	C122	F1K2H681A008	680p	
	C123	ECUE1H100DCQ	10p	
	C126	ECUE1H100DCQ	10p	
	C132	ECUV1H103KBV	0.01	
	C142	ECUV1H103KBV	0.01	
	C151	ECUE1H100DCQ	10p	
	C152	ECUE1C103KBQ	0.01	
	C161	F2G1H1000009	10	
	C167	ECUV1H102KBV	0.001	
	C171	ECUV1C223KBV	0.022	
	C173	ECUV1A224KBV	0.22	
	C175	ECUE1H102KBQ	0.001	
	C176	PQCUV0J106KB	10	
	C178	ECUE1C223KBQ	0.022	
	C184	ECUV1A105KBV	1	
	C186	ECUE1H100DCQ	10p	
	C302	ECUE1H100DCQ	10p	
	C306	F2A1C1010119	100	
	C321	ECUV1A105KBV	1	
	C322	ECUE1H100DCQ	10p	
	C341	F2A1A3310040	330	
	C342	ECUV1C104KBV	0.1	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C343	ECUE1H100DCQ	10p	
	C351	ECUV1C104KBV	0.1	
	C352	ECUV1C105KBV	1	
	C476	ECUE1H100DCQ	10p	
	C477	ECUE1H100DCQ	10p	
	C478	ECUE1H100DCQ	10p	
	C479	ECUE1H100DCQ	10p	
	C501	ECUE1A104KBQ	0.1	
	C502	ECJ1VB0G106M	10	
	C503	ECJ1VB0G106M	10	
	C504	ECUE0J105KBQ	1	
	C505	ECJ1VB0G106M	10	
	C506	ECUV1A105KBV	1	
	C507	ECUV1A225KB	2.2	
	C508	ECUE1H100DCQ	10p	
	C509	ECUE1H120JCQ	12p	
	C510	ECUV1A105KBV	1	
	C511	ECJ1VB0G106M	10	
	C512	ECUE1A104KBQ	0.1	
	C513	ECUV1A225KB	2.2	
	C514	ECUE1A104KBQ	0.1	
	C515	ECUV1A105KBV	1	
	C516	ECUE1A104KBQ	0.1	
	C517	ECUE1A104KBQ	0.1	
	C518	ECUE1A104KBQ	0.1	
	C519	ECUE1A104KBQ	0.1	
	C520	ECUE1A104KBQ	0.1	
	C521	ECUE0J105KBQ	1	
	C522	ECUE1H100DCQ	10p	
	C530	ECUE1H100DCQ	10p	
	C601	ECUE1A104KBQ	0.1	
	C611	ECUE1A104KBQ	0.1	
	C805	F1G1H2R7A480	2.7p	
	C806	F1G1H2R7A480	2.7p	
	C810	F1G1H2R4A480	2.4p	
	C811	F1G1H100A723	10p	
	C812	F1G1HR90A480	0.9p	
	C813	F1G1H2R0A480	2p	
	C820	F1G1H1R5A480	1.5p	
	C822	F1G1H100A723	10p	
	C825	F1G1H100A723	10p	
	C826	F1G1H100A723	10p	
	C827	F1G1H100A723	10p	
	C859	F1G1H2R2A480	2.2p	
	C863	F1G1H1R5A480	1.5p	
	C891	F1G1H5R0A480	5p	
	C892	F1G1H5R0A480	5p	
	C893	F1G1H3R0A480	3p	
	C894	F1G1H2R2A480	2.2p	
	C895	F1G1H1R2A480	1.2p	
	C896	F1G1H2R2A480	2.2p	
			(OTHERS)	
	E1	WBX10SH-3.5G	LEAD WIRE, PARALLEL WIRE	
	F101	D4DAY220A022	THERMISTOR (POSISTOR)	S
	F301	K5H302Y00003	FUSE	
	X501	H0J138500011	CRYSTAL OSCILLATOR (*1)	

16.5.1.3. Operational P.C. Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB2	PNWP2G6521EH	OPERATIONAL P.C. BOARD ASS'Y (RTL) (DIODES)	
	LED901	LNJ237W82RA	LED	S
	LED902	LNJ237W82RA	LED	S

16.5.2. Handset

16.5.2.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	101	PNGP1085ZA	PANEL, LCD (for KX-TGA653C)	PMMA-HB
	101	PNGP1085Z9	PANEL, LCD (for KX-TGA653R)	PMMA-HB
	102	PNYE1026Z	TAPE, DOUBLE SIDED	
	103	PNKM1121QB	CABINET BODY (for KX-TGA653C)	PS-HB
	103	PNKM1121QA	CABINET BODY (for KX-TGA653R)	PS-HB
	104	PNHR1248Z	OPTIC CONDUCTIVE PARTS, LED LENS	PS-HB
	105	PNGT5136U	NAME PLATE (for KX-TGA653C)	
	105	PNGT5136V	NAME PLATE (for KX-TGA653R)	
	106	LOAD01A00020	RECEIVER	
	107	PQHG10729Z	RUBBER PARTS, RECEIVER	
	108	PNYE1029Z	SPACER, CUSHION LCD	
	109	PNBC1003Y3	BUTTON, VOLUME KEY	ABS-HB
	110	PNJK1071Z	KEYBOARD SWITCH	
	111	PNHX1165Z	COVER, LCD	
	112	PNJT1027Z	CHARGE TERMINAL (L)	
	113	PNJT1026Z	CHARGE TERMINAL (R)	
	114	PQHR11315Z	GUIDE, SPEAKER	ABS-HB
	115	LOAA02A00095	SPEAKER	
	116	PQHS10784Y	SPACER, SPEAKER NET	
	117	PQJC10056W	BATTERY TERMINAL	
	118	PNKF1091Y1	CABINET COVER (for KX-TGA653C)	ABS-HB
	118	PNKF1091Y6	CABINET COVER (for KX-TGA653R)	ABS-HB
	119	PNKE1052Z1	COVER, RUBBER GRIP (for KX-TGA653C)	
	119	PNKE1052Z2	COVER, RUBBER GRIP (for KX-TGA653R)	
	120	PQQT23182Z	LABEL, ATTENTION	
	121	PNQT1745Z	LABEL, BATTERY	
	122	PNHS1079Z	SPACER, BATTERY	
	123	PNKK1038Y1	LID, BATTERY (for KX-TGA653C)	ABS-HB
	123	PNKK1038Y7	LID, BATTERY (for KX-TGA653R)	ABS-HB
	124	PNYNTGA652CR	LID, BATTERY ASS'Y (for KX-TGA653C)	ABS-HB
	124	PNYNTGA652RR	LID, BATTERY ASS'Y (for KX-TGA653R)	ABS-HB

16.5.2.2. Main P.C. Board Parts

Note:

(*1) Reconfirm the model No. written on the handset's name plate when replacing PCB100. Because the model No. of the optional handset may differ from the included handset.

(*2) When replacing IC3 or X1, make the adjustment using PNZZTG6521M. Refer to **Handset** (P.58) of Things to Do after Replacing IC or X'tal.

(*3) When replacing the handset LCD, See **How to Replace the Handset LCD** (P.49).

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB100	PNWPTGA653CR	MAIN P.C.BOARD ASS'Y (RTL) (*1)	
			(ICs)	
	IC1	C2HBCY000062	IC (BBIC)	
	IC3	PNWITGA652BR	IC (EEPROM) (*2)	
			(TRANSISTORS)	
	Q4	B1ADGE000004	TRANSISTOR (SI)	
	Q5	UN9219J	TRANSISTOR (SI)	S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	Q6	UN9219J	TRANSISTOR (SI)	S
	Q9	2SC6054JSL	TRANSISTOR (SI)	
			(DIODES)	
	D7	MA2ZD0200L	DIODE (SI)	
	D13	MA8043M	DIODE (SI)	S
	D14	MA8043M	DIODE (SI)	S
	D21	MA8043M	DIODE (SI)	S
	D22	MA8043M	DIODE (SI)	S
	DA801	B0DDCD000001	DIODE (SI)	
			(LEDS)	
	LED7	B3ACB0000216	LED	
	LED8	B3ACB0000216	LED	
	LED9	B3ACB0000216	LED	
	LED12	B3ACB0000216	LED	
			(COILS)	
	C812	PQLQR4C8N2J	COIL	S
	L13	G1CRI8J00004	COIL	
			(RESISTOR ARRAYS)	
	RA1	EXB28V221JX	RESISTOR ARRAY	
	RA4	D1H433220001	RESISTOR ARRAY	
	RA5	EXB28V103	RESISTOR ARRAY	
			(IC FILTERS)	
	L9	J0JCC0000287	IC FILTER	
	L29	J0JDC0000045	IC FILTER	
	R308	J0JCC0000286	IC FILTER	
			(RESISTORS)	
	R3	ERJ2GEJ152	1.5k	
	R4	ERJ2GEJ473	47k	
	R5	ERJ2GEJ473	47k	
	R6	ERJ2GEJ102	1k	
	R7	ERJ2GEJ104	100k	
	R10	ERJ2GEJ100	10	
	R21	ERJ2GEJ104	100k	
	R22	ERJ2GEJ332	3.3k	
	R23	ERJ2GEJ100	10	
	R24	ERJ2GEJ391	390	
	R25	ERJ2GEJ222	2.2k	
	R26	ERJ2GEJ332	3.3k	
	R27	ERJ2GEJ222	2.2k	
	R28	ERJ3GEYJ222	2.2k	
	R31	ERJ2GEJ104	100k	
	R33	ERJ2GEJ104	100k	
	R34	ERJ2GEJ391	390	
	R35	ERJ2GEJ104	100k	
	R43	ERJ2GEOR00	0	
	R45	ERJ6RSJR10V	0.1	
	R64	ERJ2GEJ222	2.2k	
	R66	ERJ2GEJ103	10k	
	R67	ERJ2GEJ103	10k	
	R68	ERJ2GEJ103	10k	
	R69	ERJ2GEJ103	10k	
	R73	ERJ2GEJ330	33	
	R74	ERJ2GEJ330	33	
	R152	ERJ2GEOR00	0	
	R502	ERJ2GEOR00	0	
	R507	ERJ2GEOR00	0	
	R561	ERJ2GEJ221	220	
	R563	ERJ2GEOR00	0	
	R806	ERJ2GEJ471	470	
	R807	ERJ2GEJ471	470	
			(CAPACITORS)	
	C2	F2A0J6810012	680	
	C4	ECUE1H390JCQ	39p	
	C5	ECUE1A104KBQ	0.1	
	C8	ECUE1H100DCQ	10p	
	C9	ECUE1H120JCQ	12p	
	C11	ECUE1A104KBQ	0.1	
	C12	PQCUV0J106KB	10	
	C13	ECUE1A104KBQ	0.1	
	C14	ECUV1C393KBV	0.039	
	C15	ECUE1H390JCQ	39p	
	C16	ECUV1C393KBV	0.039	
	C17	ECUE1H100DCQ	10p	

Safety No.	Ref. No.	Part No.	Part Name & Description	Remarks
	C18	ECUE1H100DCQ	10p	
	C20	ECJ1VB0G106M	10	S
	C21	ECUV1A105KBV	1	
	C22	ECUE1A104KBQ	0.1	
	C23	ECUV1C104KBV	0.1	
	C24	ECUV1A105KBV	1	
	C25	ECUV1A225KB	2.2	
	C26	ECJ1VB0G106M	10	S
	C29	ECUV1A105KBV	1	
	C30	ECJ1VB0G106M	10	S
	C31	ECUE0J105KBQ	1	
	C32	ECUV1A105KBV	1	
	C33	ECUE1A104KBQ	0.1	
	C36	ECUE1A104KBQ	0.1	
	C37	ECJ1VB0G106M	10	S
	C40	ECUE1A104KBQ	0.1	
	C41	ECUE1A104KBQ	0.1	
	C43	ECUE1A104KBQ	0.1	
	C44	ECUE0J105KBQ	1	
	C45	ECUE1A104KBQ	0.1	
	C46	F1G1H100A723	10p	
	C51	ECJ1VB0G106M	10	S
	C72	ECUE1H100DCQ	10p	
	C73	ECUE1H100DCQ	10p	
	C79	ECUE1H101JCQ	100p	
	C80	ECUE1H390JCQ	39p	
	C81	ECUE1H101JCQ	100p	
	C96	ECUE1H100DCQ	10p	
	C97	ECUE1H100DCQ	10p	
	C113	ECUE1H100DCQ	10p	
	C152	ECUE1H102KBQ	0.001	
	C172	ECUE1A104KBQ	0.1	
	C183	ECUE1H100DCQ	10p	
	C184	ECUE1H100DCQ	10p	
	C188	ECUV1A105KBV	1	
	C504	ECUV1C105KBV	1	
	C505	ECUE0J105KBQ	1	
	C805	F1G1H2R4A480	2.4p	
	C806	F1G1H2R4A480	2.4p	
	C810	F1G1H2R5A480	2.5p	
	C811	F1G1H101A557	100p	
	C813	F1G1H1R6A480	1.6p	
	C820	F1G1H1R8A480	1.8p	
	C822	F1G1H100A723	10p	
	C825	F1G1H100A723	10p	
	C826	F1G1H100A723	10p	
	C859	F1G1H2R0A480	2p	
	C863	F1G1H1R8A480	1.8p	
	C895	F1G1H1R3A480	1.3p	
	C896	F1G1H1R8A480	1.8p	
	C897	F1G1H240A557	24p	
	L809	F1G1H1R0A480	1p	
			(OTHERS)	
	MIC100	L0CBAY000032	MICROPHONE	
	E101	L5DYBY00001	LIQUID CRYSTAL DISPLAY (*3)	
	E102	PNHR1114Z	TRANSPARENT PLATE, LCD	PMMA-HB
	E103	PNHR1113Z	GUIDE, LCD	ABS-HB
	E104	PNHX1136Z	COVER, LCD	
	E105	PNLA1020Z	ANTENNA	
	E106	PNVE1002Z	BATTERY TERMINAL	ABS-HB
	F1	K5H252Y00002	FUSE	
	X1	H0J138500003	CRYSTAL OSCILLATOR (*1)	S

16.5.3. Charger Unit

16.5.3.1. Cabinet and Electrical Parts

Safety No.	Ref. No.	Part No.	Part Name & Description	Remarks
	200	PNLC1010YC	CHARGER UNIT ASS'Y without NAME PLATE (RTL) (for KX-TG6572C)	

Safety No.	Ref. No.	Part No.	Part Name & Description	Remarks
	200	PNLC1010YR	CHARGER UNIT ASS'Y without NAME PLATE (RTL) (for KX-TG6572R)	
	200-1	PNKM1130Y6	CABINET BODY (for KX-TG6572C)	PS-HB
	200-1	PNKM1130YE	CABINET BODY (for KX-TG6572R)	PS-HB
	200-2	PNJT1010Z	CHARGE TERMINAL	
	200-3	PNKF1098Z1	CABINET COVER	PS-HB
	200-4	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	
	201	PNGT4777Z	NAME PLATE	

16.5.3.2. Main P.C. Board Parts

Safety No.	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB200	PNWPTGA641CH	MAIN P.C. BOARD ASS'Y (RTL)	
			(JACK)	
	J1	K2ECYB000001	JACK	S
			(RESISTOR)	
	R1	ERG2S120	12	
			(FUSE)	
	F1	K5H302Y00003	FUSE	

16.5.4. Accessories and Packing Materials

Note:

(*1) You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

Safety No.	Ref. No.	Part No.	Part Name & Description	Remarks
△	A1	PQLV219Y	AC ADAPTOR	
	A2	PQJA10075Z	CORD, TELEPHONE	
	A3	PNQX2397X	INSTRUCTION BOOK (*1)	
	A4	PNKE1054Z1	HANGER, BELT CLIP	ABS-HB
	P1	PNPK2848051Y	GIFT BOX (for KX-TG6572C)	
	P1	PNPK2848050Z	GIFT BOX (for KX-TG6572R)	
	P2	PNPD1333Z	CUSHION	

16.5.5. Screws

Safety No.	Ref. No.	Part No.	Part Name & Description	Remarks
	A	XTB26+8GFJ	TAPPING SCREW	
	B	XTB2+8GFJ	TAPPING SCREW	

16.5.6. Fixtures and Tools

Note:

(*1) See Equipment Required (P.50), and The Setting Method of JIG (P.50)

(*2) When replacing the Handset LCD, See How to Replace the Handset LCD (P.49)

Safety No.	Ref. No.	Part No.	Part Name & Description	Remarks
		PQZZ1CD300E	JIG CABLE (*1)	
		PNZZTG6521M	BATCH FILE CD-ROM (*1)	
		PQZZ430PIR	TIP OF SOLDERING IRON (*2)	
		PQZZ430PRB	RUBBER OF SOLDERING IRON (*2)	

PROSOG

T.I
KXTG6572C
KXTG6572R
KXTGA653C
KXTGA653R