



To better help you obtain assistance or service should you ever need it, write down the following information about the product. This information is on the identification label located on the left hand inside wall of the cabinet. We advise you to keep this Owners Manual and sales slip in your possession.

Model: _____

Serial Number: _____

Date of Purchase: _____

Owners Manual Glass Door Freezers

Single and Double Door Models

- 09-USGF, 09M-USGF, 09X-USGF
- 10-USGF, 10M-USGF, 10X-USGF
- 13-USGF, 15-UDGF, 19-USGF
- 22-USGF, 43-UDGF, 44-UDGF




30 Armstrong Avenue
Georgetown, Ontario
Canada L7G 4R9

tel: 800.800.5706 or 905.702.1441
fax: 905.702.1442
email: info@minusforty.com
web: minusforty.com



30 Armstrong Ave. Georgetown, Ontario Canada L7G 4R9
tel 800.800.5706 · 905.702.1441 · fax 905.702.1442 · MINUSFORTY.com

WIRING DIAGRAM (MODELS WITH CONTINUOUS RUN CONDENSER FAN)

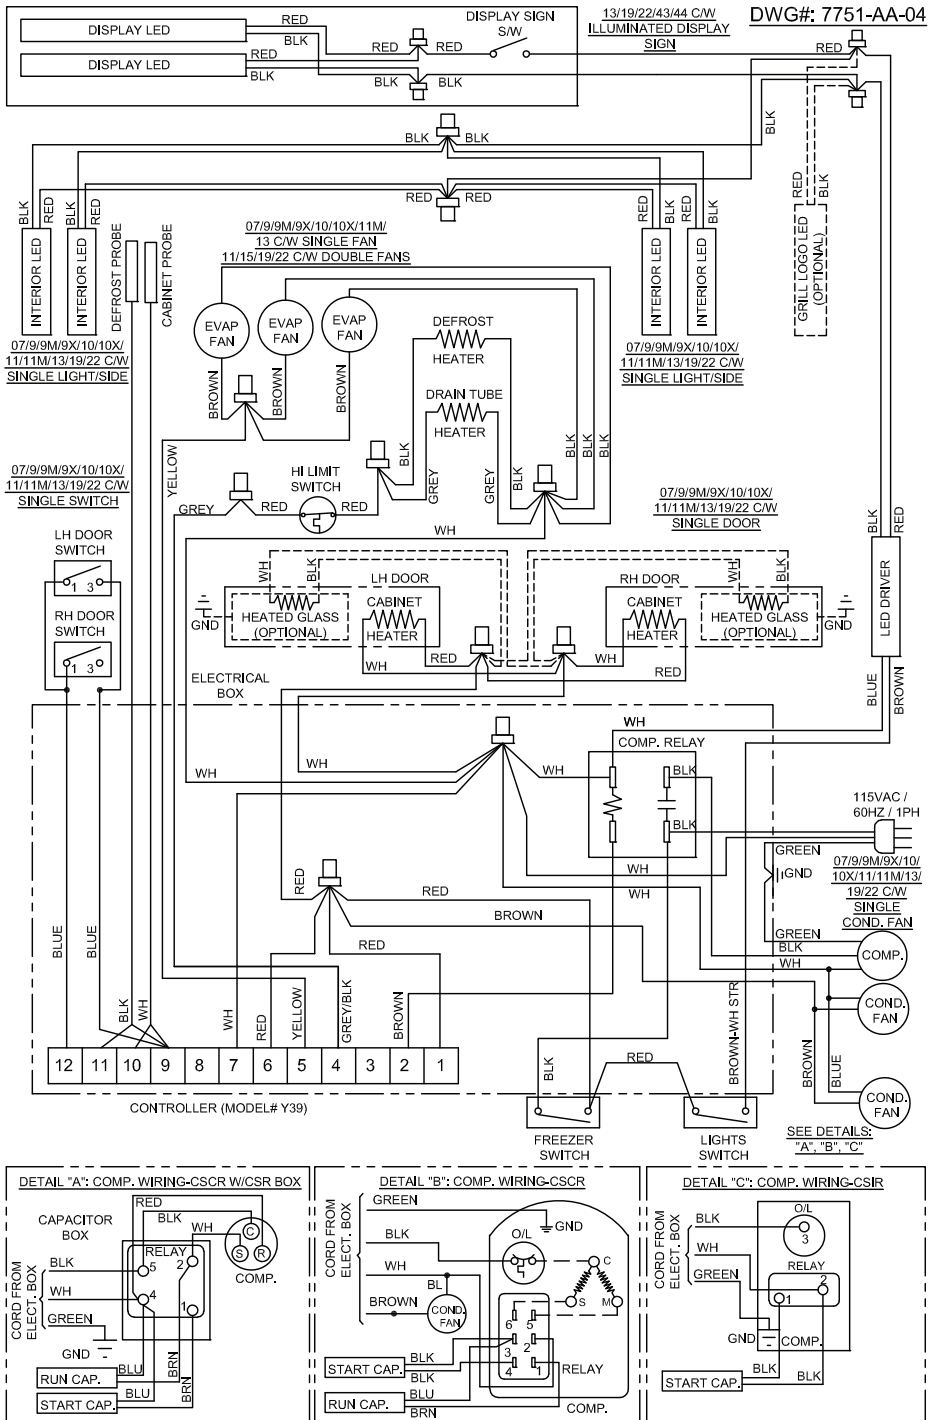

CAUTIONARY INSTRUCTIONS FOR UNITS CHARGED WITH PROPANE (R290) REFRIGERANT

⚠ WARNING



THIS UNIT IS CHARGED WITH PROPANE REFRIGERANT. PROPANE IS AN EXTREMELY FLAMMABLE AND EXPLOSIVE GAS. PLEASE READ CAREFULLY THIS MANUAL/GUIDE AND FOLLOW ALL SAFETY PRECAUTIONS CONTAINED HEREIN TO REDUCE A RISK OF FIRE AND/OR EXPLOSION. FAILURE TO FOLLOW THE SAFETY PRECAUTIONS MAY RESULT IN SERIOUS INJURY OR DEATH, AND/OR PROPERTY DAMAGE.

- **DANGER - RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. DO NOT USE MECHANICAL DEVICES TO DEFROST REFRIGERATOR. DO NOT PUNCTURE REFRIGERANT TUBING.**
- **DANGER - RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. TO BE REPAIRED ONLY BY FACTORY AUTHORIZED TRAINED SERVICE PERSONNEL. DO NOT PUNCTURE REFRIGERANT TUBING.**
- **CAUTION - RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. CONSULT REPAIR MANUAL/OWNER'S GUIDE BEFORE ATTEMPTING TO SERVICE THIS PRODUCT. ALL SAFETY PRECAUTIONS MUST BE FOLLOWED.**
- **CAUTION - RISK OF FIRE OR EXPLOSION. DISPOSE OF PROPERLY IN ACCORDANCE WITH FEDERAL OR LOCAL REGULATIONS. FLAMMABLE REFRIGERANT USED.**
- **CAUTION - RISK OF FIRE OR EXPLOSION DUE TO PUNCTURE OF REFRIGERANT TUBING; FOLLOW HANDLING INSTRUCTIONS CAREFULLY. FLAMMABLE REFRIGERANT USED.**





Propane is approved for use as a refrigerant in commercial, self-contained units in Canada and USA under limited use conditions. It can be used in new equipment only, retrofitting is not allowed, with a limited charge of up to 150 grams (5.3 oz) per refrigeration circuit. Even though this is a small amount, it still presents a fire/explosion hazard if it leaks out of refrigerant containing parts. When mixed with air, a flammable propane-air mixture can be created and easily ignited by sparks, open flames, or hot surfaces. This is particularly true in confined zones. Propane is heavier than air and tends to settle at lower points.

To mitigate the risk, please follow the precautionary measures as follows:

- Avoid unit installation in areas with open flames (kitchens, repair garages or the like), or in vicinity of open flames or high surface temperatures.
- Avoid unit installation in confined spaces. Well ventilated areas are preferred. Keep clear all ventilation openings of obstructions.
- Do not rely on smell to detect potential leaks of propane refrigerant. Propane refrigerant is a high purity propane gas and does not contain any stenching agent(s). Stenching agents are typically used in fuel-grade propane and natural gas to detect their presence in air by relying on smell.
- All repairs must be performed in well ventilated areas.
- To minimize the risk of possible ignition due to incorrect parts or improper service, component parts shall be replaced with like components and servicing shall be done by service personnel authorized by Minus Forty Technologies Corp.
- Do not attempt to modify the unit or remove any functional part(s) from the unit.
- Handle the unit with care to avoid any damage.
- When transporting the unit, all appropriate safety considerations must be considered. Check with local Department of Transportation for detailed requirements pertaining to transportation of flammable gasses.


WIRING DIAGRAM (STANDARD MODELS)

DWG#: 7303-AA-05

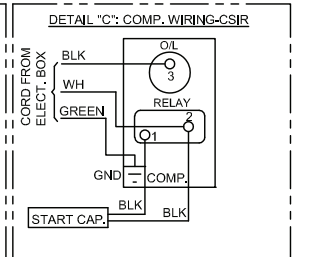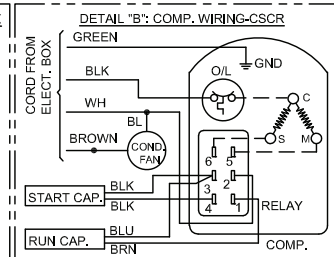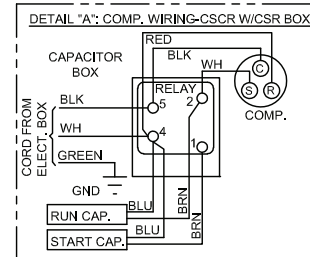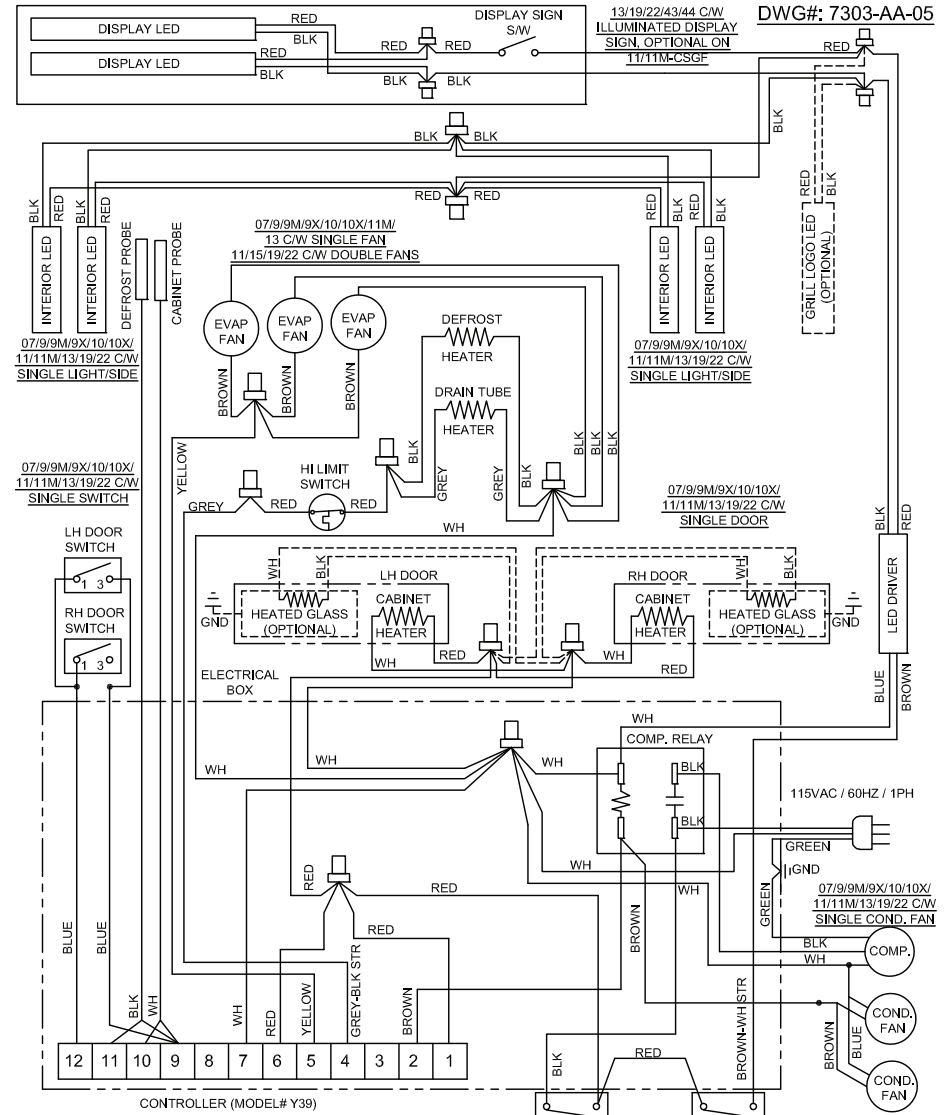

SEE DETAILS: "A", "B", "C"

ILLUSTRATION: 43-UDGF, 44-UDGF

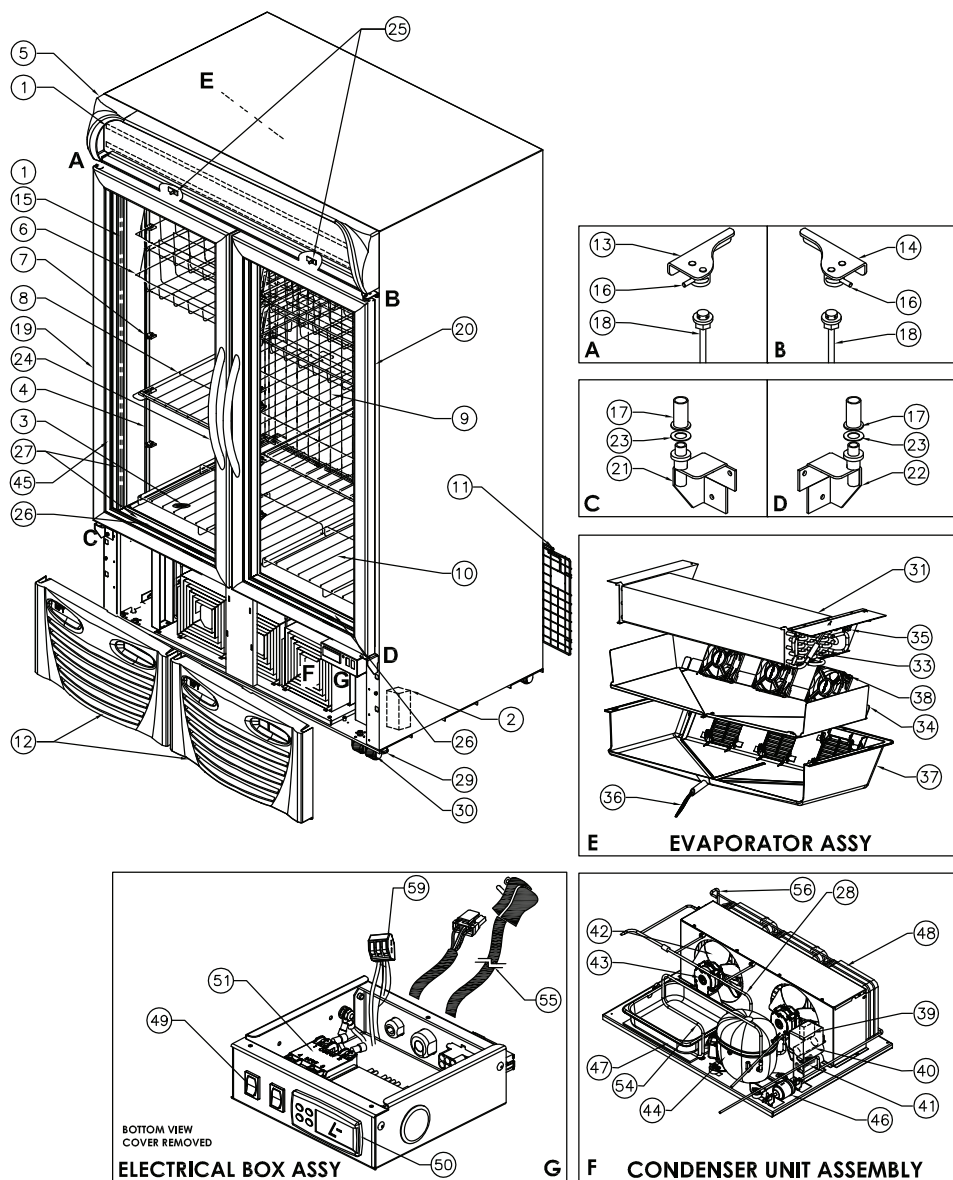

⚠ WARNING

MAKE SURE THE FREEZER IS DISCONNECTED FROM THE POWER SUPPLY BEFORE ANY SERVICE. PRESS THE FREEZER SWITCH TO THE "OFF" POSITION THEN UNPLUG THE POWER CORD FROM THE ELECTRICAL RECEPTACLE.

ALL SERVICE WORK MUST BE PERFORMED BY CERTIFIED, FACTORY AUTHORIZED SERVICE PERSONNEL ONLY. COMPONENT PARTS MUST BE REPLACED WITH LIKE COMPONENTS.

COMMERCIAL USE ONLY. NOT FOR HOUSEHOLD USE.

FOR INDOOR USE ONLY.

⚠ SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS NEAR THIS OR ANY OTHER APPLIANCE.

DO NOT TOUCH COLD SURFACES WITH DAMP OR WET HANDS. SKIN MAY STICK TO EXTREMELY COLD SURFACES.

DO NOT ALLOW CHILDREN TO CLIMB, HANG OR STAND ON FREEZER SHELVES.

KEEP FINGERS OUT OF PINCH-POINT AREAS.

DISCONNECT POWER TO THE UNIT PRIOR TO CLEANING OR REPAIRING.

BEFORE DISCARDING THIS OR ANY OTHER APPLIANCE, REMOVE THE DOORS OR LIDS TO REDUCE RISK OF CHILD ENTRAPMENT.

WHEN RECYCLING THE UNIT, REFRIGERANTS MUST BE HANDLED IN ACCORDANCE WITH LOCAL AND NATIONAL REGULATIONS.

NOTICE

OPERATING THE FREEZER FOR 24 HOURS PRIOR TO LOADING PRODUCT IS RECOMMENDED

MONITOR FREEZER TEMPERATURE REGULARLY

CONTENTS

Warranty	1
Installation Instructions	2
Power Requirements	2
Shelf and Basket, Placement and Adjustment	3
Operating Instructions	3
Product Loading	4
Temperature Adjustment and Switch Functions	5
Controller Alarms and Signals	5 - 6
Controller Symbols and Functions	6
Manual Defrost	7
How to Remove the Front Bottom Grill	7
Condenser Cleaning	8
Cabinet Cleaning	8 - 9
ISD Trans-Light LED Strip Replacement	10 - 11
Trans-Light Graphic Panel Replacement	11
Interior LED Strip Replacement	12
Troubleshooting Guide	13 - 14
Parts List (09/09M/09X/10-USGF)	15
Illustration (09/09M/09X/10-USGF)	16
Parts List (13/19/22-USGF)	17
Illustration (13/19/22-USGF)	18
Parts List (15-UDGF)	19
Illustration (15-UDGF)	20
Parts List (43/44-UDGF)	21
Illustration (43/44-UDGF)	22
Wiring Diagram (Standard Models)	23
Wiring Diagram (Continuous Run Condenser Fan Models)	24


PARTS LIST: 43-UDGF, 44-UDGF

No	Description
1	LED Strip
2	LED Driver
3	Pressure Relief Ball
4	Pilaster
5	Top Display Assembly
6	Basket
7	Pilaster Clip
8	Shelf
9	Interior Back Grill
10	Bottom Shelf
11	Rear Grill
12	Front Bottom Grill
13	Door Top Bracket (Left)
14	Door Top Bracket (Right)
15	Heater Breaker Seal LED
16	Torsion Pin
17	Bushing, Nylon (c/w Door)
18	Torsion Bar (c/w Door)
19	Door Assembly (Left)
20	Door Assembly (Right)
21	Door Bottom Bracket (Left)
22	Door Bottom Bracket (Right)
23	Nylon Washer
24	Door Handle
25	Door Switch
26	Cabinet Anti-Condensate Heater
27	Heater Breaker Seal (Bottom/Top)
28	Discharge Header
29	Leveling Leg
30	Caster
31	Evaporator Coil
32	Not Used
33	Defrost Heater
34	Evaporator Tray
35	Evaporator Styroform Pad
36	Drain Tube Heater
37	Evaporator Shroud
38	Evaporator Fan
39	Relay Potential
40	Run Capacitor







No	Description
41	Start Capacitor
42	Fan Blade(Condensing Unit)
43	Fan Motor(Condensing Unit)
44	Compressor
45	Heater Breaker Door
46	Filter Drier
47	Condensate Tray
48	Condenser Coil
49	Rocker Switch
50	Controller
51	Compressor Relay
52	Compressor Contactor
53	Defrost Heater/Evaporator Fan Wires
54	Compressor Discharge Line
55	Power Cord
56	Liquid Header
57	Compressor Harness
58	3 Pole Terminal Block
59	5 Pole Terminal Block

ILLUSTRATION: 15-UDGF

MOLDED GRILL

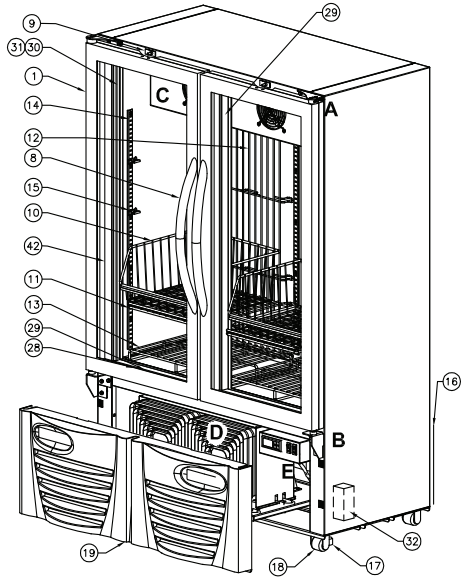

STEEL GRILL

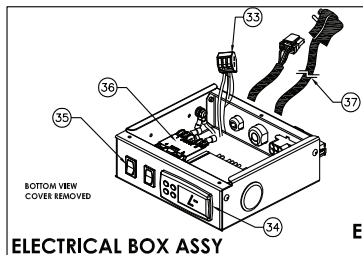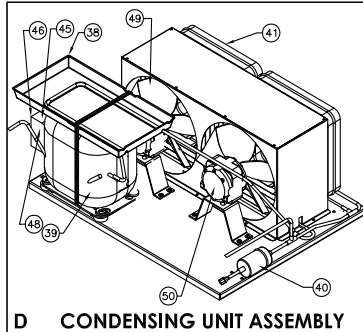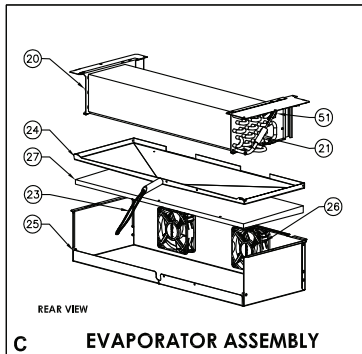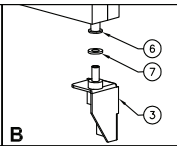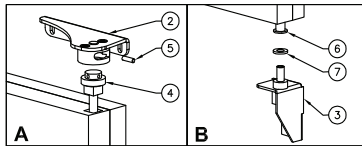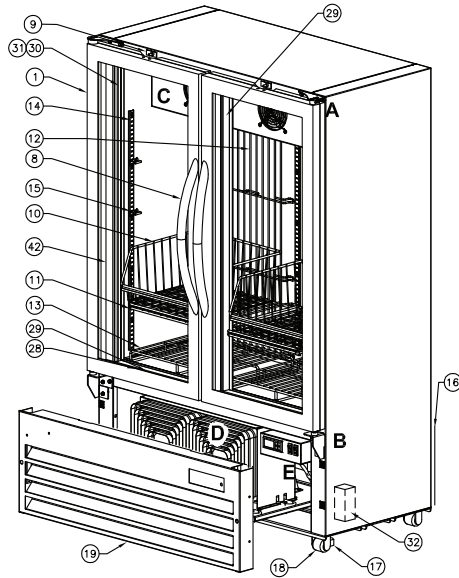

STANDARD WARRANTY FOR MINUS FORTY® REFRIGERATION EQUIPMENT AND ACCESSORIES

LIMITED WARRANTY

Minus Forty® Technologies Corp. warrants its products to be free from defect as to workmanship and materials for a period of twelve (12) months from the time of delivery.

Minus Forty® Technologies Corp. will at its option either replace or repair any defective parts returned within twelve (12) months of the time of delivery, transportation charges prepaid, which Minus Forty® Technologies Corp. in its sole discretion, determines to be defective.

This warranty shall not apply to any products that have been repaired or altered outside of Minus Forty® Technologies Corp.'s factory or repair facilities if the repairs in the judgement of Minus Forty® Technologies Corp. have affected the reliability or wear of the product and nor does the guarantee apply to any product which has been subject to misuse, accident or to any product which has not been maintained pursuant to the instruction of Minus Forty® Technologies Corp.

This warranty does not extend to any consequential damage caused by the failure of the product under any circumstance and further, Minus Forty® Technologies Corp. shall not be responsible for damage to the contents of the product or any economic loss caused by the failure of the product, whether such loss is suffered by the customer or a third party user of the product or whether the contents are owned by the customer or a third party user or supplier.



Effective January 1, 1996

INSTALLATION INSTRUCTIONS

⚠ WARNING

These freezers **MUST** be installed on a dedicated grounded circuit protected with a 15 Amp circuit breaker or a 15 Amp time delay fuse. Do not remove ground prong. If the cord or plug is damaged, replace with the same type. Refrigeration and electrical work must be performed by a qualified technician. Failure to follow these instructions can result in injury, death, fire, or electrical shock.

POWER REQUIREMENTS:

All models require a 15 Amp dedicated and properly grounded 115V/60Hz/1Ph circuit with a NEMA 5-15P receptacle. Wiring should be sized according to the amperage rating stated on the serial plate. Failure to use a dedicated circuit may cause the circuit breaker to trip off and/or cause voltage drops. As a result, power to the freezer may be interrupted and freezing performance can be adversely affected which may cause equipment damage and/or product loss.



Voltage supply to the freezer must not vary more than $\pm 10\%$ of the nominal 115V, or performance may be affected. The warranty and liability does not cover damage resulting from excessive voltage variations.

- **DO NOT USE AN EXTENSION CORD**
- **DO NOT CUT, REMOVE OR BYPASS THE GROUNDING PRONG FROM THE PLUG**
- **DO NOT PLUG FREEZER INTO AN OUTLET CONTROLLED BY A WALL SWITCH**
- **ENSURE POWER CORD IS NOT CUT OR DAMAGED FROM PINCHING, KNOTTING, OR MISHANDLING**

CABINET LOCATION: An air space of at least 6" (15 cm) must be maintained on all sides of the freezer. Do not locate the freezer in a warm unventilated room exceeding 86°F (30°C) and 55%RH; do not place freezer in direct sunlight; do not place freezer under or near heat range or heating vent.

CABINET LEVELING: The freezer must be completely leveled side to side and front to back or slightly tilted front to back but never tilted forward. Once the freezer is placed in its final location, use a carpenter level to level the freezer. Proper leveling of the freezer is important for the door closing and water drainage during the defrost cycle. There are two leg levelers in the front that can be adjusted. First, loosen the nuts using an adjustable wrench. Second, turn levelers counter-clockwise to raise the freezer, or clockwise to lower, until they reach the leveled position. Lastly, tighten the nuts again to lock the legs.

NOTICE:

Failure to follow these instructions may void the warranty and/or cause loss of product.

PROTECTIVE DOOR FILM

The anti-fog glass door has a protective film on the inner side. After the unit has been installed, peel and remove the protective film covering the inner glass surface.




PARTS LIST: 15-UDGF

No	Description
1	Door (Right or Left Hand)
2	Door Top Bracket (Right or Left)
3	Door Bottom Bracket (Right or Left)
4	Torsion Bar
5	Tension Pin
6	Bushing
7	Nylon Washer
8	Door Handle
9	Door Switch
10	Basket
11	Shelf
12	Interior Back Grill
13	Bottom Shelf
14	Pilaster
15	Pilaster Clip
16	Rear Grill
17	Leveling Leg
18	Caster
19	Front Bottom Grill
20	Evaporator Coil
21	Defrost Heater
22	not used
23	Drain Tube Heater
24	Evaporator Tray
25	Evaporator Shroud
26	Evaporator Fan
27	Evaporator Styrofoam Pad
28	Cabinet Anti-Condensate Heater
29	Heater Breaker Seal (Side and Bottom/Top)
30	Heater Breaker Seal (LED)
31	LED STRIP
32	LED Driver (Interior Light)
33	3 Pole Terminal block
34	Controller
35	Rocker Switch
36	Compressor Relay


No	Description
37	Power Cord
38	Condensate Tray Assembly
39	Compressor
40	Filter Drier
41	Condenser Coil
42	Heater Breaker Door
43	not used
44	not used
45	Start Relay
46	Start Capacitor
47	not used
48	Overload protector
49	Fan Blade (Condensing Unit)
50	Fan Motor (Condensing Unit)
51	Thermostat, Defrost Limit

ILLUSTRATION: 13-USGF, 19-USGF, 22-USGF

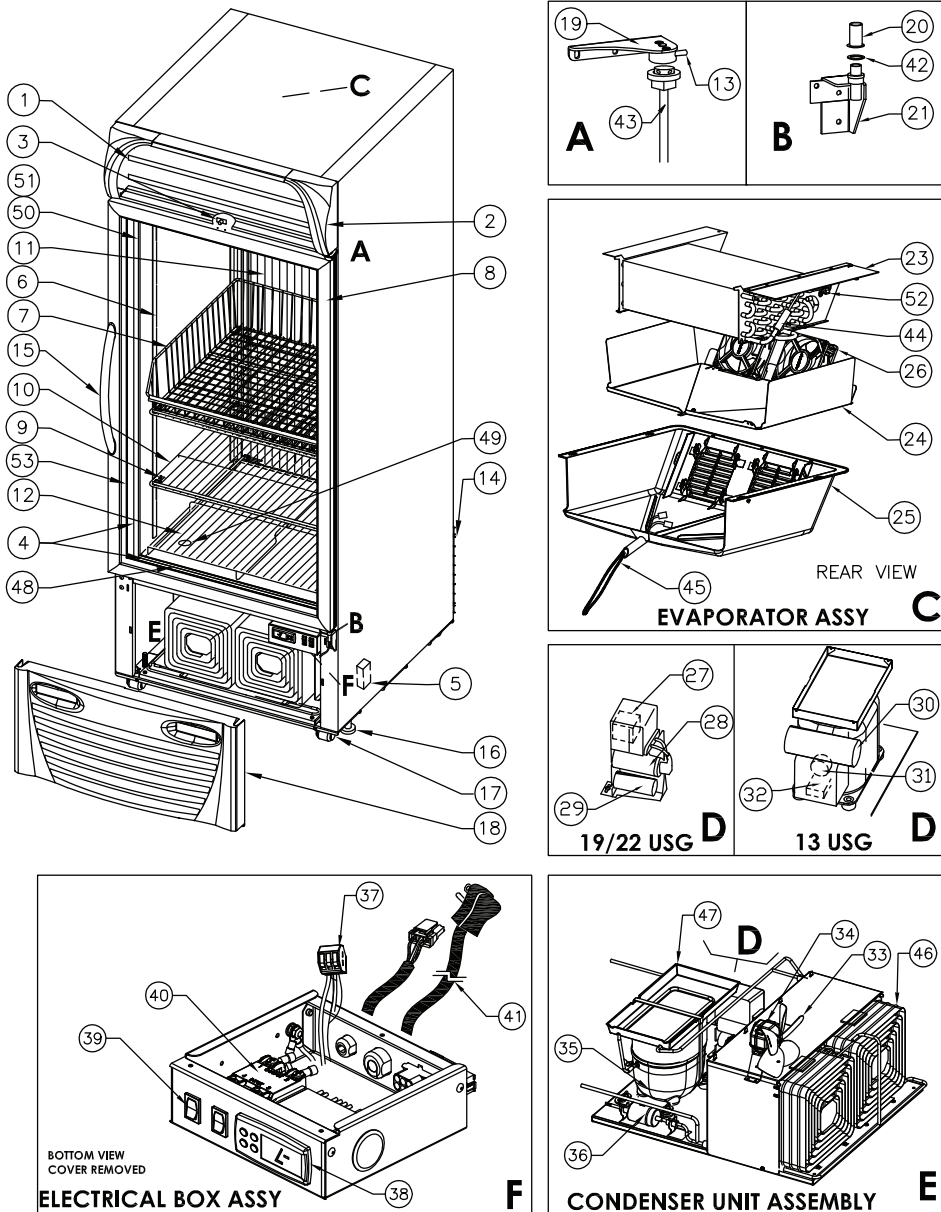

SHELF AND BASKET, INSTALLATION AND ADJUSTMENT

The freezer is supplied with shelves and molded or metallic clips. The freezer has slotted pilasters to position the shelves according to the customer's needs.

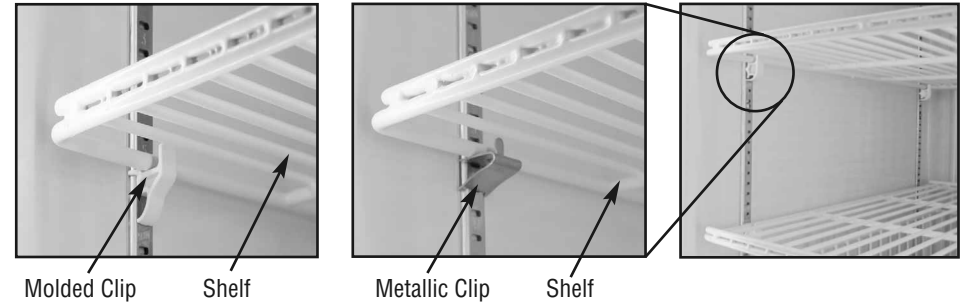

The clips can be removed at any time if a new position is chosen for the shelf or basket. To remove, grab the clip with your thumb and index finger, then push up the bottom surface until the clip is free. Once the clips are in place, put the shelf on top. Once the shelves are securely in place, baskets (if equipped) may be positioned on the shelves.

OPERATING INSTRUCTIONS

⚠ WARNING

Check with your power company if you are not certain of your power supply. Before connecting to power supply the freezer should be upright and idle for at least 1 hour.

Once the unit has been installed and the power supply has been connected, press the power switch to the "ON" position using a pen or pencil.

The compressor will start to run after 6 minutes. This can be confirmed by listening for a slight humming or a slight vibration.



NOTE:

If the freezer is running and the power supply is interrupted, the freezer will not restart immediately. There is a 6 minute delay for compressor protection.

Once the freezer is running, the inside temperature will start to cool down within a couple of minutes. Ensure that the freezer has reached the desired temperature (this will take between 2 to 3 hours) by checking the electronic control display readout before loading product. **It is strongly recommended to run the freezer empty for 24 hours before loading any products.**

PRODUCT LOADING

NOTICE:

Ensure the freezer has reached the proper operating temperature before loading product. The electronic control displays the interior cabinet temperature.

Product loss is not covered under warranty.

For enhanced performance of the unit and to avoid spoilage of perishable products, follow these instructions:

DO leave at least 6" (15 cm) free space between the fan and the product for air circulation.

DO NOT stock any products against the evaporator fan. See load limit labels inside the cabinet for reference.

DO NOT block the air space behind the grill. Free space is required for proper air circulation.

AVOID removing the bottom shelf from the inner bottom.

DO NOT overstock the unit.




PARTS LIST: 13-USGF, 19-USGF, 22-USGF

No	Description
1	Display LED Strip
2	Top Display Assembly
3	Door Switch
4	Heater Breaker Seal (Bottom/Top)
5	LED Driver
6	Pilaster
7	Basket
8	Door Assembly (Right or Left Hand)
9	Pilaster Clip
10	Shelf
11	Interior Back Grill
12	Bottom Shelf
13	Torsion Pin
14	Rear Grill
15	Door Handle
16	Leveling Leg
17	Caster
18	Front Bottom Grill
19	Door Top Bracket (Right or Left)
20	Bushing, Nylon
21	Door Bottom Bracket (Right or Left)
22	not used
23	Evaporator Coil
24	Evaporator Tray
25	Evaporator Shroud
26	Evaporator Fan
27	Relay Potential (22-USGF)
28	Run Capacitor (22-USGF)
29	Start Capacitor (22-USGF)
30	Start Capacitor (13-USGF)
31	Overload Protector (13-USGF)
32	Start Relay (13-USGF)
33	Fan Blade (Condensing Unit)
34	Fan Motor (Condensing Unit)
35	Compressor
36	Filter Drier

No	Description
37	5 Pole Terminal Block
38	Controller
39	Rocker Switch
40	Compressor Relay
41	Power Cord
42	Nylon Washer
43	Torsion Bar
44	Defrost Heater
45	Drain Tube Heater
46	Condenser Coil
47	Condensate Tray Assembly
48	Cabinet Anti-Condensate Heater
49	Pressure Relief Ball
50	Heater Breaker Seal (LED)
51	Cabinet LED Strip
52	Thermostat, Defrost Limit
53	Heater Breaker Door

ILLUSTRATION: 09/09M/09X-USGF, 10/10M/10X-USGF

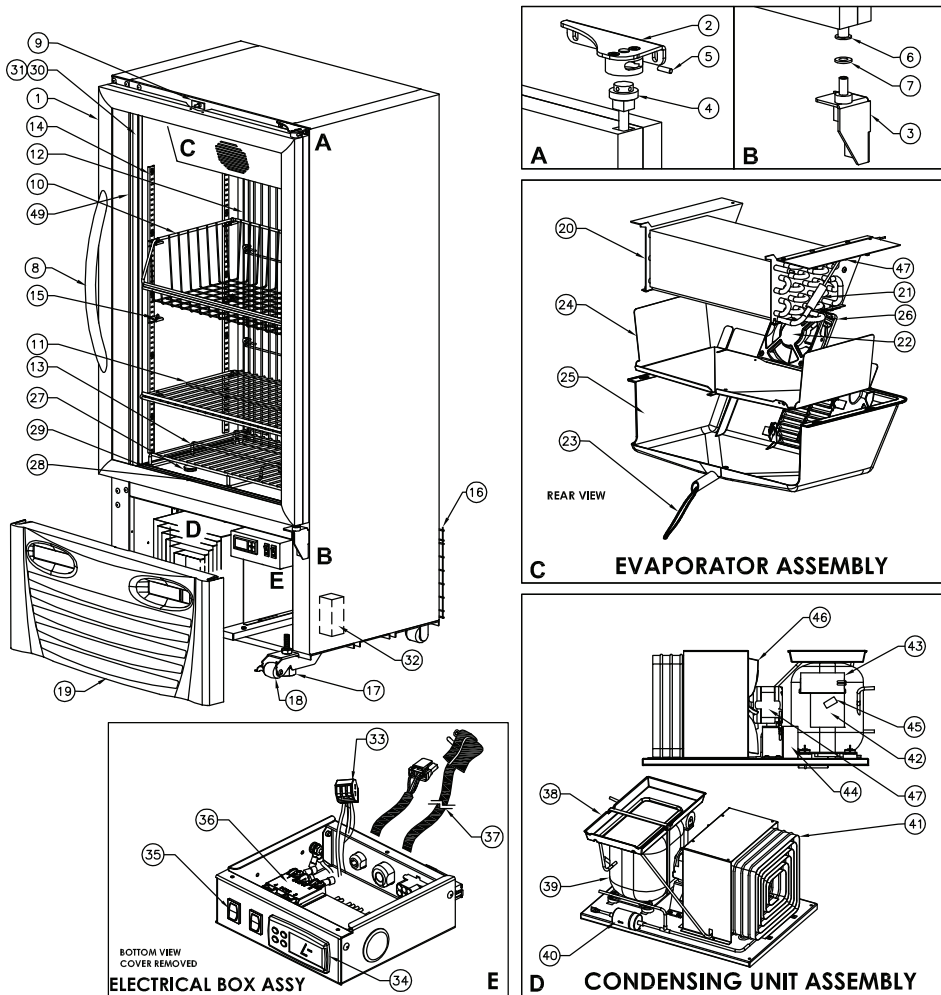

TEMPERATURE ADJUSTMENT AND SWITCH FUNCTIONS

Locate the electronic control on the right of the front bottom grill. The electronic control displays actual temperature inside the freezer. In addition, the electronic control turns the refrigeration system OFF when freezer reaches the set temperature, and turns the refrigeration system ON after the freezer temperature rises by 8°F or after 7 minutes, whichever lasts longer.

To adjust the set temperature, follow these steps:

1. Press and release P button; the set temperature and SP1 are displayed alternatively on the controller
2. Press the UP or DOWN buttons to adjust the set temperature.
3. Press P to store the adjusted value; The electronic control will return to cabinet temperature display. The U Button on the electronic controller is used for displaying cabinet and defrost temperatures (PR1 and PR2 parameters)

There are two switches located on the right hand side of the controller. Their functions are to manually switch electronic components of the freezer.

1. POWER switch turns the refrigeration system (including all electrical parts) ON or OFF. (use a pen or pencil to press the power switch to the ON or OFF position).
2. LIGHT switch turns the internal and external lights ON or OFF.

ELECTRONIC CONTROLLER



CONTROLLER ALARMS AND SIGNALS

The electronic controller can detect and signal several alarm conditions: high/low freezer temperatures, door open and open or short-circuited temperature probes. If the alarm conditions last longer than pre-programmed time delays, the controller will turn ON an audio signal (buzzer). Also a LED light located in the upper left corner of the controller, next to the caution symbol, will glow in case an alarm is active.

Once the alarm conditions have been fixed, the controller will turn off the alarms on its own. Alarms can be disabled by pressing any controller button, during alarm conditions.

Message	Cause	Action
Pr 1 d .SC	Cabinet temperature probe open	<ul style="list-style-type: none"> • Check connections • Replace probe
Pr 1 Short CC	Cabinet temperature probe short-circuited	
Pr 2 d .SC	Defrost probe open	<ul style="list-style-type: none"> • Check connection • Replace probe
Pr 2 Short CC	Defrost probe short-circuited	
Int Error	Internal memory error	<ul style="list-style-type: none"> • Replace controller
StAr-t dELAY	Start up delay in progress	<ul style="list-style-type: none"> • Wait for 6 minutes


CONTROLLER ALARMS AND SIGNALS CONT...


Message	Cause	Action
H I ALARn	High temperature alarm in progress	<ul style="list-style-type: none"> • Check door • See Troubleshooting (page 13)
LO ALARn	Low temperature alarm in progress	<ul style="list-style-type: none"> • Adjust set temperature
door oPEn	Door open	<ul style="list-style-type: none"> • Close door
CC CYCLE	"Turbo" mode active	<ul style="list-style-type: none"> • none
H I LO dELAY	Alarm delay after a restocking command	<ul style="list-style-type: none"> • Press the door switch 3 times repeatedly within 5 seconds to enable restocking.


CONTROLLER SYMBOLS AND FUNCTIONS




At the left side of the controller display are the following LED indicators:

- 

1. Indicates compressor status:
 Light on - Compressor cooling on
 Light off - Compressor cooling off
 Light flashing - Start-up delay in progress
- 

2. Indicates defrost status:
 Light on - Defrost in progress
 Light flashing - Freezer in dripping mode
- 

3. Indicates fan status:
 Light on - Cabinet fan ON
 Light off - Cabinet fan OFF
 Light flashing - Start-up delay in progress after defrost.
- 

4. Indicates the alarm status:
 Light on - Alarm is on
 Light off - Alarm is off
 Light flashing - Alarm silenced or memorized

PARTS LIST: 09/09M/09X-USGF, 10/10M/10X-USGF

No	Description
1	Door (Right or Left Hand)
2	Door Top Bracket (Right or Left)
3	Door Bottom Bracket (Right or Left)
4	Torsion Bar
5	Tension Pin
6	Bushing
7	Nylon Washer
8	Door Handle
9	Door Switch
10	Basket
11	Shelf
12	Interior Back Grill
13	Bottom Shelf
14	Pilaster
15	Pilaster Clip
16	Rear Grill
17	Leveling Leg
18	Caster
19	Front Bottom Grill
20	Evaporator Coil
21	Defrost Heater
22	Fan Guard
23	Drain Tube Heater
24	Evaporator Tray
25	Evaporator Shroud
26	Evaporator Fan
27	Pressure Relief Ball
28	Cabinet Anti-Condensate Heater
29	Heater Breaker Seal (Bottom/Top)
30	Heater Breaker Seal (LED)
31	LED STRIP
32	LED Driver (Interior Light)
33	3 Pole Terminal block
34	Controller
35	Rocker Switch
36	Compressor Relay

No	Description
37	Power Cord
38	Condensate Tray Assembly
39	Compressor
40	Filter Drier
41	Condenser Coil
42	Start Relay
43	Start Capacitor
44	Run Capacitor
45	Overload Protector
46	Fan Blade (Condensing Unit)
47	Fan Motor (Condensing Unit)
48	Thermostat, Defrost Limit
49	Heater Breaker Door

TROUBLESHOOTING GUIDE CONT...

for online reference go to minusforty.com

⚠ WARNING

Make sure the freezer is disconnected from the power supply before any service. Press the freezer switch to the "Off" position then unplug the power cord from electrical receptacle. All service work must be conducted by a certified technician only.

Problem	Possible Cause	Action
Condensation on glass door.	<ul style="list-style-type: none"> • Door not closing properly. • Room humidity too high. 	<ul style="list-style-type: none"> • Check the spring tension or any obstruction • To prevent condensation, room humidity should be below 55%.
LED strips are not working.	<ul style="list-style-type: none"> • Light switch is off. • Faulty LED strip. 	<ul style="list-style-type: none"> • Check if the light switch is on. • Replace the LED strip. (See page 12)
Cabinet is noisy.	<ul style="list-style-type: none"> • Part(s) loose • Tubing vibrating 	<ul style="list-style-type: none"> • Locate and tighten loose part(s). • Ensure tubing is not in contact with other tubing or components.
Door does not close tight.	<ul style="list-style-type: none"> • Freezer is not leveled. • Hinges are loose / not adjusted. • Gasket is out of the groove. 	<ul style="list-style-type: none"> • Level the unit (See page 2). • Adjust / tighten the hinge screws. • Check gasket condition. Adjust position or replace gasket.
Electronic control blank, flashing, or displaying incorrect characters.	<ul style="list-style-type: none"> • Wires disconnected at back of electronic control. 	<ul style="list-style-type: none"> • See actions described in the controller section. (page 5)
Evaporator fan does not run.	<ul style="list-style-type: none"> • Fan wire disconnected. • Door switch not working. • Defrost probe not attached to the evaporator coil. 	<ul style="list-style-type: none"> • Check wiring. • Check door switch. • Check the location of defrost probe. It should be pressed in between fins in the middle of the evaporator and close to the cabinet top

MANUAL DEFROST

This freezer is designed for automatic defrost. Every eight hours the refrigeration system is turned OFF and the defrost/drain heaters are activated to melt the ice from the evaporator coil and drain pan. If the freezer is not leveled properly, the water may not drain out of the freezer, it will re-freeze and ice gradually builds up. Excessive ice buildup reduces cooling performance and may cause the failure of refrigeration system and product loss. Ice buildup may be noticed through the evaporator fan grill on the coil fins.


To perform a manual defrost, follow these steps:

1. Press the UP arrow button and hold it for 6 seconds until the defrost symbol illuminates.
2. Wait until the electronic control stops defrost (the defrost symbol disappears).
3. If ice is still noticeable on the evaporator, press the freezer switch to the "Off" position then disconnect the freezer from the power supply.
4. Take down the evaporator shroud and use a hair dryer to quickly melt the ice.
5. Make sure the freezer is leveled side to side, and front to back or slightly tilted front to back.
6. Replace the evaporator shroud.

HOW TO REMOVE THE FRONT BOTTOM GRILL



With a screwdriver remove the bottom screws from the grill.

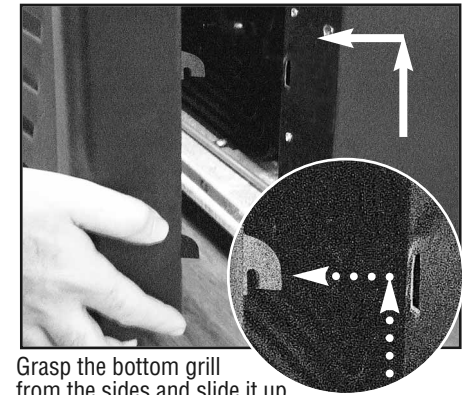


Grasp the bottom grill from the sides and slide it up and towards you to release the hooks.

To replace bottom grill, align hooks of the grill with slots and slide the grill back onto the freezer. Replace the bottom screws to secure the grill to the cabinet.



With a screwdriver, remove the two screws and washers from the grill front. Grasp the grill behind ventilation slots as shown, and pull it towards you.

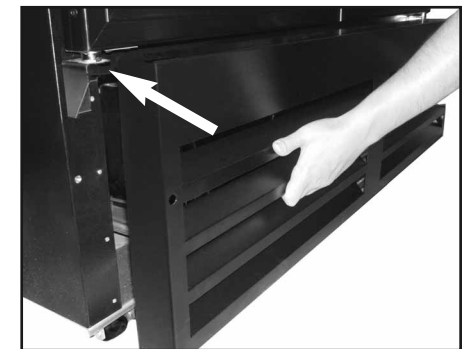

To replace bottom grill, align the hinge slots in the grill with the hinge pins and push the grill back. Replace the screws and washers to secure the grill to the cabinet.

CONDENSER CLEANING

The freezer is designed for minimal condenser cleaning. With the “lint free” condenser design, most dust and dirt will pass right through the condenser. To insure the proper operation, we recommend scheduled check-ups and cleaning every three to four months. This period may be shorter or longer depending on the location in which the freezer was installed. A dirty condenser can result in a voided warranty, part failure, product loss, and higher electrical cost. The steps to clean the condenser are as follows:

1. Remove the front bottom grill (see page 7)
2. Switch off power at freezer switch on control panel.
3. Unplug power cord from electrical receptacle.
4. Brush the dirt, dust and paper off the condenser coil plate, all the way to the fan. Use either a vacuum or blow with a compressed air supply if available.
5. When finished with cleaning, plug power cord back into receptacle.
6. Switch power back on at switch on control panel.
7. Replace bottom grill (see page 7)

NOTE:

The cleaning of the condenser is a service not covered under the warranty

CABINET CLEANING

⚠ WARNING

To reduce the risk of fire, electrical shock or personal injury, disconnect the freezer from the power source before cleaning. Press the freezer switch to the “Off” position, then unplug the power cord from the receptacle. Keep liquids away from electrical and electronic components.

⚠ CAUTION

Do not apply hot water on cold glass components. Allow glass to warm sufficiently to prevent shattering.

⚠ CAUTION

Do not use ammonia or bleach based cleaners or abrasive type cleaners. Do not use abrasive cleaning pads.

To clean the exterior whether it has the original finish or a decal package, use only a mild non-abrasive liquid cleaner, water and a soft cloth. For stainless steel parts, a commercial stainless steel polish and cleaner can be used. Always apply the cleaner to the soft cloth and then clean the freezer. Never apply the cleaner directly to the freezer. Excess liquid applied to the surface may seep into the electronic control and switches which can cause an electrical hazard or a malfunction.

DO NOT USE abrasive or caustic cleaners, scouring pads, solvents or flammable liquids.

GENERAL

The freezer should be cleaned at regular intervals to meet a good standard of hygiene and to keep the freezer attractive as an effective point of purchase display.

INTERIOR CLEANING

Use only mild non-abrasive liquid cleaner, water and a soft cloth for the entire freezer interior. Make sure to wipe off all residue.

TROUBLESHOOTING GUIDE

for online reference go to minusforty.com

⚠ WARNING

Make sure the freezer is disconnected from the power supply before any service. Press the freezer switch to the “Off” position then unplug the power cord from electrical receptacle. All service work must be conducted by a certified technician only.

Problem	Possible Cause	Action
Freezer not operating.	<ul style="list-style-type: none"> • Freezer switch located on the front grill turned off. • Fuse blown / circuit breaker tripped. • Power cord unplugged. • Receptacle not working. • Improper voltage supplied to cabinet / over load circuit. 	<ul style="list-style-type: none"> • Turn power switch on. • Replace fuse/reset circuit breaker. • Plug in power cord. • Check receptacle. • Remove extension cords or other equipment on the same circuit.
Freezer not getting cold but compressor is operating.	<ul style="list-style-type: none"> • Freezer located in direct sunlight or ambient (room) temperature is too hot. • Condenser clogged with dust. 	<ul style="list-style-type: none"> • Move freezer away from direct sunlight. • Room temperature is recommended not to exceed 86°F (30°C), 55% RH. • See page 8 (Cleaning)
Condensing unit operating for a prolonged period or continuously.	<ul style="list-style-type: none"> • Freezer loaded with excessive amount of warm product. • Prolonged door opening or door ajar. • Door not closing properly. • Clogged condenser. • Evaporator coil blocked with ice or frost. 	<ul style="list-style-type: none"> • Allow enough time for product to cool down. • Close door when not in use. Avoid prolonged door openings. • Level the unit (See page 2). Check gasket condition. Check the door spring. • Clean the condenser (See page 8). • Defrost manually if required (See page 7).
Freezer cabinet temperature too high.	<ul style="list-style-type: none"> • Electronic control set too high. • Poor air circulation in cabinet. • Insufficient clearance around cabinet or ambient temperature too high. • Clogged condenser 	<ul style="list-style-type: none"> • Adjust control setting (See page 5). • Follow instructions for product loading (See page 4) • Keep at least 6”(15 cm) free space around all sides of the freezer. Room temperature is recommended not to exceed 86°F (30°C), 55% RH. Make sure the air flow to the compressor is not obstructed. • Clean the condenser (See page 8)


INTERIOR LED STRIP REPLACEMENT

⚠ WARNING

Make sure the unit is disconnected from the power supply before any service. Press the power switch to the "Off" position then unplug the power cord from electrical receptacle. All service work must be conducted by a certified technician only.




Remove silicone corner beads. Pry the screwdriver between plastic cover and cabinet frame. Pry from one end to the other.

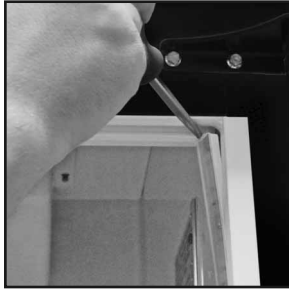


Pry the screwdriver between plastic lens cover and cabinet frame.




Carefully remove the plastic lens cover from cabinet frame.

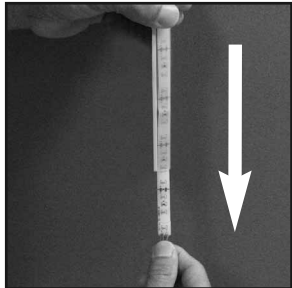

Slide faulty LED strip from plastic cover.

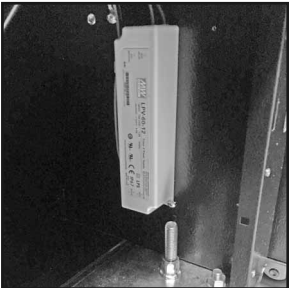

Locate the wire for the LED strip in the compressor compartment and disconnect from connectors.

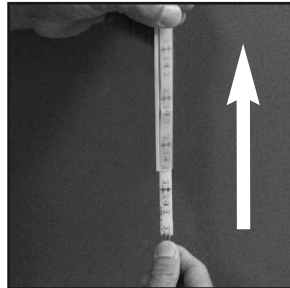

Install the new LED strip into the plastic cover.



Attach wires, observing color coding. Press lens cover back to cabinet frame.



Snap plastic cover back to cabinet frame. Apply silicone at plastic cover corners.



Plug the unit in and make sure the light switch on the bottom grill is in the 'ON' position.

CABINET CLEANING (CONT'D)

EXTERIOR CLEANING

Use only mild non-abrasive liquid cleaner, water and a soft cloth for the painted surfaces and a stainless steel polish and cleaner for the stainless steel surfaces if desired.

CLEANING GLASS DOOR EXTERIOR

Due to the special coating on the glass, use only a mild, non-abrasive liquid cleaner, water, and a soft cloth. The same applies to the plastic door frame.

ANTI FOG GLASS DOOR INTERIOR

The anti-fog glass door has a protective film on the inner side. After the unit has been installed, peel and remove the protective film covering the inner glass surface.

The Anti-Fog coating is a scratch resistant, permanent coating applied on the inner surface of the door glass. It prevents fogging and icing of cold glass surface after door opening and closing.

Cleaning can be performed using common household glass cleaners (Sidolin®, Windex®, Mr. Muscle®) and a tissue or paper towel. However, on very cold surfaces these cleaners may freeze. In these cases a mixture with 30% pure alcohol and water may be used.

At temperatures above 0°C, warm hand temperature water with a mild detergent can be applied.

Do not use abrasive cleaners or materials like Ajax®, Scotch Brite® or Steel Wool.

Do not contaminate the door with silicone.

Do not use tape, glue, stickers, attachments, magic markers or similar products on the coating.

Do not use razor blades or any other mechanical device to remove foreign residues or objects directly from the coating.

Do not use cleaners or materials that hinder the anti-fog performance by leaving residue or damaging the surface. Examples of these cleaners include: ArmorAll®, Tilex®, Bleach, Windex® No-Drip, Windex® Wipes, Pledge®, or any product containing silicone oils or waxes.

Recommended cleaners include: Greased Lightning®, Formula 409® Grease & Grime®, Fantastik®, Windex® Vinegar, Windex® Original, MicroClean Professional APC® (formerly Now® all purpose cleaner), Mean Green®, or Mr. Clean® (degreasing cleaners).

Recommended cleaning is with a soft dry or slightly damp towel, or with one of the degreasing cleaners listed above.

ISD TRANS-LIGHT LED STRIP REPLACEMENT (IF EQUIPPED)

⚠ WARNING


Make sure the freezer is disconnected from the power supply before any service. Press the freezer switch to the "Off" position then unplug the power cord from electrical receptacle. All service work must be conducted by a certified technician only.



Remove the plastic screw covers from the right hand side of the display.




With a screwdriver remove the two screws from the right hand side of the display.

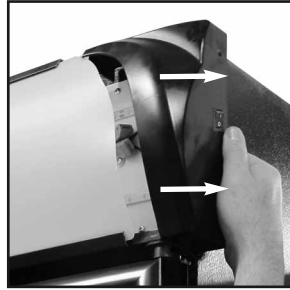


Slide the right hand display end cap from the display frame.



Slide the diffuser panel and graphic panel (if used) out of the frame channel.

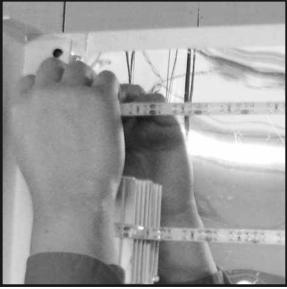


Disconnect LED strip wires from connectors and peel LED strips off freezer.

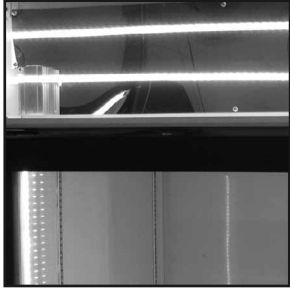

Install replacement LED strips at the same place and connect wires. Observe color coding.



Replace the diffuser panel and graphic panel (if used).

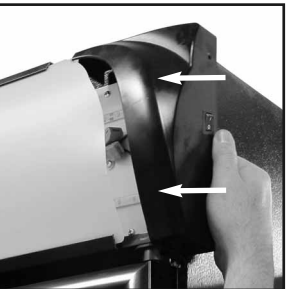

Replace the display end cap.



Replace the two screws on the display end cap.

ISD TRANS-LIGHT LED STRIP REPLACEMENT CONT'D



Replace the plastic screw covers on the display end cap.



Plug the freezer in and make sure the light switch on the bottom grill is in the 'ON' position.




To turn the display lighting "ON" or "OFF", use the display light switch.


GRAPHIC PANEL REPLACEMENT (IF EQUIPPED)

⚠ WARNING


Make sure the freezer is disconnected from the power supply before any service. Press the freezer switch to the "Off" position then unplug the power cord from electrical receptacle. All service work must be conducted by a certified technician only.

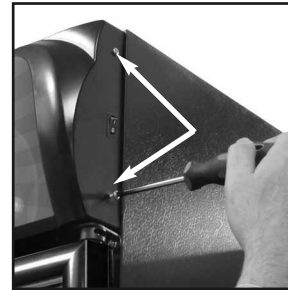


Remove the two plastic screw covers and the two screws from the right hand display end cap.

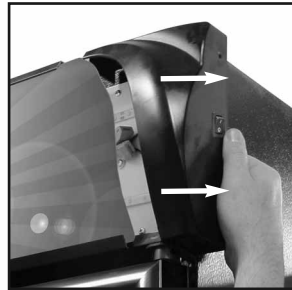


Slide the right hand display end cap from the display frame.

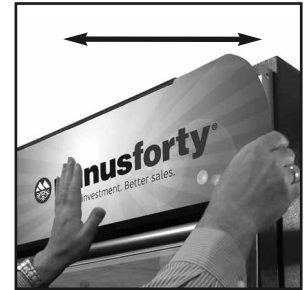

Slide out the old panel and replace with the new panel.

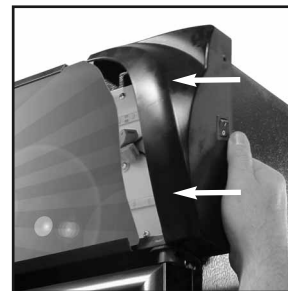

Replace the display end cap.

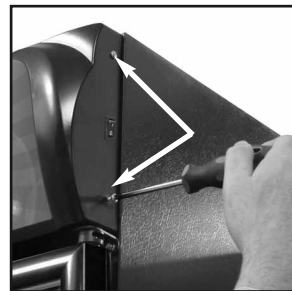

Replace the two screws and plastic screw covers on the display end cap. To turn the display lighting "ON" or "OFF", use the display light switch.



Plug the freezer in and make sure the light switch on the bottom grill is in the 'ON' position.